




1/8TH SCALE BRUSHLESS 4WD BUGGY 1:8 無刷電動四驅越野車

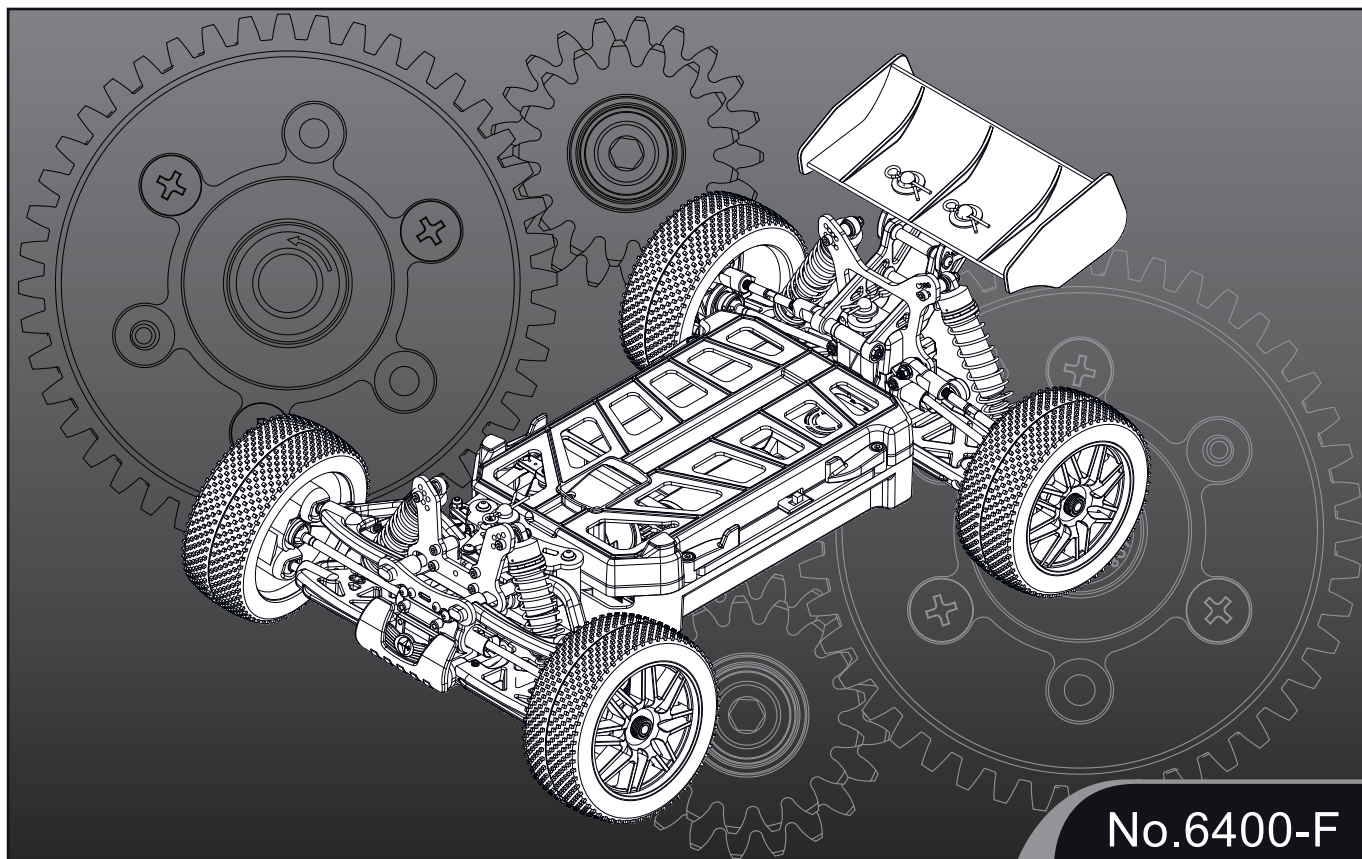

No.6400-F



This radio control model car is not a toy! Before beginning assembly, please read this manual thoroughly.
本產品為高性能模型非一玩具，組裝與操作前請詳閱本產品說明書。

The contents are subject to change without prior notice due to product improvements and specification changes.
本套件所附之零件可能跟圖示有所差異。因產品後續之設計研發或功能不斷改善之因，我們將保留產品規格變更權力，不再另行通知使用者。

Maintenance Manual & Parts Catalogue 維修說明書及零件包型錄

Introduction 前言

Thank you for purchasing this Thunder Tiger product. This manual contains the steps and instructions required to assemble your car. Please read this manual completely before attempting to start maintenance. Follow the directions in this manual closely to reduce problems during operation. We offer online help on our www.acehobby.com or www.thundertiger.com and forums and our product specialists are ready to take your call if you have any technical questions. Have fun and enjoy the exciting world of R/C.

感謝您購買雷虎科技產品。雷虎科技一向以提供最高品質的產品及服務作為持續努力的目標，並藉由參與競賽及重覆測試產品，不斷累積經驗，進而提昇設計及製造品質，期望能呈現給您最頂級之工藝產品。本使用說明書包含了組裝及維修本產品前所需要注意的重要事項，建議您在開始組裝及維修本產品之前，能詳閱此說明書，並熟悉本產品之組裝步驟及維修程序。若是您在產品的使用上有任何的疑問，歡迎多加利用我們所提供的24小時諮詢留言版或洽詢雷虎科技授權經銷商。雷虎科技的全球英文網址為www.thundertiger.com，我們將竭誠為您服務！

Safety Precautions 安全注意事項

Please read all of the instructions and familiarize yourself with the product and its controls before operation.

1. This product is not a toy. It is a high performance model car therefore it is important to familiarize yourself with the model, its manual, and its construction before assembly or operation. Adult supervision is necessary for children operating this model.
2. Always keep this instruction manual on hand during assembly and for operating reference.
3. Do not use a power screwdriver to install screws into plastic parts. A power screwdriver's high rotation speed can heat up the screw being installed which can result in some melting of the plastic parts or stripped threads.
4. For best performance, it is important to make sure all the moving parts can move freely without binding.
5. This product, its parts, and its assembly tools can be harmful to your health. Always exercise extreme caution when assembling and operating this product. Keep away from any high speed rotating parts during operation.


感謝您購買雷虎科技產品，在您開始操作本產品前，請詳閱本產品說明書。

1. 本產品為高性能模型產品非一般玩具，組裝與操作過程皆須由成人陪同。請詳讀此本使用說明書，避免因組裝錯誤與操作不當造成損壞。
2. 請妥善保管此說明書，對於後續維修、操控說明將可提供您協助。
3. 請勿使用電動工具旋緊自攻螺絲於塑膠零件上，可能導致塑膠零件融化或滑牙。
4. 請檢視所有活動部位零件是否不受干涉，可靈活作動，以達車輛最佳性能。
5. 此項產品具有相當之危險性，於組裝、調整、操控上的不熟悉都可能造成自身或他人的傷害，發生這些傷害事件時製造商是可以免除責任的，建議您於初次使用本產品前，先行請教具有相程度經驗同好或是專業雷虎經銷商與模型專賣店。


Index 索引

Manual Format 說明書使用方式	P.2	STEP28 Chassis 底板	P.16
Symbols Used Throughout The Manual 符號說明	P.2	STEP29 Installing Battery 電池安裝	P.16
STEP1 Front / Rear Differential 前/後差速器	P.3	STEP31 Receiver 接收機	P.17
STEP2 Front / Rear Bulkheads 前/後差速箱	P.3	STEP32 Electronic Speed Controller (E.S.C 電子調速器)	P.17
STEP3 Front / Rear Shock Tower 前/後避震器支架	P.4	STEP33 Radio Antenna 接收天線	P.18
STEP4 Center Differential 中央差速組	P.4	STEP34 Chassis Cover 底板護蓋	P.18
STEP5 Center Gearbox 中央齒輪箱	P.5	STEP35 Rear Wing Mount 尾翼固定座	P.19
STEP6 Chassis Brace 底板護蓋	P.5	STEP37 Tires & Wheels 輪胎與輪轂	P.20
STEP7 Drivetrain 傳動軸	P.6	STEP39 Body Shell 車殼	P.21
STEP9 Steering Servo 轉向伺服機	P.7	OPTIONAL PARTS Front Sway Bar 前防傾桿(選購零件)	P.22
STEP10 Turnbuckle 拉桿	P.7	OPTIONAL PARTS Rear Sway Bar 後防傾桿(選購零件)	P.23
STEP11 Steering System 轉向組	P.8	OPTIONAL PARTS Changing Gear Ratio 更換齒比	P.24
STEP15 Rear Mount 後固定座	P.10	ASSEMBLY EXPLODED VIEW 組裝爆炸圖檢索	P.25
STEP16 Front Suspension 前懸吊	P.10	EB-4WD BUGGY SPARE PARTS LIST 零件表	P.30
STEP20 Rear Suspension 後懸吊	P.12	EB-4WD BUGGY OPTIONAL PARTS LIST 選購零件表	P.36
STEP25 Shock Absorber 避震組	P.14	OPTIONAL ELECTRONICS 選配電子產品	P.39

Tools Included 內附工具

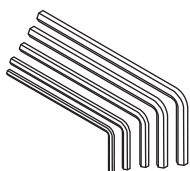


Hex Wrenches
1.5 / 2.0 / 2.5 / 3 / 5mm
六角板手組

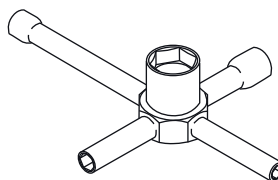

5-Way Cross Wrench
十字套筒

Tools Required For Assembly 組裝維修工具

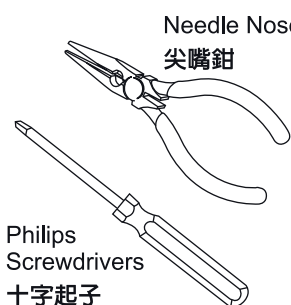


Needle Nose Pliers
尖嘴鉗

Philips
Screwdrivers
十字起子



Super Glue
(CA Glue)
快乾膠

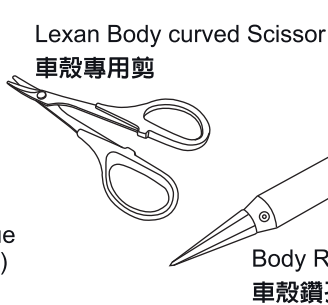

Lexan Body curved Scissor
車殼專用剪

Body Reamer
車殼鑽孔器



Wire Cutter
斜口剪

Grease
潤滑油膏
(黃油)




Thread Locking
Adhesive
(Threadlocker)
螺絲防鬆膠

Manual Format 說明書使用方式

How to read the instruction manual ? 說明書導讀

- A:** The manual indicates the assembly step number and the parts that are to be assembled.
- B:** The manual displays actual size drawings, and part quantities used.
- C:** All parts, except screws, are identified by their order numbers. When purchasing spare parts, identify the part required and cross reference this to the spare parts list at the end of this manual, which shows the spare parts and the corresponding order numbers.
- D:** This instruction manual uses several symbols. Pay careful attention to them during construction. Details are given at the bottom of each page.
- A:** 顯示組立步驟及需組立之零件部位。
- B:** 零件實際對照尺寸及使用數量。
- C:** 請比對零件形狀以及後附零件料號對照圖示找出需求零件料號。
- D:** 操作說明符號可更有效協助組裝者使用此說明書，請依說明書符號指示進行組裝步驟。

Example 說明範例

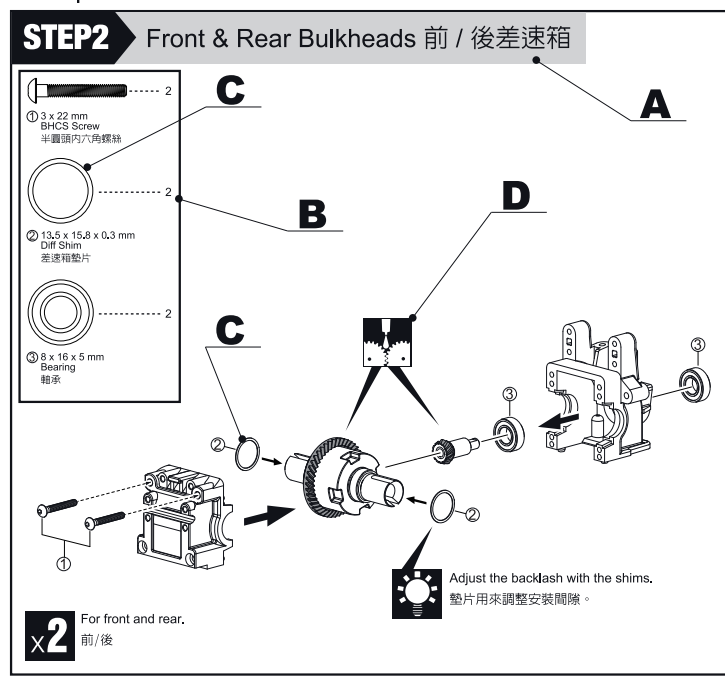

Symbols Used Throughout The Manual 符號說明



Apply C.A Glue
使用快乾膠黏合



Apply silicon oil
使用模型專用矽油



Assemble as many times as specified
依指示組裝所需數量



Assemble left and right side the same way
左右側組件相同



Assemble in right order
依標示順序組裝



Drill holes with the specified diameter
依標示尺寸鑽孔



Hint
組裝提示



Must be purchased separately
改裝品需另購



Cut off shaded portion
依標示部分裁切



Ensure smooth, non-binding movement when assembling
確認組件靈活度



Pay attention
組裝注意



Cut off excess
裁剪多餘部分





Apply threadlocker
使用螺絲防鬆膠



Apply grease
使用潤滑油膏(黃油)

STEP1 Front / Rear Differential 前 / 後差速器

x2 For front and rear.
前/後

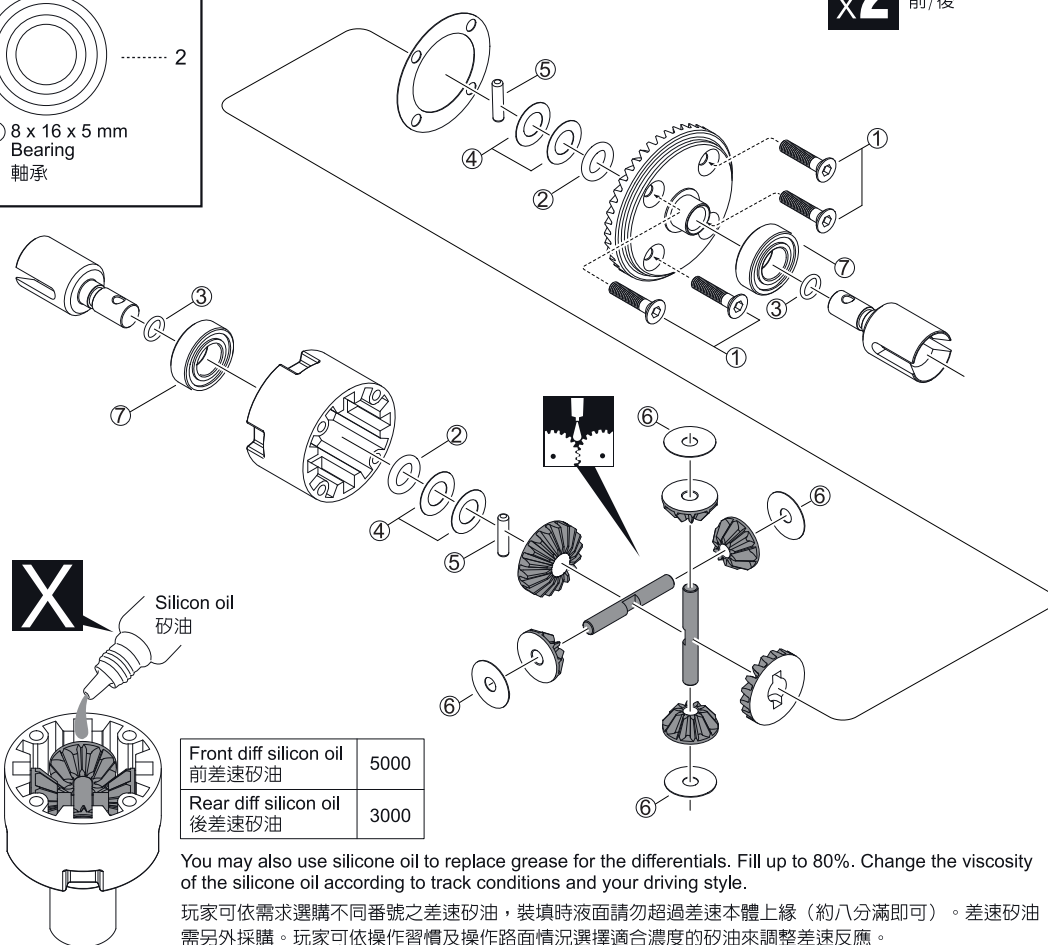
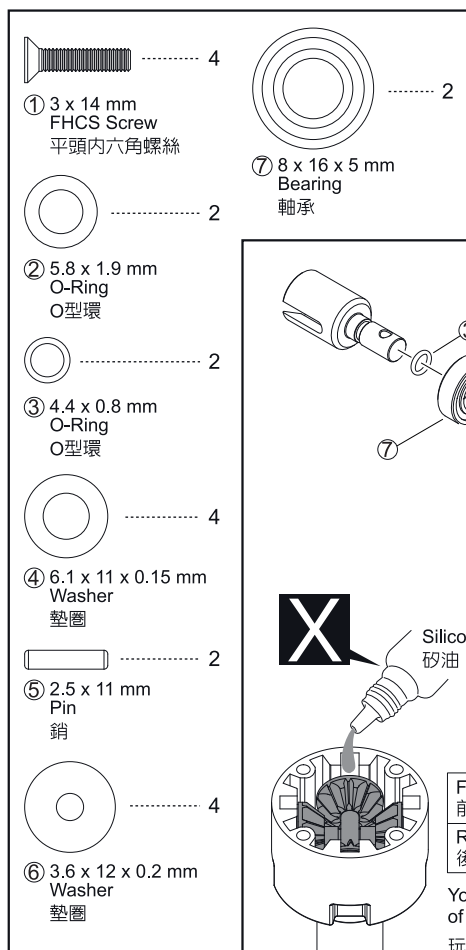


You may also use silicone oil to replace grease for the differentials. Fill up to 80%. Change the viscosity of the silicone oil according to track conditions and your driving style.

玩家可依需求選購不同番號之差速矽油，裝填時液面請勿超過差速本體上緣（約八分滿即可）。差速矽油需另外採購。玩家可依操作習慣及操作路面情況選擇適合濃度的矽油來調整差速反應。

STEP2 Front / Rear Bulkheads 前 / 後差速箱

x2 For front and rear.
前/後

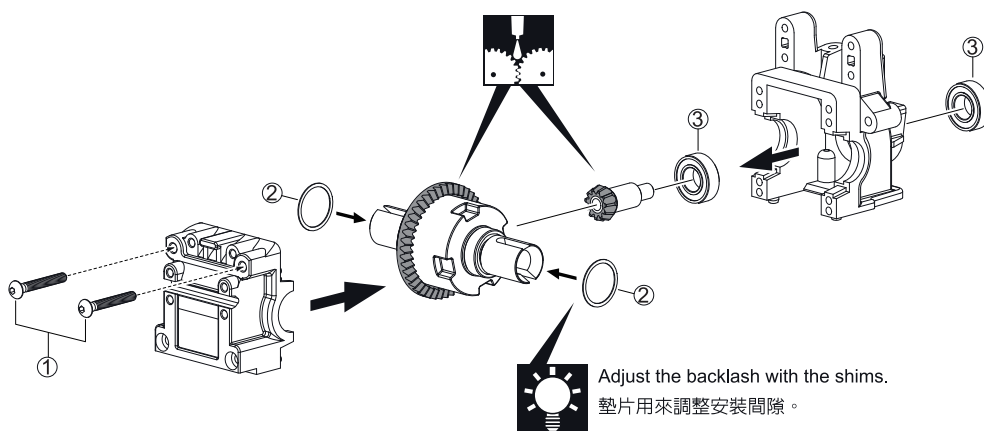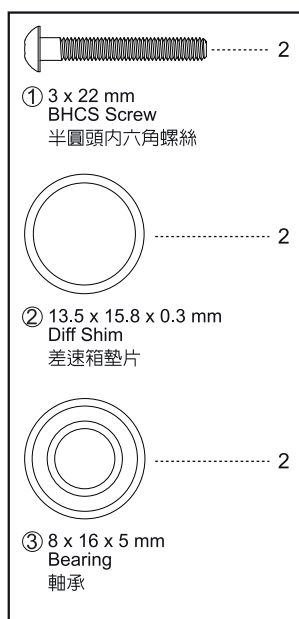

Adjust the backlash with the shims.
墊片用來調整安裝間隙。



Apply grease
使用潤滑油膏(黃油)



Must be purchased
separately
改裝品需另購




Assemble as many times
as specified
依指示組裝所需數量





Hint
組裝提示


STEP3 Front / Rear Shock Tower 前 / 後避震器支架

-  6
① 3 x 12 mm SHCS Screw
內六角螺絲
-  4
② 3 x 18 mm SHCS Screw
內六角螺絲
-  4
③ M3 Lock Nut
止鬆螺帽

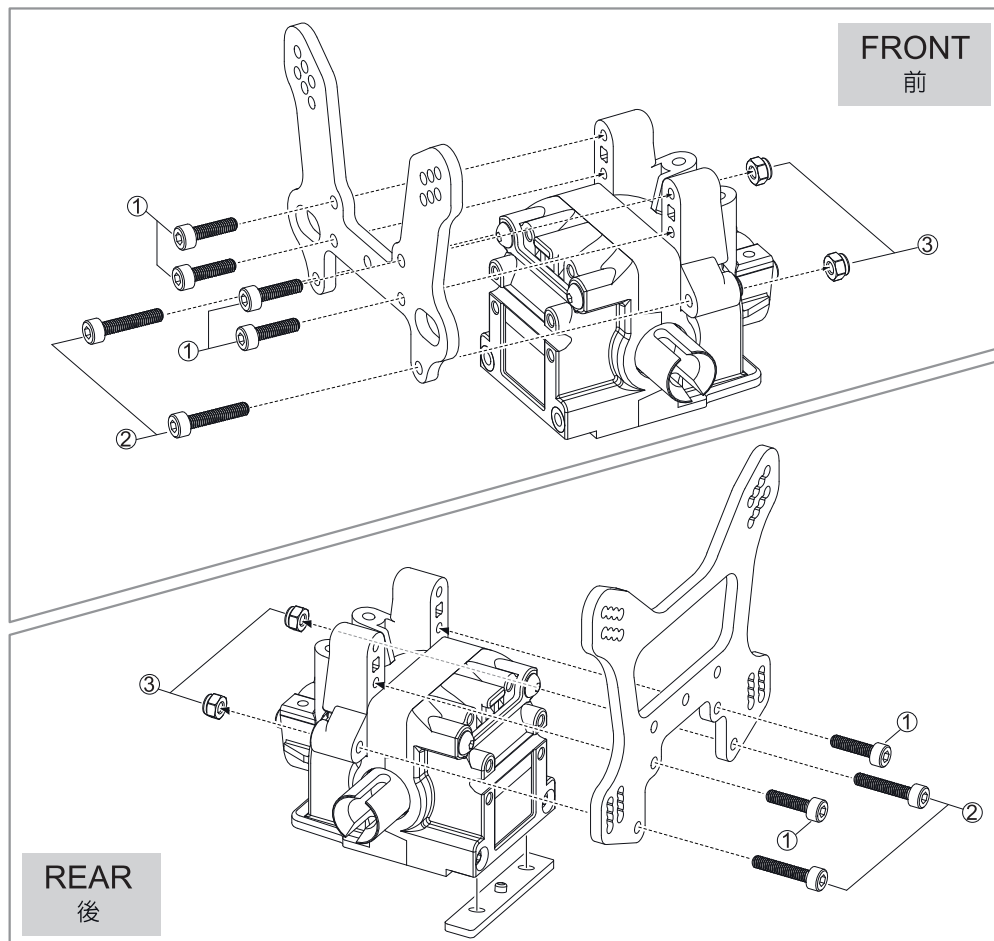

  STEP4 Center Differential 中央差速組

-  4
① 3 x 14 mm FHCS Screw
平頭內六角螺絲
-  2
② 5.8 x 1.9 mm O-Ring
O型環
-  2
③ 4.4 x 0.8 mm O-Ring
O型環
-  4
④ 6.1 x 11 x 0.15 mm Washer
墊圈
-  2
⑤ 2.5 x 11 mm Pin
銷
-  4
⑥ 3.6 x 12 x 0.2 mm Washer
墊圈
-  2
⑦ 8 x 16 x 5 mm Bearing
軸承

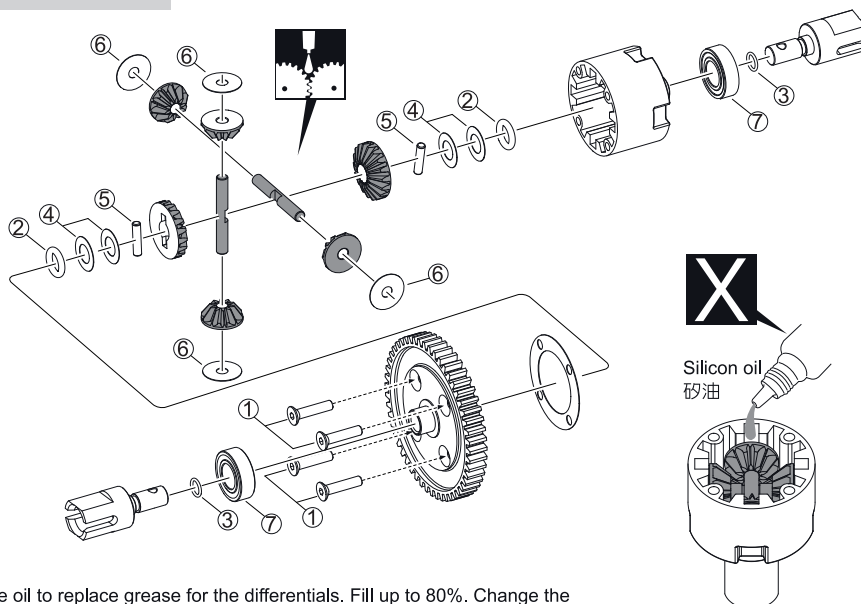

You may also use silicone oil to replace grease for the differentials. Fill up to 80%. Change the viscosity of the silicone oil according to track conditions and your driving style.

玩家可依需求選購不同番號之差速矽油，裝填時液面請勿超過差速本體上緣（約八分滿即可）。差速矽油需另外採購。玩家可依操作習慣及操作路面情況選擇適合濃度的矽油來調整差速反應。

Center diff silicon oil 中差速矽油	8000
----------------------------------	------





Apply grease
使用潤滑油膏 (黃油)



Must be purchased separately
改裝品需另購


STEP5 Center Gearbox 中央齒輪箱

-  4
① 3 x 8 mm SHCS Screw
內六角螺絲
-  2
② 3 x 10 mm SHCS Screw
內六角螺絲
-  1
③ 4 x 4 mm Set Screw
無頭內六角螺絲

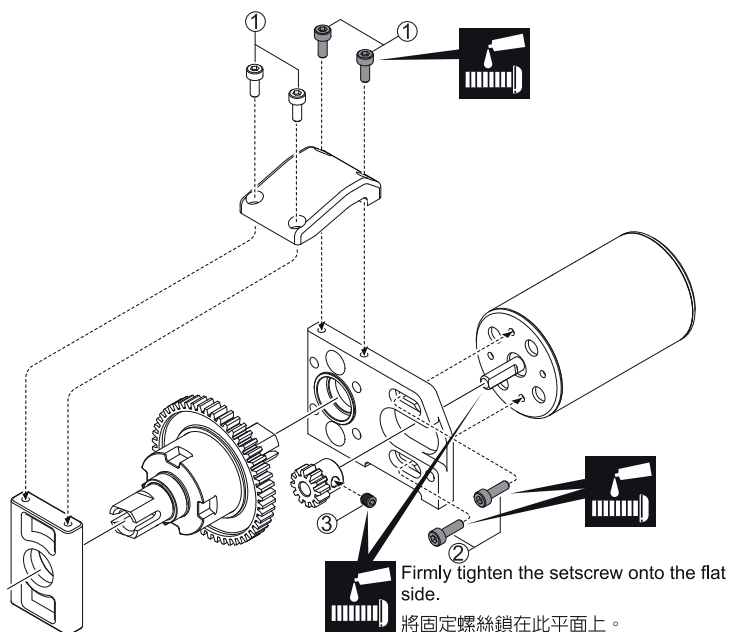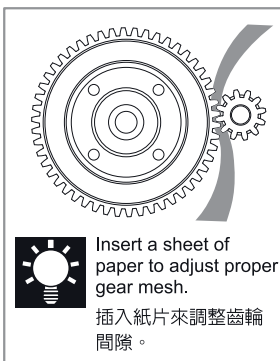

STEP6 Chassis Brace 底板護蓋

-  4
① 3 x 22 mm BHCS Screw
半圓頭內六角字螺絲
-  6
② 3 x 5 mm FHCS Screw
平頭內六角螺絲
-  4
③ M3 Lock Nut
止鬆螺帽
-  4
④ 4 x 12 mm FHCS Screw
平頭內六角螺絲
-  2
⑤ 4 x 10 mm FHCS Screw
平頭內六角螺絲
-  1
⑥ 4 x 6 mm FHCS Screw
平頭內六角螺絲
-  2
⑦ 3 x 10 mm FHCS Screw
平頭內六角螺絲
-  4
⑧ 2.8 x 1.9 mm O-Ring
O型環
-  4
⑨ 3.2 x 8 x 0.8 mm Washer
墊圈

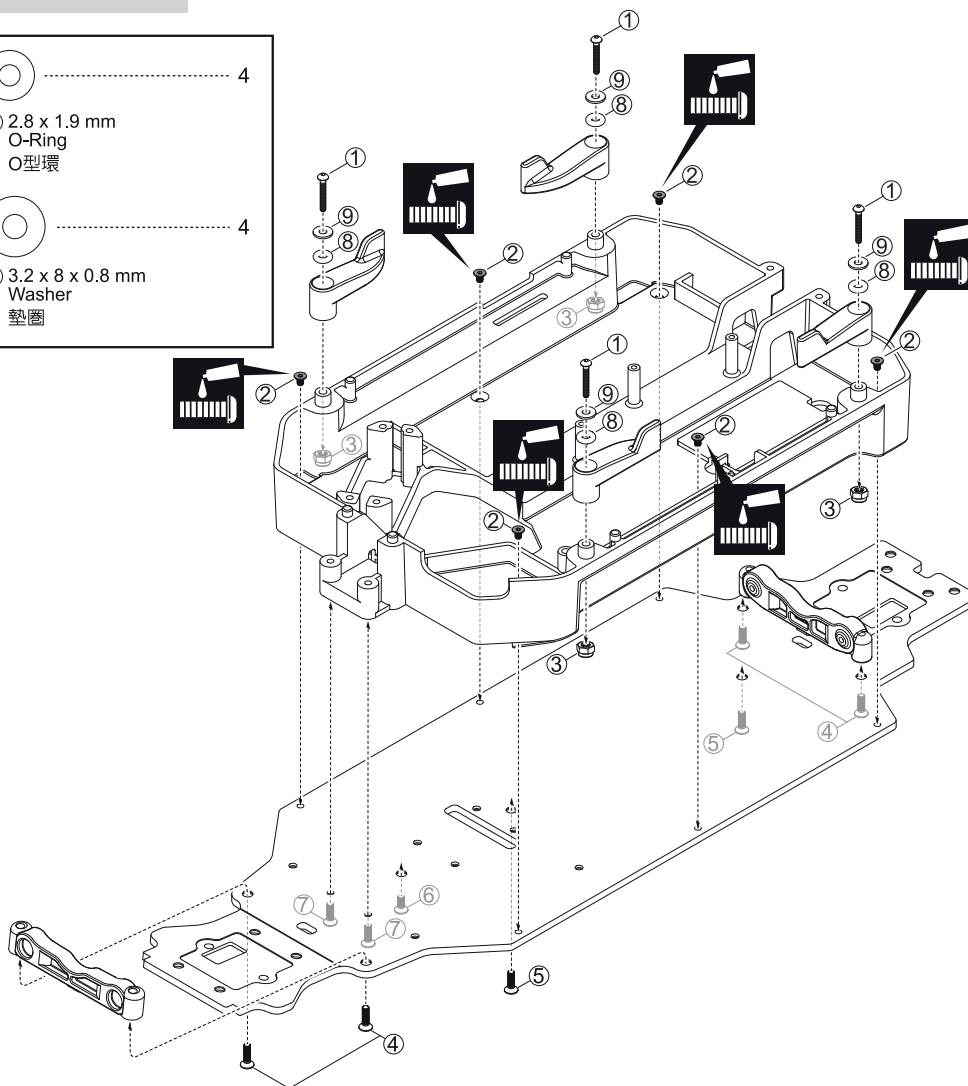


Apply threadlocker
使用螺絲防鬆膠



Hint
組裝提示


STEP7 Drivetrain 傳動軸 (1)

-  5
- ① 3 x 12 mm
FHCS Screw
平頭內六角螺絲
-  2
- ② 4 x 12 mm
FHCS Screw
平頭內六角螺絲
-  1
- ③ 5 x 4 mm
Set Screw
無頭內六角螺絲

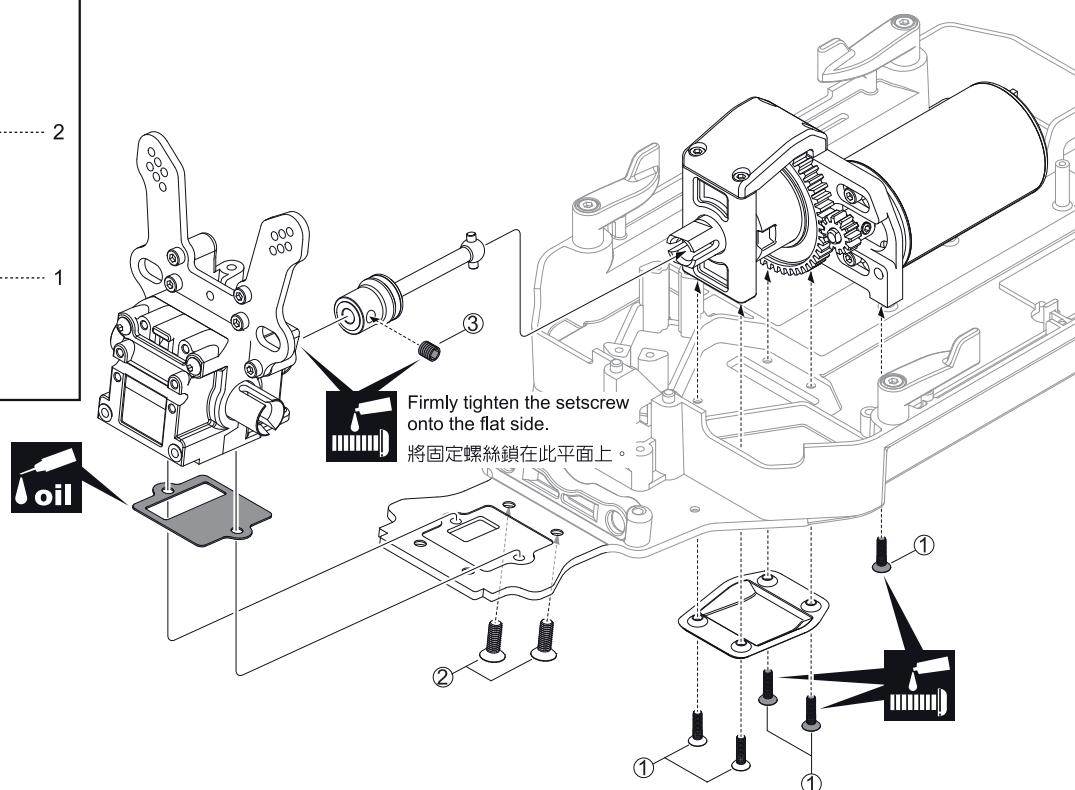

STEP8 Drivetrain 傳動軸 (2)

-  4
- ① 4 x 12 mm
FHCS Screw
平頭內六角螺絲
-  1
- ② 5 x 4 mm
Set Screw
無頭內六角螺絲


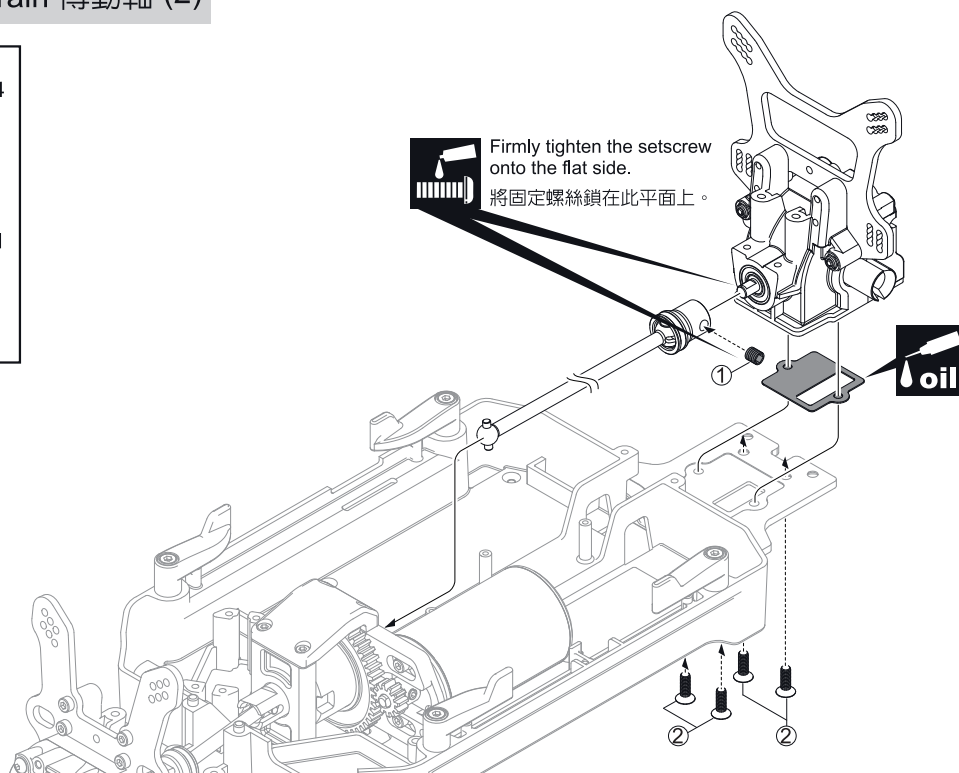


Apply threadlocker
使用螺絲防鬆膠



Apply silicon oil
使用模型專用矽油


STEP9 Steering Servo 轉向伺服機

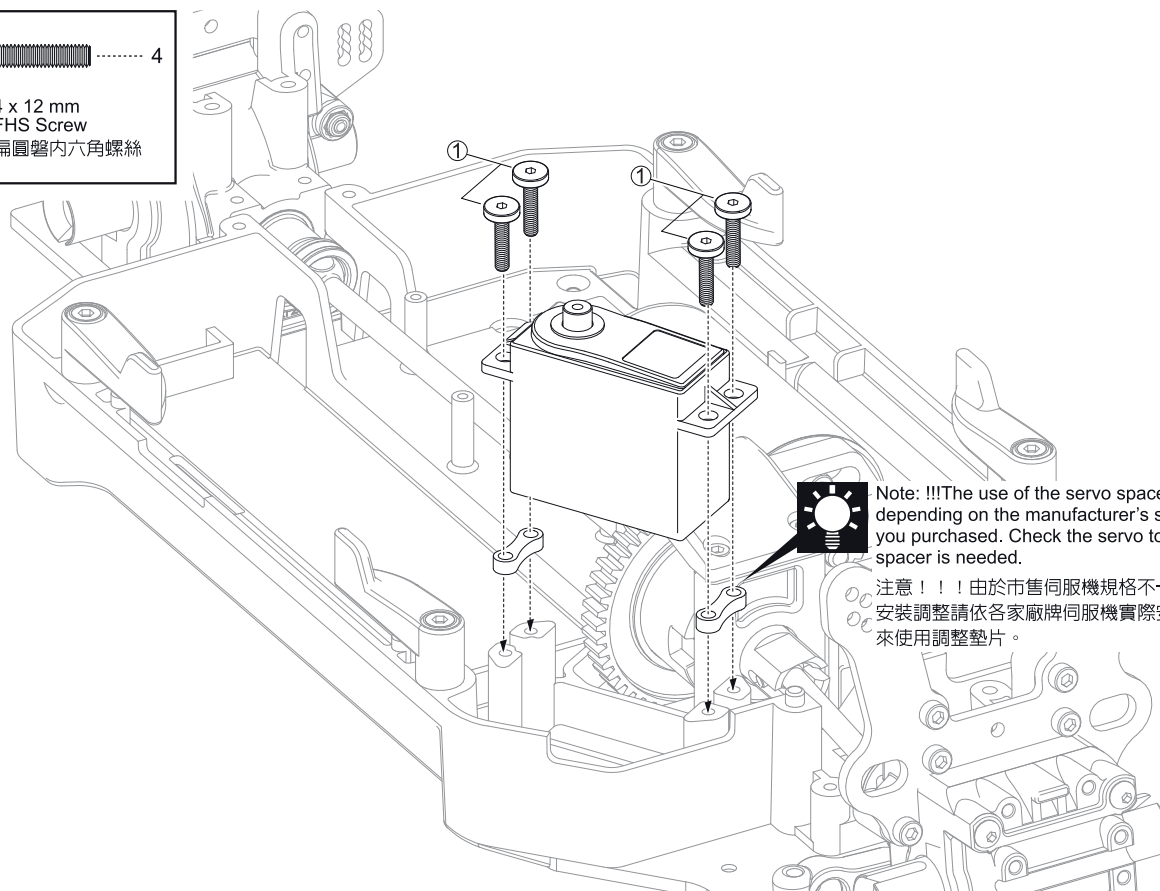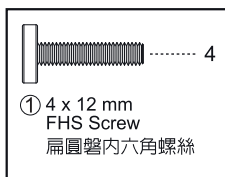

STEP10 Turnbuckle 拉桿


SERVO TIE ROD

伺服機拉桿

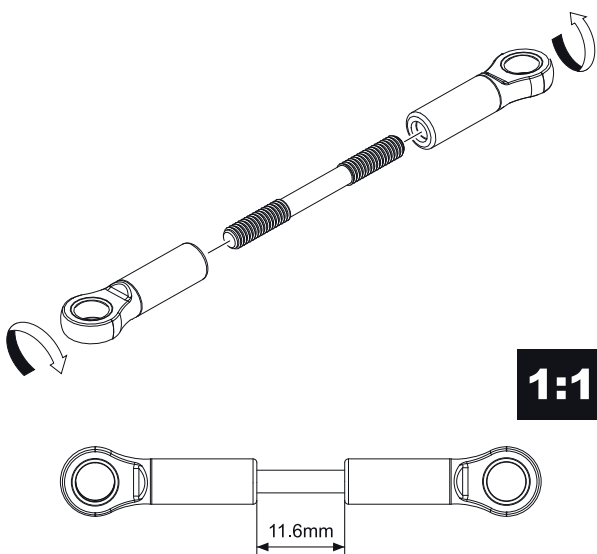

STEERING TURNBUCKLE

轉向拉桿

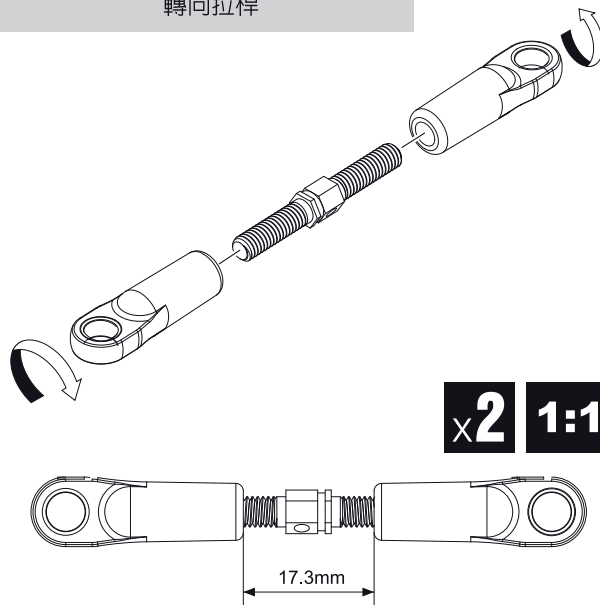


Hint
組裝提示






Assemble as many times as specified
依指示組裝所需數量

STEP11 Steering System 轉向組 (1)

-  4
① 3 x 8 mm Washer
墊圈
-  4
② M3 Lock Nut
止鬆螺帽
-  4
③ 5 x 10 x 4 mm Bearing
軸承
-  1
④ 3 x 8 mm BHCS Screw
半圓頭內六角螺絲
-  6
⑤ 3 x 12 mm BHCS Screw
半圓頭內六角螺絲
-  2
⑥ 3 x 16 mm FHCS Screw
平頭內六角螺絲
-  2
⑦ 3 x 22 mm FHCS Screw
平頭內六角螺絲

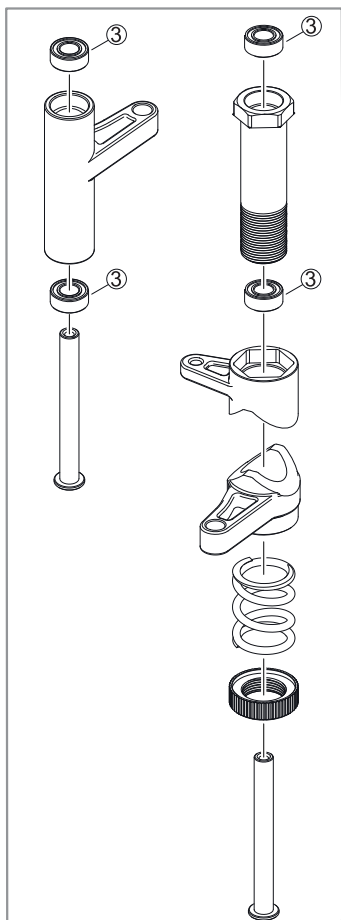

Holes for mounting.
安裝孔位。

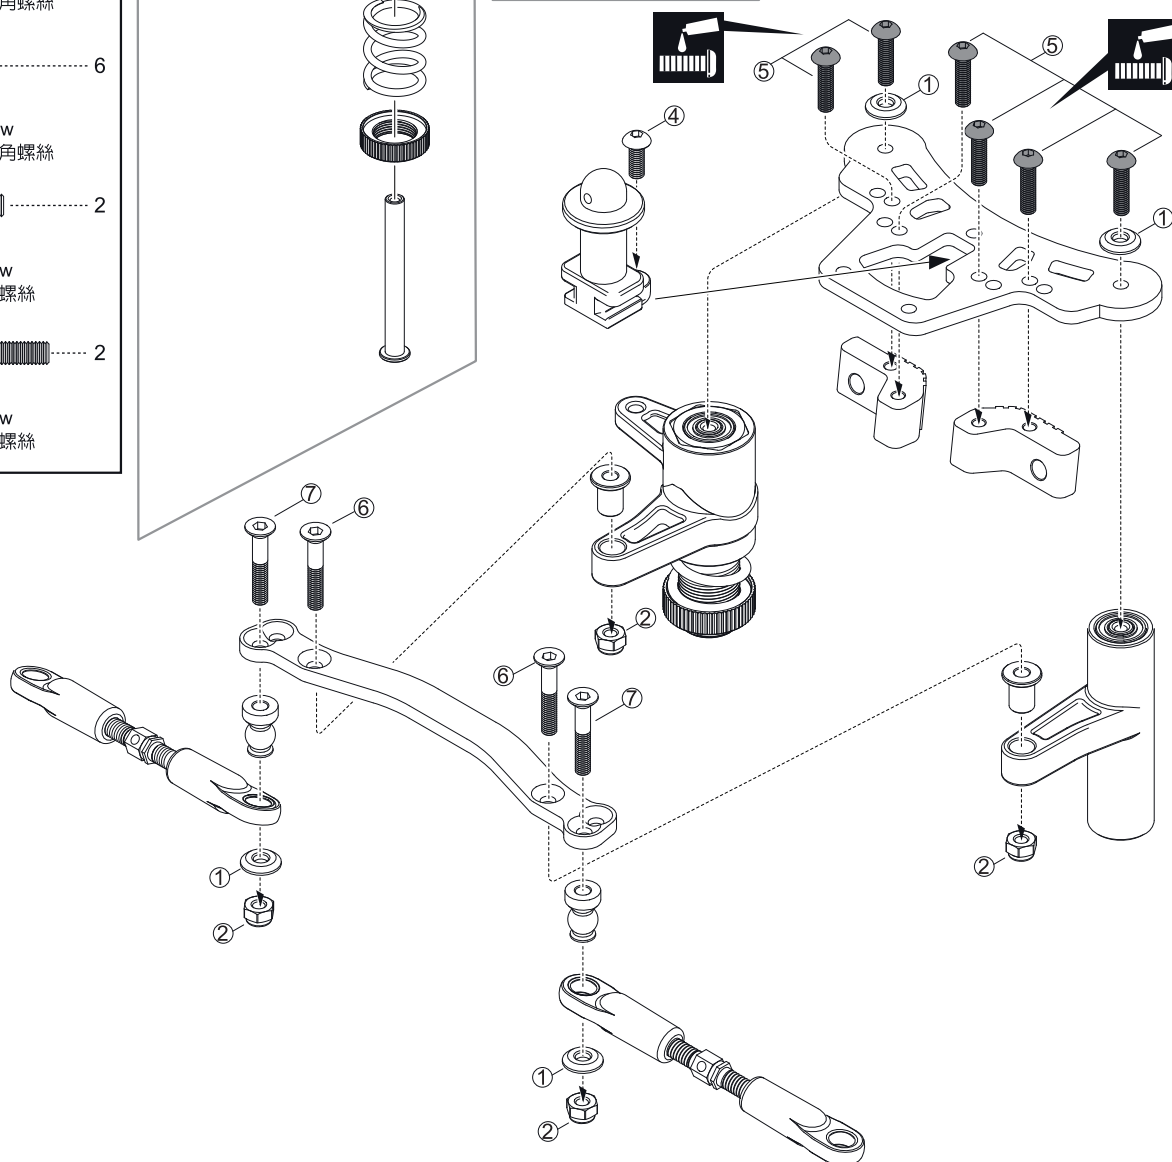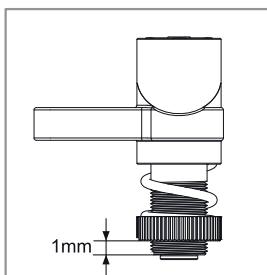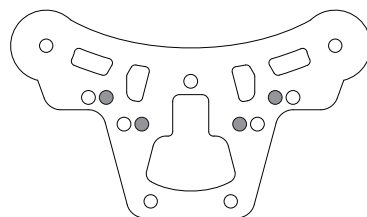


Hint
組裝提示



Apply threadlocker
使用螺絲防鬆膠


STEP12 Steering System 轉向組 (2)

-  1
① M3 Lock Nut
止鬆螺帽
-  1
② 3 x 16 mm
BHCS Screw
半圓頭內六角螺絲

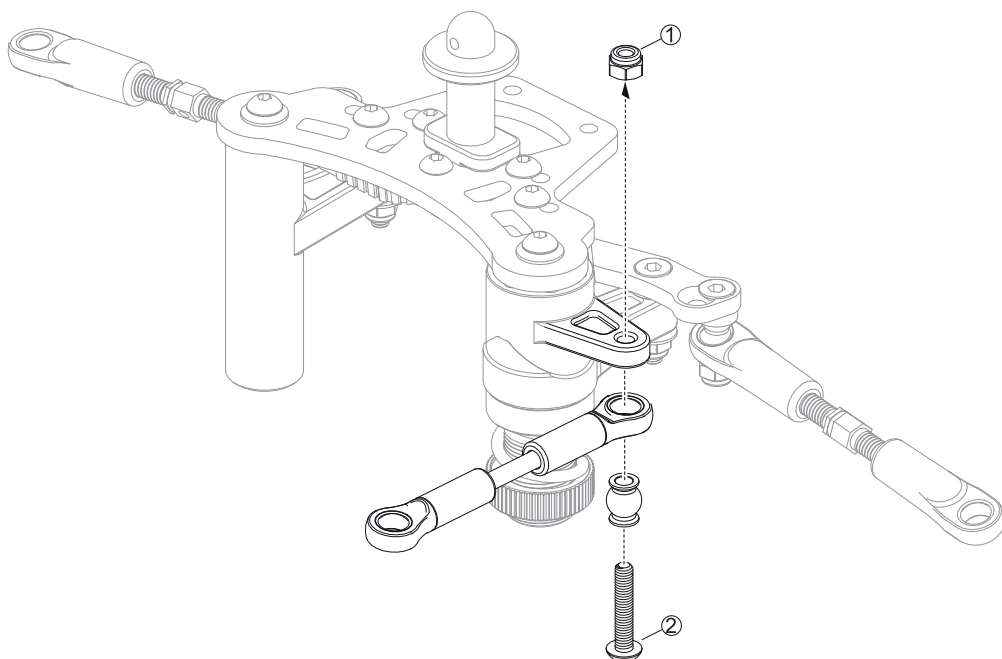

STEP13 Steering System 轉向組 (3)

-  2
① 3 x 12 mm
BHCS Screw
半圓頭內六角螺絲
-  2
② 3 x 10 mm
FHCS Screw
平頭內六角螺絲


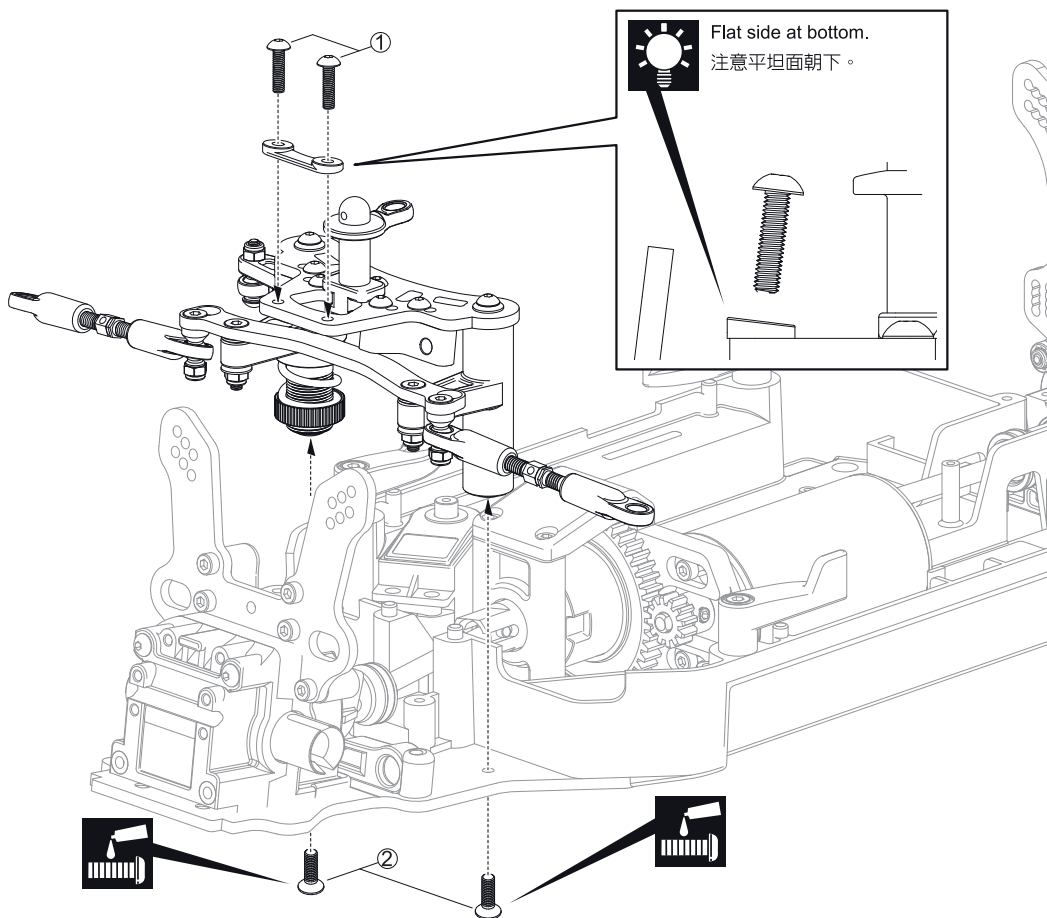


 Hint
組裝提示

 Apply threadlocker
使用螺絲防鬆膠


STEP14 Steering System 轉向組 (4)

- ① 3 x 8 mm FHCS Screw
平頭內六角螺絲
- ② 3 x 12 mm BHCS Screw
半圓頭內六角螺絲
- ③ M3 Lock Nut
止鬆螺帽

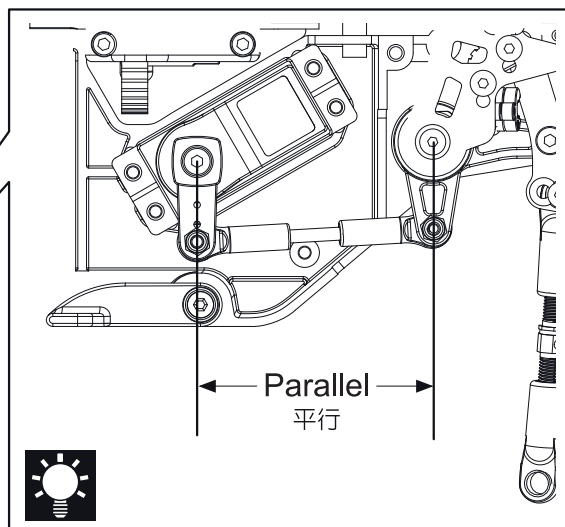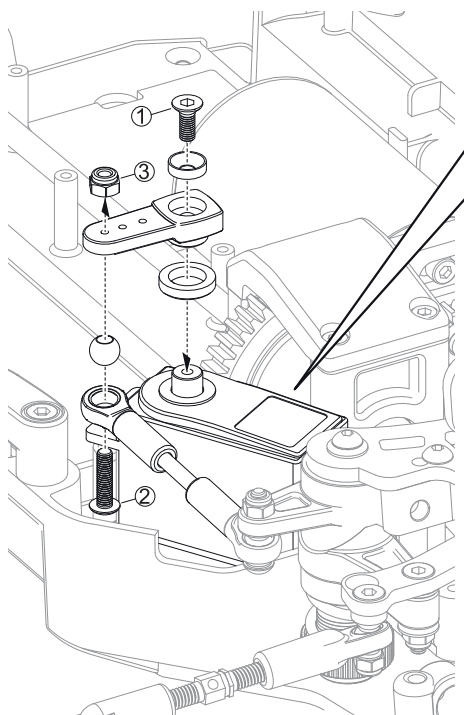


STEP15 Rear Mount 後固定座

- ① 3 x 8 mm BHCS Screw
半圓頭內六角螺絲

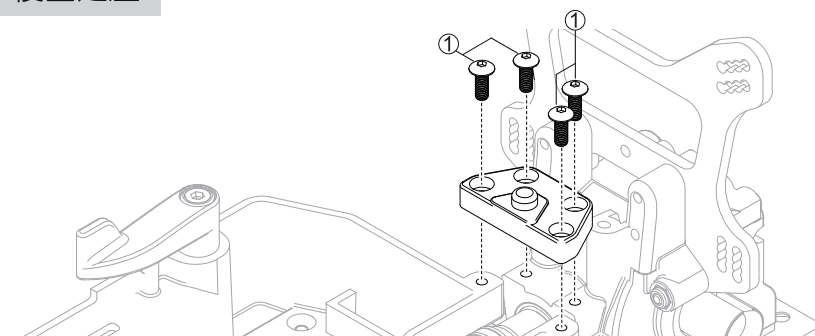


STEP16 Front Suspension 前懸吊 (1)


- ① 4 x 68 mm Outer Hinge Pin
擺臂銷
- ② 3 x 30 mm BHCS Screw
半圓頭內六角螺絲
- ③ 4 x 12 mm Set Screw
無頭內六角螺絲
- ④ 4 x 12 mm FHCS Screw
平頭內六角螺絲

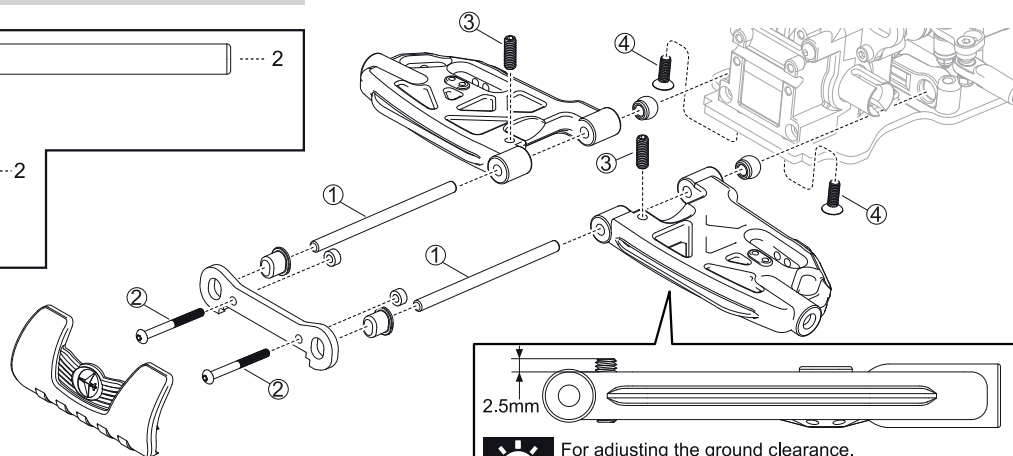


STEP17 Front Suspension 前懸吊 (2)

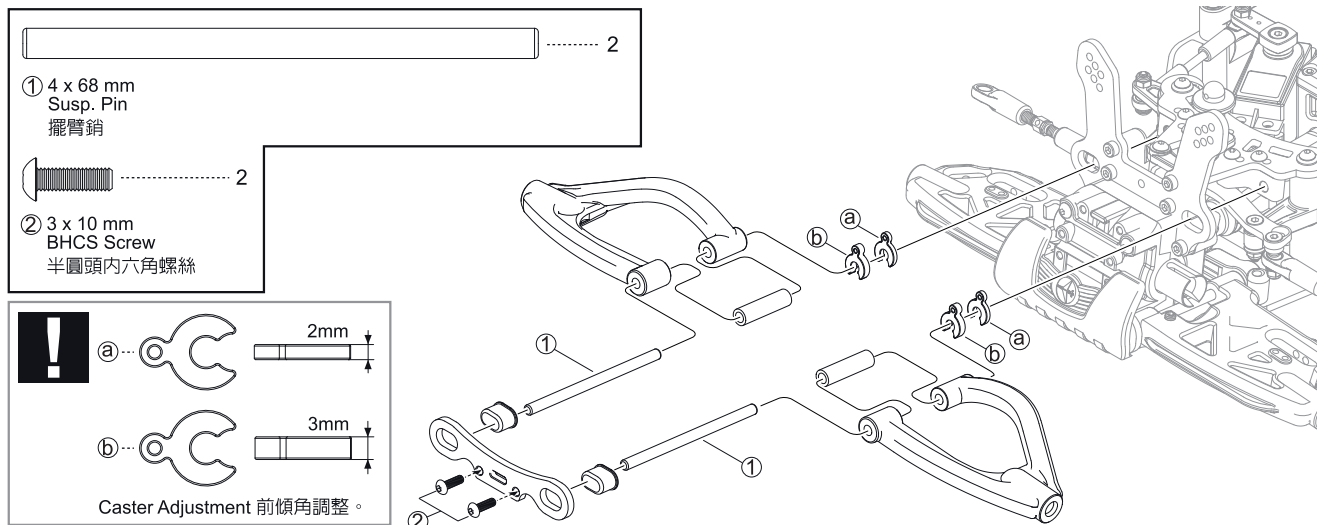

STEP18 Front Suspension 前懸吊 (3)

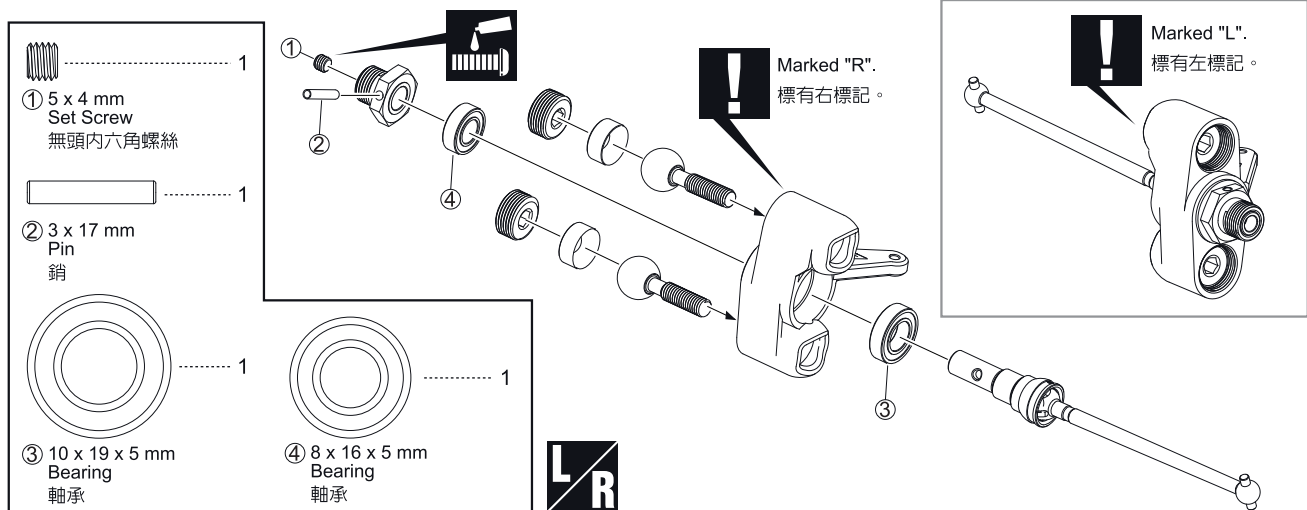

STEP19 Front Suspension 前懸吊 (4)

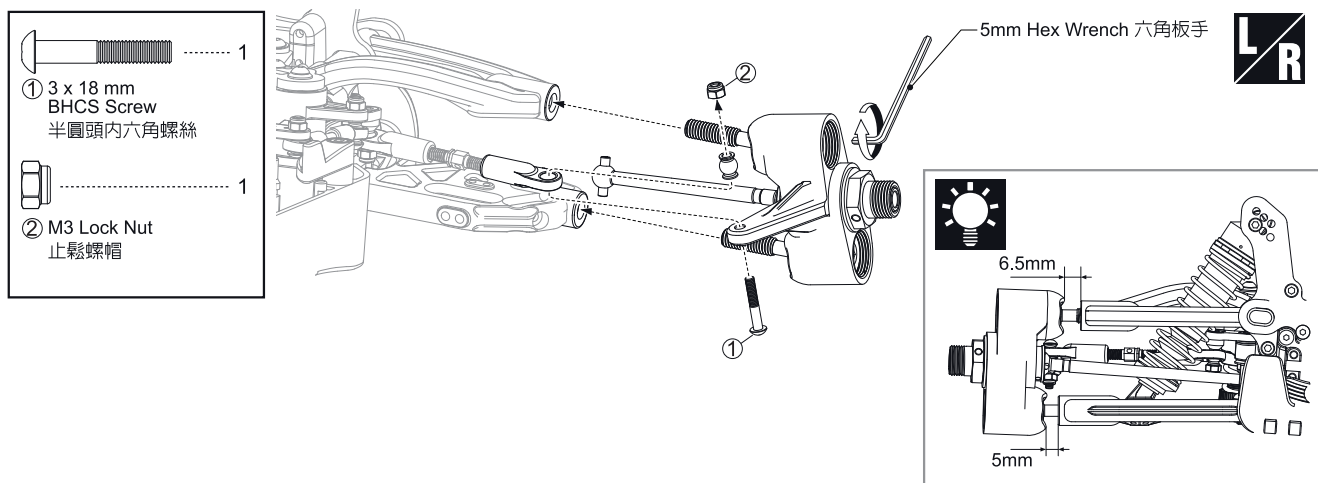



Apply threadlocker
使用螺絲防鬆膠

Assemble left and right side the same way
左右側組件相同



Pay attention
組裝注意

Hint
組裝提示

STEP20 Rear Suspension 後懸吊 (1)

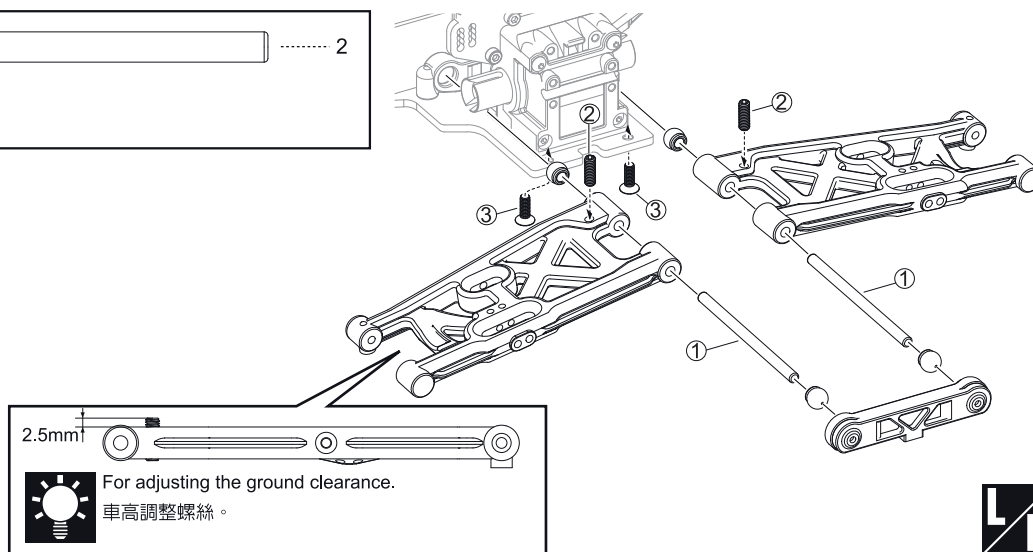
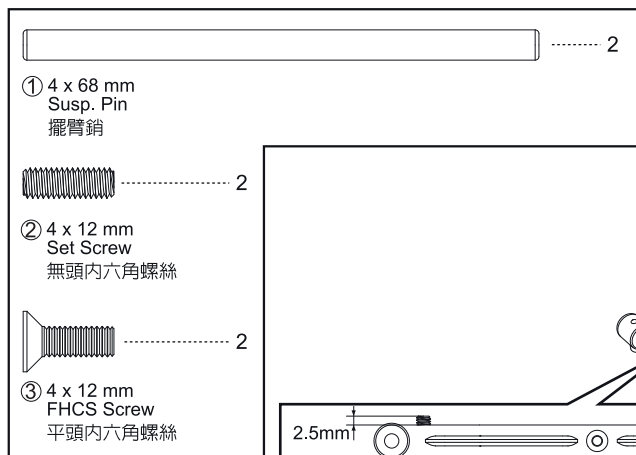


STEP21 Rear Suspension 後懸吊 (2)

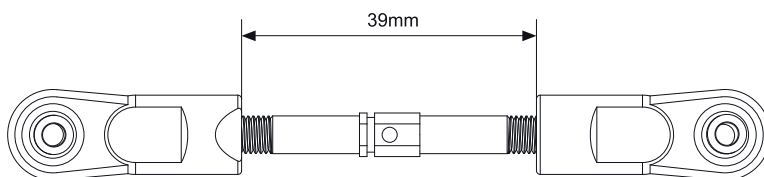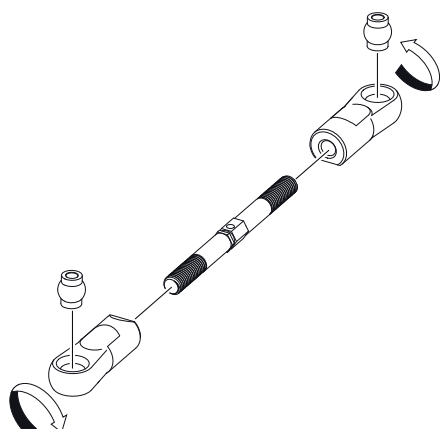

x2 1:1

STEP22 Rear Suspension 後懸吊 (3)

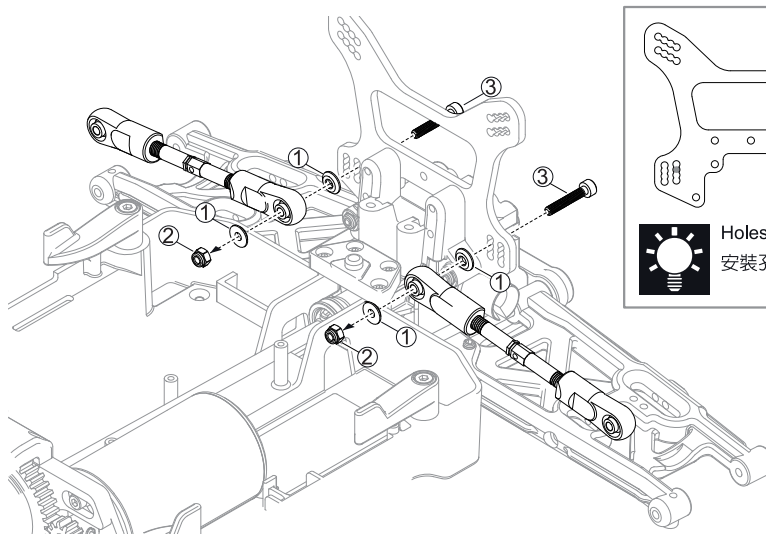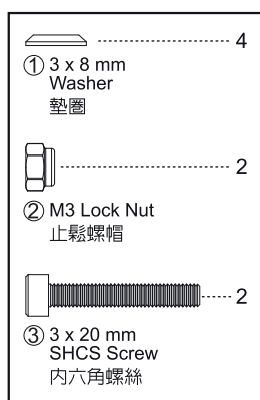


x2 Assemble as many times as specified
依指示組裝所需數量

L/R Assemble left and right side the same way
左右側組件相同

STEP23 Rear Suspension 後懸吊 (4)

L/R


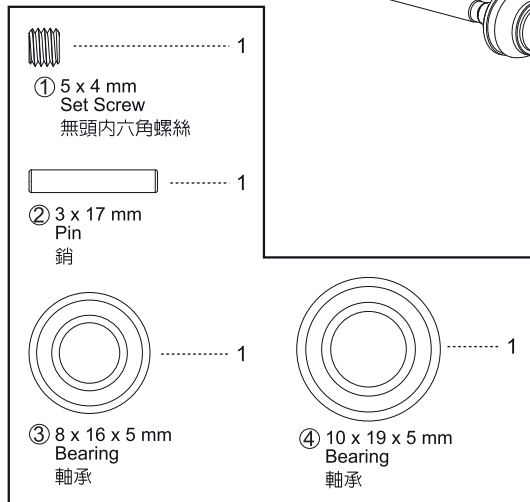


! Marked "L".
標有“左”標記。





STEP24 Rear Suspension 後懸吊 (5)

L/R

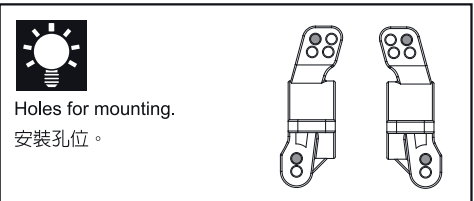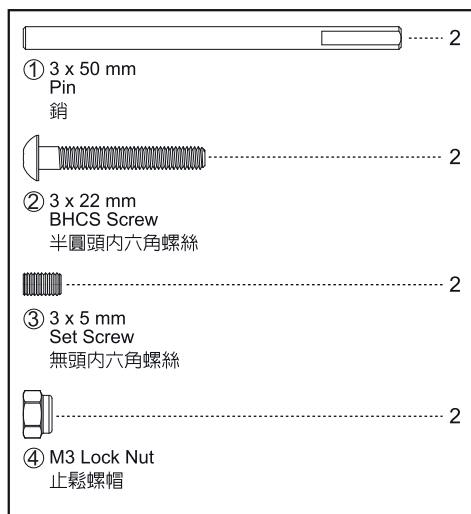

! Firmly tighten the setscrew onto the flat side.
將固定螺絲鎖在此平面上。


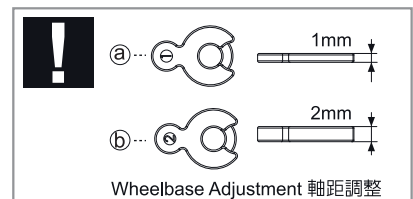
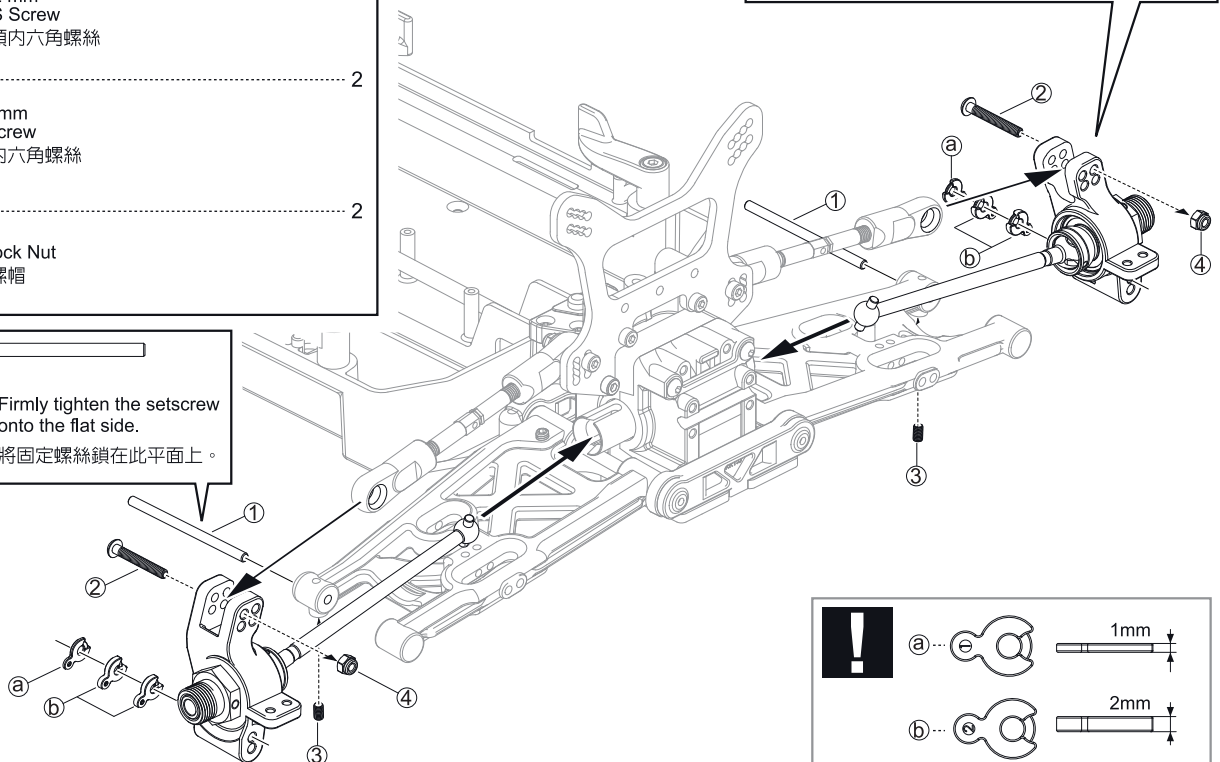


! Apply threadlocker
使用螺絲防鬆膠




L/R Assemble left and right side the same way
左右側組件相同

! Pay attention
組裝注意


STEP25 Shock Absorber 避震組 (1)

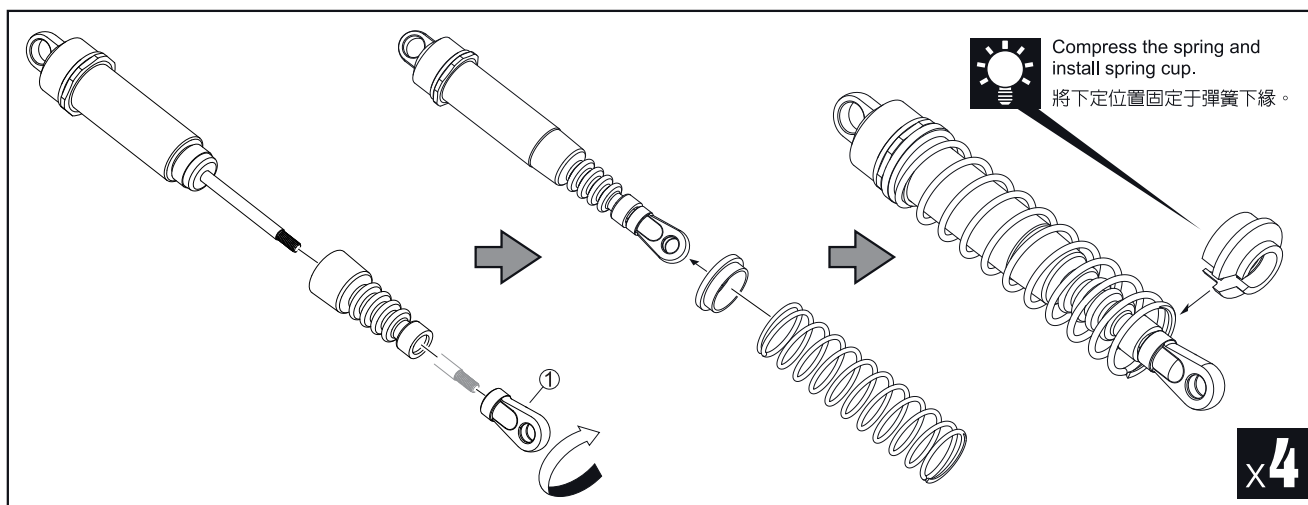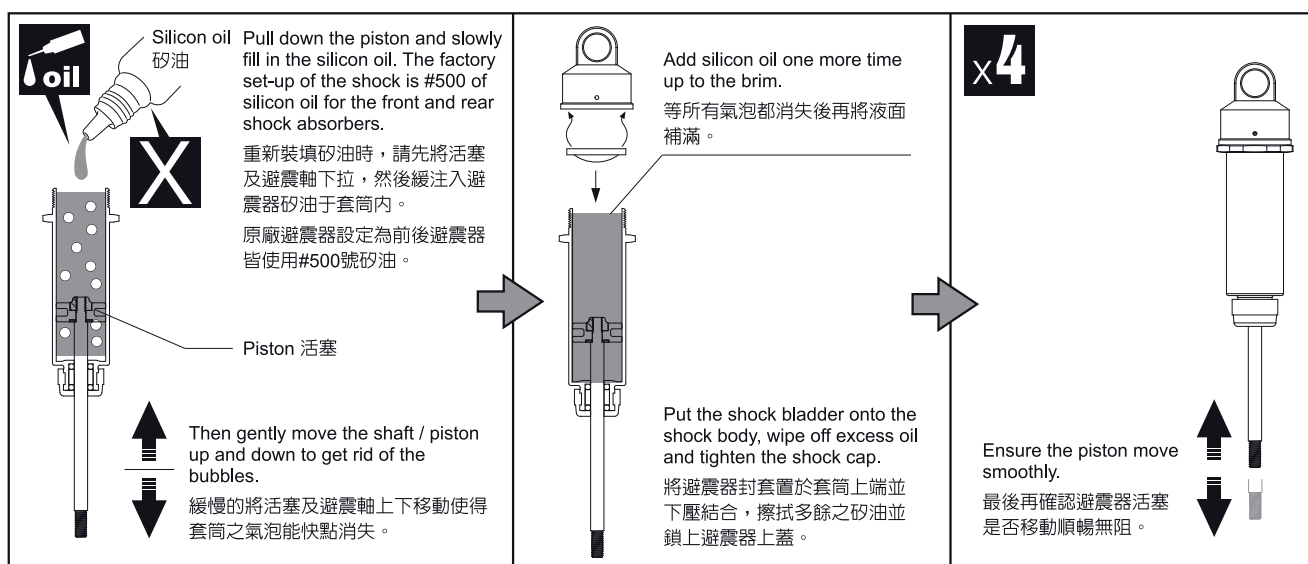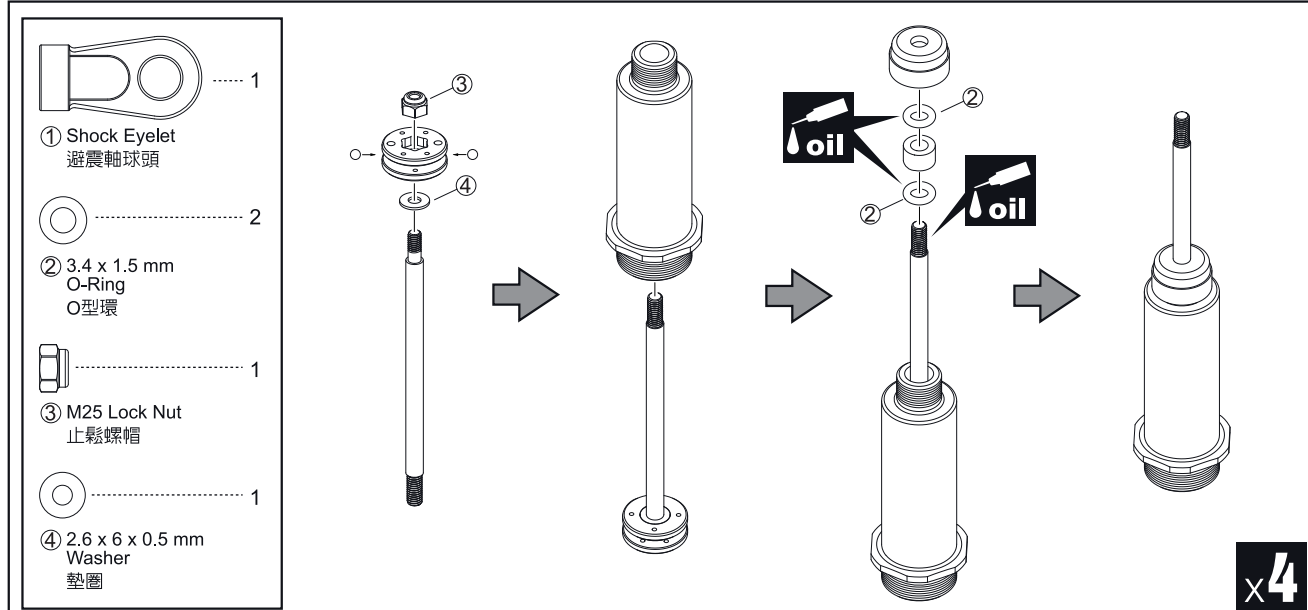

   
STEP26 Shock Absorber 避震組 (2)

-  2
① 3 x 23 mm SHCS Screw
內六角螺絲
-  2
② Hinge Pin (long)
避震器固定銷 (長)
-  2
③ 3 x 3 mm Set Screw
無頭內六角螺絲
-  2
④ M3 Lock Nut
止鬆螺帽
-  2
⑤ 3 x 8 mm Washer
墊圈



FRONT
前

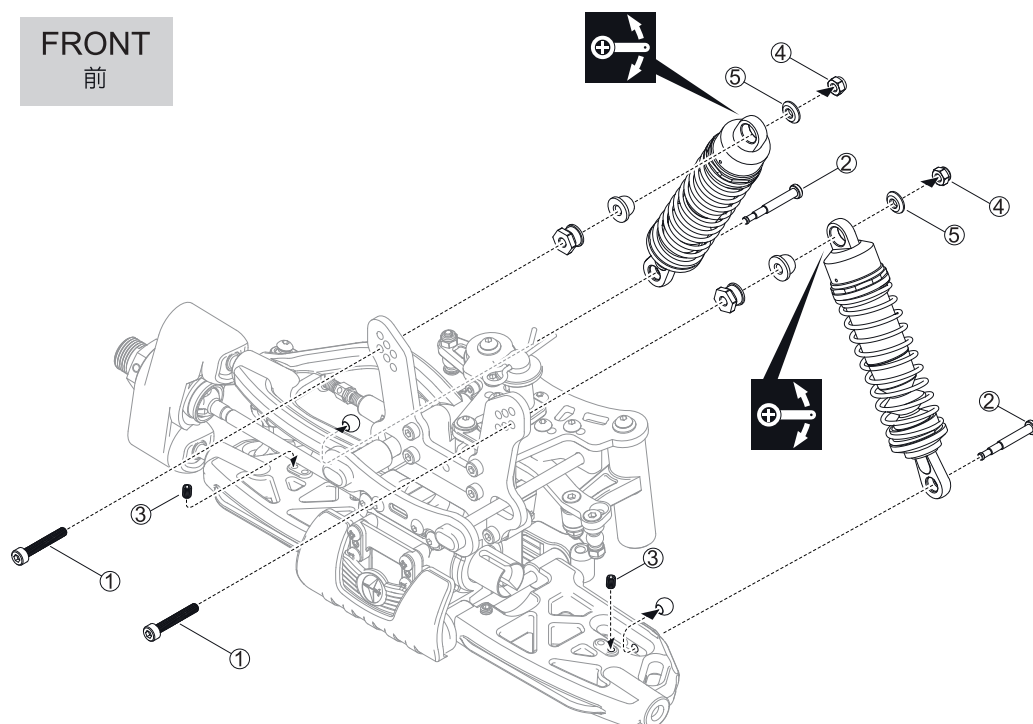

 
STEP27 Shock Absorber 避震組 (3)

-  2
① 3 x 26 mm SHCS Screw
內六角螺絲
-  2
② Hinge Pin (short)
避震器固定銷 (短)
-  2
③ 3 x 3 mm Set Screw
無頭內六角螺絲
-  2
④ M3 Lock Nut
止鬆螺帽

 

REAR
後

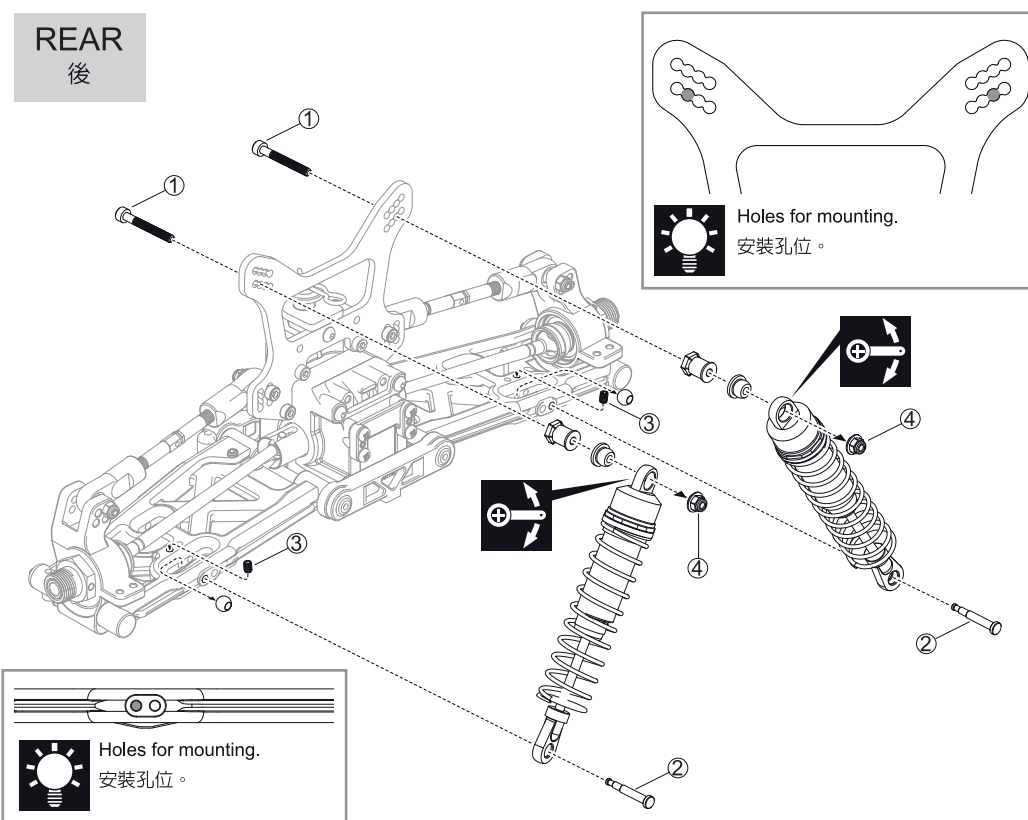


STEP28 Chassis 底板

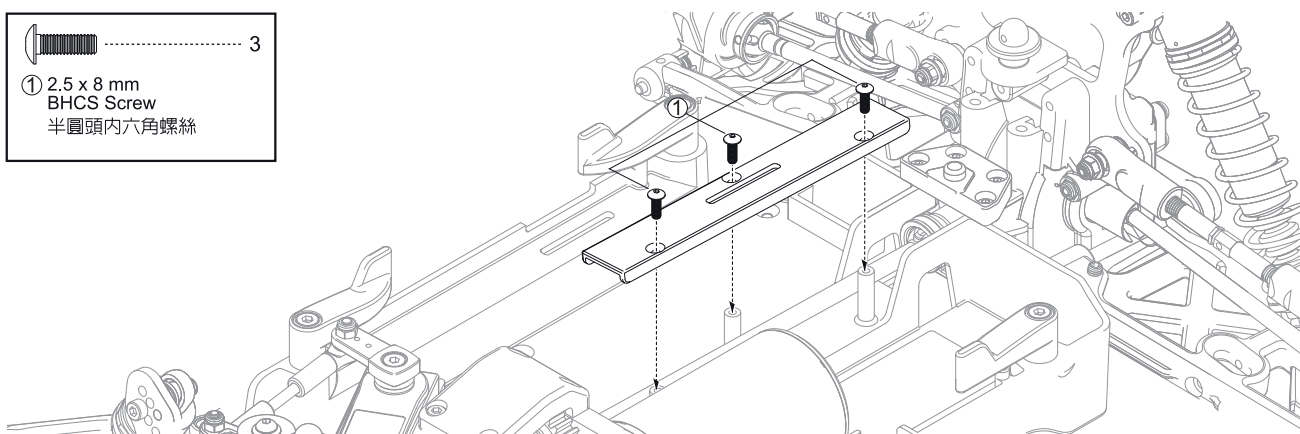



STEP29 Installing Battery 電池安裝 (1)

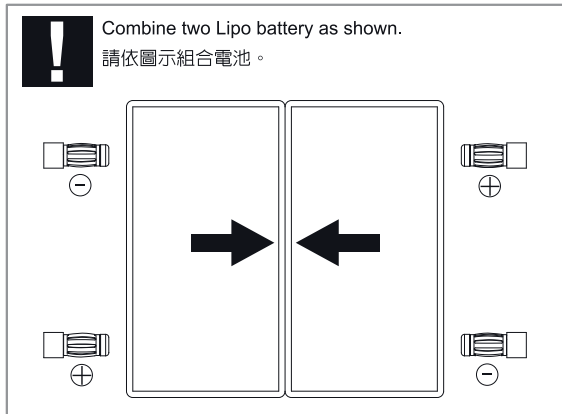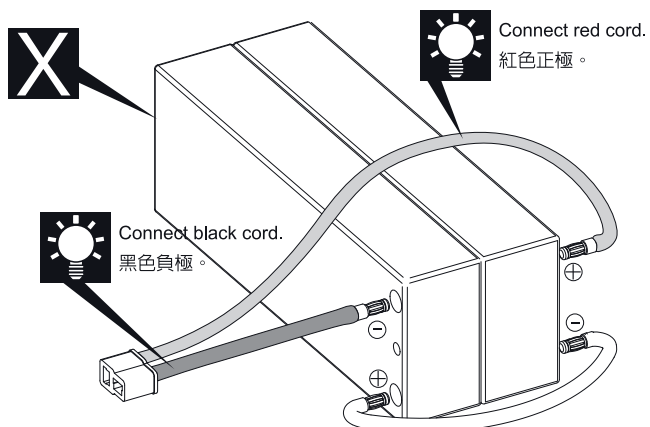


STEP30 Installing Battery 電池安裝 (2)

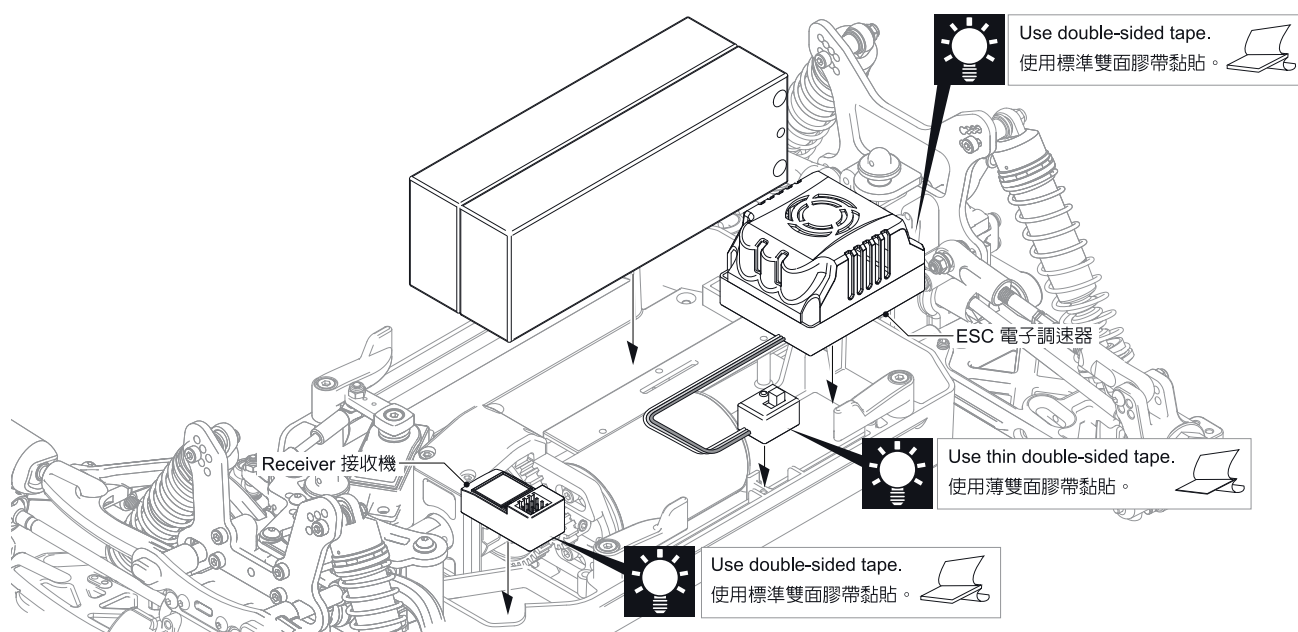

STEP31 Receiver 接收機

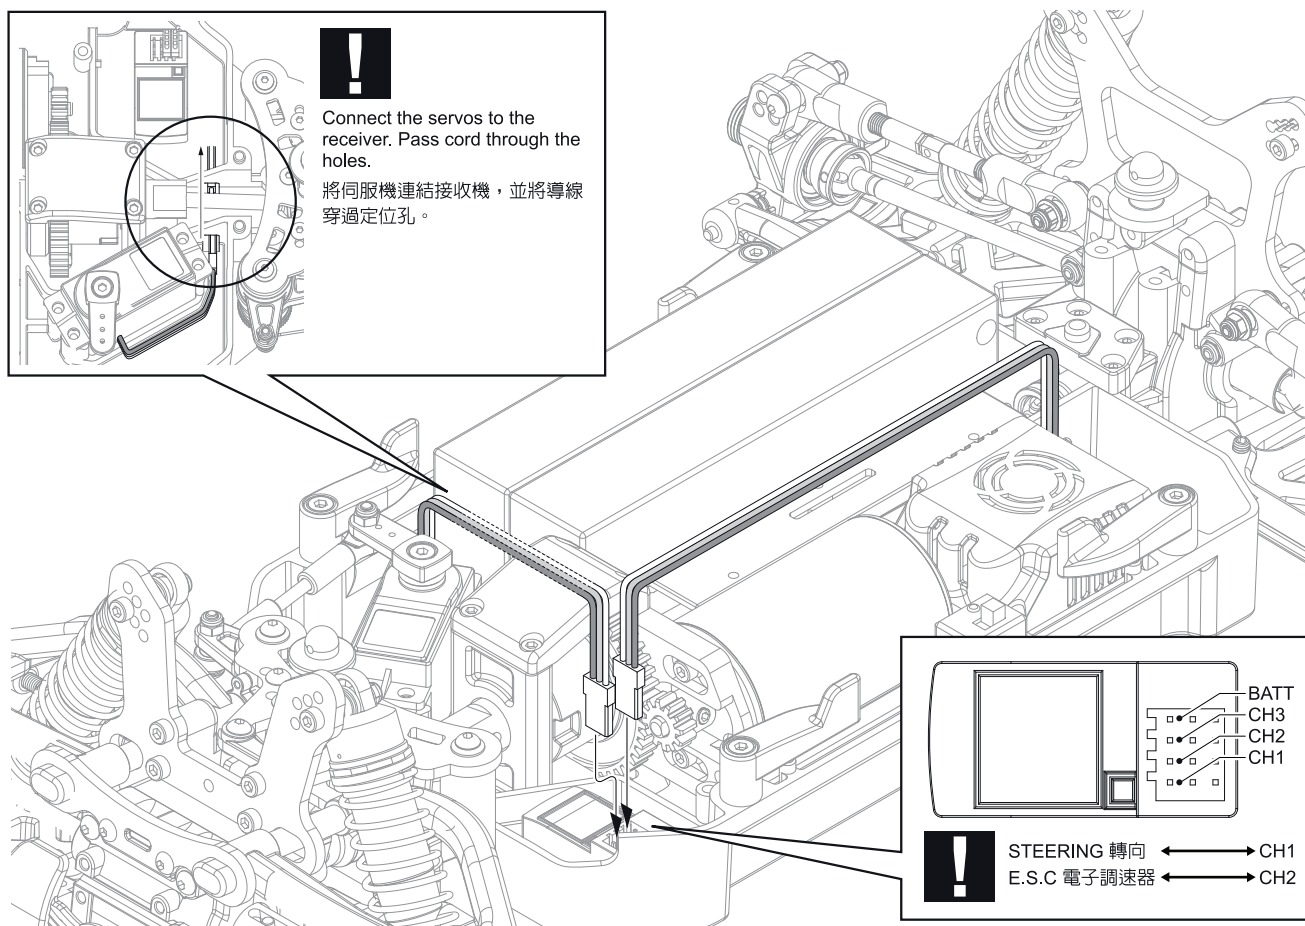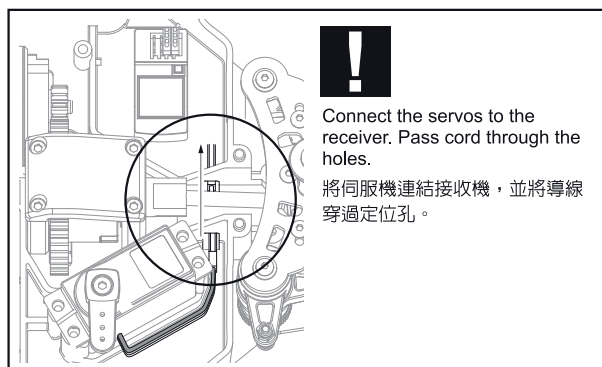


STEP32 Electronic Speed Controller (E.S.C 電子調速器)

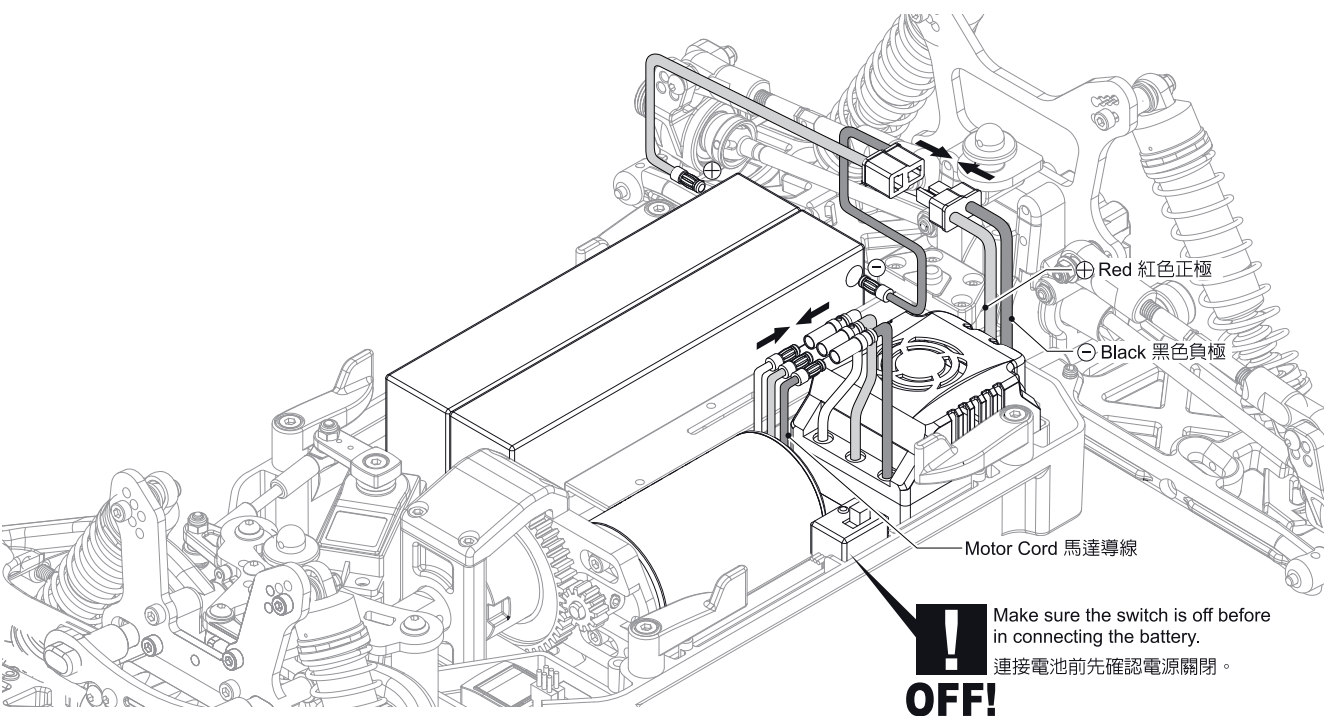


! Pay attention
組裝注意


STEP33 Radio Antenna 接收天線

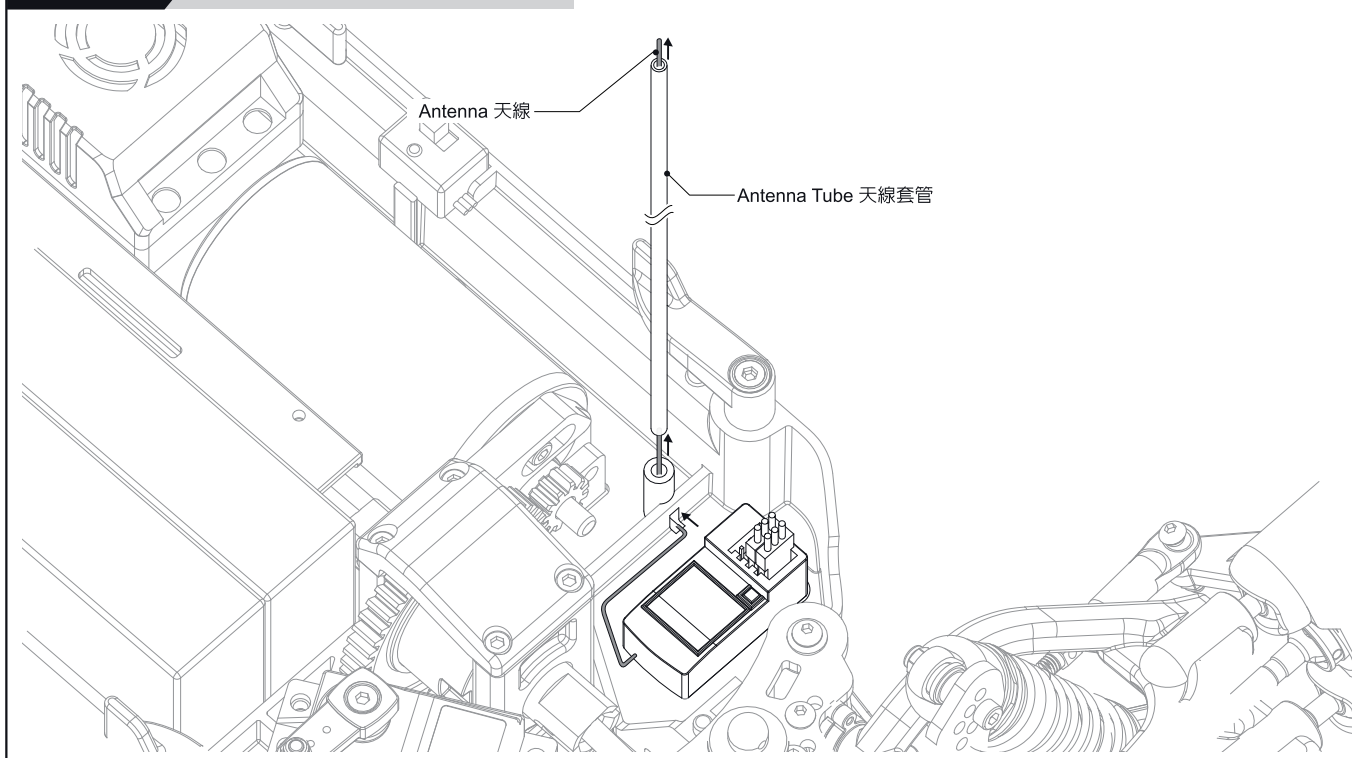


STEP34 Chassis Cover 底板護蓋

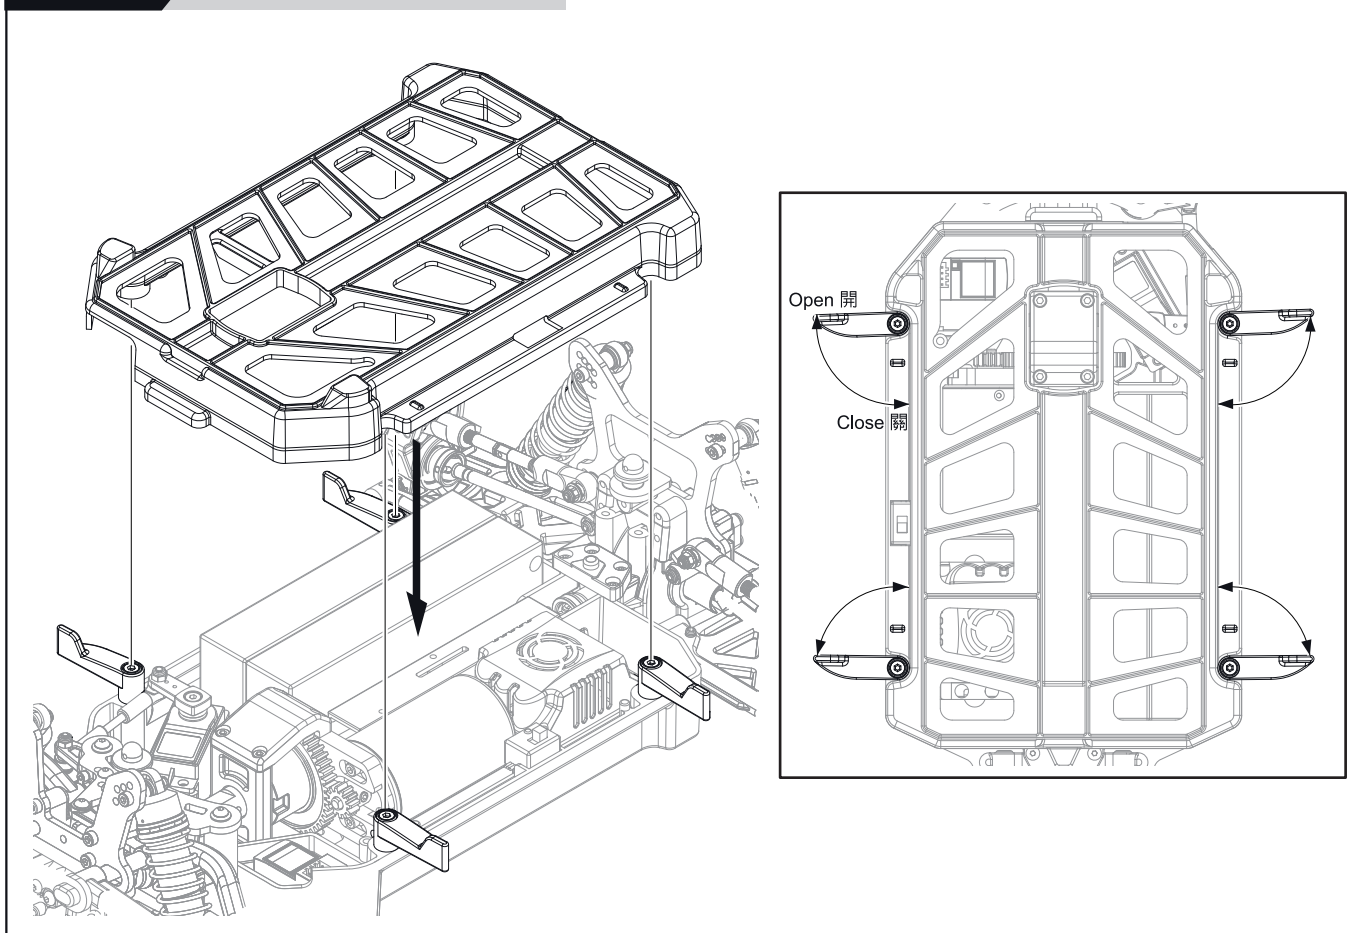

STEP35 Rear Wing Mount 尾翼固定座 (1)




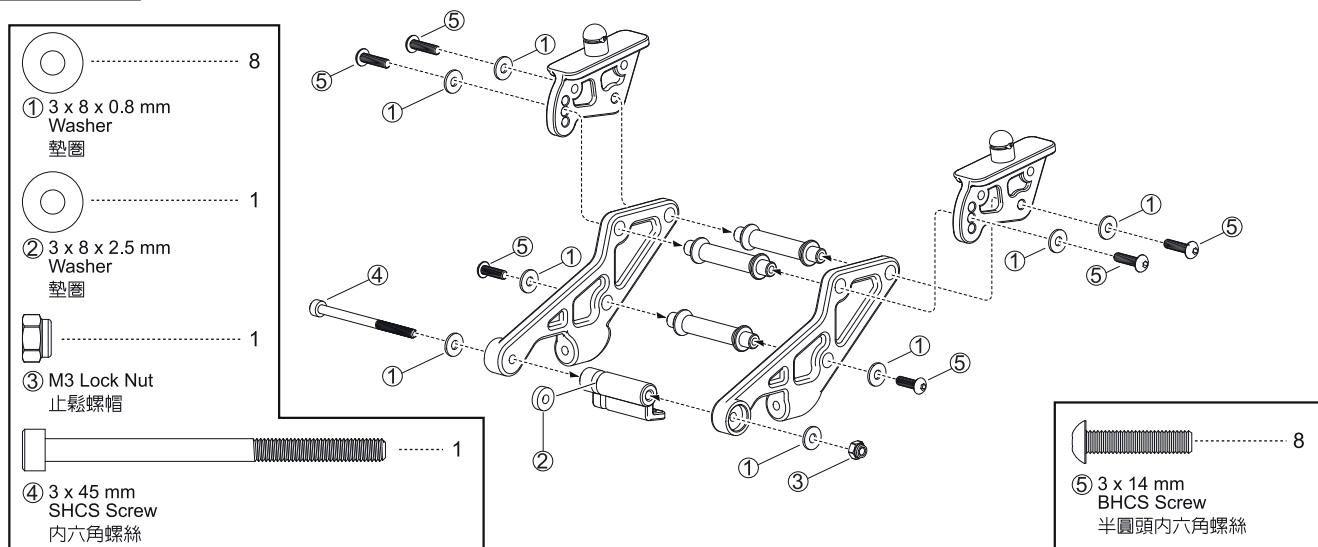


STEP36 Rear Wing Mount 尾翼固定座 (2)

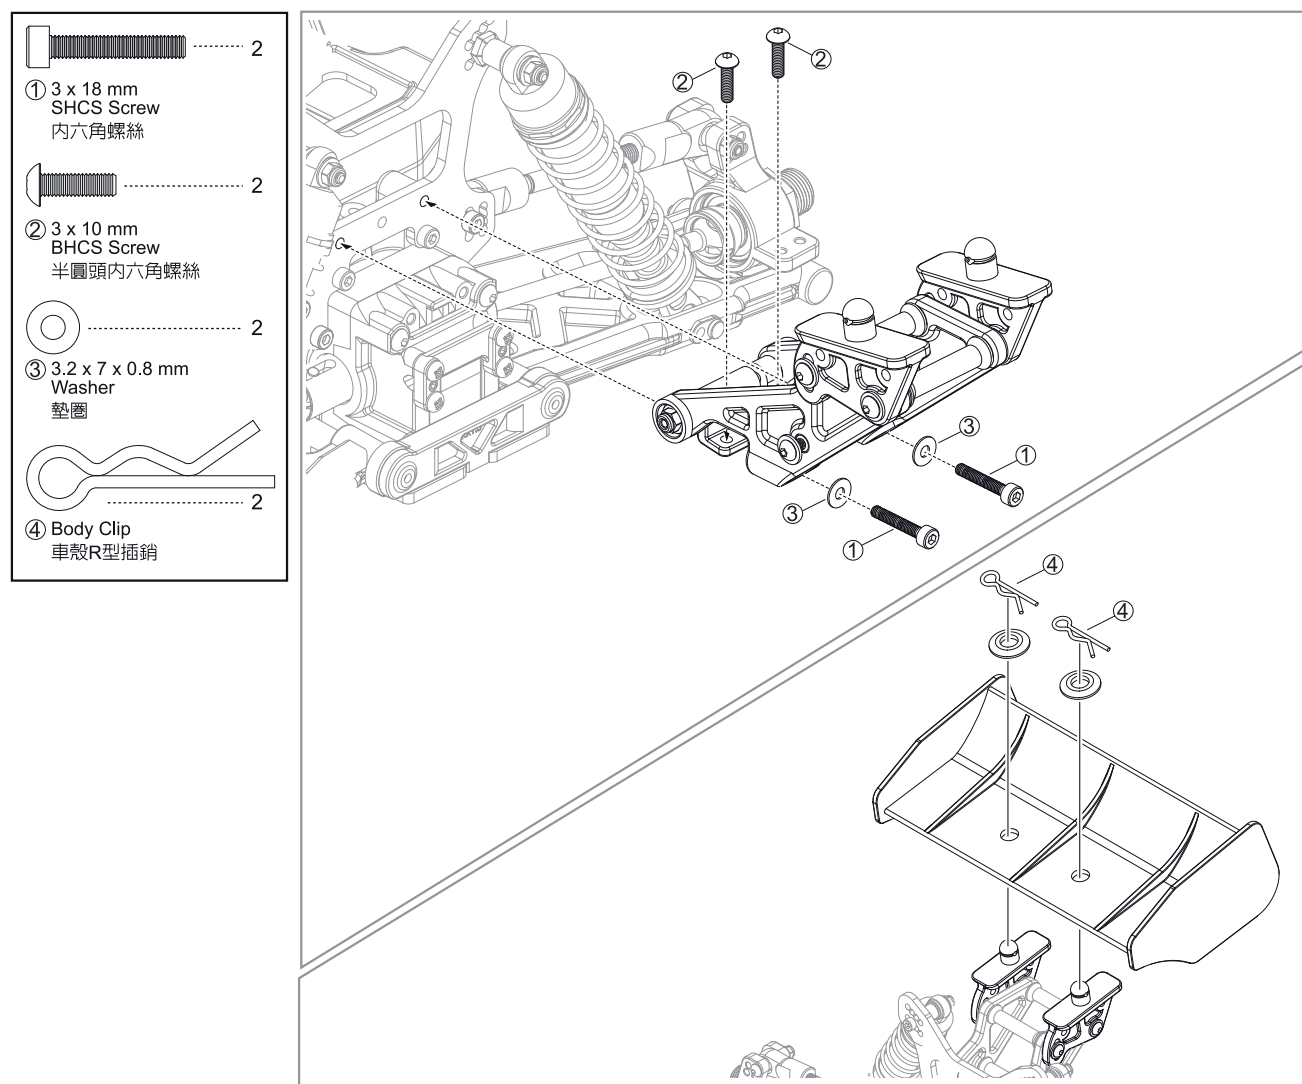

STEP37 Tires & Wheels 輪胎與輪轂 (1)


x4

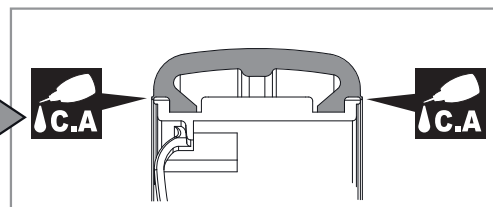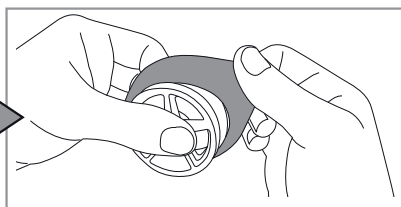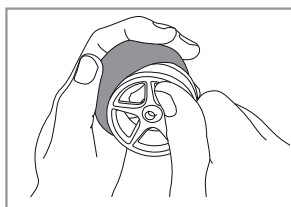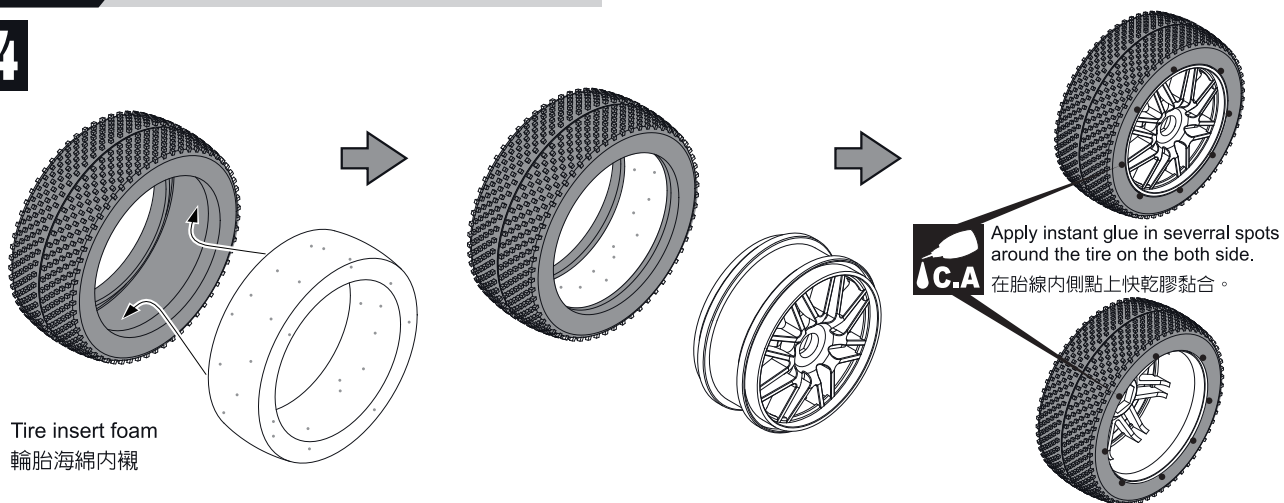

Install the tire onto the wheel. Glue the tire to the wheel with instant glue in several spots around the tire on both sides.
將輪胎（含內襯）與輪轂結合並在胎緣內側點上快乾膠黏合。

Warning: Follow the adhesive instructions for proper use and safety. Wear eye and hand protection.
注意！！使用快乾膠時請注意安全，最好戴上手套及護目鏡以避免危險。

STEP38 Tires & Wheels 輪胎與輪轂 (2)

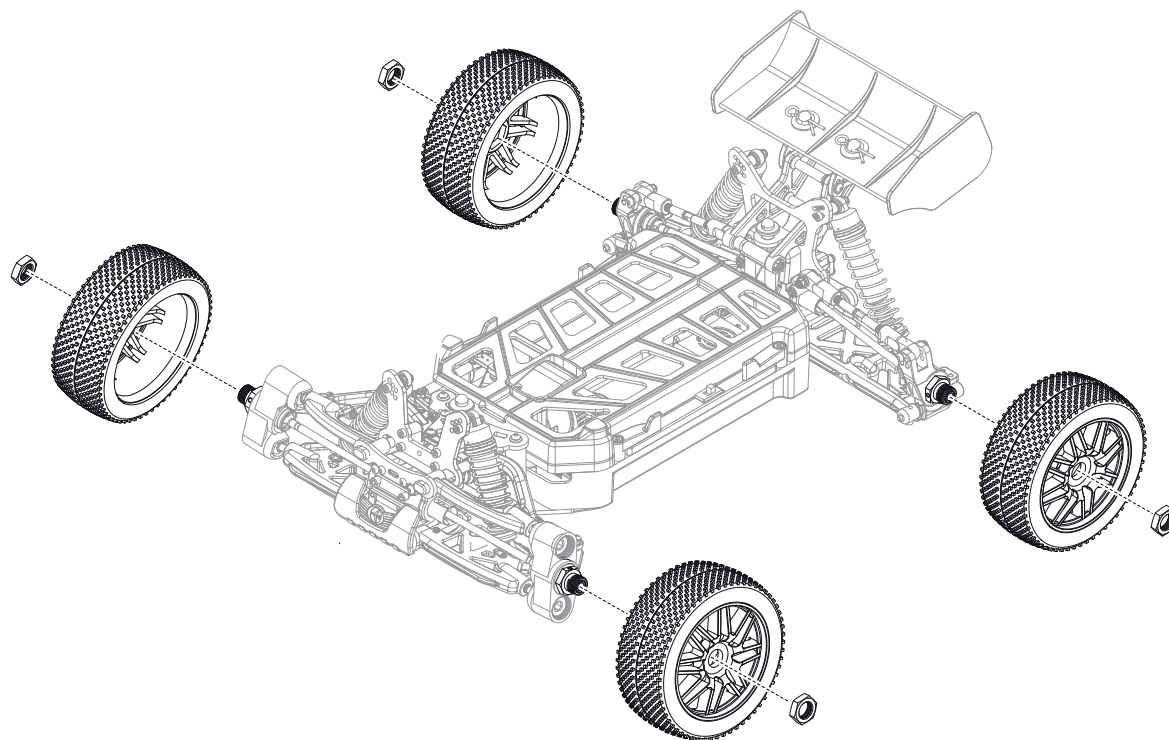

Hint
組裝提示





Pay attention
組裝注意

x4

Assemble as many times as specified
依指示組裝所需數量

STEP39 Body Shell 車殼



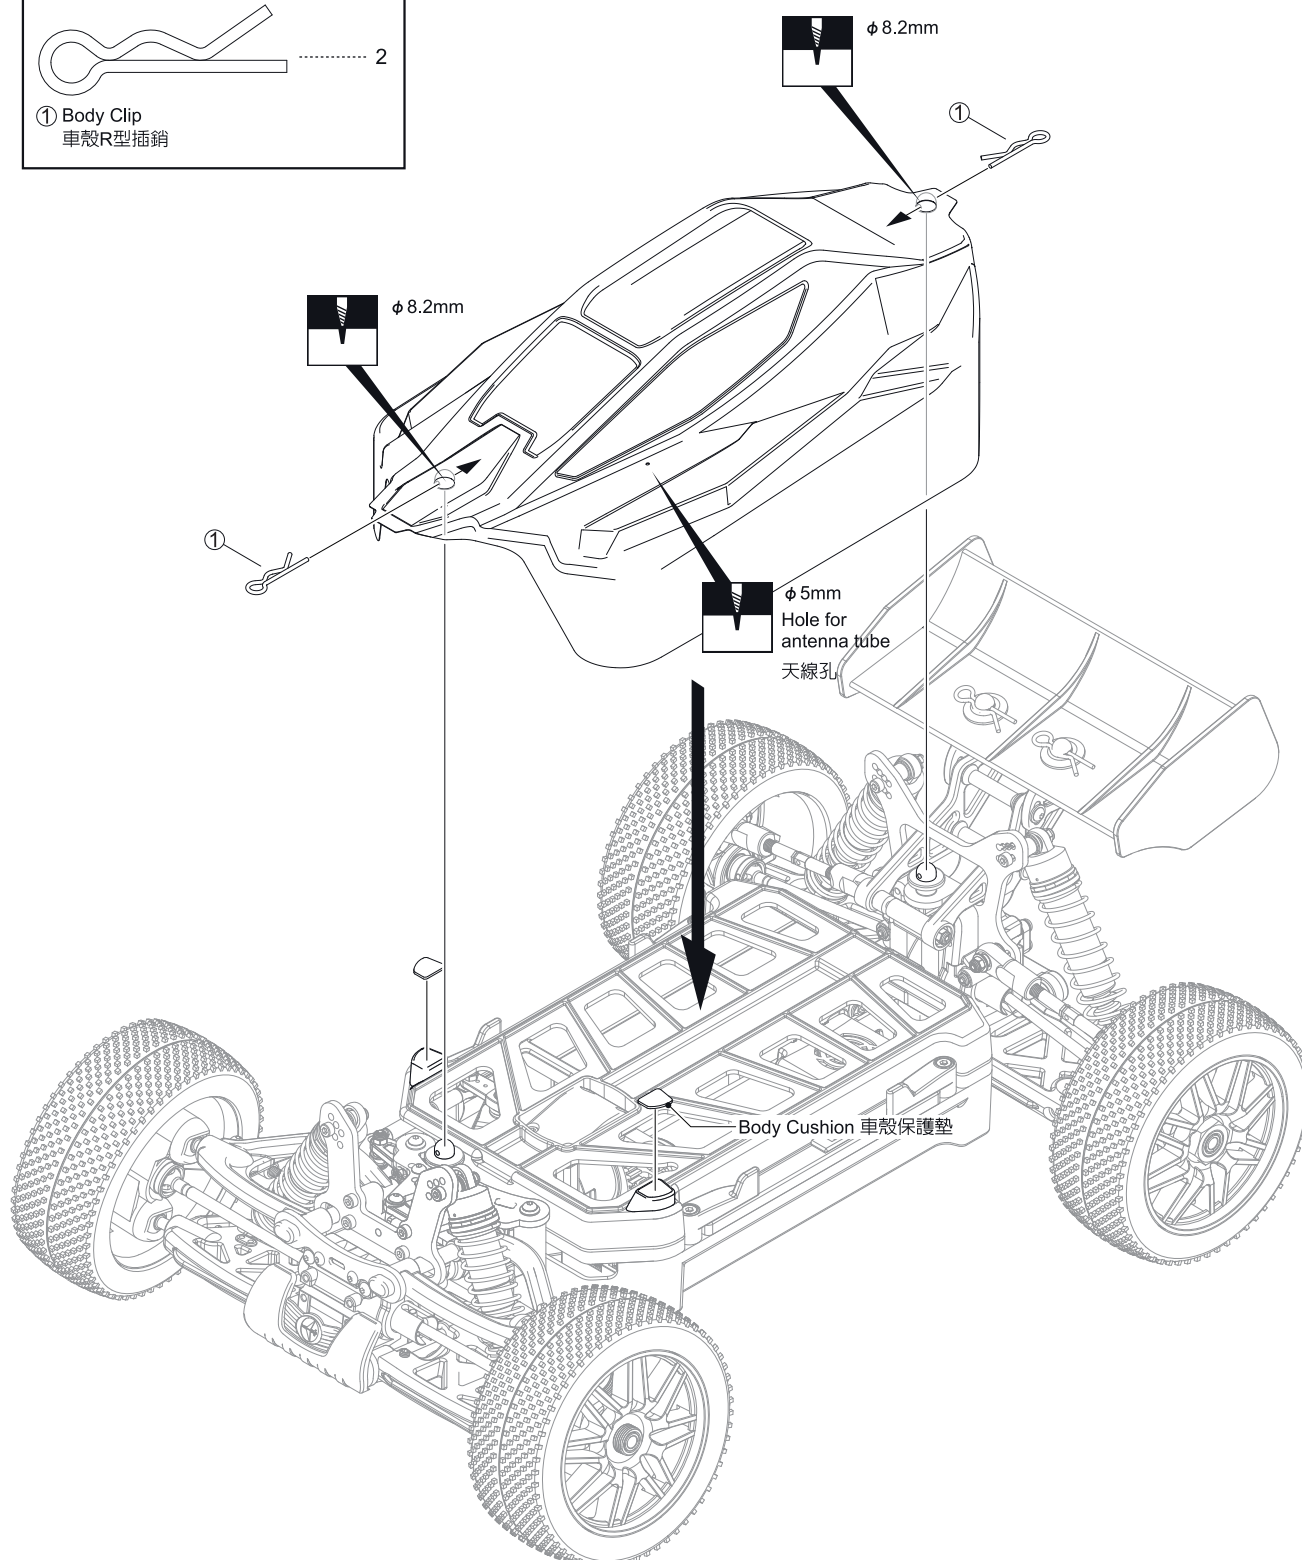
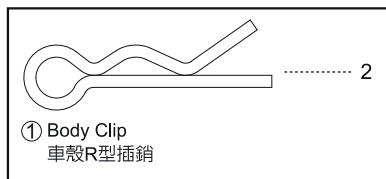


Drill holes with the specified diameter
依標示尺寸鑽孔

OPTIONAL PARTS

Front Sway Bar 前防傾桿 (選購零件)

-  1
- ① M3 x 16 mm
BHCS Screw
半圓頭內六角螺絲
-  4
- ② M3 x 10mm
BHCS Screw
半圓頭內六角螺絲
-  2
- ③ M3 x 3
無頭內六角螺絲
-  2
- ④ M3 x 5
無頭內六角螺絲

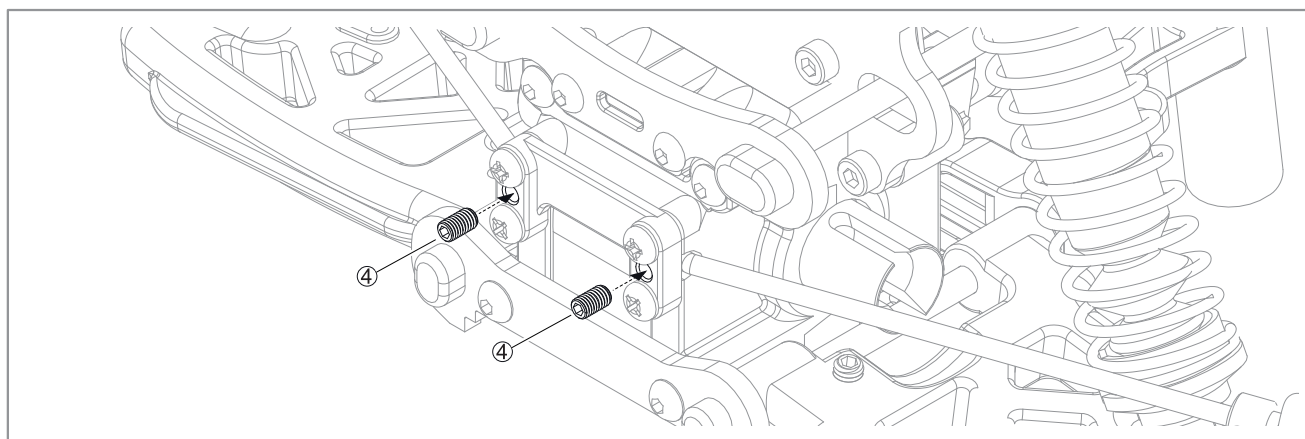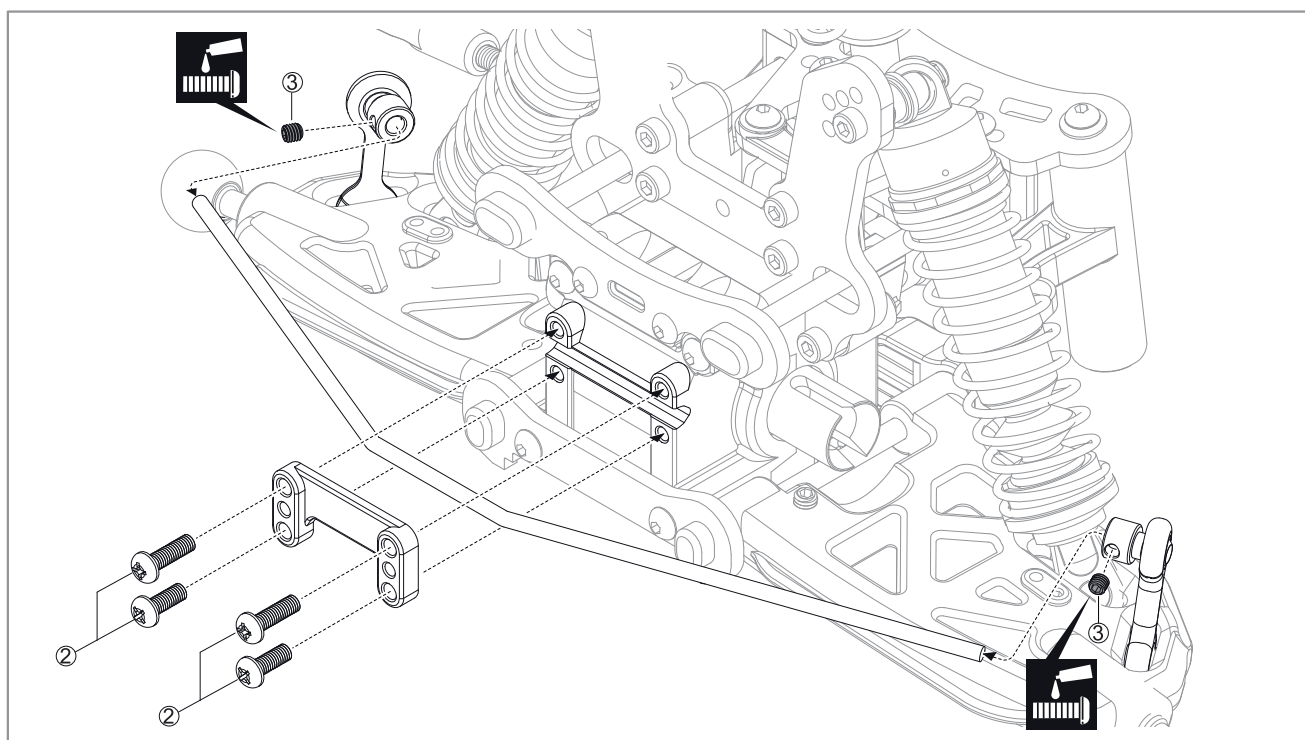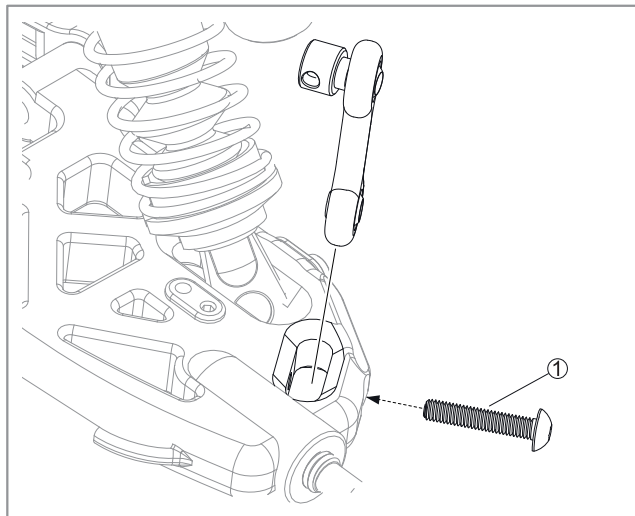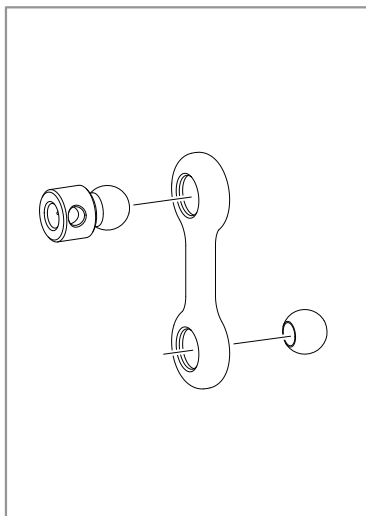

Apply threadlocker
使用螺絲防鬆膠

OPTIONAL PARTS

 
Rear Sway Bar 後防傾桿 (選購零件)




- ① M3 x 22 mm
BHCS Screw
半圓頭內六角螺絲



- ② M3 x 10mm
BHCS Screw
半圓頭內六角螺絲







- ③ M3 x 3
無頭內六角螺絲

 

- ④ M3 x 5
無頭內六角螺絲



- ⑤ M3 x 15
無頭內六角螺絲

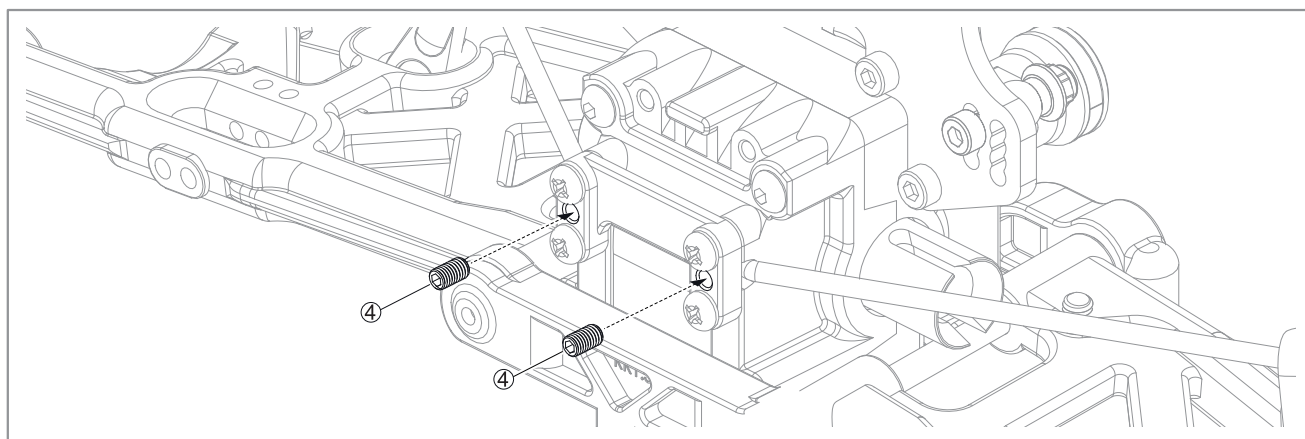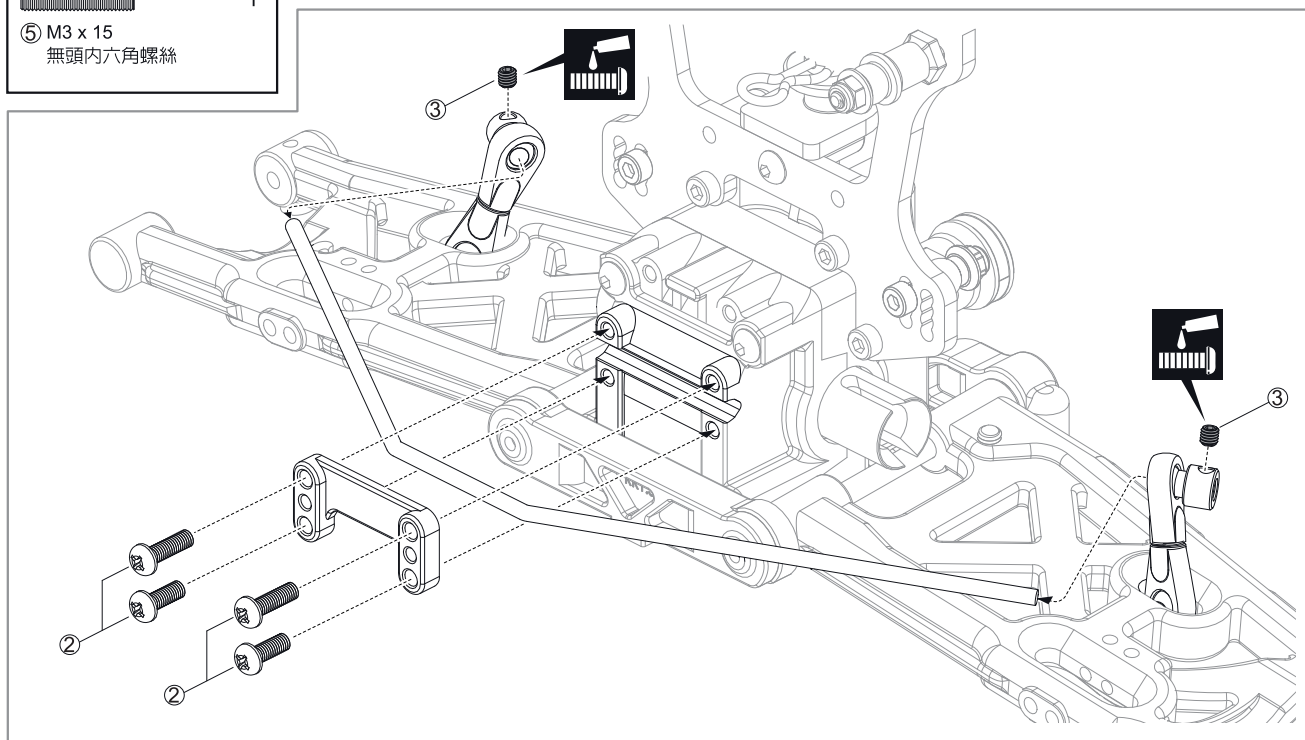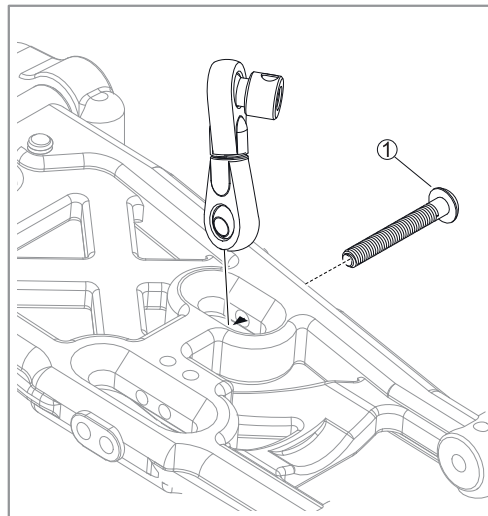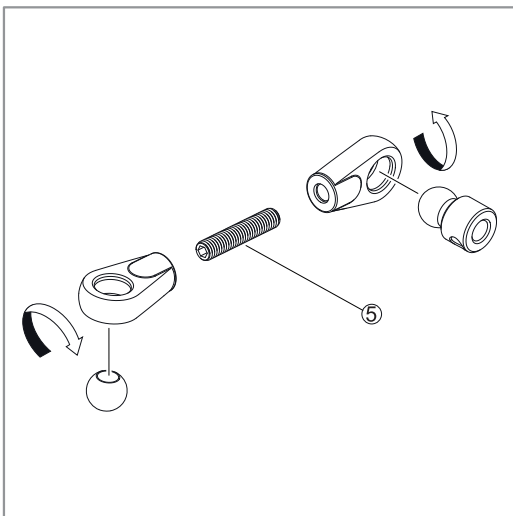

Apply threadlocker
使用螺絲防鬆膠


OPTIONAL PARTS Changing Gear Ratio 更換齒比



This gear ratio chart shows the recommended combinations of spurs and pinions. Increasing the gear ratio will result in higher Max. Speed, but will also increase the temperature of the motor. Be note that the motor temperature does not exceed 190F / 88°C. If the motor temperature is too high, reduce the gear ratio by changing a smaller pinion gear and / or a bigger spur gear.


此表顯示最終驅動比與驅動大齒盤和馬達齒輪之間的關係。我們強烈建議操作者在更換齒輪 / 齒盤時應以這張表為更換基準。驅動齒比增大，將提升車子操控的極速，但馬達溫度也將相對升溫。為避免因為驅動齒比更換不當導致馬達過熱燒毀，請注意馬達操作溫度勿超過華氏溫度190度 / 攝氏溫度88度。調降更改齒比 (更換較小馬達齒輪和 / 或較大驅動齒盤) 將有助於馬達的降溫。

 ! Motor Max Temp.
馬達最高溫度



190°F
88°C

 
! Battery Max Temp.
電池最高溫度



140°F
60°C

Gear Ratio Chart 驅動齒比對照表

Pinion Gear 馬達齒輪			12T	Standard 標準 13T	14T	15T
Spur Gear 驅動大齒盤		48T	13.23	12.21	11.34	10.58
		Standard 標準 50T	13.78	12.72	11.81	11.02
Cautions 警告 ESC might be HOT. Check temperature often. 速控器可能會過熱，請隨時檢測溫度。						
Max. Speed 最高速			Slower 低速 ← → 高速 Faster			
Acceleration 加速			Quicker 快速 ← → 緩慢 Slower			

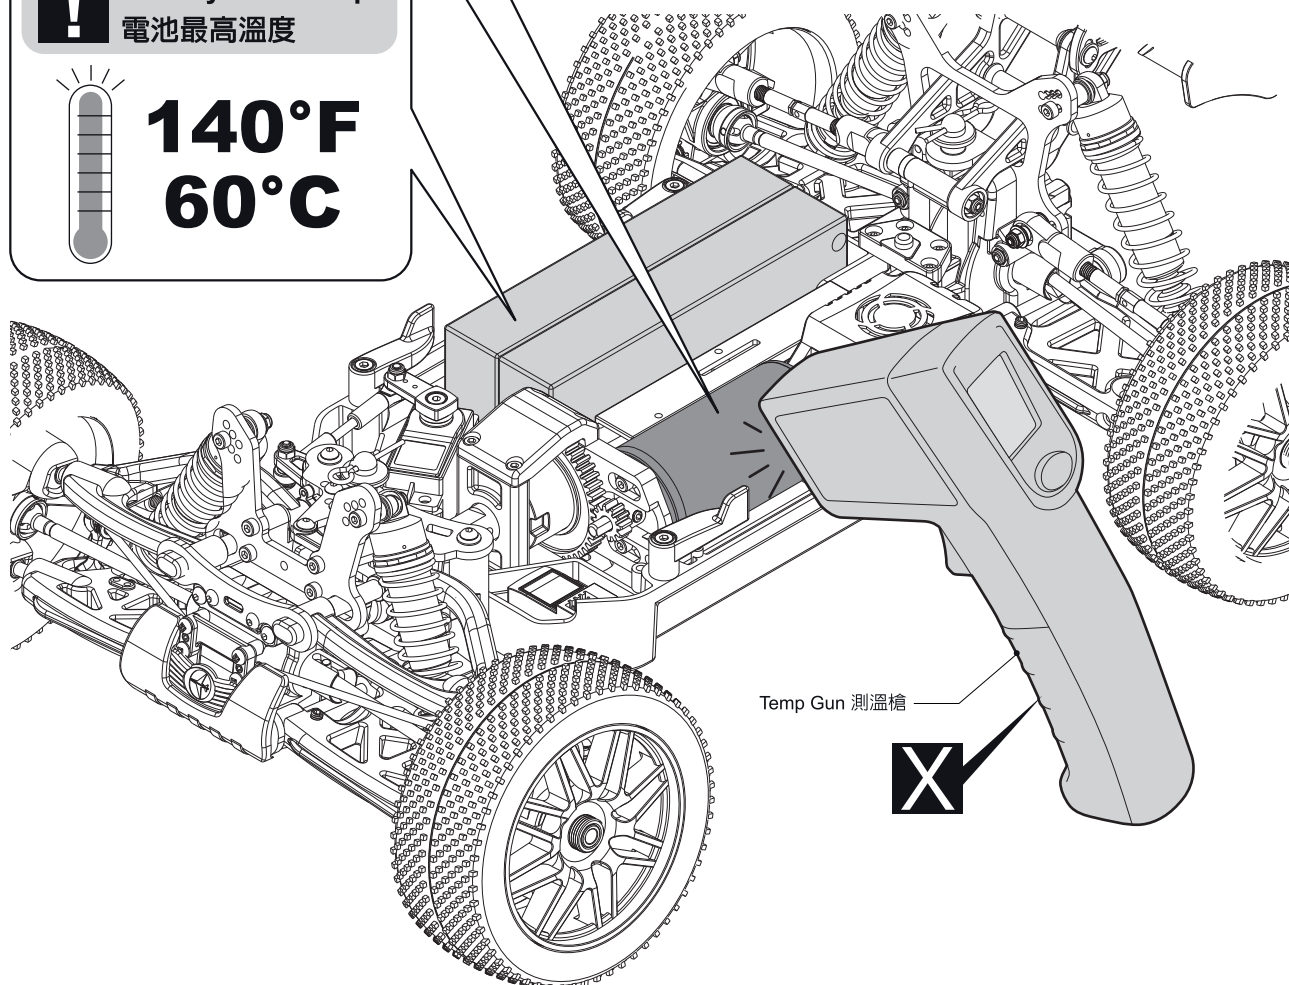

Temp Gun 測溫槍



Hint
組裝提示




Pay attention
組裝注意



Must be purchased separately
改裝品需另購


FR / RR DIFF. ASSEMBLY

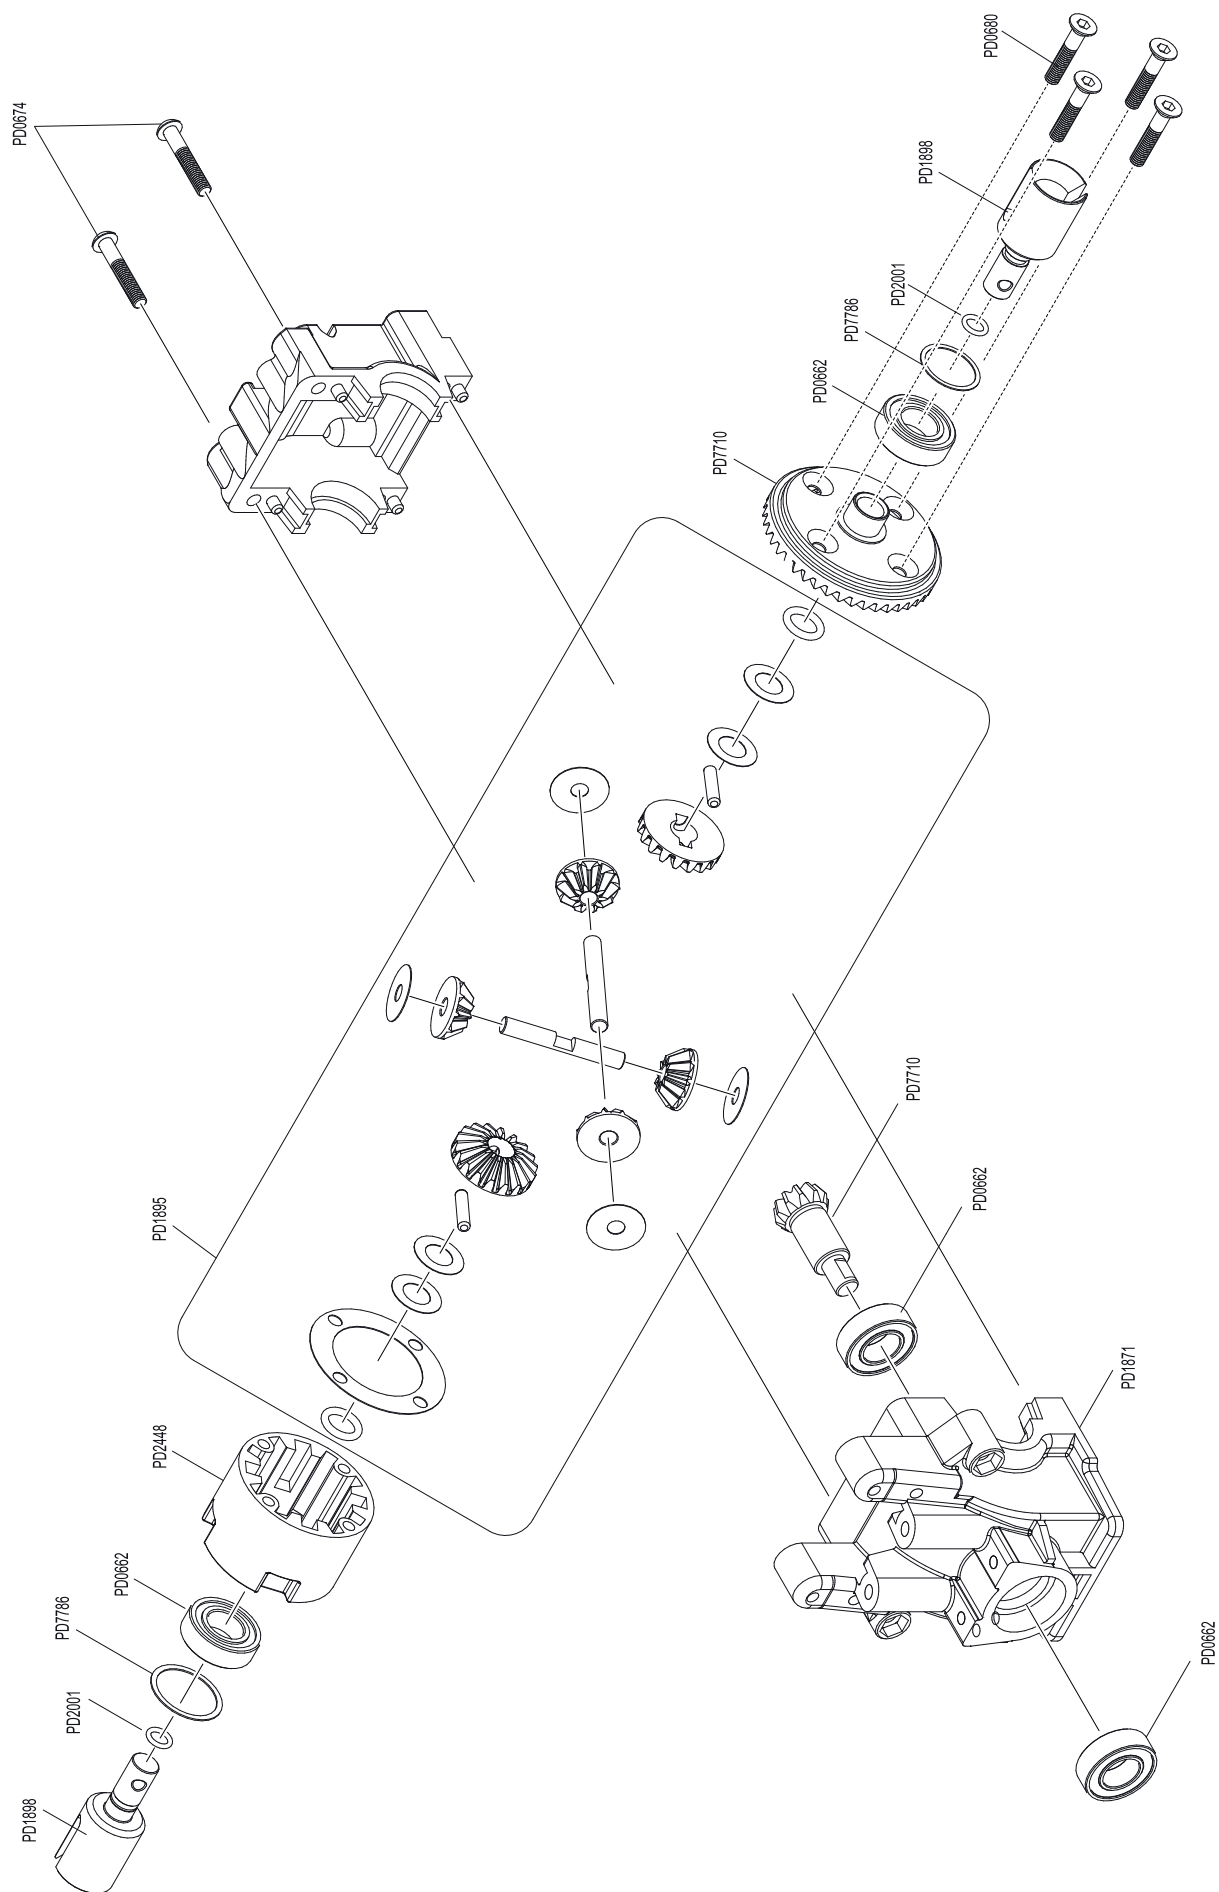


This technical diagram illustrates the exploded view of a vehicle chassis and suspension system. The components are labeled with part numbers, including:

- Chassis and Body:** PD1949, PD1903-B, PD1981-W, PD08-0014, PD1924, PD1970, PD08-0014, PD1924, PD1970, PD08-0014.
- Wheels and Tires:** PD1981-W, PD08-0014, PD1924, PD1970, PD08-0014.
- Suspension and Steering Components:** PD1921, PD1922, PD1978, PD1976, PD1977, PD1979, PD1982, PD1983, PD1984, PD1985, PD1986, PD1987, PD1988, PD1989, PD1990, PD1991, PD1992, PD1993, PD1994, PD1995, PD1996, PD1997, PD1998, PD1999, PD2000, PD2001, PD2002, PD2003, PD2004, PD2005, PD2006, PD2007, PD2008, PD2009, PD2010, PD2011, PD2012, PD2013, PD2014, PD2015, PD2016, PD2017, PD2018, PD2019, PD2020, PD2021, PD2022, PD2023, PD2024, PD2025, PD2026, PD2027, PD2028, PD2029, PD2030, PD2031, PD2032, PD2033, PD2034, PD2035, PD2036, PD2037, PD2038, PD2039, PD2040, PD2041, PD2042, PD2043, PD2044, PD2045, PD2046, PD2047, PD2048, PD2049, PD2050, PD2051, PD2052, PD2053, PD2054, PD2055, PD2056, PD2057, PD2058, PD2059, PD2060, PD2061, PD2062, PD2063, PD2064, PD2065, PD2066, PD2067, PD2068, PD2069, PD2070, PD2071, PD2072, PD2073, PD2074, PD2075, PD2076, PD2077, PD2078, PD2079, PD2080, PD2081, PD2082, PD2083, PD2084, PD2085, PD2086, PD2087, PD2088, PD2089, PD2090, PD2091, PD2092, PD2093, PD2094, PD2095, PD2096, PD2097, PD2098, PD2099, PD2100, PD2101, PD2102, PD2103, PD2104, PD2105, PD2106, PD2107, PD2108, PD2109, PD2110, PD2111, PD2112, PD2113, PD2114, PD2115, PD2116, PD2117, PD2118, PD2119, PD2120, PD2121, PD2122, PD2123, PD2124, PD2125, PD2126, PD2127, PD2128, PD2129, PD2130, PD2131, PD2132, PD2133, PD2134, PD2135, PD2136, PD2137, PD2138, PD2139, PD2140, PD2141, PD2142, PD2143, PD2144, PD2145, PD2146, PD2147, PD2148, PD2149, PD2150, PD2151, PD2152, PD2153, PD2154, PD2155, PD2156, PD2157, PD2158, PD2159, PD2160, PD2161, PD2162, PD2163, PD2164, PD2165, PD2166, PD2167, PD2168, PD2169, PD2170, PD2171, PD2172, PD2173, PD2174, PD2175, PD2176, PD2177, PD2178, PD2179, PD2180, PD2181, PD2182, PD2183, PD2184, PD2185, PD2186, PD2187, PD2188, PD2189, PD2190, PD2191, PD2192, PD2193, PD2194, PD2195, PD2196, PD2197, PD2198, PD2199, PD2200, PD2201, PD2202, PD2203, PD2204, PD2205, PD2206, PD2207, PD2208, PD2209, PD2210, PD2211, PD2212, PD2213, PD2214, PD2215, PD2216, PD2217, PD2218, PD2219, PD2220, PD2221, PD2222, PD2223, PD2224, PD2225, PD2226, PD2227, PD2228, PD2229, PD2230, PD2231, PD2232, PD2233, PD2234, PD2235, PD2236, PD2237, PD2238, PD2239, PD2240, PD2241, PD2242, PD2243, PD2244, PD2245, PD2246, PD2247, PD2248, PD2249, PD2250, PD2251, PD2252, PD2253, PD2254, PD2255, PD2256, PD2257, PD2258, PD2259, PD2260, PD2261, PD2262, PD2263, PD2264, PD2265, PD2266, PD2267, PD2268, PD2269, PD2270, PD2271, PD2272, PD2273, PD2274, PD2275, PD2276, PD2277, PD2278, PD2279, PD2280, PD2281, PD2282, PD2283, PD2284, PD2285, PD2286, PD2287, PD2288, PD2289, PD2290, PD2291, PD2292, PD2293, PD2294, PD2295, PD2296, PD2297, PD2298, PD2299, PD2300, PD2301, PD2302, PD2303, PD2304, PD2305, PD2306, PD2307, PD2308, PD2309, PD2310, PD2311, PD2312, PD2313, PD2314, PD2315, PD2316, PD2317, PD2318, PD2319, PD2320, PD2321, PD2322, PD2323, PD2324, PD2325, PD2326, PD2327, PD2328, PD2329, PD2330, PD2331, PD2332, PD2333, PD2334, PD2335, PD2336, PD2337, PD2338, PD2339, PD2340, PD2341, PD2342, PD2343, PD2344, PD2345, PD2346, PD2347, PD2348, PD2349, PD2350, PD2351, PD2352, PD2353, PD2354, PD2355, PD2356, PD2357, PD2358, PD2359, PD2360, PD2361, PD2362, PD2363, PD2364, PD2365, PD2366, PD2367, PD2368, PD2369, PD2370, PD2371, PD2372, PD2373, PD2374, PD2375, PD2376, PD2377, PD2378, PD2379, PD2380, PD2381, PD2382, PD2383, PD2384, PD2385, PD2386, PD2387, PD2388, PD2389, PD2390, PD2391, PD2392, PD2393, PD2394, PD2395, PD2396, PD2397, PD2398, PD2399, PD2400, PD2401, PD2402, PD2403, PD2404, PD2405, PD2406, PD2407, PD2408, PD2409, PD2410, PD2411, PD2412, PD2413, PD2414, PD2415, PD2416, PD2417, PD2418, PD2419, PD2420, PD2421, PD2422, PD2423, PD2424, PD2425, PD2426, PD2427, PD2428, PD2429, PD2430, PD2431, PD2432, PD2433, PD2434, PD2435, PD2436, PD2437, PD2438, PD2439, PD2440, PD2441, PD2442, PD2443, PD2444, PD2445, PD2446, PD2447, PD2448, PD2449, PD2450, PD2451, PD2452, PD2453, PD2454, PD2455, PD2456, PD2457, PD2458, PD2459, PD2460, PD2461, PD2462, PD2463, PD2464, PD2465, PD2466, PD2467, PD2468, PD2469, PD2470, PD2471, PD2472, PD2473, PD2474, PD2475, PD2476, PD2477, PD2478, PD2479, PD2480, PD2481, PD2482, PD2483, PD2484, PD2485, PD2486, PD2487, PD2488, PD2489, PD2490, PD2491, PD2492, PD2493, PD2494, PD2495, PD2496, PD2497, PD2498, PD2499, PD2500, PD2501, PD2502, PD2503, PD2504, PD2505, PD2506, PD2507, PD2508, PD2509, PD2510, PD2511, PD2512, PD2513, PD2514, PD2515, PD2516, PD2517, PD2518, PD2519, PD2520, PD2521, PD2522, PD2523, PD2524, PD2525, PD2526, PD2527, PD2528, PD2529, PD2530, PD2531, PD2532, PD2533, PD2534, PD2535, PD2536, PD2537, PD2538, PD2539, PD2540, PD2541, PD2542, PD2543, PD2544, PD2545, PD2546, PD2547, PD2548, PD2549, PD2550, PD2551, PD2552, PD2553, PD2554, PD2555, PD2556, PD2557, PD2558, PD2559, PD2560, PD2561, PD2562, PD2563, PD2564, PD2565, PD2566, PD2567, PD2568, PD2569, PD2570, PD2571, PD2572, PD2573, PD2574, PD2575, PD2576, PD2577, PD2578, PD2579, PD2580, PD2581, PD2582, PD2583, PD2584, PD2585, PD2586, PD2587, PD2588, PD2589, PD2590, PD2591, PD2592, PD2593, PD2594, PD2595, PD2596, PD2597, PD2598, PD2599, PD2600, PD2601, PD2602, PD2603, PD2604, PD2605, PD2606, PD2607, PD2608, PD2609, PD2610, PD2611, PD2612, PD2613, PD2614, PD2615, PD2616, PD2617, PD2618, PD2619, PD2620, PD2621, PD2622, PD2623, PD2624,

FRONT ASSEMBLY

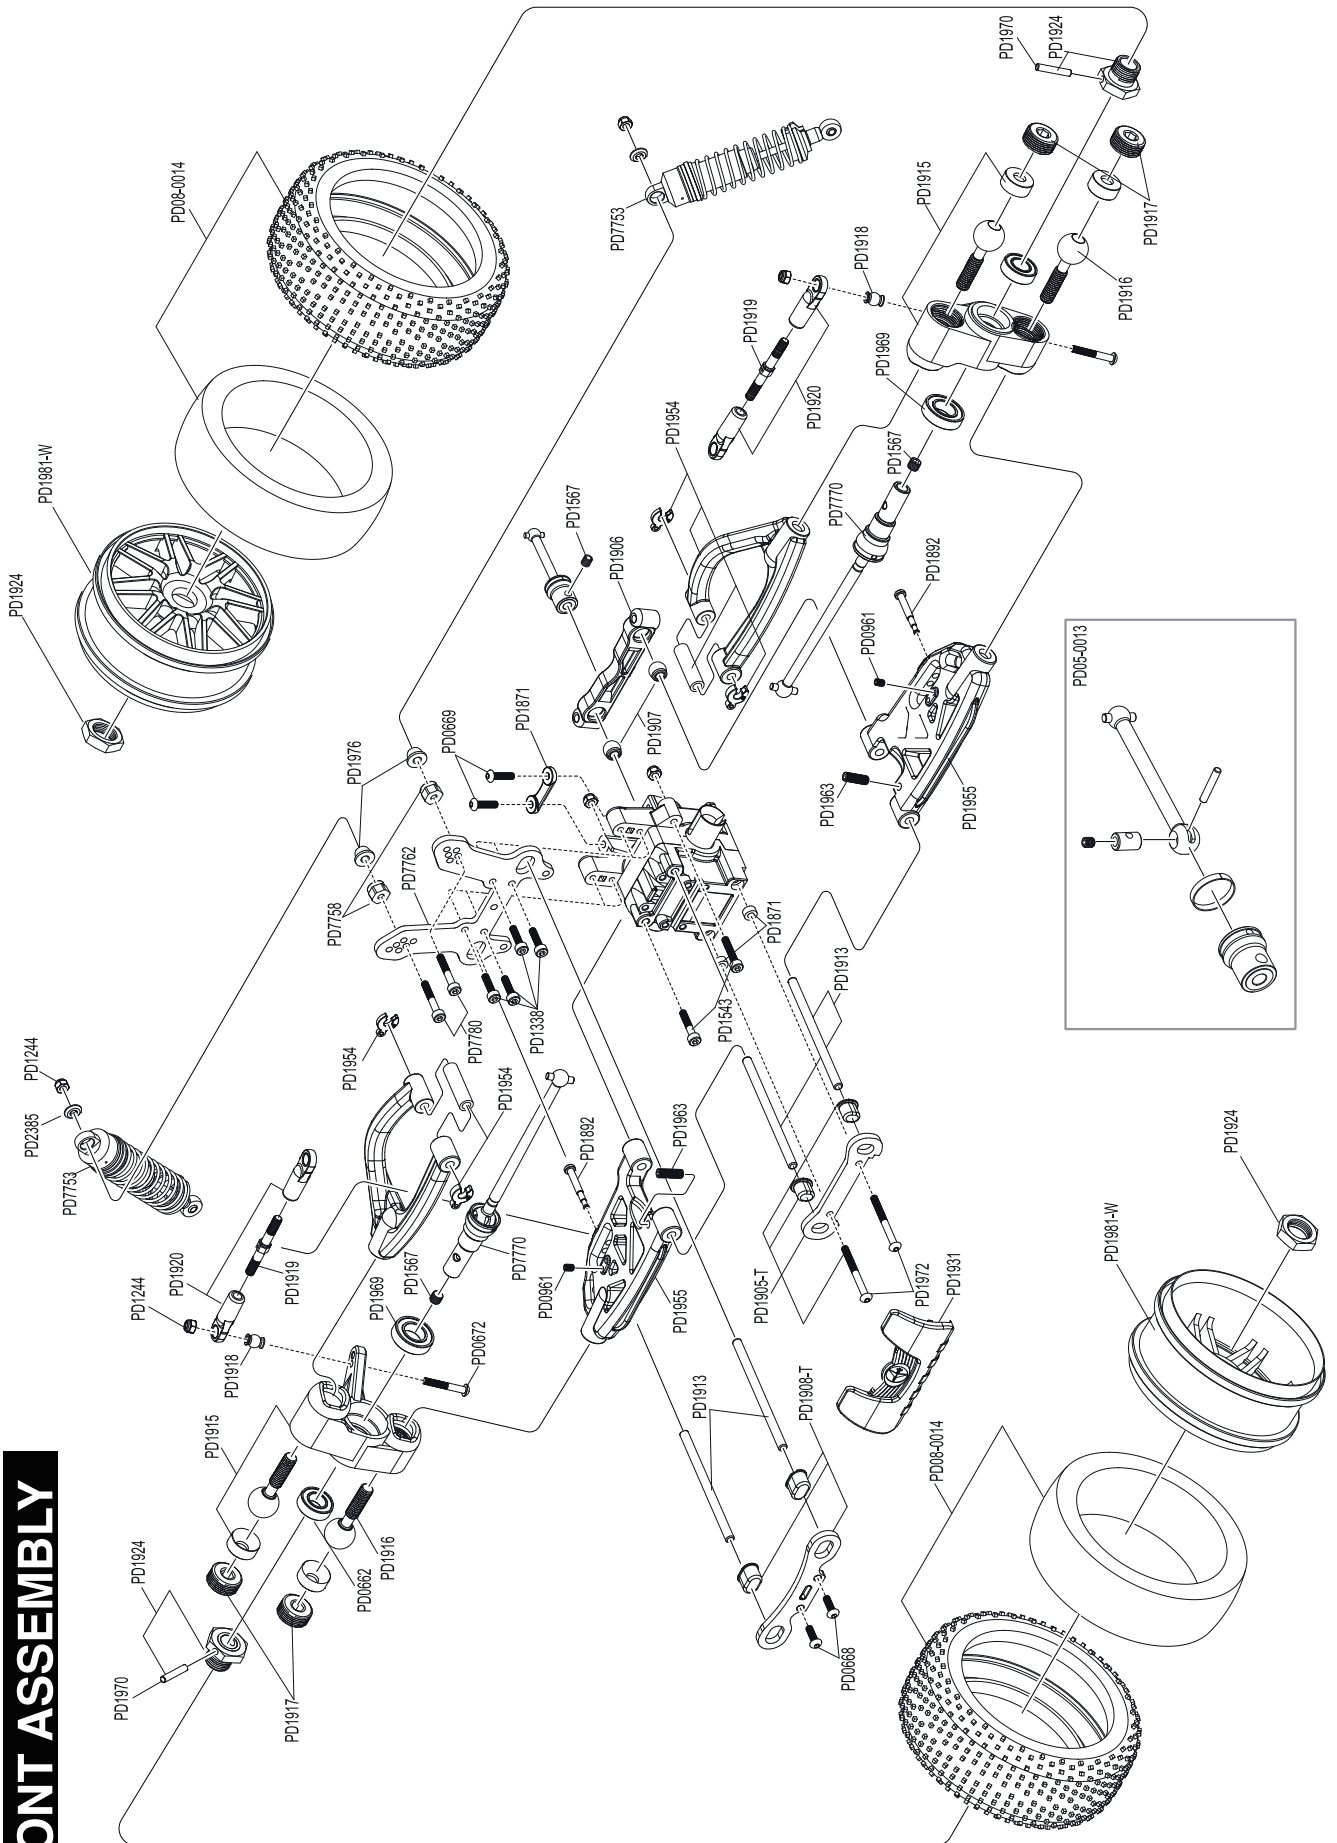

CHASSIS ASSEMBLY

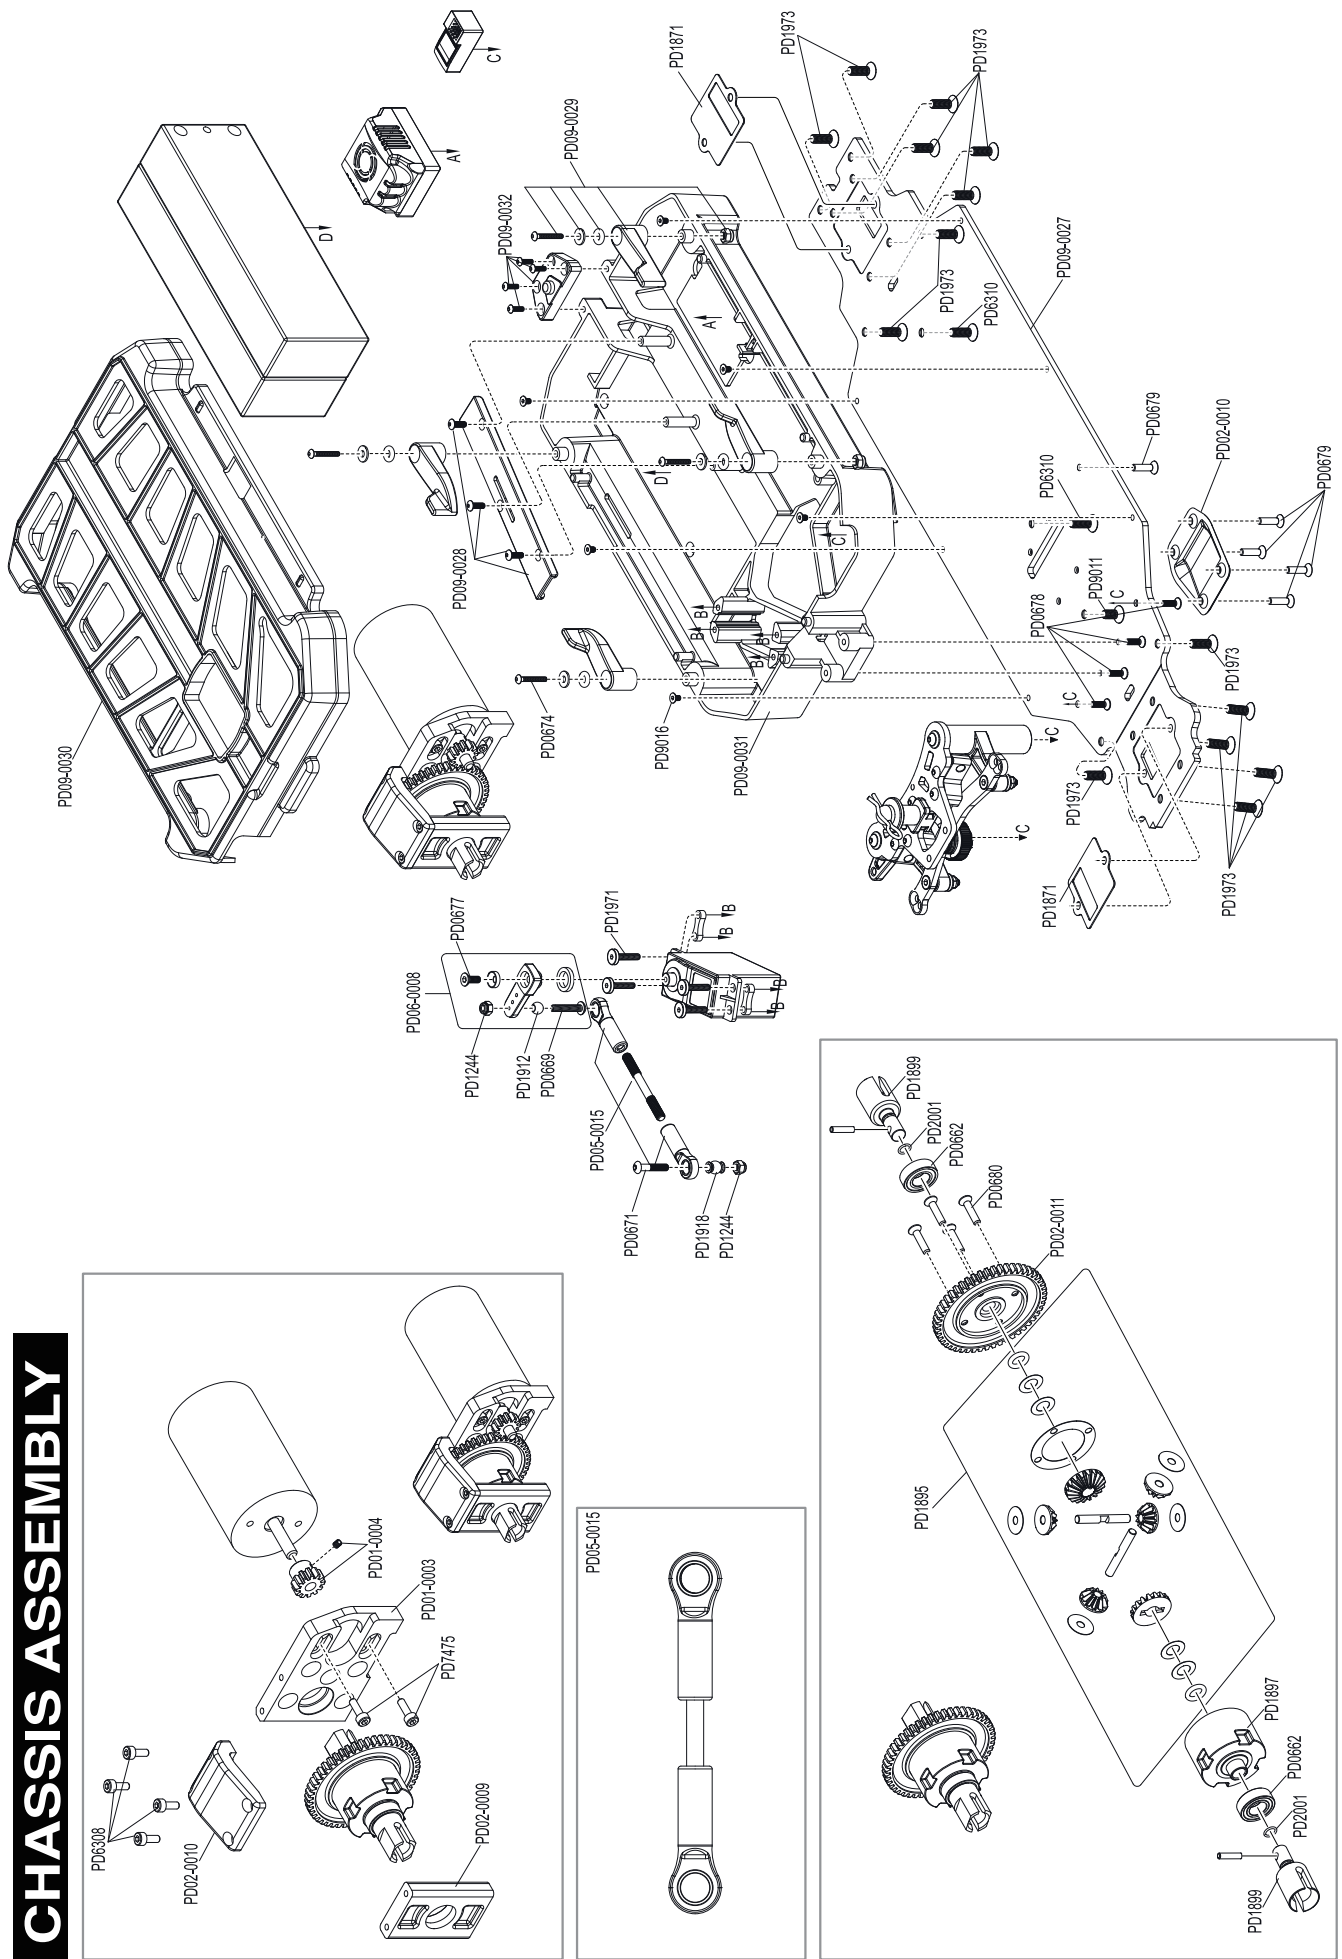


EB-4WD BUGGY SPARE PARTS LIST 零件表


FOR TRANS CASE, OUTSIDE



PD0662 BEARING SET, 8 x 16 x 5 mm
軸承, MSEAL 8 x 16 x 5

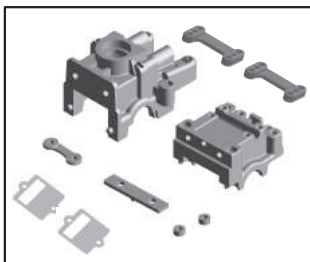


PD1871 TRANS CASE / BULKHEAD SET
差速箱本體

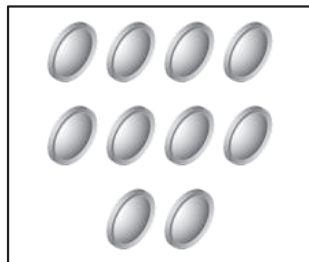


PD1880 SHOCK DIAPHRAGM
避震器空氣活門




PD1886 FR SHOCK SHAFT
後避震器軸

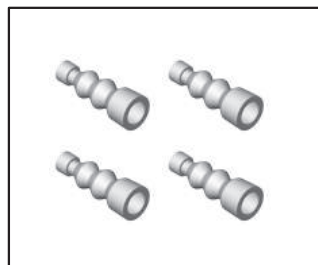

PD1887 FR SHOCK BOOT
前避震器腹套

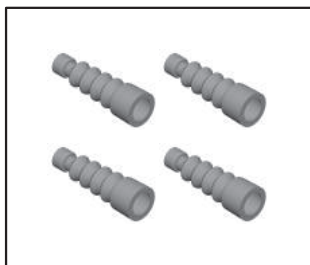


PD1888 RR SHOCK BOOT
後避震器腹套

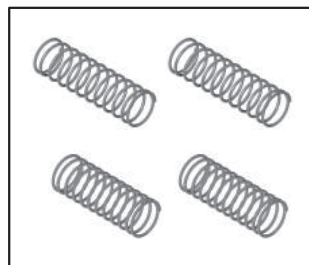


PD1889 FR / RR SHOCK SPRING
避震器彈簧



PD1890 SHOCK PLASTIC PARTS
避震器塑膠配件

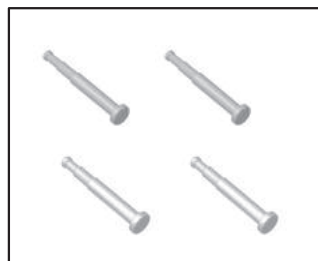

PD1892 FR / RR SHOCK SET PIN
避震器下固定銷

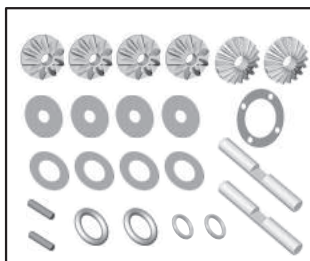

PD1895 DIFF. BEVEL GEARS & PARTS
差速內傘齒維修包, 10T / 18T




PD1897 DIFF. CASE
差速器本體



PD1898 DIFF. OUTDRIVE (2), FR / RR
差速傳動軸套



PD1899 DIFF. OUTDRIVE(2), CTR
中央差速傳動軸套

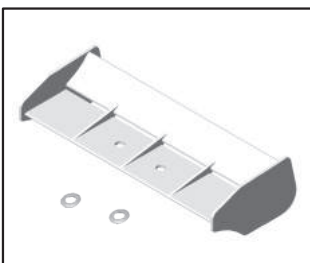


PD1903-B REAR WING (BLACK), 1 / 8
擾流尾翼(黑), 1 / 8



PD1905-T FF SUSP. PLATE SET
前投影板




PD1906 SUSP. PLATE SET
投影板組

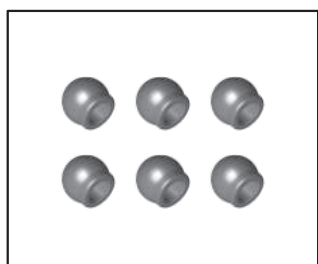


PD1907 SUSP. PLATE JOINT
球座




PD1908-T UP SUSP. ARM PLATE
上擺臂固定板

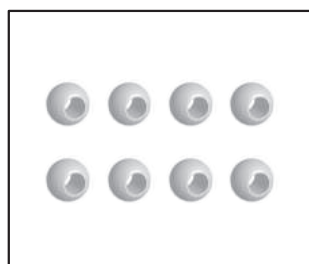

PD1912 PIVOT BALL
球頭

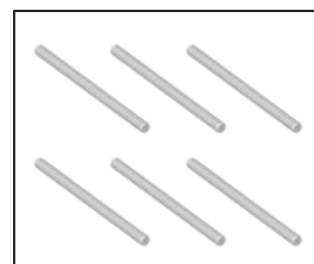


PD1913 SUSP. HINGE PIN SET
擺臂固定銷

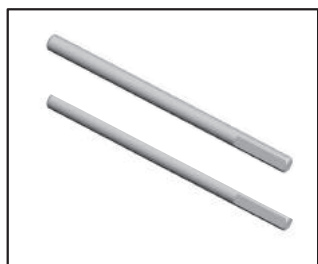


PD1914 RR LOWER HINGE PIN
後輪座固定銷



PD1915 KNUCKLE
轉向輪座組

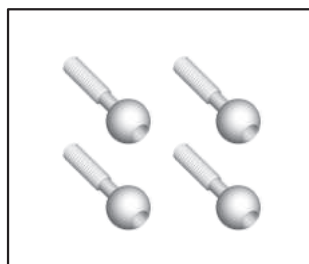


PD1916 ADJ. BALL
擺臂球頭

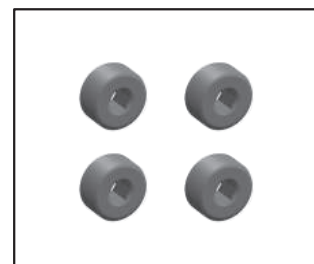

PD1917 ADJ. SCREW
轉向球頭固定螺絲

EB-4WD BUGGY SPARE PARTS LIST 零件表

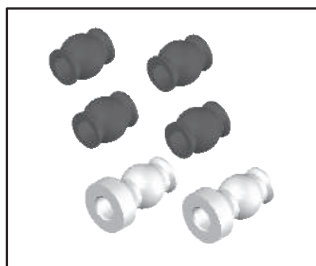


PD1918 ST. PIVOT BALL
轉向球座




PD1919 STEERING TURNBUCKLE
轉向拉桿



PD1920 ST. TIE END
轉向拉桿頭

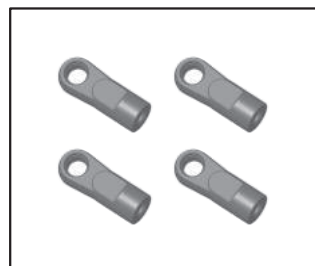


PD1921 RR TIE END
後上擺臂拉桿頭

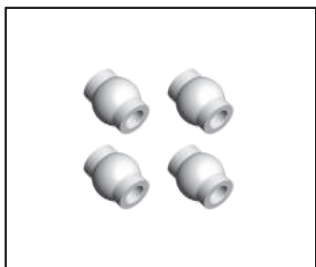

PD1922 RR PIVOT BALL
後上擺臂拉桿球座




PD1923 REAR HUB SET
後輪組

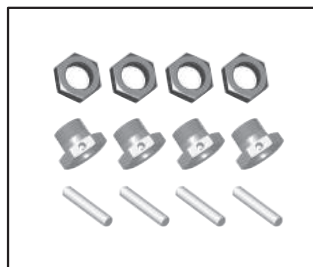

PD1924 HEX WHEEL ADAPTER SET
六角輪殼轉換器



PD1925 SERVO SAVER PL. PARTS
轉向搖臂塑件

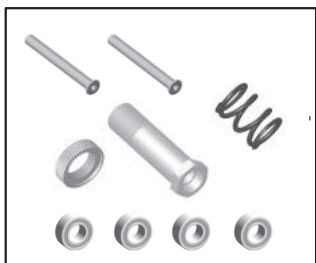

PD1926 SEVO SAVER ML. PARTS
轉向金屬配件




PD1927-T STEERING SLIDER
轉向曲板




PD1928 SERVO SAVER BUSHING
轉向曲板襯套



PD1931 FR BUMPER
前防撞板

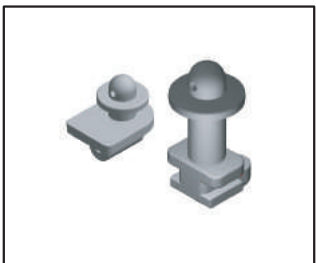

PD1935 FF / RR BODY MOUNT & POST
前車殼固定塊

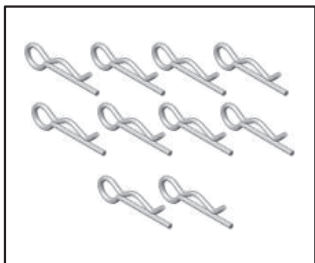

PD1949 R CLIPS (10), SHORT
R型插銷



PD1954 UP SUSP. ARM SET
上擺臂組



PD1955 LWR SUSP. ARM SET
下擺臂組




PD1956 REAR SUSP. ARM SET (2)
後擺臂組 (2)




PD1968 BEARING, d5 x D10 x W4
軸承




PD1969 BEARING, d10 x D19 x W5
軸承

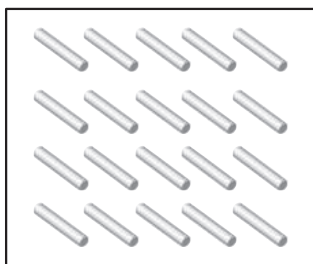

PD1970 DOWEL PIN SET
軸承滾針

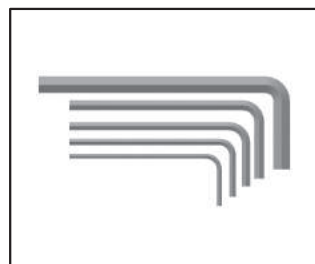

PD1975 HEX WRENCH SET
六角板手組

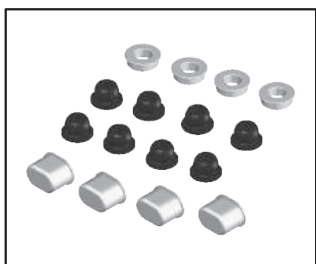

PD1976 SHOCK PLASTIC BUSHING
避震器襯套



PD1978 RR TURNBUCKLE
後上擺臂拉桿




PD1981-W MULTI-SPOKE WHL, 1/8 (WHITE)
輪殼, 1/8 (白)




PD1985 TT LOGO DECAL
TT LOGO 貼紙

EB-4WD BUGGY SPARE PARTS LIST 零件表

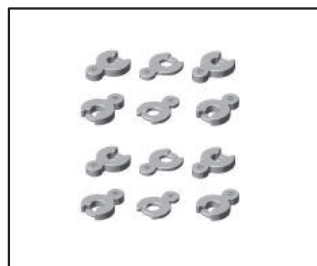


PD2281 CASTER SHIM
傾角調整夾片

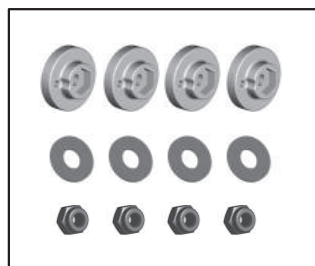


PD2372 SHOCK PSITON
避震器活塞組




PD2385 WASHER SET
墊片組

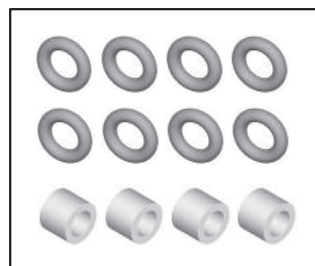

PD2429 O-RINGS & SPACERS
避震器O型環 & 內環柱組

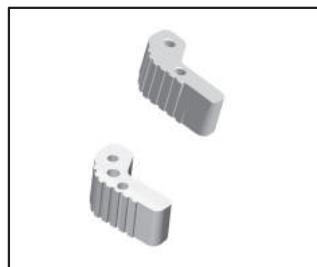


PD2446 FR UP SUSP.
前上擺臂支撐座

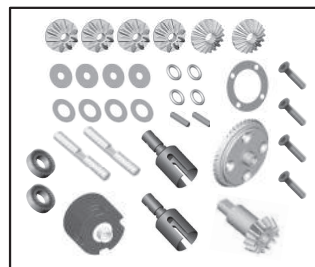


PD2448 DIFF. SET, FR & RR
前後差速組



PD7710 DIFF. GEAR SET
傳動大 / 小齒輪

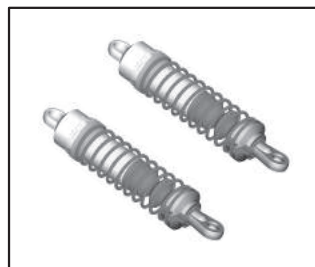


PD7753 FR SHOCK SET
前避震器組

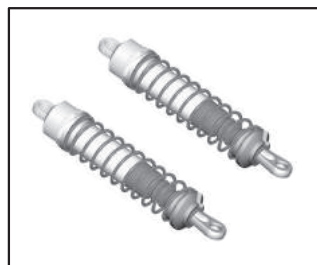

PD7754 RR SHOCK SET
後避震器組




PD7756 FR SHOCK BODY
前避震器套筒

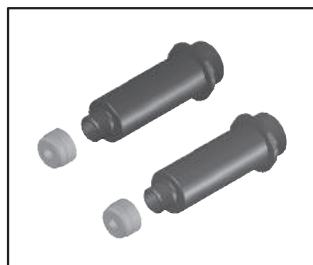

PD7757 RR SHOCK BODY (2)
後避震器套筒



PD7758 FR / RR SHOCK STAND OFF
避震器固定座

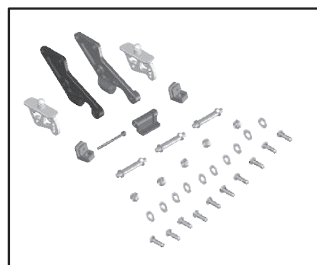

PD7761 WING ASSEMBLY
尾翼安裝




PD7762 FR SHOCK TOWER
前避震器支架



PD7763 RR SHOCK TOWER
後避震器支架



PD7767 FR SHOCK SHAFT
前避震器軸

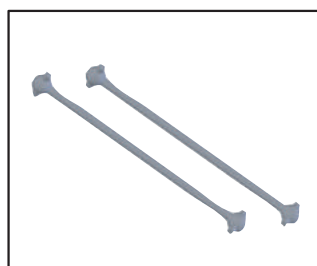


PD7769 SWING SHAFT BAG
後傳動軸



PD7770 FR CVA
前萬向傳動軸組




PD7771 REAR AXLE / NUT
後傳動軸

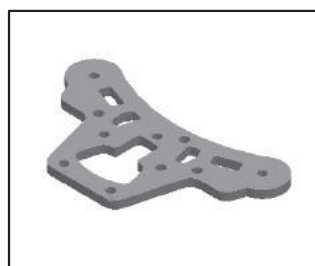

PD7773 SERVO SAVER TOP PLATE
前補強板




PD7782 ANTENNA BAG, 1 / 8
天線零件包

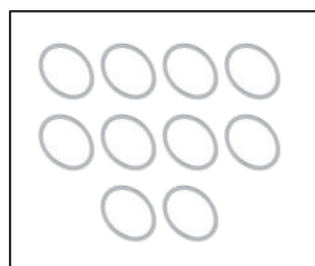

PD7786 DIFF. SHIME (10), 0.2mm
差速器墊片 (0.2mm)




PD01-0003 MOTOR MOUNT
馬達固定座

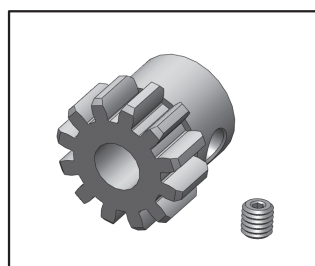


PD01-0004 PINION GEAR (13T)
馬達驅動齒輪


EB-4WD BUGGY SPARE PARTS LIST 零件表

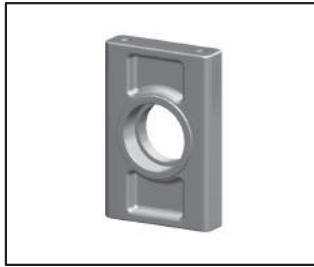


PD02-0009 CTR DIFF MNT.
中差支架組

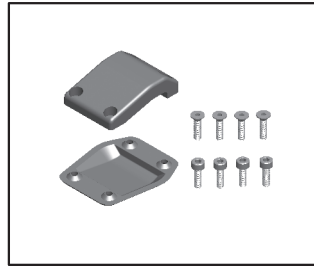


PD02-0010 CTR DIFF PLT.
差速護蓋組

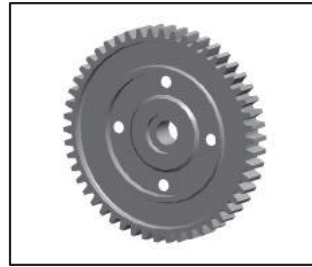

PD02-0011 SPUR GEAR (50T), 1/8
主齒輪

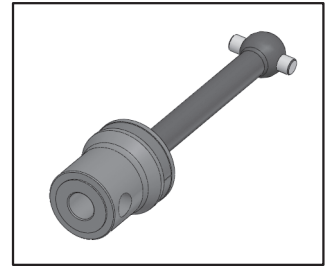


PD05-0013 FR UNINI SHAFT
前中央傳動軸組

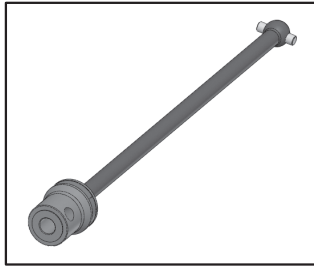


PD05-0014 RR UNINI SHAFT
後中央傳動軸組




PD05-0015 SERVO ARM SET
伺服拉桿組

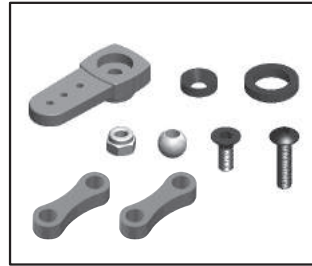


PD06-0008 SERVO HORN SET
伺服轉向組

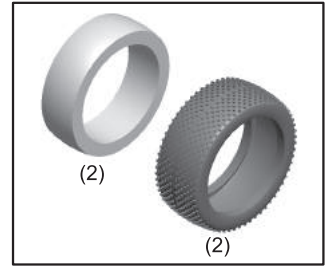


PD08-0014 TIRE SET, 1/8
輪胎組

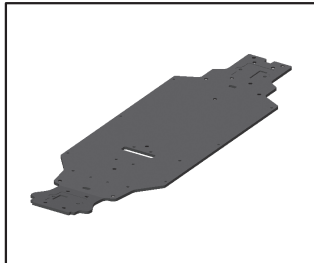

PD09-0027 CHASSIS
車底板

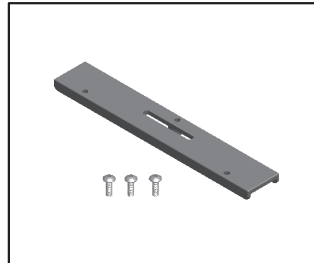


PD09-0028 LEAD TRAY
導線護板組

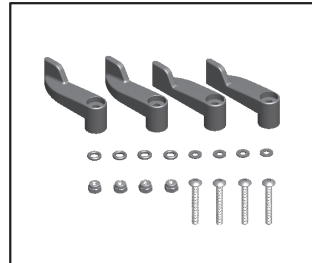


PD09-0029 CTR UNIT LOCK
本體固定旋鈕組



PD09-0030 UPPR CTR UNIT
本體上蓋

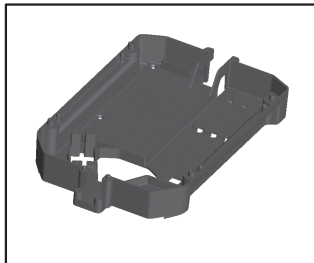

PD09-0031 LWR CTR UNIT
本體下蓋

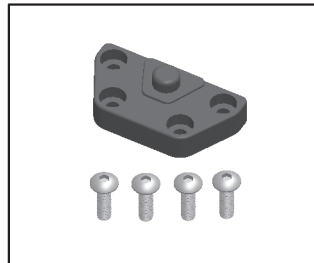


PD09-0032 BRACE SET
補強塊組



PD9038-L BODY SET (BLUE)
完成車殼 (藍)




PD9038-Y BODY SET (YELLOW)
完成車殼 (黃)

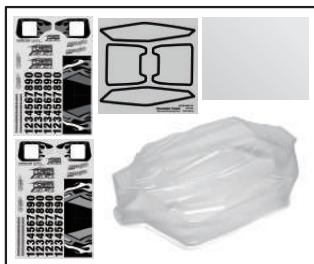

PD9039 CLEAR BODY SET + BODY DECAL
透明車殼 + 貼紙組




PD9040 BODY DECAL
貼紙組

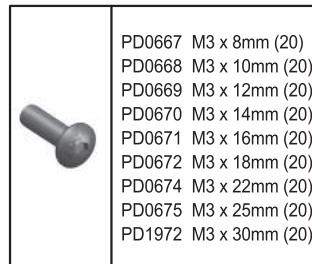


BHCS SCREW
半圓頭內六角螺絲




FHCS SCREW
平頭內六角螺絲

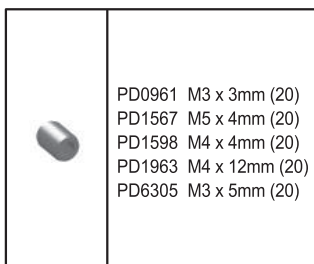


SET SCREW
無頭內六角螺絲

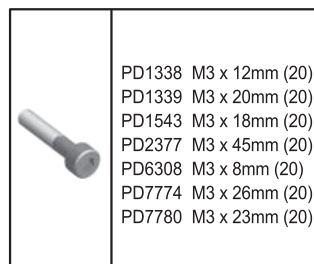


SHCS SCREW
內六角螺絲

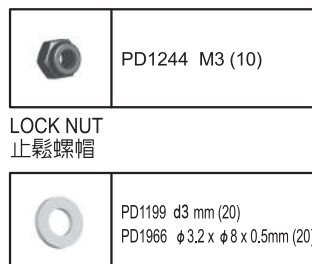

LOCK NUT
止鬆螺帽

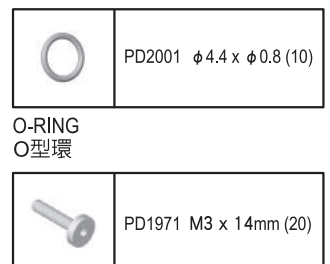

O-RING
O型環

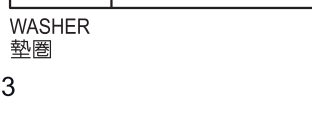

WASHER
墊圈



FHS SCREW
扁圓盤內六角螺絲

PART#	DESCRIPTION	中文名稱	NOTE
PD0662	BEARING (10) d8 x d16	軸承, MSEALD 8 x 16 x 5	
PD0667	BHCS SCREW (20), M3 x 8	半圓頭內六角螺絲 (20), M3 x 8	
PD0668	BHCS SCREW (20), M3 x 10	半圓頭內六角螺絲 (20), M3 x 10	
PD0669	BHCS SCREW (20), M3 x 12	半圓頭內六角螺絲 (20), M3 x 12	
PD0670	BHCS SCREW (20), M3 x 14	半圓頭內六角螺絲 (20), M3 x 14	
PD0671	BHCS SCREW (20), M3 x 16	半圓頭內六角螺絲 (20), M3 x 16	
PD0672	BHCS SCREW (20), M3 x 18	半圓頭內六角螺絲 (20), M3 x 18	
PD0674	BHCS SCREW (20), M3 x 22	半圓頭內六角螺絲 (20), M3 x 22	
PD0675	BHCS SCREW (20), M3 x 25	半圓頭內六角螺絲 (20), M3 x 25	
PD0677	FHCS SCREW(20), M3 x 8	平頭內六角螺絲 (20), M3 x 8	
PD0678	FHCS SCREW (20), M3 x 10	平頭內六角螺絲 (20), M3 x 10	
PD0679	FHCS SCREW (20), M3 x 12	平頭內六角螺絲 (20), M3 x 12	
PD0680	FHCS SCREW (20), M3 x 14	平頭內六角螺絲 (20), M3 x 14	
PD0681	FHCS SCREW (20), M3 x 16	平頭內六角螺絲 (20), M3 x 16	
PD0961	SET SCREW (20), M3 x 3	無頭內六角螺絲 (20), M3 x 3	
PD1199	WASHER (20)	墊圈 (20)	
PD1244	LOCK NUT (10)	止鬆螺帽 (10)	
PD1338	SHCS SCREW (20), M3 x 12	內六角螺絲 (20), M3 x 12	
PD1339	SHCS SCREW (20), M3 x 20	內六角螺絲 (20), M3 x 20	
PD1543	SHCS SCREW (20), M3 x 18	內六角螺絲 (20), M3 x 18	
PD1567	SET SCREW (20), M5 x 4	無頭內六角螺絲 (20), M5 x 4	
PD1598	SET SCREWS (20), M4 x 4	無頭內六角螺絲 (20), M4 x 4	
PD1871	TRANS CASE / BULKHEAD SET	差速箱本體	
PD1880	SHOCK DIAPHRAGM (10)	避震器空氣活門 (10)	
PD1886	FR SHOCK SHAFT (2)	後避震器軸 (2)	
PD1887	FR SHOCK BOOT (4)	前避震器腹套 (4)	
PD1888	RR SHOCK BOOT (4)	後避震器腹套 (4)	
PD1889	FR / RR SHOCK SPRING (2)	避震器彈簧	
PD1890	SHOCK PLASTIC PARTS	避震器塑膠配件	
PD1892	FR / RR SHOCK SET PIN	避震器下固定銷	
PD1895	DIFF. INNER GEAR & PARTS	差速內傘齒維修包, 10T / 18T	
PD1897	DIFF. CASE	差速器本體	
PD1898	DIFF. OUTDRIVE (2) FR / RR	差速傳動軸套	
PD1899	DIFF. OUTDRIVE (2), CTR	中央差速傳動軸套	
PD1903-B	REAR WING (BLACK), 1 / 8	擾流尾翼 (黑), 1 / 8	
PD1905-T	FF SUSP. PLATE SET	前投影板	
PD1906	SUSP. PLATE SET	投影板組	
PD1907	SUSP. PLATE JOINT	球座	
PD1908-T	UP SUSP. ARM PLATE	上擺臂固定板	
PD1912	PIVOT BALL	球頭	
PD1913	SUSP. HINGE PIN SET	擺臂固定銷	
PD1914	RR LOWER HINGE PIN	後輪座固定銷	
PD1915	KNUCKLE	轉向輪座組	
PD1916	ADJ. BALL (4)	擺臂球頭	
PD1917	ADJ. SCREW (4)	轉向球頭固定螺絲	
PD1918	ST. PIVOT BALL	轉向球座	
PD1919	STEERING TURNBUCKLE	轉向拉桿	
PD1920	ST. TIE END	轉向拉桿頭	
PD1921	RR TIE END	後上擺臂拉桿頭	
PD1922	RR PIVOT BALL	後上擺臂拉桿球座	
PD1923	REAR HUB SET	後輪組	
PD1924	HEX WHEEL ADAPTER SET	六角輪殼轉換器	
PD1925	SERVO SAVER PL. PARTS	轉向搖臂塑件	
PD1926	SERVO SAVER ML. PARTS	轉向金屬配件	
PD1927-T	STEERING SLIDER	轉向曲板	
PD1928	SERVO SAVER BUSHING	轉向曲板襯套	
PD1931	FR BUMPER	前防撞板	
PD1935	FF / RR BODY MOUNT & POST	前車殼固定塊	
PD1949	R CLIPS (10), SHORT	R型插銷	
PD1954	UP SUSP. ARM SET (2)	上擺臂組 (2)	
PD1955	LWR SUSP. ARM SET (2)	下擺臂組 (2)	
PD1956	REAR SUSP. ARM SET (2)	後擺臂組 (2)	
PD1963	SET SCREW (20), M4 x 12	無頭內六角螺絲 (20), M4 x 12	
PD1966	WASHER (20), ϕ 3.2 x ϕ 8 x 0.5	墊圈	

PART#	DESCRIPTION	中文名稱	NOTE
PD1968	BEARING (4), d5 x D10 x W4	軸承 (4), d5 x D10 x W4	
PD1969	BEARING (4), d10 x D19 x W5	軸承 (4), d10 x D19 x W5	
PD1970	DOWEL PIN SET	軸承滾針	
PD1971	FLAT HEAD SOCKET SCREW	扁圓盤內六角螺絲, M3 x 14	
PD1972	BHCS SCREW (20), M3 x 30	半圓頭內六角螺絲 (20), M3 x 30	
PD1973	FHCS SCREW (20), M4 x 12	平頭內六角螺絲 (20), M4 x 12	
PD1975	HEX WRENCH SET	六角扳手組	
PD1976	SHOCK PLASTIC BUSHING	避震器襯套	
PD1978	RR TURNBUCKLE	後上擺臂拉桿	
PD1981-W	MULTI-SPOKE WHL, 1 / 8 (WHITE)	輪轂, 1 / 8 (白)	
PD1985	TT LOGO DECAL	TT LOGO 貼紙	
PD2001	O-RING, ϕ 4.4	O型環	
PD2281	CASTER SHIM	傾角調整夾片	
PD2372	SHOCK PSITON (4)	避震器活塞組	
PD2377	SHCS SCREW (20), M3 x 45	內六角螺絲 (20), M3 x 45	
PD2385	WASHER SET	墊片組	
PD2389	FR SHOCK CAP (2)	避震器上蓋	
PD2429	O-RINGS & SPACERS	避震器O型環 & 內環柱組	
PD2446	FR UP SUSP.	前上擺臂支撐座	
PD2448	DIFF. SET, FR & RR	前後差速組	
PD6305	SET SCREW(20), M3 x 5	無頭內六角螺絲 (20), M3 x 5	
PD6308	SHCS SCREW (20), M3 x 8	內六角螺絲 (20), M3 x 8	
PD6310	FHCS SCREW (20), M4 x 10	平頭內六角螺絲 (20), M4 x 10	
PD7710	DIFF. GEAR SET	傳動大 / 小齒輪	
PD7752	FHCS SCREW (20), M3 x 22	平頭內六角螺絲 (20), M3 x 22	
PD7753	FR SHOCK SET (2)	前避震器組	
PD7754	RR SHOCK SET (2)	後避震器組	
PD7756	FR SHOCK BODY (2)	前避震器套筒	
PD7757	RR SHOCK BODY (2)	後避震器套筒	
PD7758	FR / RR SHOCK STAND OFF	避震器固定座	
PD7761	WING ASSEMBLY	尾翼安裝	
PD7762	FR SHOCK TOWER	前避震器支架	
PD7763	RR SHOCK TOWER	後避震器支架	
PD7767	FR SHOCK SHAFT (2)	前避震器軸	
PD7769	SWING SHAFT BAG	後傳動軸	
PD7770	FR CVA (2)	前萬向傳動軸組	
PD7771	REAR AXLE / NUT	後傳動軸	
PD7773	SERVO SAVER TOP PLATE	前補強板	
PD7774	SHCS SCREW (20), M3 x 26	內六角螺絲 (20), M3 x 26	
PD7780	SHCS SCREW (20), M3 x 23	內六角螺絲 (20), M3 x 23	
PD7782	ANTENNA BAG, 1 / 8	天線零件包, 1 / 8	
PD7786	DIFF. SHIME (10), 0.2mm	差速器墊片 (0.2mm)	
PD9016	FHCS SCREW (20), M3 x 5	平頭內六角螺絲 (20), M3 x 5	
PD01-0003	MOTOR MOUNT	馬達固定座	
PD01-0004	PINION GEAR (13T)	馬達驅動齒輪	
PD02-0009	CTR DIFF MNT.	中差支架組	
PD02-0010	CTR DIFF PLT.	差速護蓋組	
PD02-0011	SPUR GEAR (50T), 1 / 8	主齒輪	
PD05-0013	FR UNINI SHAFT	前中央傳動軸組	
PD05-0014	RR UNINI SHAFT	後中央傳動軸組	
PD05-0015	SERVO ARM SET	伺服拉桿組	
PD06-0008	SERVO HORN SET	伺服轉向組	
PD08-0014	TIRE SET, 1 / 8	輪胎組	
PD09-0027	CHASSIS	車底板	
PD09-0028	LEAD TRAY	導線護板組	
PD09-0029	CTR UNIT LOCK	本體固定旋鈕組	
PD09-0030	UPPR CTR UNIT	本體上蓋	
PD09-0031	LWR CTR UNIT	本體下蓋	
PD09-0032	BRACE SET	補強塊組	
PD9038-L	BODY SET (BLUE)	完成車殼 (藍)	
PD9038-Y	BODY SET (YELLOW)	完成車殼 (黃)	
PD9039	CLEAR BODY SET + BODY DECAL	透明車殼+貼紙組	
PD9040	BODY DECAL	貼紙組	

 
EB-4WD BUGGY OPTIONAL PARTS LIST 選購零件表




PD0399 TURNBUCKLE WRENCH, 5mm
拉桿板手, 5mm



PD1841 7075RR SHOCK TOWER
後避震器支架零件包



 
PD1848 FR PLT FR TRANS, FF0
前投影板 (FF0) 零件包




PD1850 A75RR PLT FR TRN, FR0
前投影板 (FR0) 零件包



 PD1840 7075FR SHOCK TOWER
前避震器支架零件包



 
PD1847 FR PLT FR TRANS, FF-1
前投影板 (FF-1) 零件包



PD1849 FR PLT FR TRANS, FF+1
前投影板 (FF+1) 零件包



 PD1851 A75FR PLT RR TRN, RF0
後投影板 (RF0) 零件包



PD1852 A75FR PLT RR TRN, RF+4
後投影板 (RF+4) 零件包



PD1854 A75RR PLT RR TRN, RR+3
後投影板 (RR+3) 零件包



PD1856 UP SUSP., ARM HOLDER
上擺臂後固定座零件包



PD1857 ALUM S. SAVER SET
緩衝 / 轉向擺臂零件包



 
PD1853 A75RR PLT RR TRN, RR+2
後投影板 (RR+2) 零件包



PD1855 A75UP ARM PLATE
上擺臂前固定板零件包




PD1858 A75 ST. SLIDER W / BB
轉向曲板零件包




PD1862 WING POST
擾流板固定支柱零件包



 
PD1864 LITE HEX WHEEL ADAPTER
六角輪殼固定座螺絲



PD1866 SWAY BAR, 3mm
防傾桿零件包 (φ 3mm)

 


PD1860 HARD SWAY BAR BALL
防傾桿球頭零件包

 

PD1863 LITE PILLOW BALL
懸吊球頭零件包



 PD1865 LITE WHEEL NUT
六角輪殼止鬆螺帽



PD1867 SWAY BAR, 2.5mm
防傾桿零件包 (φ 2.5mm)



PD1873 RR CVA
後萬象傳動軸



PD1882 FR SHOCK BODY
前避震器套筒



 
PD1884 FR SHOCK CAP
避震器上蓋




PD1894 DIFF. BEVEL GEAR SET
傳動大 / 小斜齒輪




PD1879 SHOCK PSITON (4)
避震器活塞組 (4)



PD1883 RR SHOCK BODY
後避震器套筒

 

PD1891 FR / RR SHOCK STANDOFF
避震器上固定座

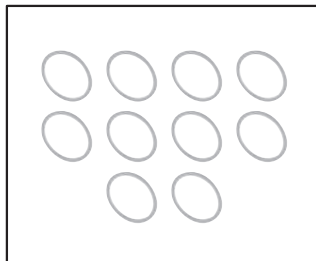

PD1896 DIFF SHIME (10), 0.3mm
差速器墊片 (0.3mm)




PD1903-G REAR WING, GREEN, 1/8
擾流尾翼, 1/8 (綠)


PD1903-O REAR WING, ORANGE, 1/8
擾流尾翼, 1/8 (橘)

PD1903-P REAR WING, PINK, 1/8
擾流尾翼, 1/8 (粉紅)


PD1903-Y REAR WING, YELLOW, 1/8
擾流尾翼, 1/8 (黃)

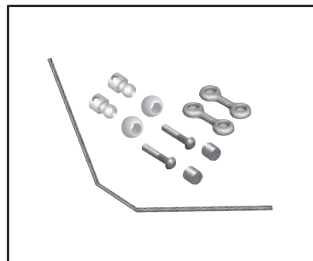

PD1910 FR SWAY BAR SET, 2.7mm
前防傾桿附件

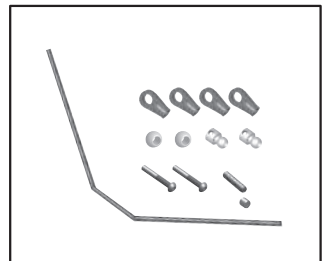

PD1911 RR SWAY BAR SET, 2.7mm
後防傾桿附件

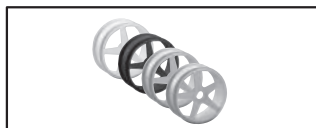


PD1946-B 5-SPOKE WHL, 17mm 1/8 (B)
輪殼, 1/8 (黑)

PD1946-G 5-SPOKE WHL, 17mm 1/8 (G)
輪殼, 1/8 (綠)

PD1946-P 5-SPOKE WHL, 17mm 1/8 (P)
輪殼, 1/8 (粉紅)

PD1946-Y 5-SPOKE WHL, 17mm 1/8 (Y)
輪殼, 1/8 (黃)

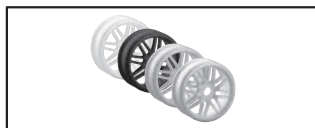


PD1981-B MULTI-SPOKE WHL, 1/8 (B)
輪殼, 1/8 (黑)


PD1981-G MULTI-SPOKE WHL, 1/8 (G)
輪殼, 1/8 (綠)

PD1981-P MULTI-SPOKE WHL, 1/8 (P)
輪殼, 1/8 (粉紅)

 PD1981-Y MULTI-SPOKE WHL, 1/8 (Y)
輪殼, 1/8 (黃)



 PD1989 RR TOE-IN BLOCK, RF+2
後投影板 (RF+2) 零件包



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1991 A75RR PLT RR TRN, RR+2.5
後投影板 (RR+2.5) 零件包




PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包


EB-4WD BUGGY OPTIONAL PARTS LIST 選購零件表




PD1994 AL SHOCK RETAINER
金屬避震器下蓋零件包

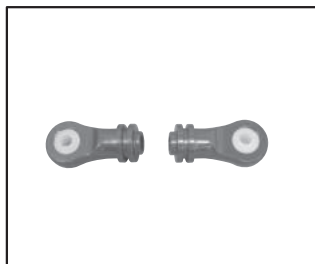

PD1995 ALUM SHOCK BOTTOM
球頭座 / 球頭零件包

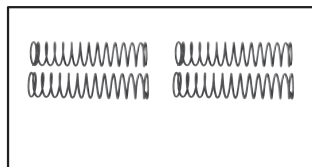

PD1996 FR SHOCK SPRING SET
前避震器彈簧零件包
1.4mm (BLUE)
藍
1.6mm (BLACK)
黑

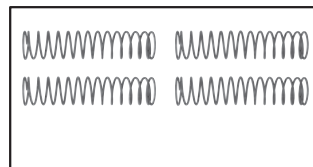

PD1997 RR SHOCK SPRING SET
後避震器彈簧零件包
1.4mm (BLUE)
藍
1.6mm (BLACK)
黑



PD6602-B VELOCITY WHL, 1 / 8 (B)
輪殼, 1 / 8 (黑)
PD6602-G VELOCITY WHL, 1 / 8 (G)
輪殼, 1 / 8 (綠)
PD6602-O VELOCITY WHL, 1 / 8 (O)
輪殼, 1 / 8 (橘)


PD6602-P VELOCITY WHL, 1 / 8 (P)
輪殼, 1 / 8 (粉紅)
PD6602-W VELOCITY WHL, 1 / 8 (W)
輪殼, 1 / 8 (白)
PD6602-Y VELOCITY WHL, 1 / 8 (Y)
輪殼, 1 / 8 (黃)



PD7779 CARBON SERVO SAVER TOP
前補強板零件包 (碳纖板)



PD02-0012 AL CTR DIFF MNT
金屬中差支撐架

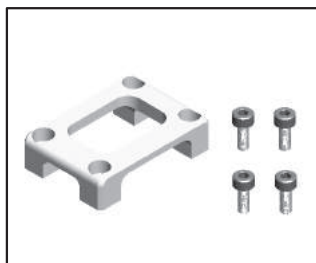

PD02-0013 AL CTR DIFF PLT
金屬中差連板

PART#	DESCRIPTION	中文名稱	NOTE
PD0399	TURNBUCKLE WRENCH, 5mm	拉桿板手, 5mm	
PD1840	7075FR SHOCK TOWER	前避震器支架零件包	
PD1841	7075RR SHOCK TOWER	後避震器支架零件包	
PD1847	FR PLT FR TRANS, FF-1	前投影板 (FF-1) 零件包	
PD1848	FR PLT FR TRANS, FF0	前投影板 (FF0) 零件包	
PD1849	FR PLATR FR TRANS, FF+1	前投影板 (FF+1) 零件包	
PD1850	A75RR PLT FR TRN, FR0	前投影板 (FR0) 零件包	
PD1851	A75FR PLT RR TRN, RF0	後投影板 (RF0) 零件包	
PD1852	A75FR PLT RR TRN, RF+4	後投影板 (RF+4) 零件包	
PD1853	A75RR PLT RR TRN, RR+2	後投影板 (RR+2) 零件包	
PD1854	A75RR PLT RR TRN, RR+3	後投影板 (RR+3) 零件包	
PD1855	A75UP ARM PLATE	上擺臂前固定板零件包	
PD1856	UP SUSP., ARM HOLDER	上擺臂後固定座零件包	
PD1857	ALUM S. SAVER SET	緩衝 / 轉向擺臂零件包	
PD1858	A75 ST. SLIDER W / BB	轉向曲板零件包	
PD1860	HARD SWAY BAR BALL	防傾桿球頭零件包	
PD1862	WING POST	擾流板固定支柱零件包	
PD1863	LITE PILLOW BALL	懸吊球頭零件包	
PD1864	LITE HEX WHEEL ADAPTER	六角輪殼固定座螺絲	
PD1865	LITE WHEEL NUT	六角輪殼止鬆螺帽	
PD1866	SWAY BAR, 3mm	防傾桿零件包 (φ 3mm)	
PD1867	SWAY BAR, 2.5mm	防傾桿零件包 (φ 2.5mm)	
PD1873	RR CVA (2)	後萬象傳動軸	
PD1879	SHOCK PSITON (4)	避震器活塞組 (4)	
PD1882	FR SHOCK BODY (2)	前避震器套筒	
PD1883	RR SHOCK BODY (2)	後避震器套筒	
PD1884	FR SHOCK CAP (2)	避震器上蓋	
PD1891	FR / RR SHOCK STANDOFF	避震器上固定座	
PD1894	DIFF. BEVEL GEAR SET	傳動大 / 小斜齒輪	
PD1896	DIFF. SHIME (10), 0.3mm	差速器墊片 (0.3mm)	
PD1903-G	REAR WING, GREEN, 1 / 8	擾流尾翼, 1 / 8 (綠)	
PD1903-O	REAR WING, ORINGE, 1 / 8	擾流尾翼, 1 / 8 (橘)	
PD1903-P	REAR WING, PINK, 1 / 8	擾流尾翼, 1 / 8 (粉紅)	
PD1903-Y	REAR WING, YELLOW, 1 / 8	擾流尾翼, 1 / 8 (黃)	
PD1910	FR SWAY BAR SET, 2.7mm	前防傾桿附件	
PD1911	RR SWAY BAR SET, 2.7mm	後防傾桿附件	
PD1946-B	5-SPOKE WHL, 17mm 1 / 8 (B)	輪殼, 1 / 8 (黑)	
PD1946-G	5-SPOKE WHL, 17mm 1 / 8 (G)	輪殼, 1 / 8 (綠)	
PD1946-P	5-SPOKE WHL, 17mm 1 / 8 (P)	輪殼, 1 / 8 (粉紅)	
PD1946-Y	5-SPOKE WHL, 17mm 1 / 8 (Y)	輪殼, 1 / 8 (黃)	
PD1981-B	MULTI-SPOKE WHL, 1 / 8 (B)	輪殼, 1 / 8 (黑)	
PD1981-G	MULTI-SPOKE WHL, 1 / 8 (G)	輪殼, 1 / 8 (綠)	
PD1981-P	MULTI-SPOKE WHL, 1 / 8 (P)	輪殼, 1 / 8 (粉紅)	
PD1981-Y	MULTI-SPOKE WHL, 1 / 8 (Y)	輪殼, 1 / 8 (黃)	
PD1989	RR TOE-IN BLOCK, RF+2	後投影板 (RF+2) 零件包	
PD1990	A75FR PLT RR TRN, RF+3	後投影板 (RF+3) 零件包	
PD1991	A75RR PLT RR TRN, RR+2.5	後投影板 (RR+2.5) 零件包	
PD1992	A75RR PLT RR TRN, RR+4	後投影板 (RR+4) 零件包	
PD1994	AL SHOCK RETAINER	金屬避震器下蓋零件包	
PD1995	ALUM SHOCK BOTTOM	球頭座 / 球頭零件包	
PD1996	FR SHOCK SPRING SET	前避震器彈簧零件包	
PD1997	RR SHOCK SPRING SEET	後避震器彈簧零件包	
PD6602-B	VELOCITY WHL, 1 / 8 (B)	輪殼, 1 / 8 (黑)	
PD6602-G	VELOCITY WHL, 1 / 8 (G)	輪殼, 1 / 8 (綠)	
PD6602-O	VELOCITY WHL, 1 / 8 (O)	輪殼, 1 / 8 (橘)	
PD6602-P	VELOCITY WHL, 1 / 8 (P)	輪殼, 1 / 8 (粉紅)	
PD6602-W	VELOCITY WHL, 1 / 8 (W)	輪殼, 1 / 8 (白)	
PD6602-Y	VELOCITY WHL, 1 / 8 (Y)	輪殼, 1 / 8 (黃)	
PD7779	CARBON SERVO SAVER TOP	前補強板零件包 (碳纖板)	
PD02-0012	AL CTR DIFF MNT	金屬中差支撐架	
PD02-0013	AL CTR DIFF PLT	金屬中差連板	

ACE RC® Digital Servo 數位伺服機



No.8127 High Torque / DS1015 No.8128 Standard / DS1313

Specifications		
No.	8127	8128
Torque 4.8V / 6V (oz-in)	161.1 / 201.4	133.3 / 173.6
Torque 4.8V / 6V (Kg-cm)	11.6 / 14.5	9.6 / 12.5
Speed 4.8V / 6V (sec / 60°)	0.138 / 0.108	0.16 / 0.13
Gear	1P + 3MG	1P + 3MG
Bearing	2BB	2BB
Size L x W x H (in)	1.65x 0.81 x 1.56	1.65x 0.81 x 1.56
Size L x W x H (mm)	41.8 x 20.6 x 39.6	41.8 x 20.6 x 39.6
Weight (gram / oz)	2.328 / 66	2.328 / 66

ACE RC® All-in-One Balance Charger 萬用充電器



No.2536 ACE RC T3AC Balance Charger



No.2537-E, EV
No.2537-U, UK ACE RC T6AC Balance Charger



No.2538 ACE RC T6 Balance Charger

Specifications			
No.	2536	2537	2538
Input Voltage	AC 100 ~ 240	DC 11.0V ~ 18.0V AC 100 ~ 240V	DC 11.0 ~ 18.0V
Max. Charge Power	·	50W	50W
Charge Current	3 x 650mA	0.1~5.0A	0.1~5.0A
Max. discharge power	·	5W	5W
Discharge Current	None	0.1~1.0A	0.1~1.0A
Output Voltage	Li-Po: 1~3cells	NiCd / NiMH 1~15cells Li-Po / Li-ion 1S~6S Pb: 2V~20V	NiCd / NiMH 1~15cells Li-Po / Li-ion 1S~6S Pb: 2V~20V
Status Indicator	LCD	LCD	LCD
Case Size	100 x 60 x 35mm	145 x 147 x 46mm	145 x 87 x 33mm
Weight	180g	531g	277g

COUGAR PS3i 2.4GHz 3CH DIGITAL RADIO SYSTEM 2.4GHz Surface Radio Control System 數位槍型遙控器



No.8308

Specifications	
Transmitter	COUGAR PS3i
Configuration	Pistol Grip
Encoder	3Ch
Frequency (MHz)	2.44GHz
Modulation	GFSK
Current Drain	130mA @ 9.6V
Frequency Band Width	24MHz
Transmission System	FHSS
Band No.	78CH
ID No.	13bit
Radio Speed	16Kbps
Servo Reverse	CH1~CH3
Display	LCD
Mode Memory	10
Antenna Type	1 / 4_Dipole Sleeve
Antenna Peak Gain	2dBi Typical
Power Requirement	9.6V / 8 cell AA Battery
Dimension (w / o Antenna)	220 x 99 x 182 mm / 8.66 x 3.89 x 7.16 in
Weight (g / oz)	443 g / 15.59 oz

ACE RC® Li-Po Battery 鋰電池



No.2843 Li-Po Battery 7.4V / 5000mAh 2S 37Wh



AQ2259
2.4GHz TX RF Module,
W / 4CH Receiver,
Futaba*



AQ2255
2.4GHz TX RF
Module, Futaba*

* Futaba is registered trademark.

