




1/8TH SCALE BRUSHLESS 4WD MONSTER TRUCK 1:8 無刷電動四驅大腳卡車

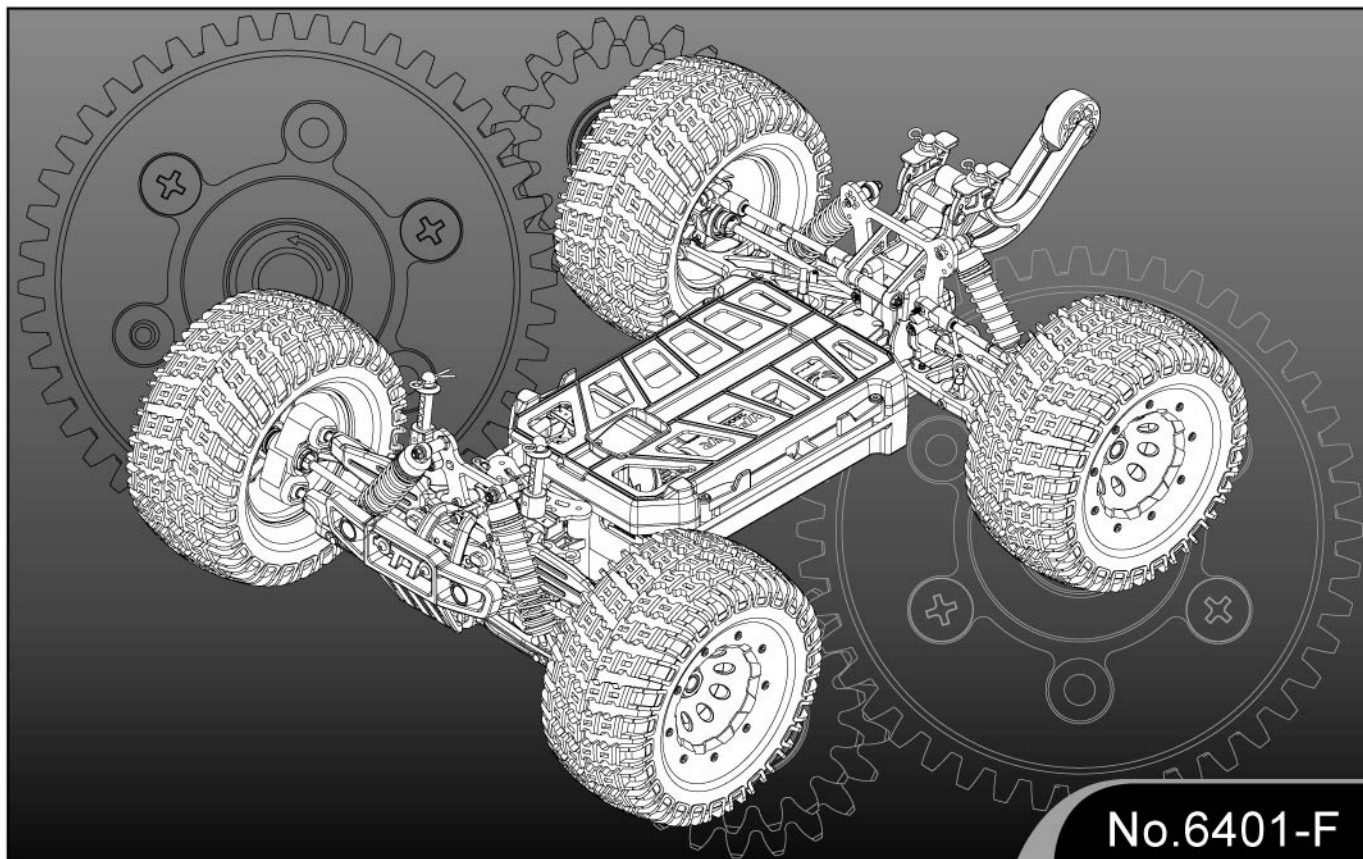

No.6401-F



This radio control model car is not a toy! Before beginning assembly, please read this manual thoroughly.
本產品為高性能模型非一般玩具，組裝與操作前，請詳閱本產品說明書。

The contents are subject to change without prior notice due to product improvements and specification changes.
本套件所附之零件可能跟圖示有所差異。因產品後續之設計研發或功能不斷改善之因，我們將保留產品規格變更權力，不再另行通知使用者。

Maintenance Manual & Parts Catalogue 維修說明書及零件包型錄

Introduction 前言

Thank you for purchasing this Thunder Tiger product. This manual contains the steps and instructions required to assemble your car. Please read this manual completely before attempting to start maintenance. Follow the directions in this manual closely to reduce problems during operation. We offer online help on our www.acehobby.com or www.thundertiger.com and forums and our product specialists are ready to take your call if you have any technical questions. Have fun and enjoy the exciting world of R/C.

感謝您購買雷虎科技產品。雷虎科技一向以提供最高品質的產品及服務作為持續努力的目標，並藉由參與競賽及重覆測試產品，不斷累積經驗，進而提昇設計及製造品質，期望能呈現給您最頂級之工藝產品。本使用說明書包含了組裝及維修本產品前所需注意的重要事項，建議您在開始組裝及維修本產品之前，能詳閱此說明書，並熟悉本產品之組裝步驟及維修程序。若是您在產品的使用上有任何的疑問，歡迎多加利用我們所提供的24小時諮詢留言版或洽詢雷虎科技授權經銷商。雷虎科技的全球英文網址為www.thundertiger.com，我們將竭誠為您服務！

Safety Precautions 安全注意事項

Please read all of the instructions and familiarize yourself with the product and its controls before operation.

1. This product is not a toy. It is a high performance model car therefore it is important to familiarize yourself with the model, its manual, and its construction before assembly or operation. Adult supervision is necessary for children operating this model.
2. Always keep this instruction manual on hand during assembly and for operating reference.
3. Do not use a power screwdriver to install screws into plastic parts. A power screwdriver's high rotation speed can heat up the screw being installed which can result in some melting of the plastic parts or stripped threads.
4. For best performance, it is important to make sure all the moving parts can move freely without binding.
5. This product, its parts, and its assembly tools can be harmful to your health. Always exercise extreme caution when assembling and operating this product. Keep away from any high speed rotating parts during operation.

感謝您購買雷虎科技產品，在您開始操作本產品前，請詳閱本產品說明書。

1. 本產品為高性能模型產品非一般玩具，組裝與操作過程皆須由成人陪同。請詳讀此本使用說明書，避免因組裝錯誤與操作不當造成損壞。
2. 請妥善保管此說明書，對於後續維修、操控說明將可提供您協助。
3. 請勿使用電動工具旋緊自攻螺絲於塑膠零件上，可能導致塑膠零件融化或滑牙。
4. 請檢視所有活動部位零件是否不受干涉，可靈活作動，以達車輛最佳性能。
5. 此項產品具有相當之危險性，於組裝、調整、操控上的不熟悉都可能造成自身或他人的傷害，發生這些傷害事件時，製造商是可以免除責任的，建議您於初次使用本產品前，先行請教具有相程度經驗同好或是專業雷虎經銷商與模型專賣店。


Index 索引

Manual Format 說明書使用方式	P.2	STEP28 Shock Absorber 避震組	P.14
Symbols Used Throughout The Manual 符號說明	P.2	STEP31 Chassis 底板	P.16
STEP1 Front / Rear Differential 前/後差速器	P.3	STEP32 Installing Battery 電池安裝	P.16
STEP2 Front / Rear Bulkheads 前/後差速箱	P.3	STEP34 Receiver 接收機	P.17
STEP3 Front / Rear Shock Tower 前/後避震器支架	P.4	STEP35 Electronic Speed Controller (E.S.C 電子調速器)	P.17
STEP4 Center Differential 中央差速組	P.4	STEP36 Radio Antenna 接收天線	P.18
STEP5 Center Gearbox 中央齒輪箱	P.5	STEP37 Chassis Cover 底板護蓋	P.18
STEP6 Chassis Brace 底板護蓋	P.5	STEP38 Rear Body Mount 後車殼固定座	P.19
STEP7 Drivetrain 傳動軸	P.6	STEP40 Tires & Wheels 輪胎與輪殼	P.20
STEP9 Steering Servo 轉向伺服機	P.7	STEP42 Body Shell 車殼	P.21
STEP10 FR Chassis Brace 前底盤補強桿	P.7	STEP43 Wheelie Bar 翹頭輔助輪	P.22
STEP11 Turnbuckle 拉桿	P.7	OPTIONAL PARTS Front Sway Bar 前防傾桿(選購零件)	P.23
STEP12 Steering System 轉向組	P.8	OPTIONAL PARTS Rear Sway Bar 後防傾桿(選購零件)	P.24
STEP16 Rear Chassis Brace 後固定座	P.10	OPTIONAL PARTS Changing Gear Ratio 更換齒比	P.25
STEP17 Front Suspension 前懸吊	P.10	ASSEMBLY EXPLODED VIEW 組裝爆炸圖檢索	P.26
STEP21 Front Bumper 前防撞板	P.12	MT-4 G3 TRUCK SPARE PARTS LIST 零件表	P.31
STEP20 Rear Suspension 後懸吊	P.12	MT-4 G3 TRUCK OPTIONAL PARTS LIST 選購零件表	P.38
STEP27 Body Post 車殼支柱	P.13		

Tools Included 內附工具




Hex Wrenches
1.5 / 2.0 / 2.5 / 3 / 5mm
六角板手組

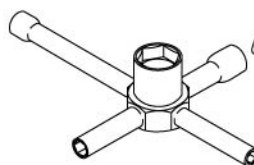

5-Way Cross Wrench
十字套筒

Tools Required For Assembly 組裝維修工具

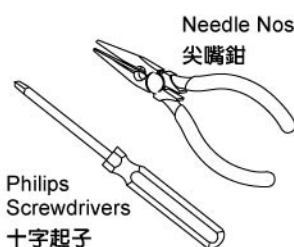


Needle Nose Pliers
尖嘴鉗

Philips
Screwdrivers
十字起子



Super Glue
(CA Glue)
快乾膠

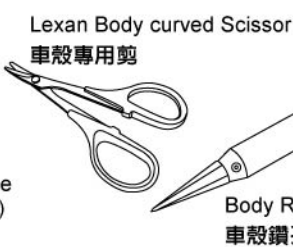

Lexan Body curved Scissor
車殼專用剪

Body Reamer
車殼鑽孔器



Wire Cutter
斜口剪



Grease
潤滑油膏
(黃油)




Thread Locking
Adhesive
(Threadlocker)
螺絲防鬆膠

Manual Format 說明書使用方式

How to read the instruction manual ? 說明書導讀

- A:** The manual indicates the assembly step number and the parts that are to be assembled.
- B:** The manual displays actual size drawings, and part quantities used.
- C:** All parts, except screws, are identified by their order numbers. When purchasing spare parts, identify the part required and cross reference this to the spare parts list at the end of this manual, which shows the spare parts and the corresponding order numbers.
- D:** This instruction manual uses several symbols. Pay careful attention to them during construction. Details are given at the bottom of each page.
- A:** 顯示組立步驟及需組立之零件部位。
- B:** 零件實際對照尺寸及使用數量。
- C:** 請比對零件形狀以及後附零件料號對照圖示找出需求零件料號。
- D:** 操作說明符號可更有效協助組裝者使用此說明書，請依說明書符號指示進行組裝步驟。

Example 說明範例

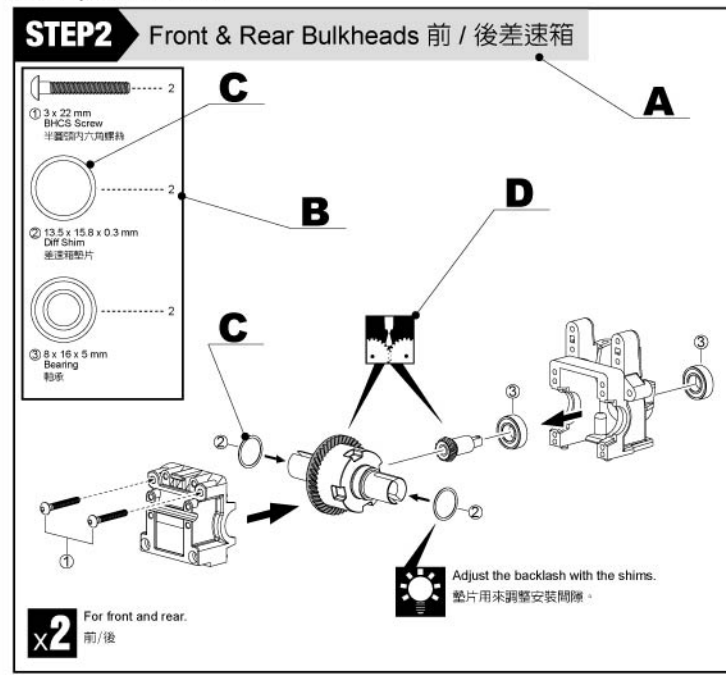

Symbols Used Throughout The Manual 符號說明



Apply C.A Glue
使用快乾膠黏合



Apply silicon oil
使用模型專用矽油



Assemble as many times as specified
依指示組裝所需數量



Assemble left and right side the same way
左右側組件相同



Assemble in right order
依標示順序組裝



Drill holes with the specified diameter
依標示尺寸鑽孔



Hint
組裝提示



Must be purchased separately
改裝品需另購



Cut off shaded portion
依標示部分裁切



Ensure smooth, non-binding movement when assembling
確認組件靈活度



Pay attention
組裝注意



Cut off excess
裁剪多餘部分





Apply threadlocker
使用螺絲防鬆膠




Apply grease
使用潤滑油膏(黃油)

STEP1 Front / Rear Differential 前 / 後差速器


x2 For front and rear.
前/後

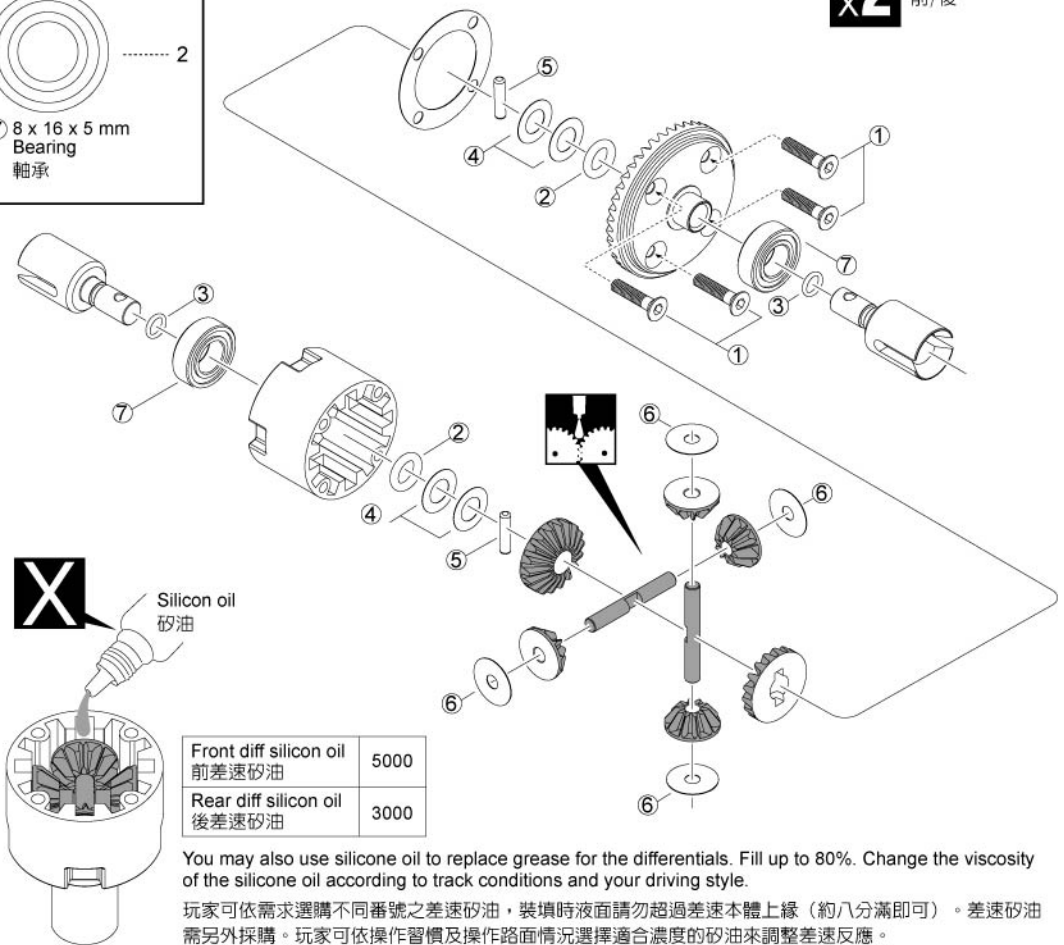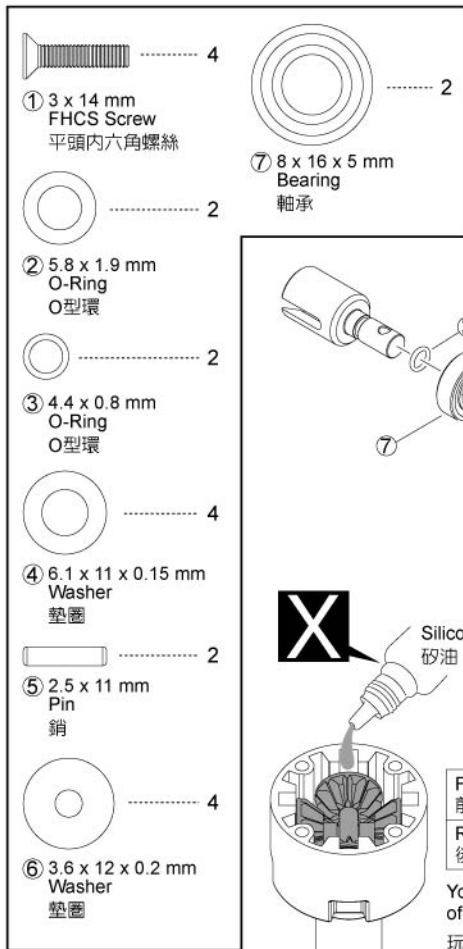

STEP2 Front / Rear Bulkheads 前 / 後差速箱

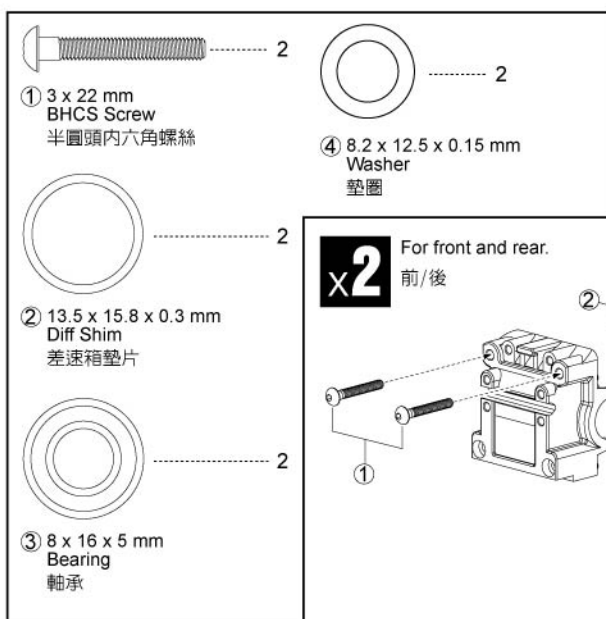

x2 For front and rear.
前/後

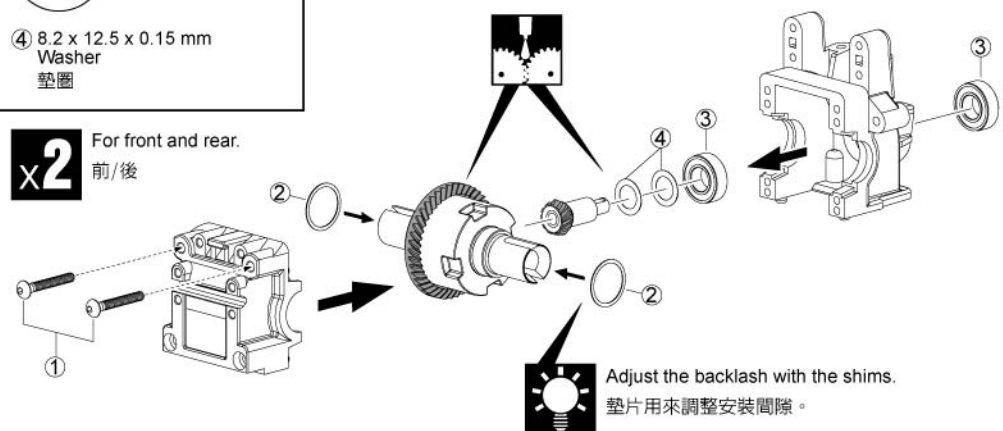

Apply grease
使用潤滑油膏(黃油)


X Must be purchased separately
改裝品需另購

x2 Assemble as many times
as specified
依指示組裝所需數量

Hint
組裝提示


STEP3 Front / Rear Shock Tower 前 / 後避震器支架

- ① 3 x 14 mm SHCS Screw 內六角螺絲
- ② 3 x 20 mm SHCS Screw 內六角螺絲
- ③ M3 Lock Nut 止鬆螺帽

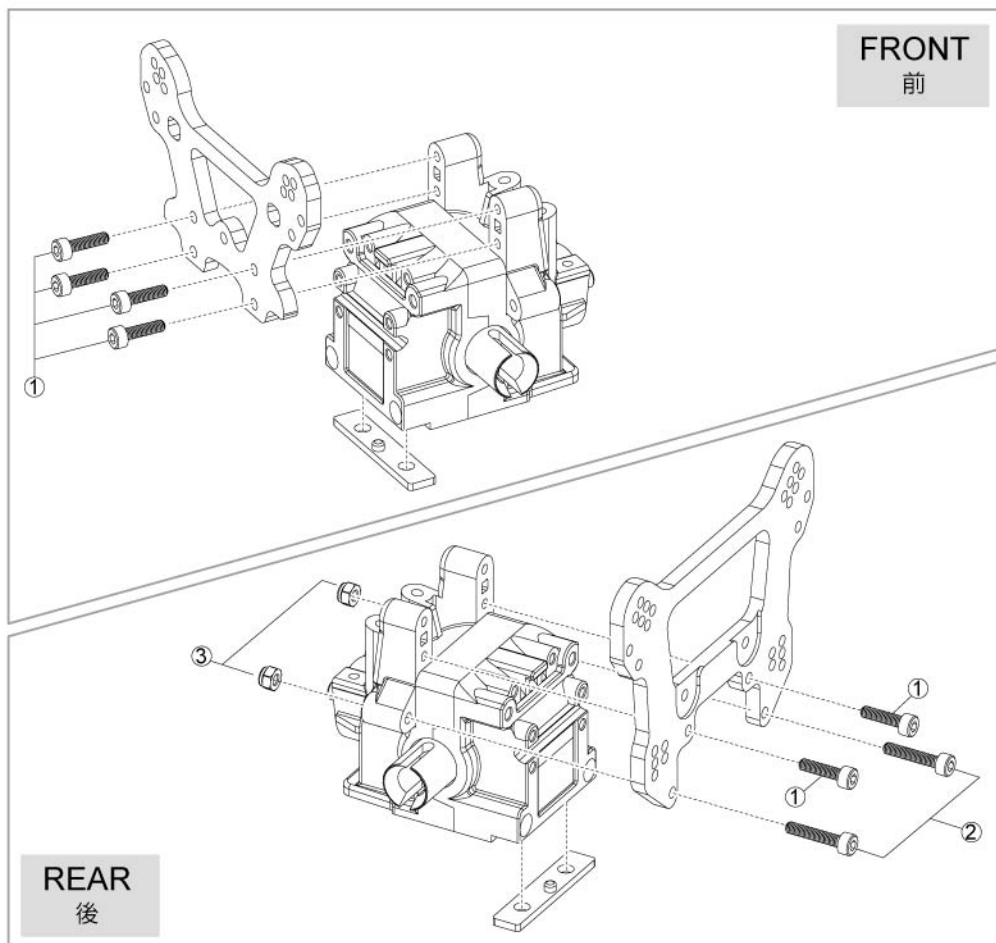

STEP4 Center Differential 中央差速組

- ① 3 x 14 mm FHCS Screw 平頭內六角螺絲
- ② 5.8 x 1.9 mm O-Ring O型環
- ③ 4.4 x 0.8 mm O-Ring O型環
- ④ 6.1 x 11 x 0.15 mm Washer 墊圈
- ⑤ 2.5 x 11 mm Pin 銷
- ⑥ 3.6 x 12 x 0.2 mm Washer 墊圈
- ⑦ 8 x 16 x 5 mm Bearing 軸承

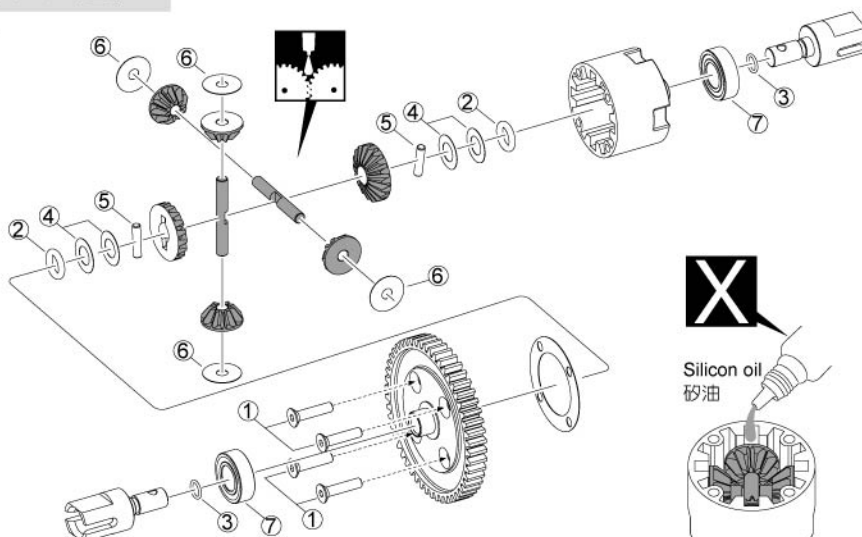

You may also use silicone oil to replace grease for the differentials. Fill up to 80%. Change the viscosity of the silicone oil according to track conditions and your driving style.

玩家可依需求選購不同番號之差速矽油，裝填時液面請勿超過差速本體上緣（約八分滿即可）。差速矽油需另外採購。玩家可依操作習慣及操作路面情況選擇適合濃度的矽油來調整差速反應。

Center diff silicon oil 中差速矽油 8000





Apply grease 使用潤滑油膏(黃油)



Must be purchased separately 改裝品需另購


STEP5 Center Gearbox 中央齒輪箱

-  4
- ① 3 x 8 mm SHCS Screw 內六角螺絲
-  2
- ② 3 x 10 mm SHCS Screw 內六角螺絲
-  1
- ③ 4 x 4 mm Set Screw 無頭內六角螺絲

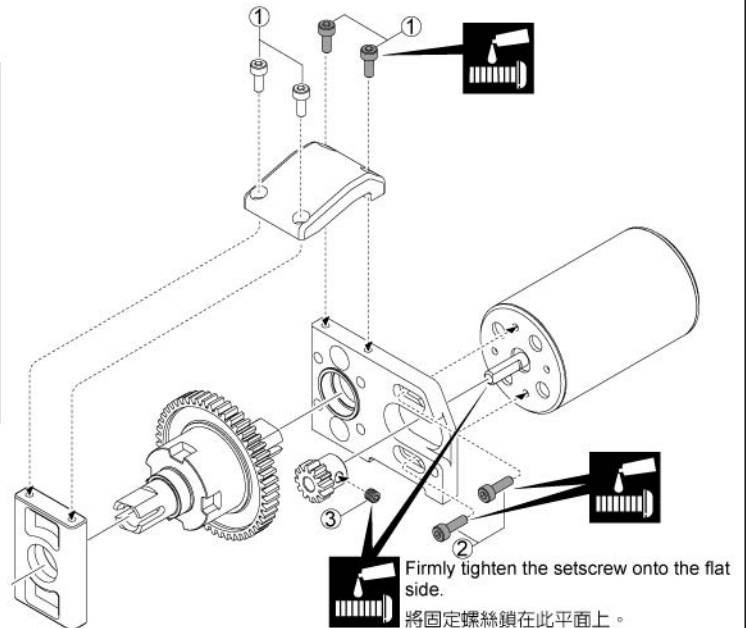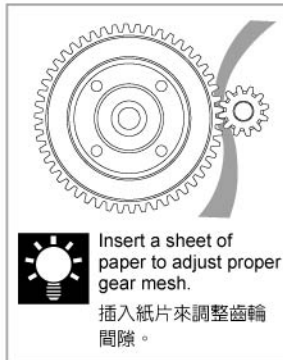

STEP6 Chassis Brace 底板護蓋

-  4
- ① 3 x 22 mm BHCS Screw 半圓頭內六角螺絲
-  6
- ② 3 x 5 mm FHCS Screw 平頭內六角螺絲
-  4
- ③ M3 Lock Nut 止鬆螺帽
-  4
- ④ 4 x 12 mm FHCS Screw 平頭內六角螺絲
-  2
- ⑤ 4 x 10 mm FHCS Screw 平頭內六角螺絲
-  1
- ⑥ 4 x 6 mm FHCS Screw 平頭內六角螺絲
-  2
- ⑦ 3 x 10 mm FHCS Screw 平頭內六角螺絲
-  4
- ⑧ 2.8 x 1.9 mm O-Ring O型環
-  4
- ⑨ 3.2 x 8 x 0.8 mm Washer 墊圈

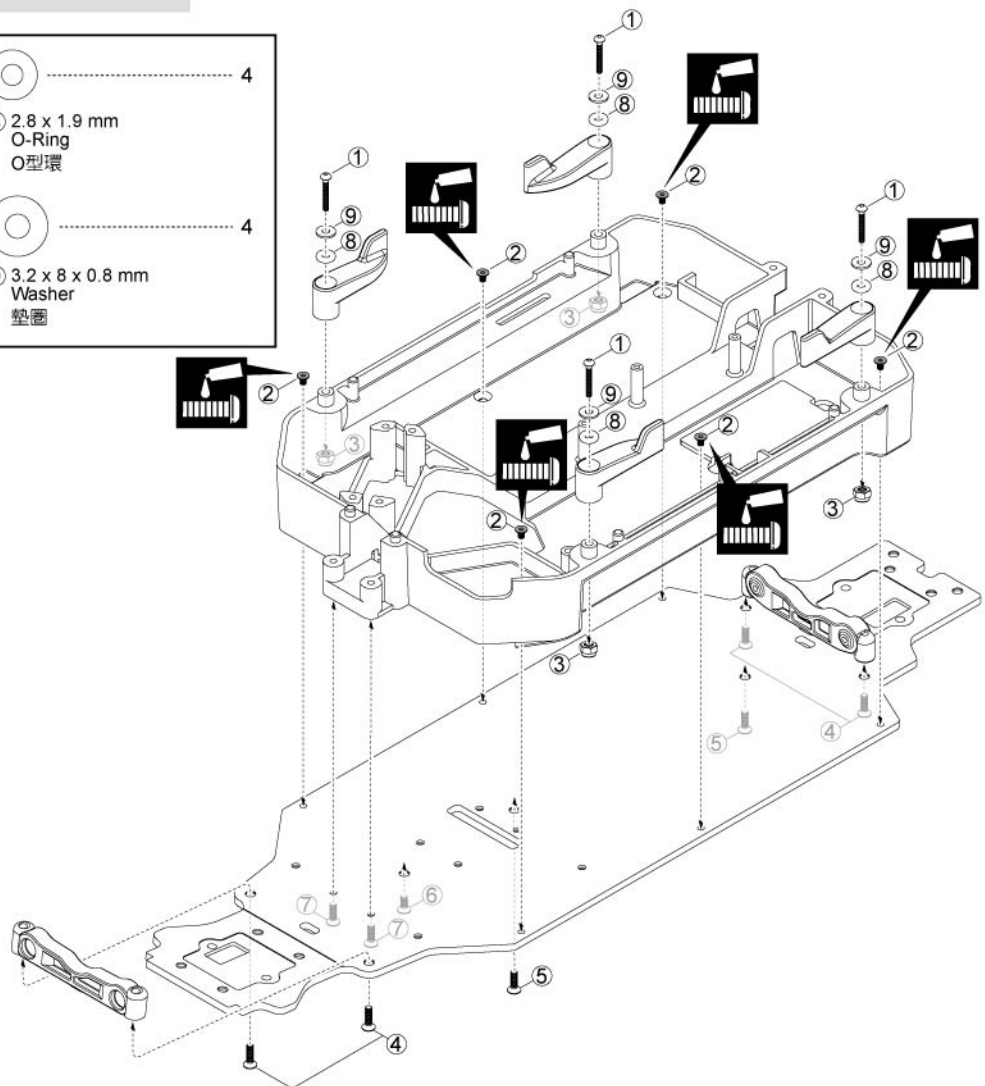


Apply threadlocker
使用螺絲防鬆膠



Hint
組裝提示


STEP7 Drivetrain 傳動軸 (1)

-  5
- ① 3 x 12 mm
FHCS Screw
平頭內六角螺絲
-  2
- ② 4 x 12 mm
FHCS Screw
平頭內六角螺絲
-  1
- ③ 5 x 4 mm
Set Screw
無頭內六角螺絲

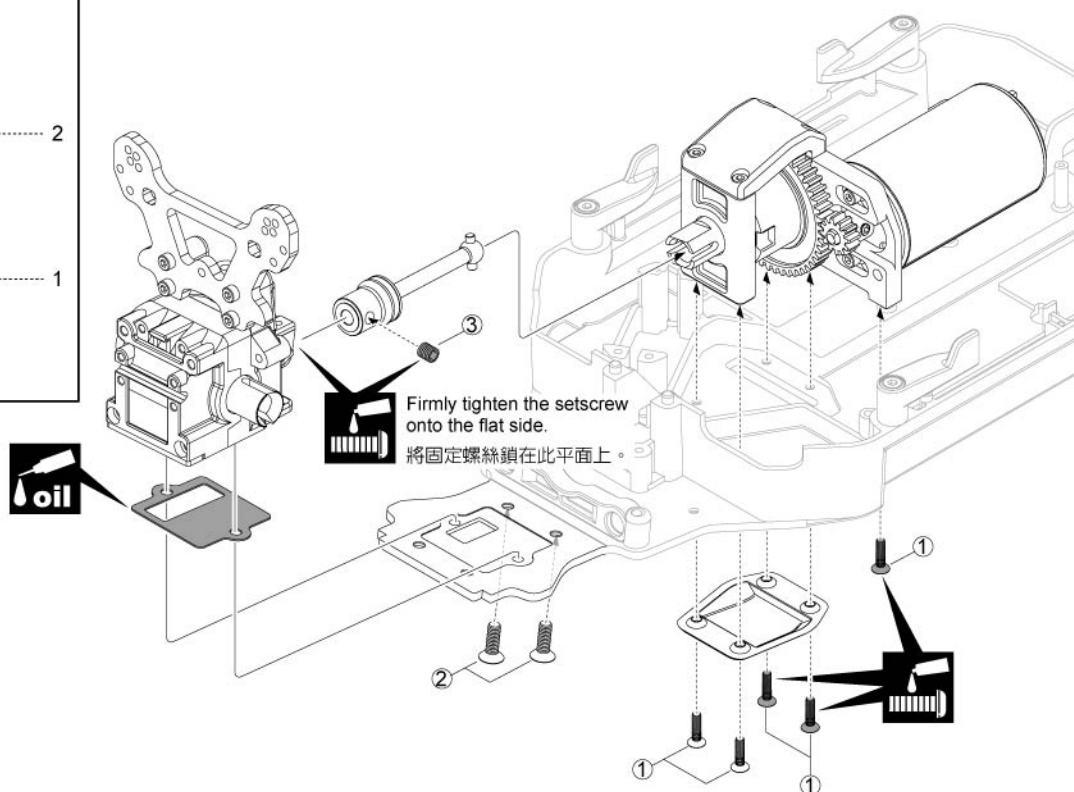

STEP8 Drivetrain 傳動軸 (2)

-  4
- ① 4 x 12 mm
FHCS Screw
平頭內六角螺絲
-  1
- ② 5 x 4 mm
Set Screw
無頭內六角螺絲


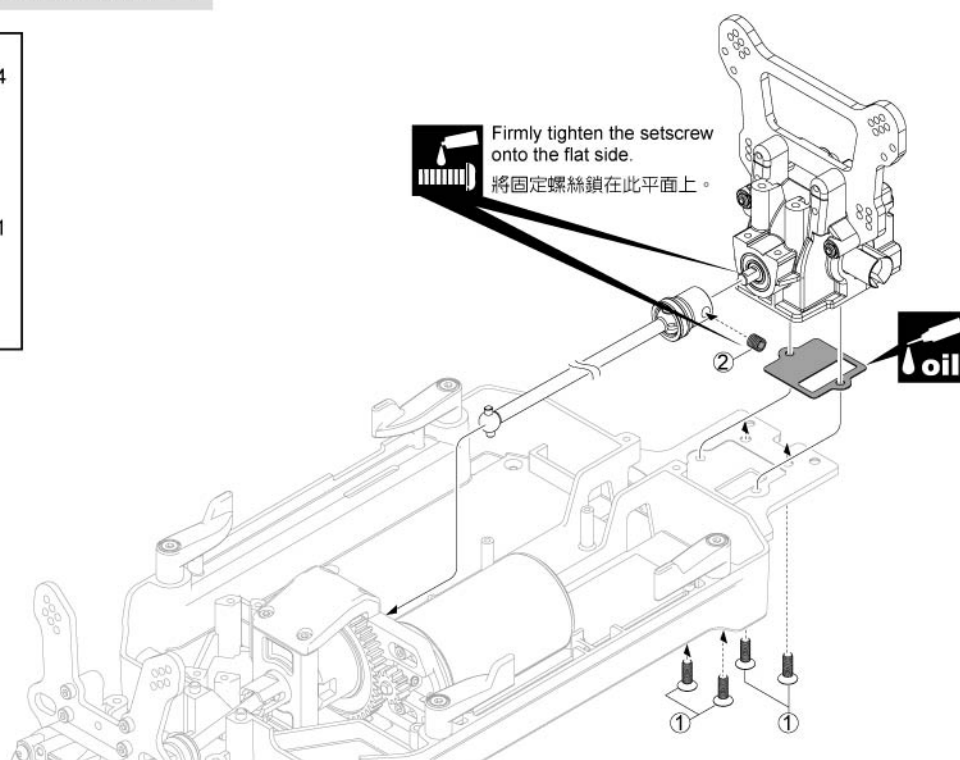


Apply threadlocker
使用螺絲防鬆膠




Apply silicon oil
使用模型專用矽油

STEP9 Steering Servo 轉向伺服機

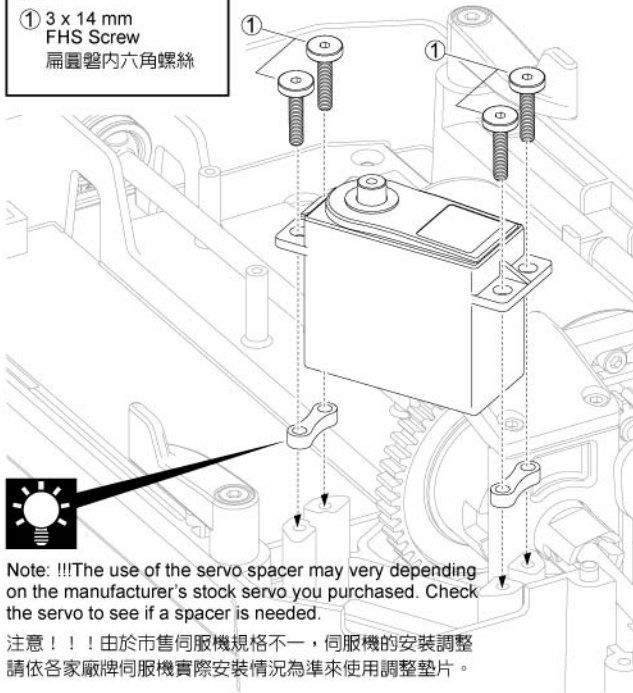
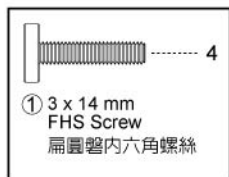


STEP10 FR Chassis Brace 前底盤補強桿


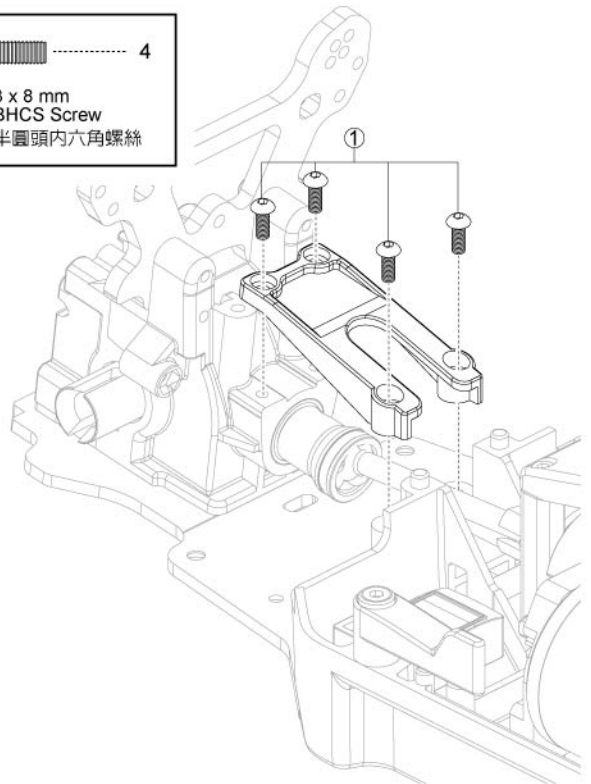


STEP11 Turnbuckle 拉桿

SERVO TIE ROD 伺服機拉桿

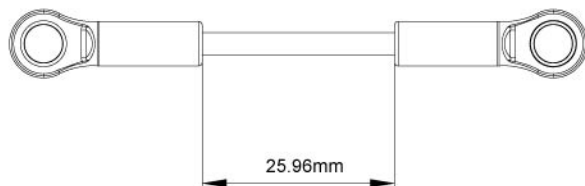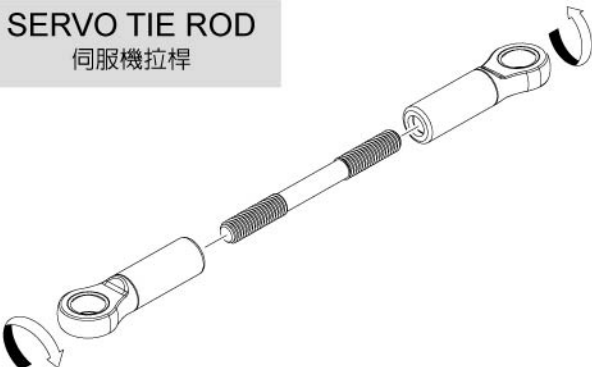

STEERING TURNBUCKLE 轉向拉桿

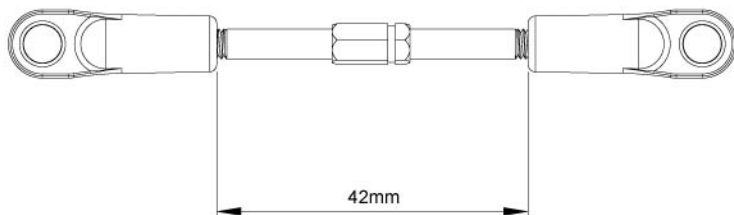
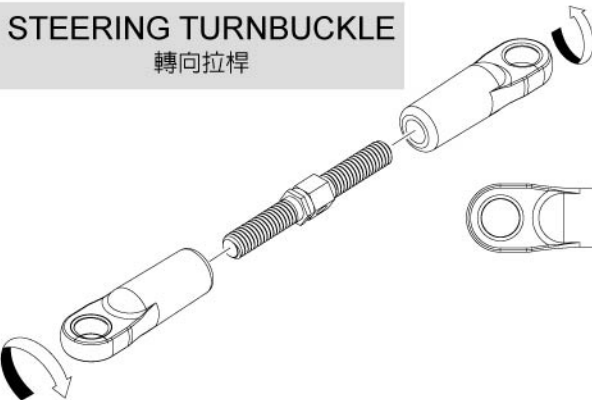



x2






x2 Assemble as many times as specified
依指示組裝所需數量

  STEP12 Steering System 轉向組 (1)



-  4
① 3 x 8 mm Washer
墊圈
-  4
② M3 Lock Nut
止鬆螺帽
-  4
③ 5 x 10 x 4 mm Bearing
軸承
-  6
④ 3 x 12 mm BHCS Screw
半圓頭內六角螺絲
-  2
⑤ 3 x 16 mm FHCS Screw
平頭內六角螺絲
-  2
⑥ 3 x 20 mm FHCS Screw
平頭內六角螺絲

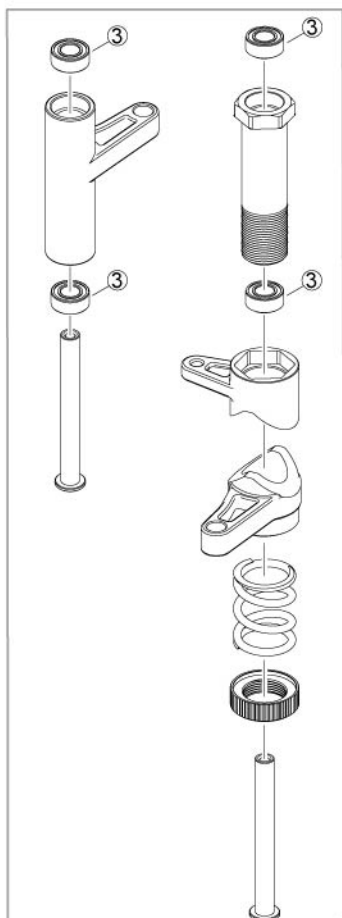

Holes for mounting.
安裝孔位。

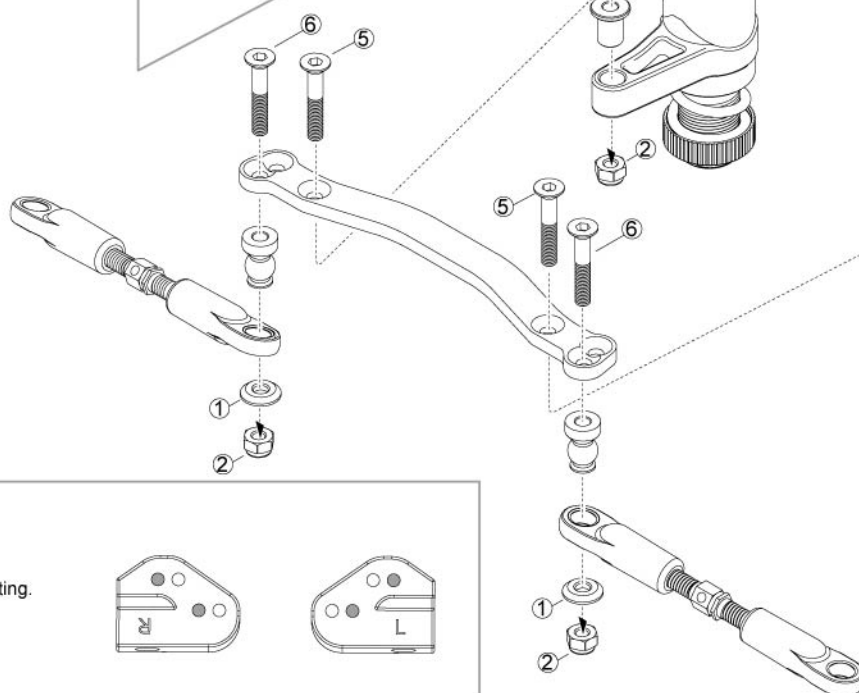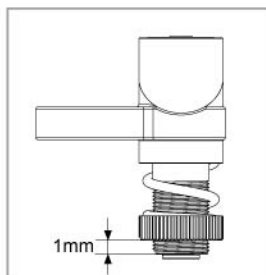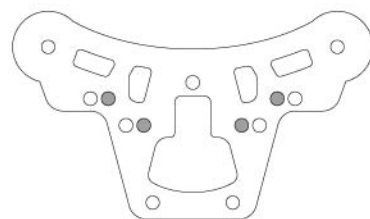

Holes for mounting.
安裝孔位。

  


Hint
組裝提示



Apply threadlocker
使用螺絲防鬆膠


STEP13 Steering System 轉向組 (2)

-  1
- ① M3 Lock Nut
止鬆螺帽
-  1
- ② 3 x 16 mm
BHCS Screw
半圓頭內六角螺絲

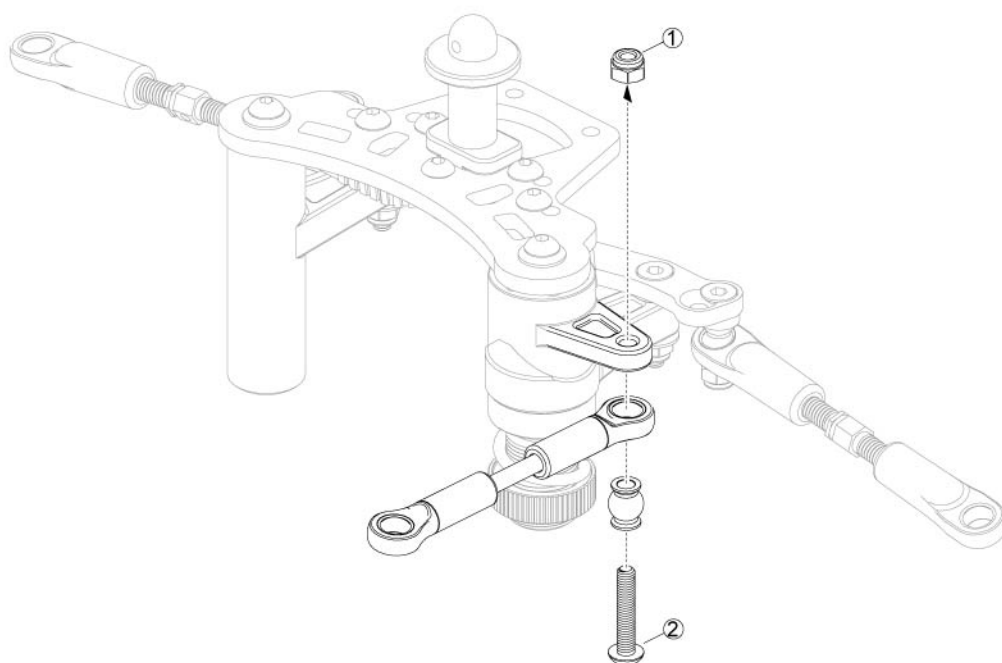

STEP14 Steering System 轉向組 (3)

-  2
- ① 3 x 12 mm
BHCS Screw
半圓頭內六角螺絲
-  2
- ② 3 x 10 mm
FHCS Screw
平頭內六角螺絲


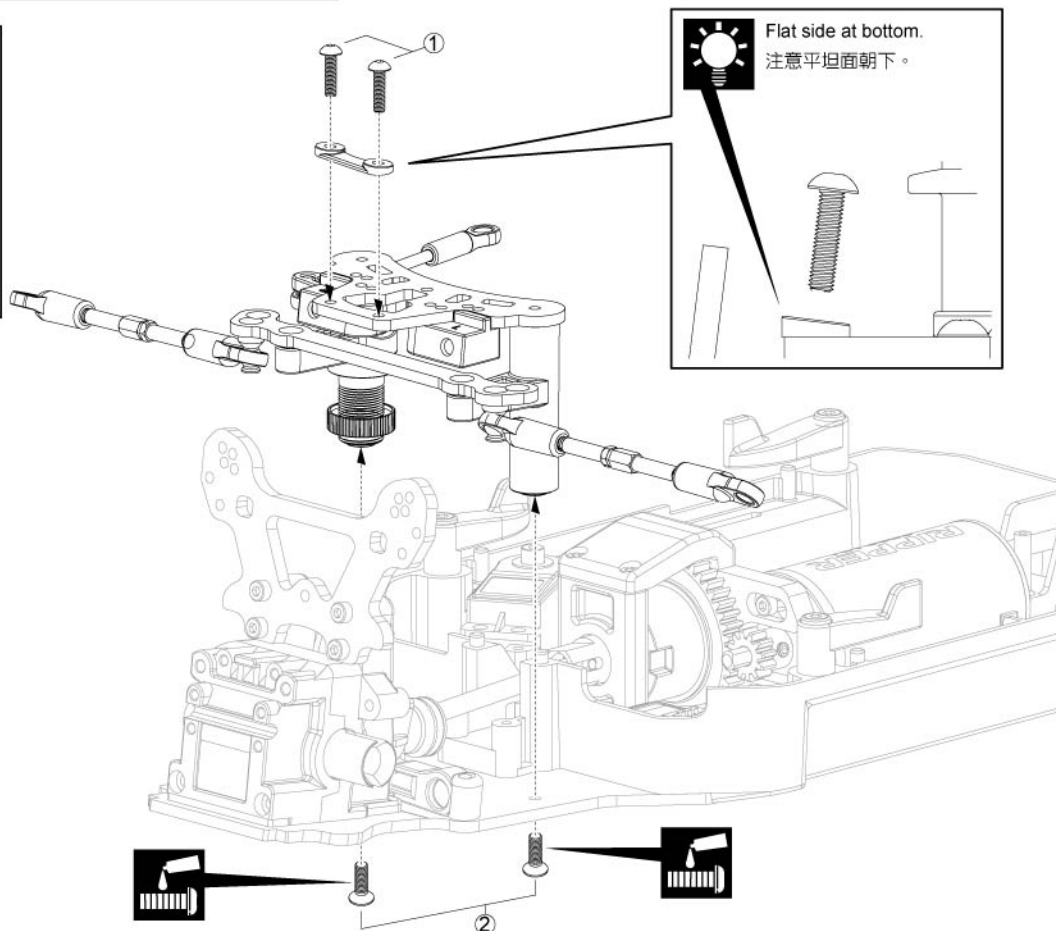


 Hint
組裝提示

 Apply threadlocker
使用螺絲防鬆膠


STEP15 Steering System 轉向組 (4)

- ① 3 x 8 mm FHCS Screw
平頭內六角螺絲
- ② 3 x 12 mm BHCS Screw
半圓頭內六角螺絲
- ③ M3 Lock Nut
止鬆螺帽

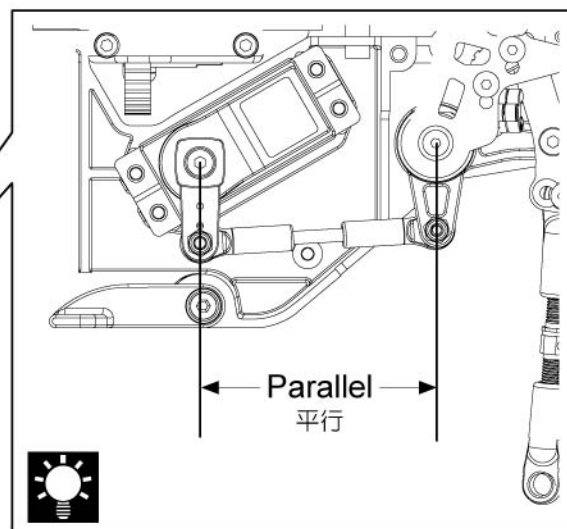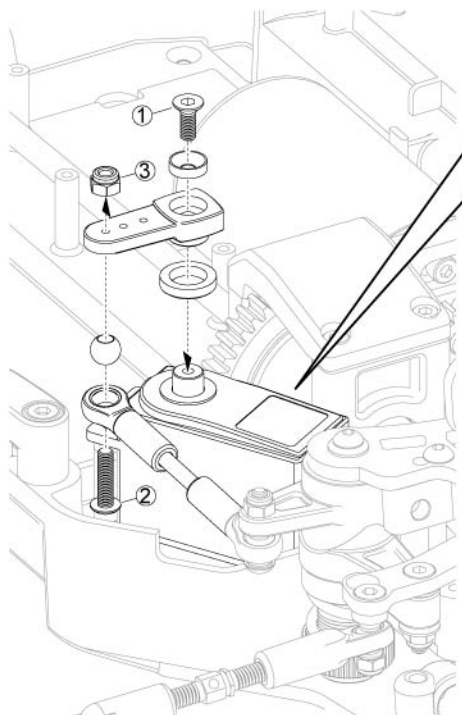


STEP16 Rear Chassis Brace 後固定座

- ① 3 x 8 mm BHCS Screw
半圓頭內六角螺絲

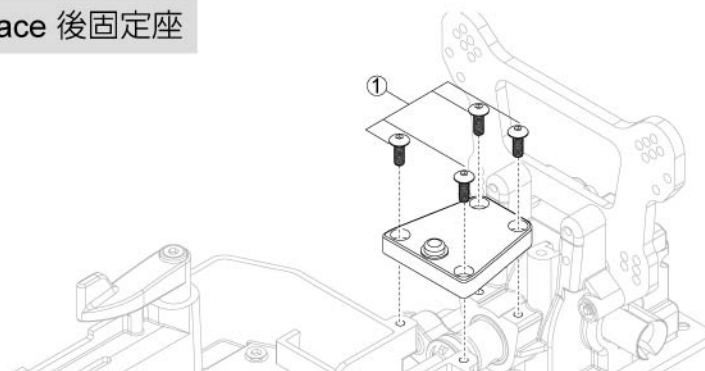


STEP17 Front Suspension 前懸吊 (1)


- ① 4 x 68 mm Outer Hinge Pin
擺臂銷
- ② 3 x 30 mm BHCS Screw
半圓頭內六角螺絲
- ③ 4 x 12 mm Set Screw
無頭內六角螺絲

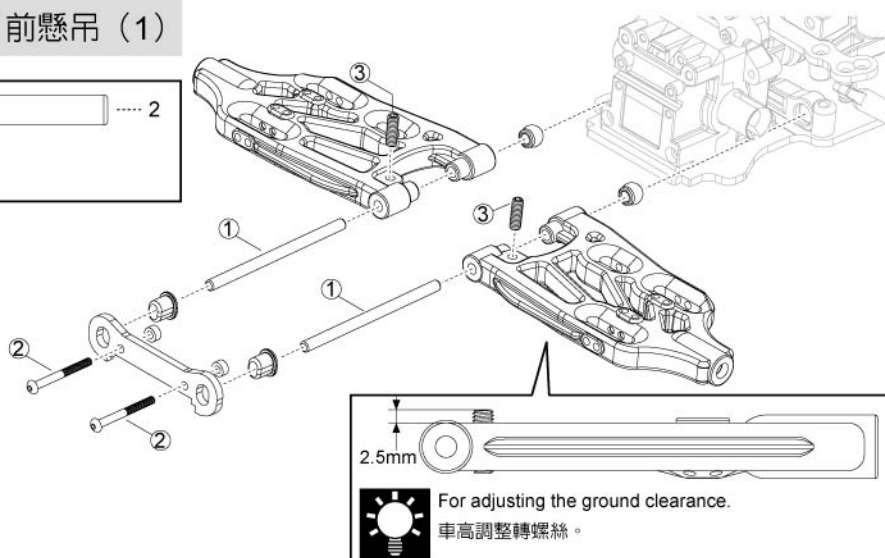


STEP18 Front Suspension 前懸吊 (2)

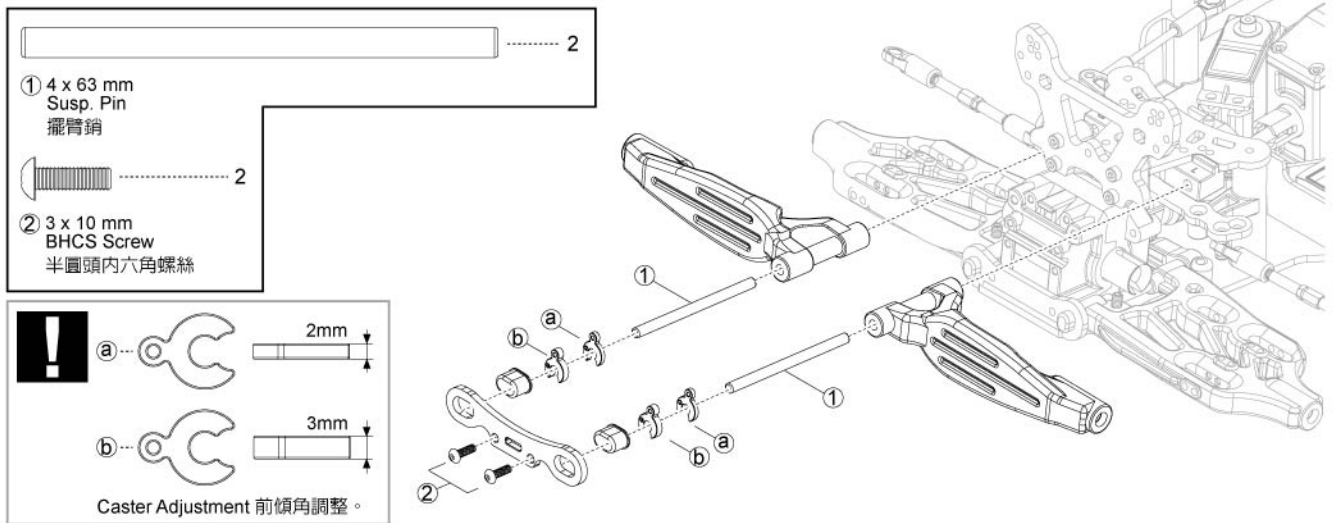

STEP19 Front Suspension 前懸吊 (3)

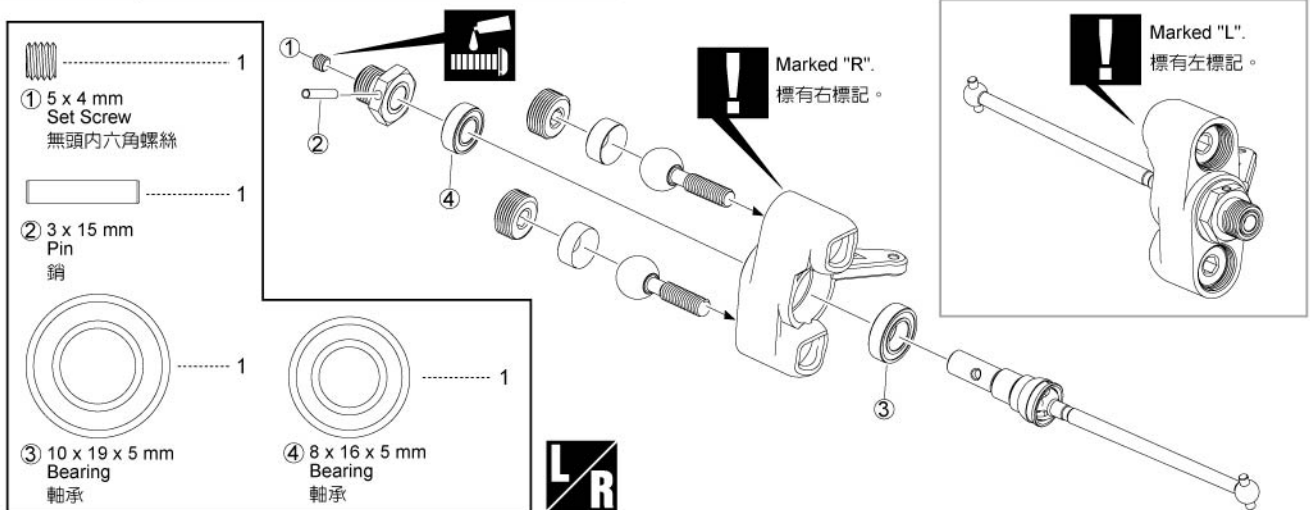

STEP20 Front Suspension 前懸吊 (4)

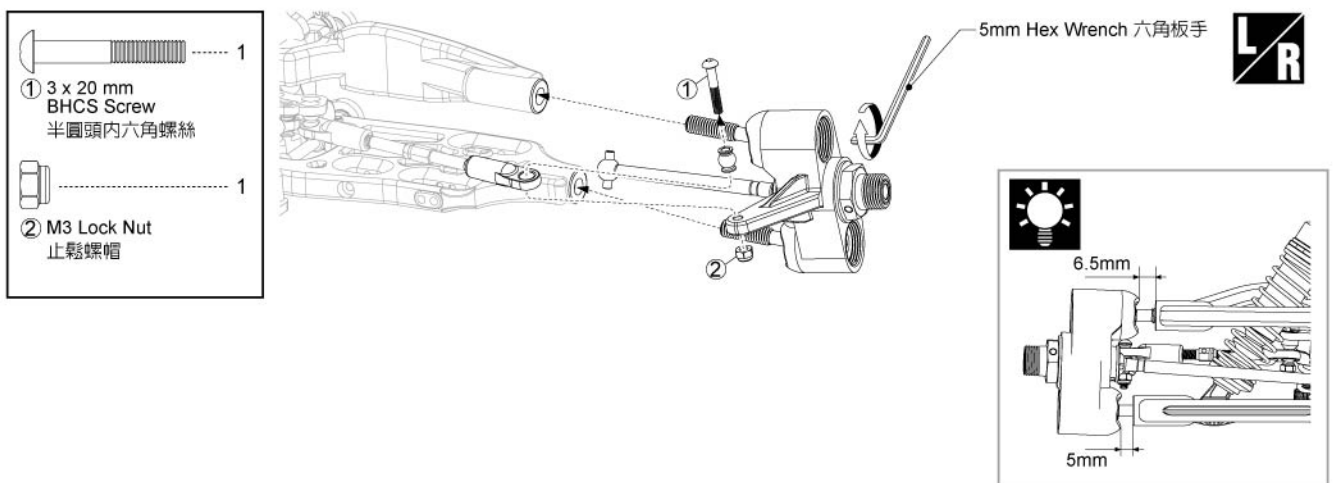

Apply threadlocker
使用螺絲防鬆膠


Assemble left and right side the same way
左右側組件相同

Pay attention
組裝注意


Hint
組裝提示



STEP21 Front Bumper 前防撞板

- | | |
|---|---|
|  2 |  2 |
| ① 4 x 12 mm FHCS Screw
平頭內六角螺絲 | ③ 3 x 12 mm BHCS Screw
半圓頭內六角螺絲 |
|  1 |  1 |
| ② 3 x 25 mm SHCS Screw
內六角螺絲 | ④ M3 Lock Nut
止鬆螺帽 |


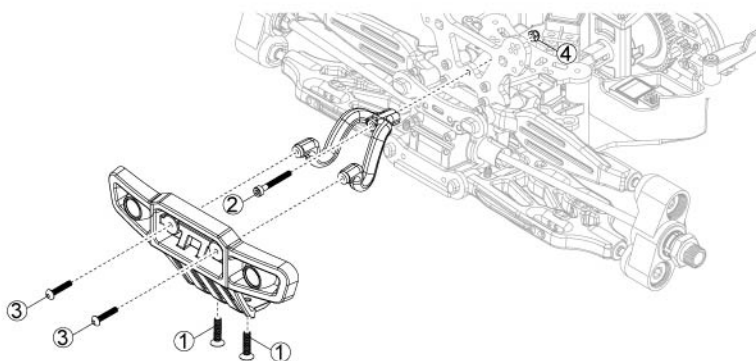


 STEP22 Rear Suspension 後懸吊 (1)

- | | |
|---|---|
|  2 | |
| ① 4 x 68 mm Susp. Pin
擺臂銷 | |
|  2 |  2 |
| ② 4 x 12 mm Set Screw
無頭內六角螺絲 | ③ 4 x 12 mm FHCS Screw
平頭內六角螺絲 |

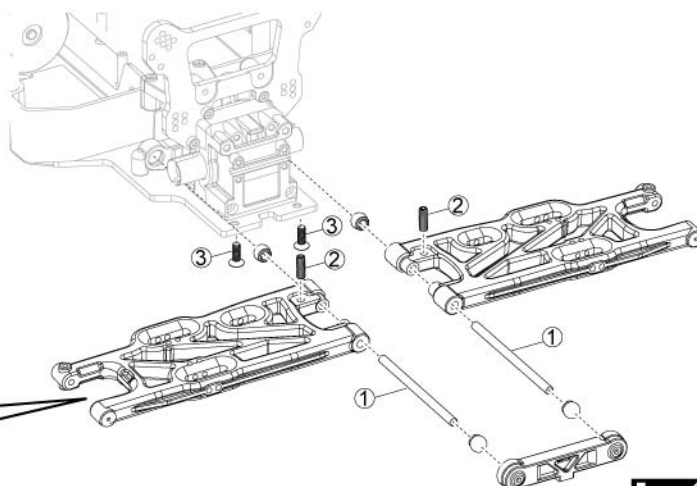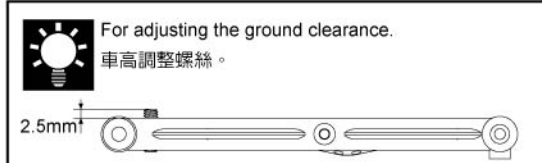


STEP23 Rear Suspension 後懸吊 (2)

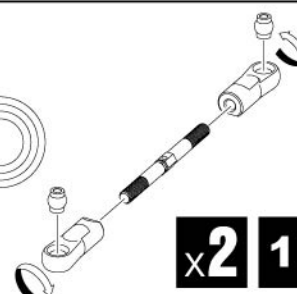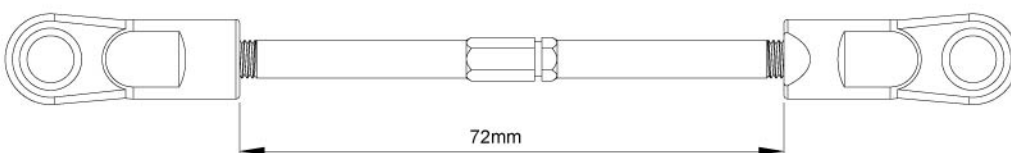

STEP24 Rear Suspension 後懸吊 (3)

- | | |
|---|--|
|  4 | |
| ① 3 x 8 mm Washer
墊圈 | |
|  2 | |
| ② M3 Lock Nut
止鬆螺帽 | |
|  2 | |
| ③ 3 x 20 mm SHCS Screw
內六角螺絲 | |

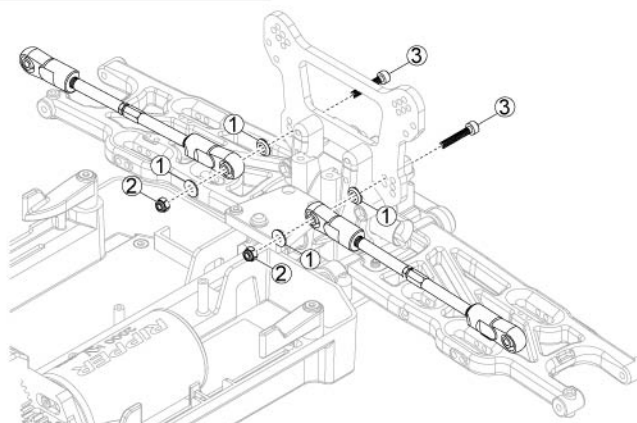

Hint
組裝提示


x2 Assemble as many times as specified
依指示組裝所需數量



Assemble left and right side the same way
左右側組件相同



STEP25 Rear Suspension 後懸吊 (4)

L/R


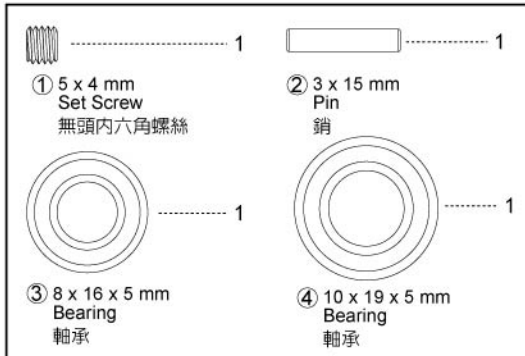


STEP26 Rear Suspension 後懸吊 (5)

L/R

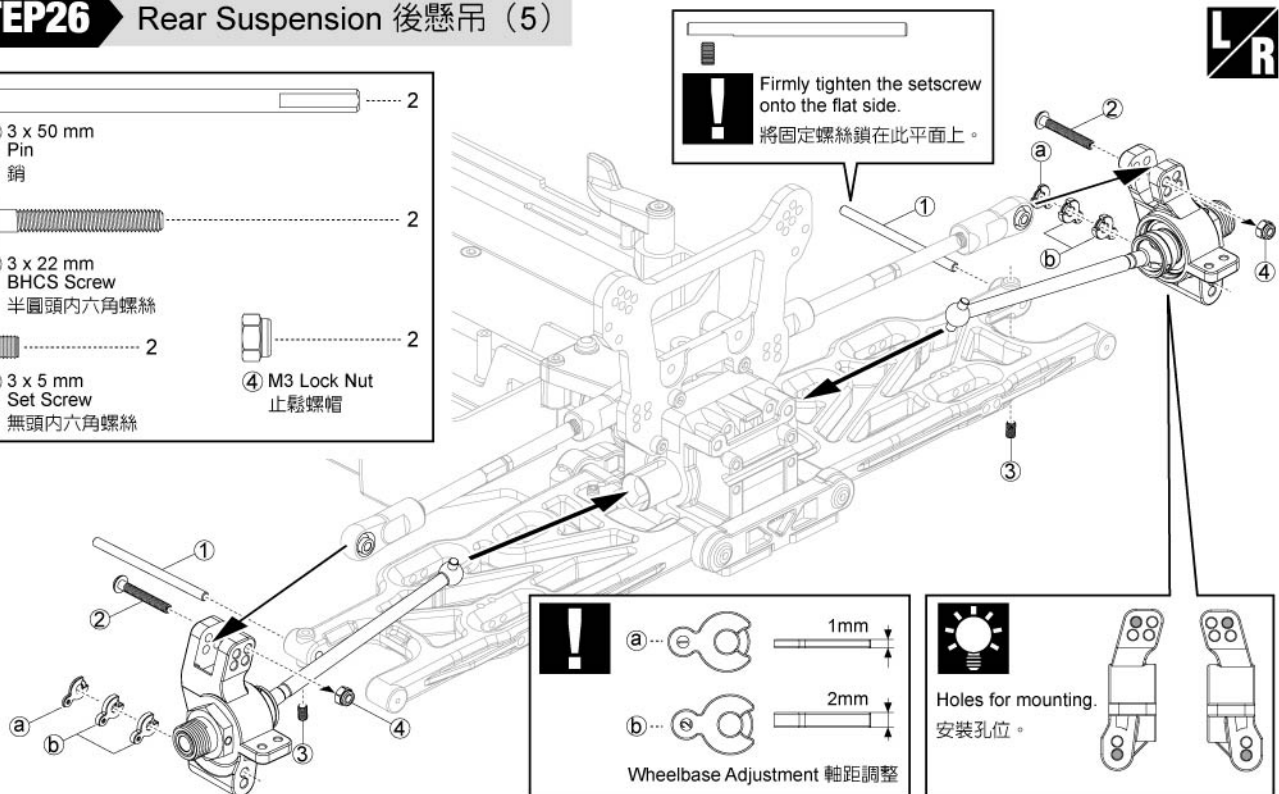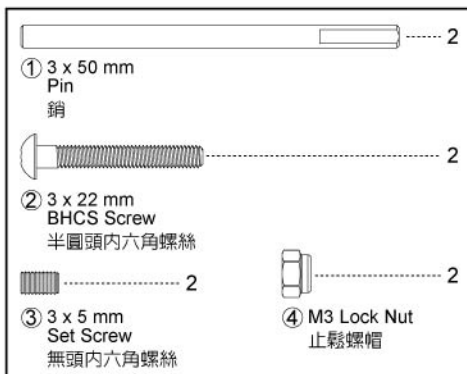

STEP27 Body Post 車殼支柱

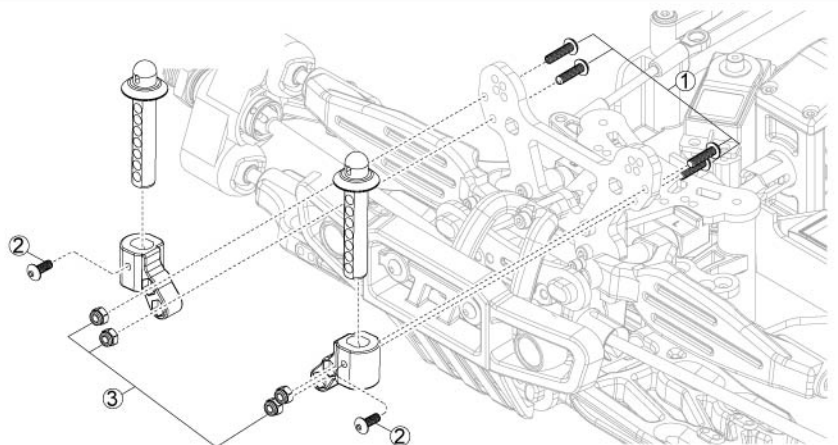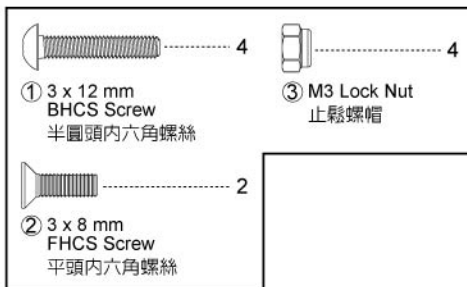

Apply threadlocker
使用螺絲防鬆膠






Assemble left and right side the same way
左右側組件相同




Pay attention
組裝注意


STEP28 Shock Absorber 避震組 (1)

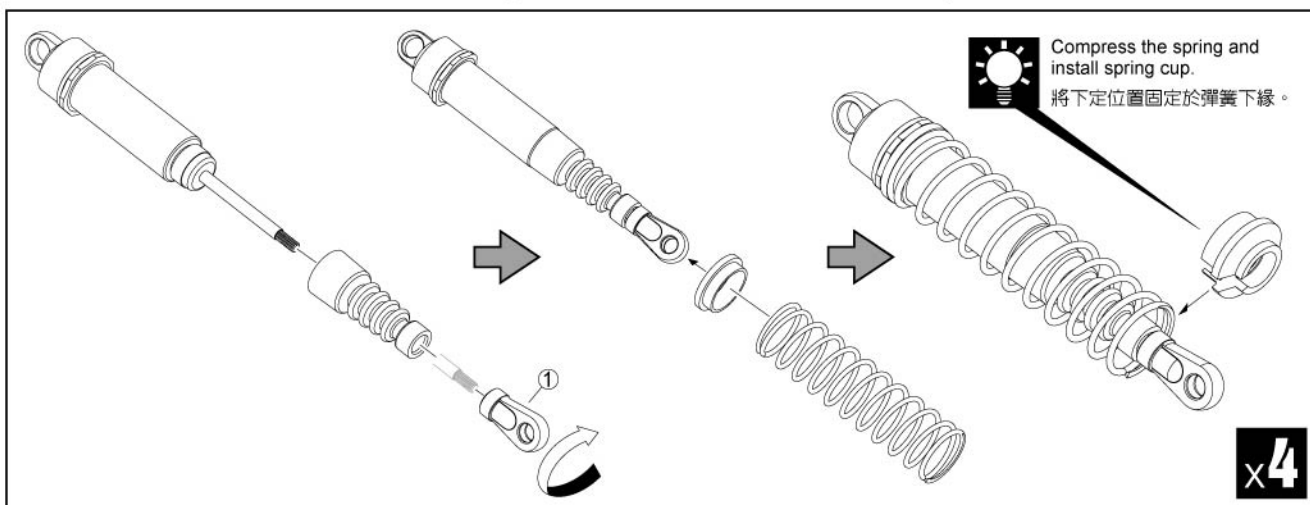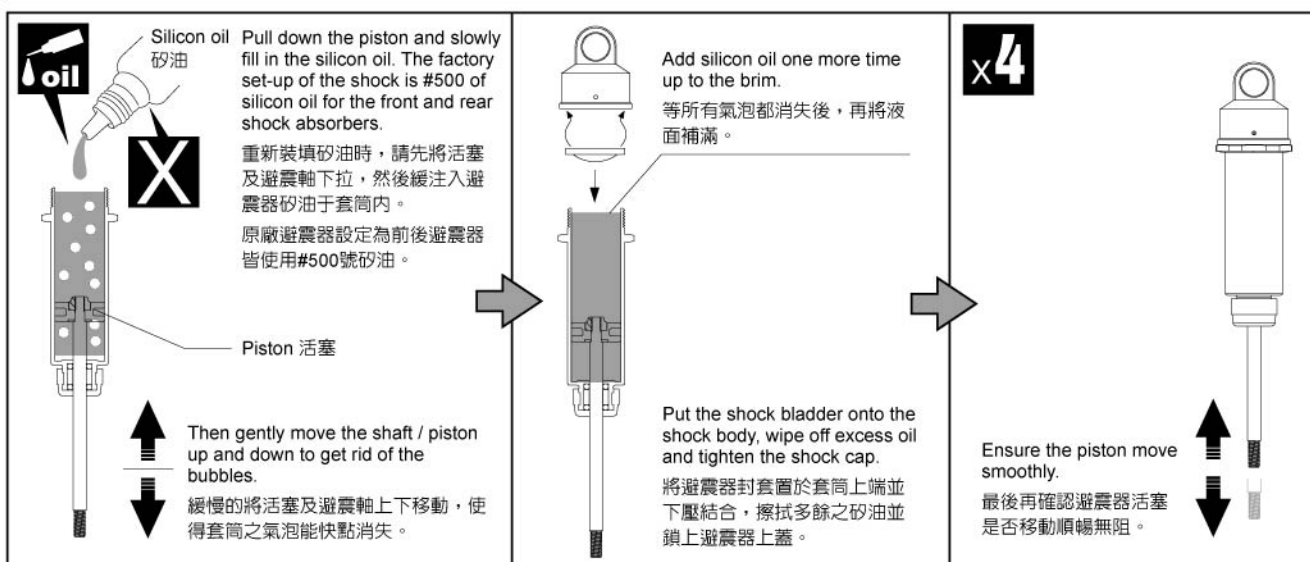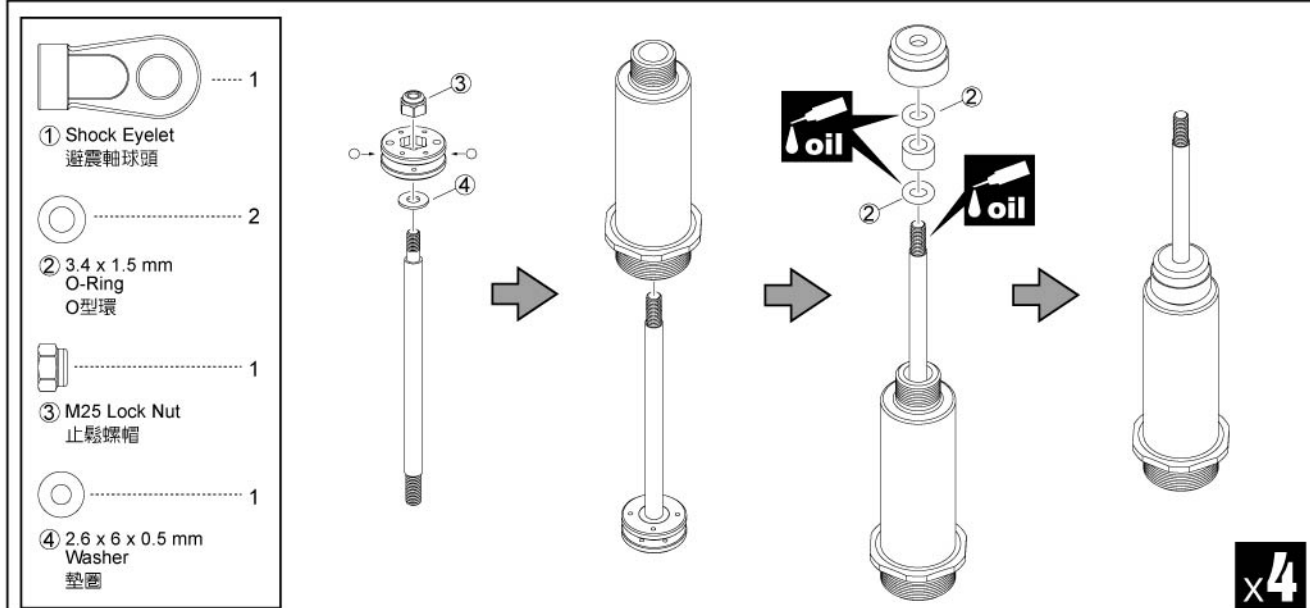

 STEP29 Shock Absorber 避震組 (2)

-  2
① 3 x 30 mm SHCS Screw
內六角螺絲
-  2
② Hinge Pin (long)
避震器固定銷 (長)
-  2
③ 3 x 5 mm Set Screw
無頭內六角螺絲
-  2
④ M3 Lock Nut
止鬆螺帽
-  2
⑤ 3 x 8 mm Washer
墊圈


FRONT
前

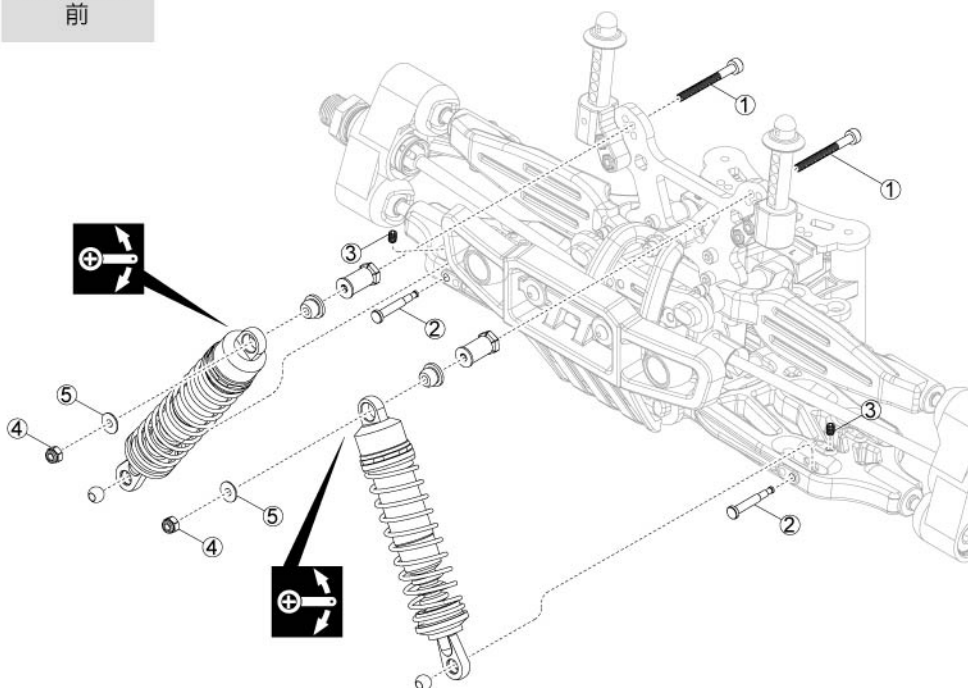

STEP30 Shock Absorber 避震組 (3)

-  2
① 3 x 25 mm SHCS Screw
內六角螺絲
-  2
② Hinge Pin (short)
避震器固定銷 (短)
-  2
③ 3 x 5 mm Set Screw
無頭內六角螺絲
-  2
④ M3 Lock Nut
止鬆螺帽
-  2
⑤ 3 x 8 mm Washer
墊圈


REAR
後

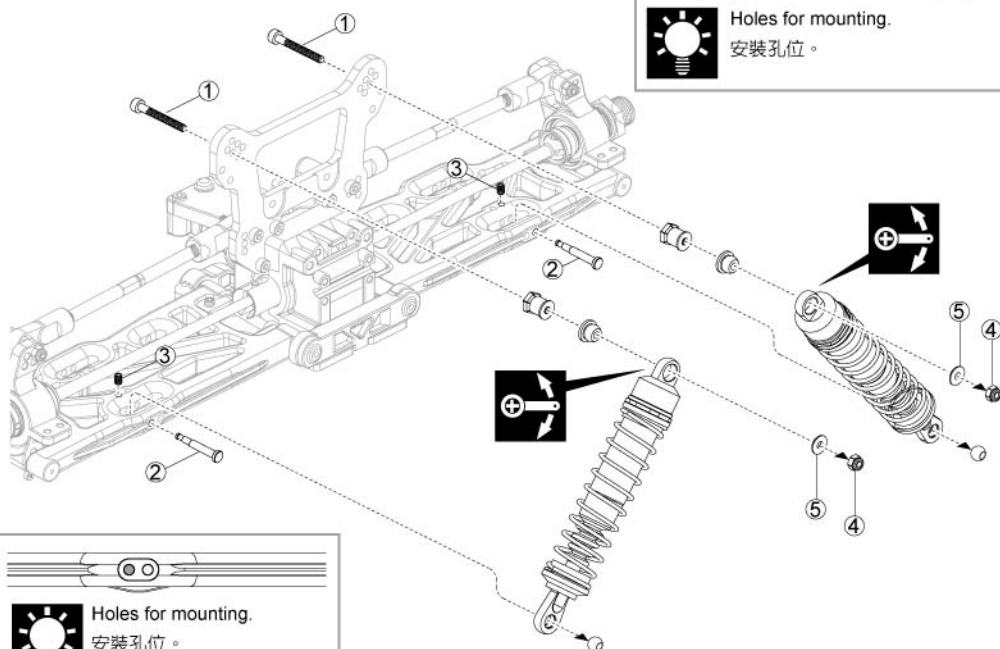



 **Hint**
組裝提示

 **Ensure smooth, non-binding movement when assembling**
確認組件靈活度


STEP31 Chassis 底板

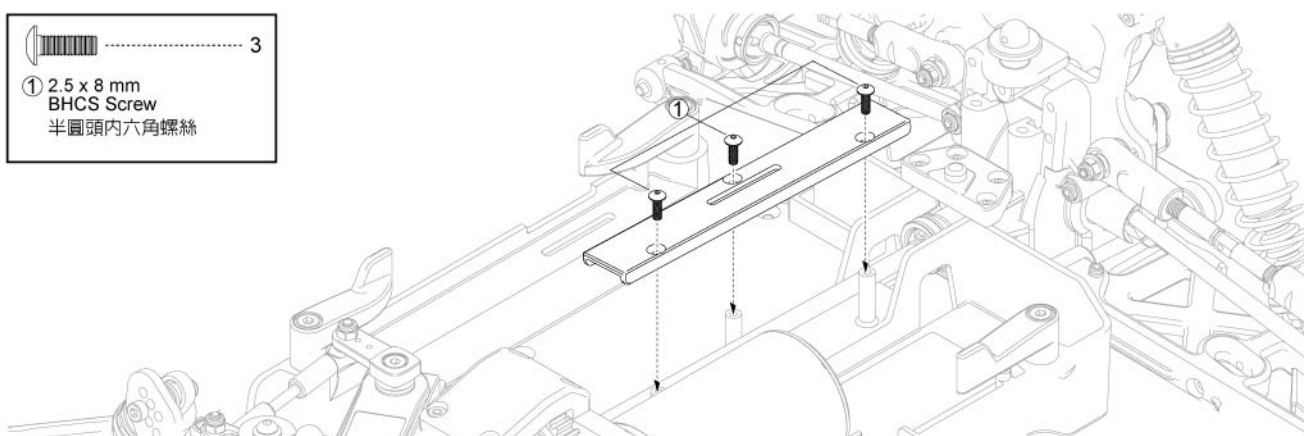

STEP32 Installing Battery 電池安裝 (1)

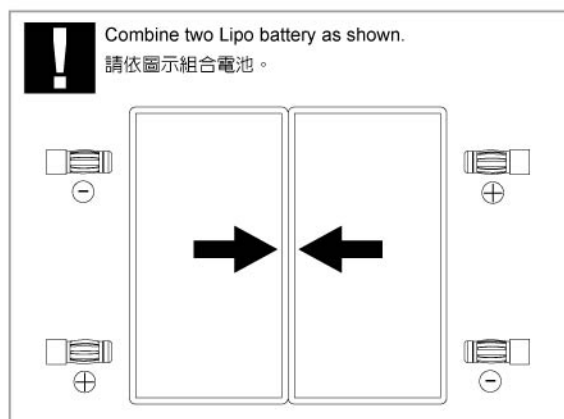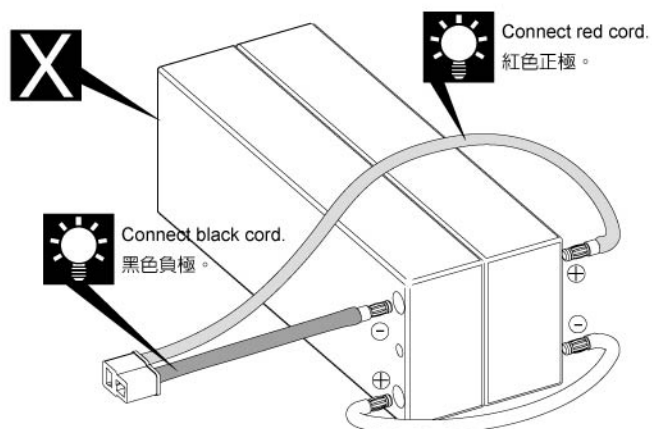

STEP33 Installing Battery 電池安裝 (2)


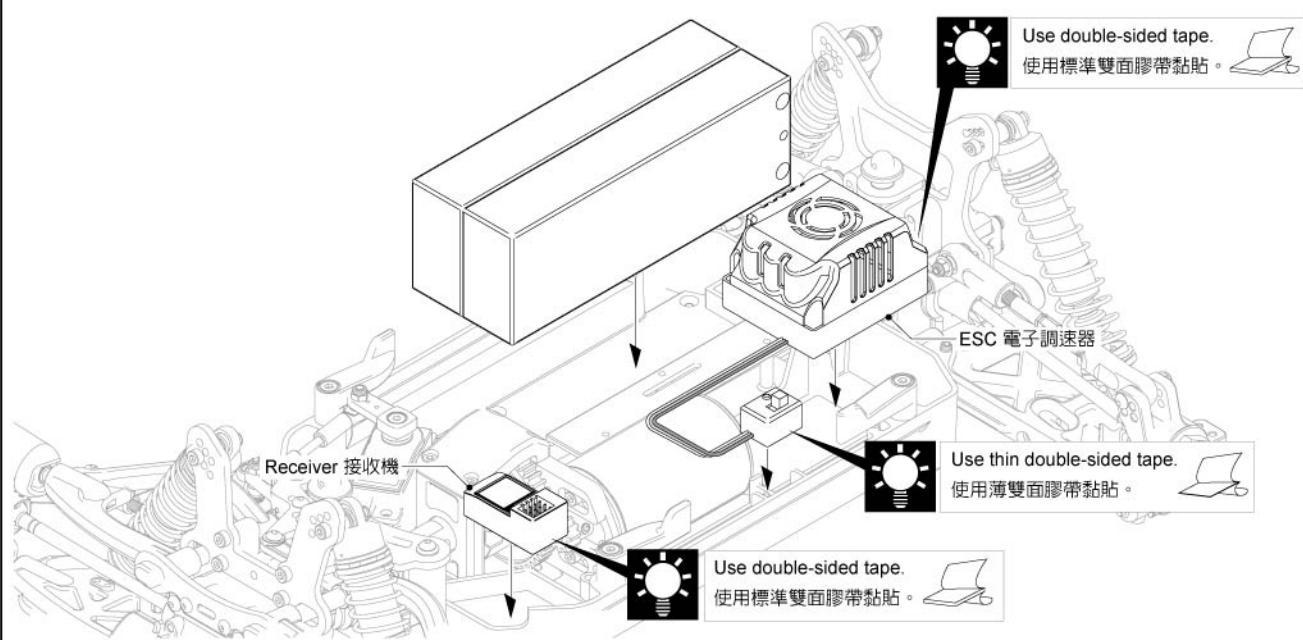


! Pay attention
組裝注意


💡 Hint
組裝提示

X Must be purchased separately
改裝品需另購

STEP34 Receiver 接收機

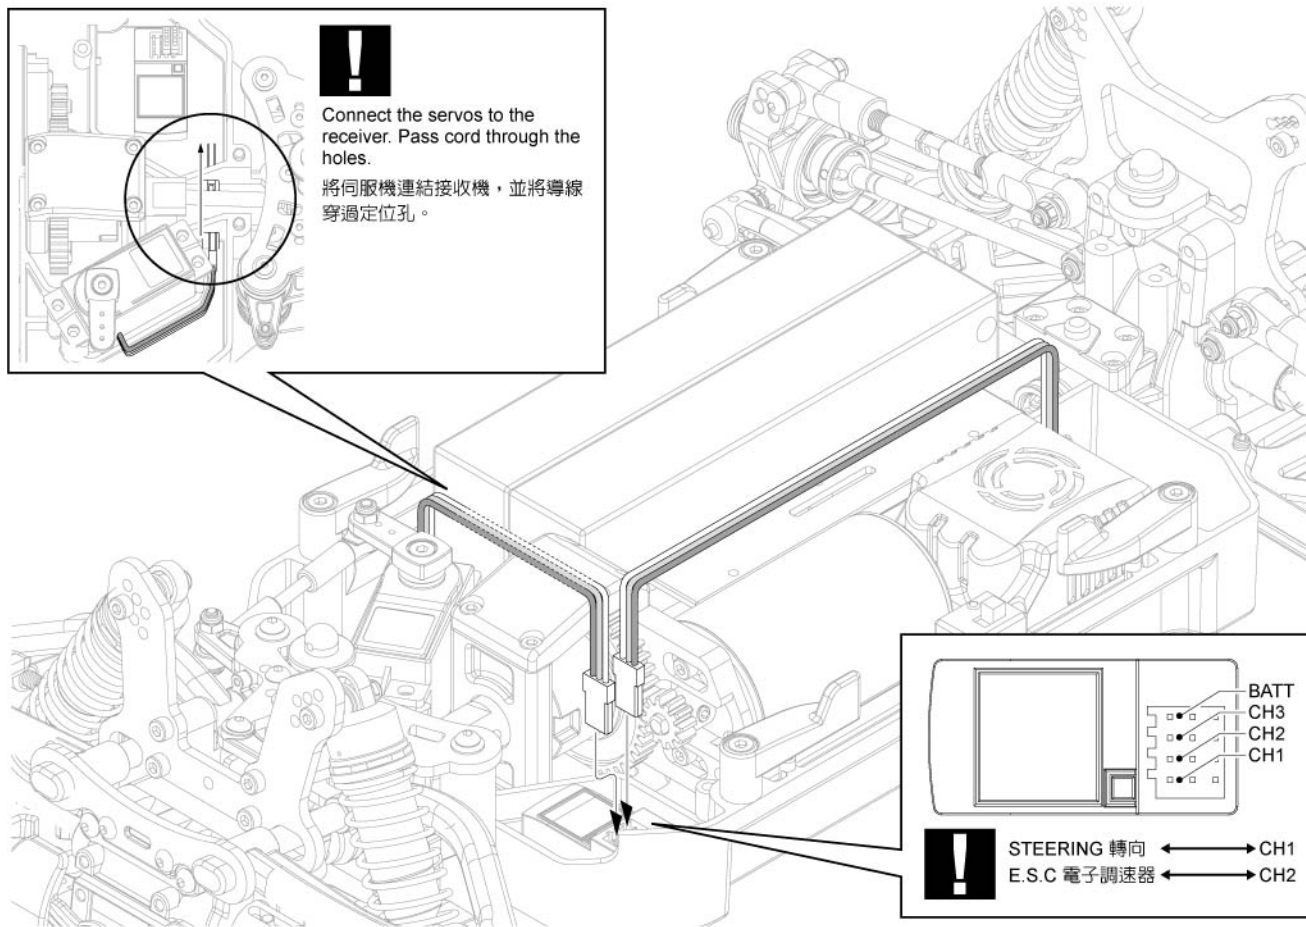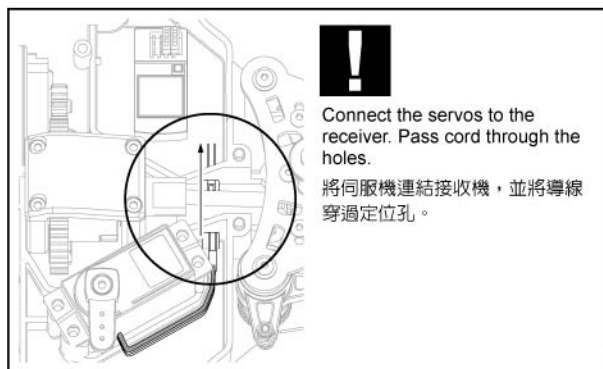


STEP35 Electronic Speed Controller (E.S.C 電子調速器)

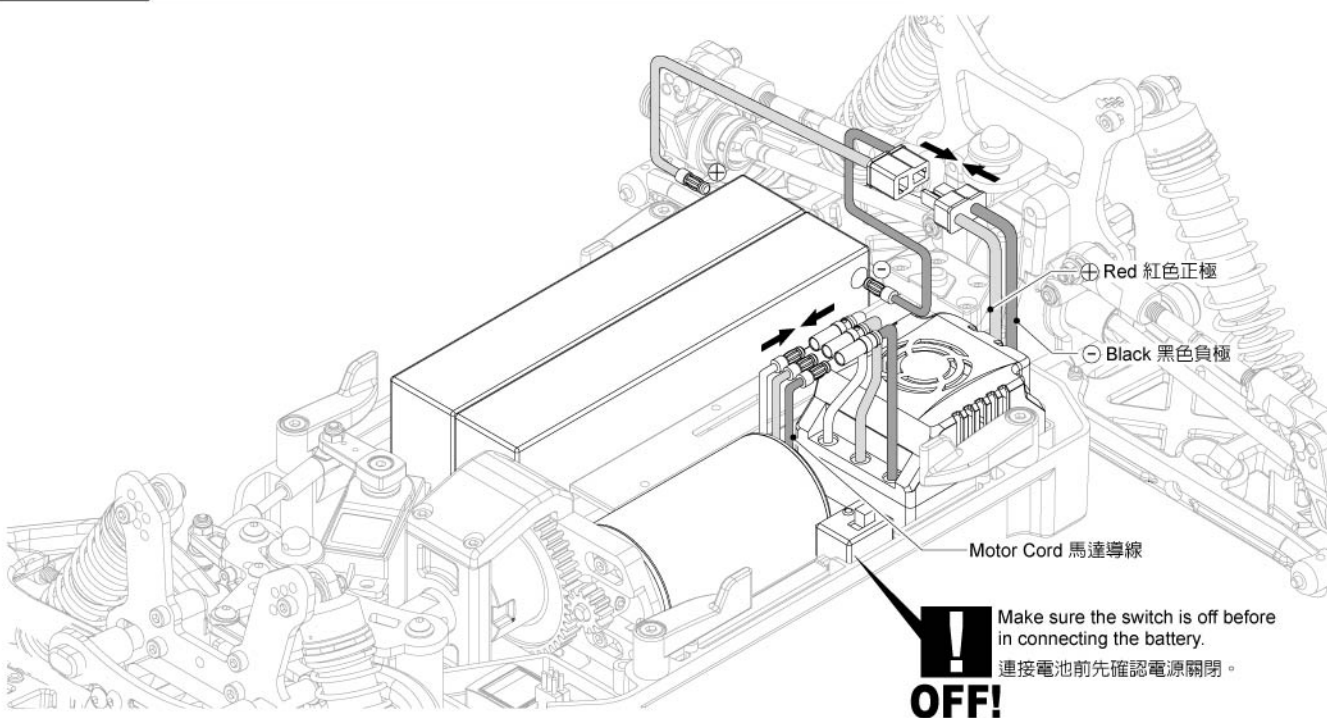


! Pay attention
組裝注意


STEP36 Radio Antenna 接收天線

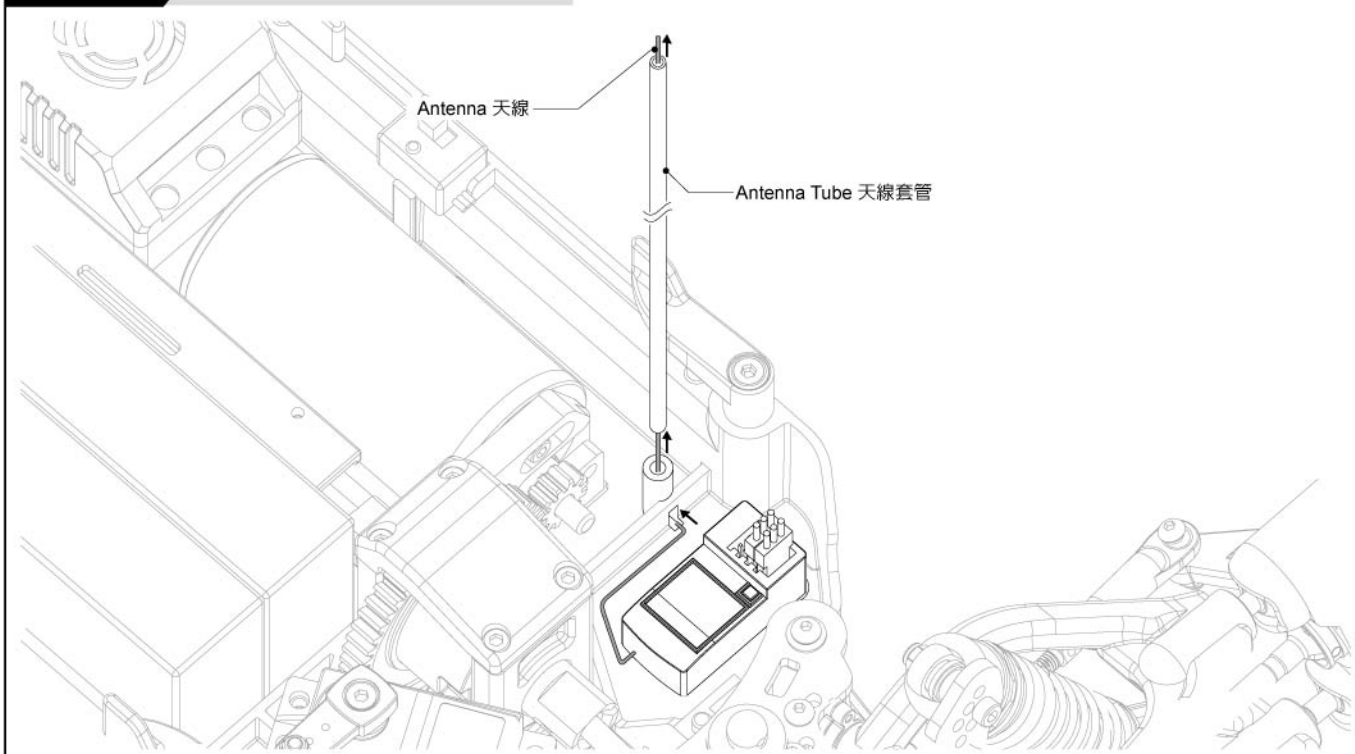


STEP37 Chassis Cover 底板護蓋

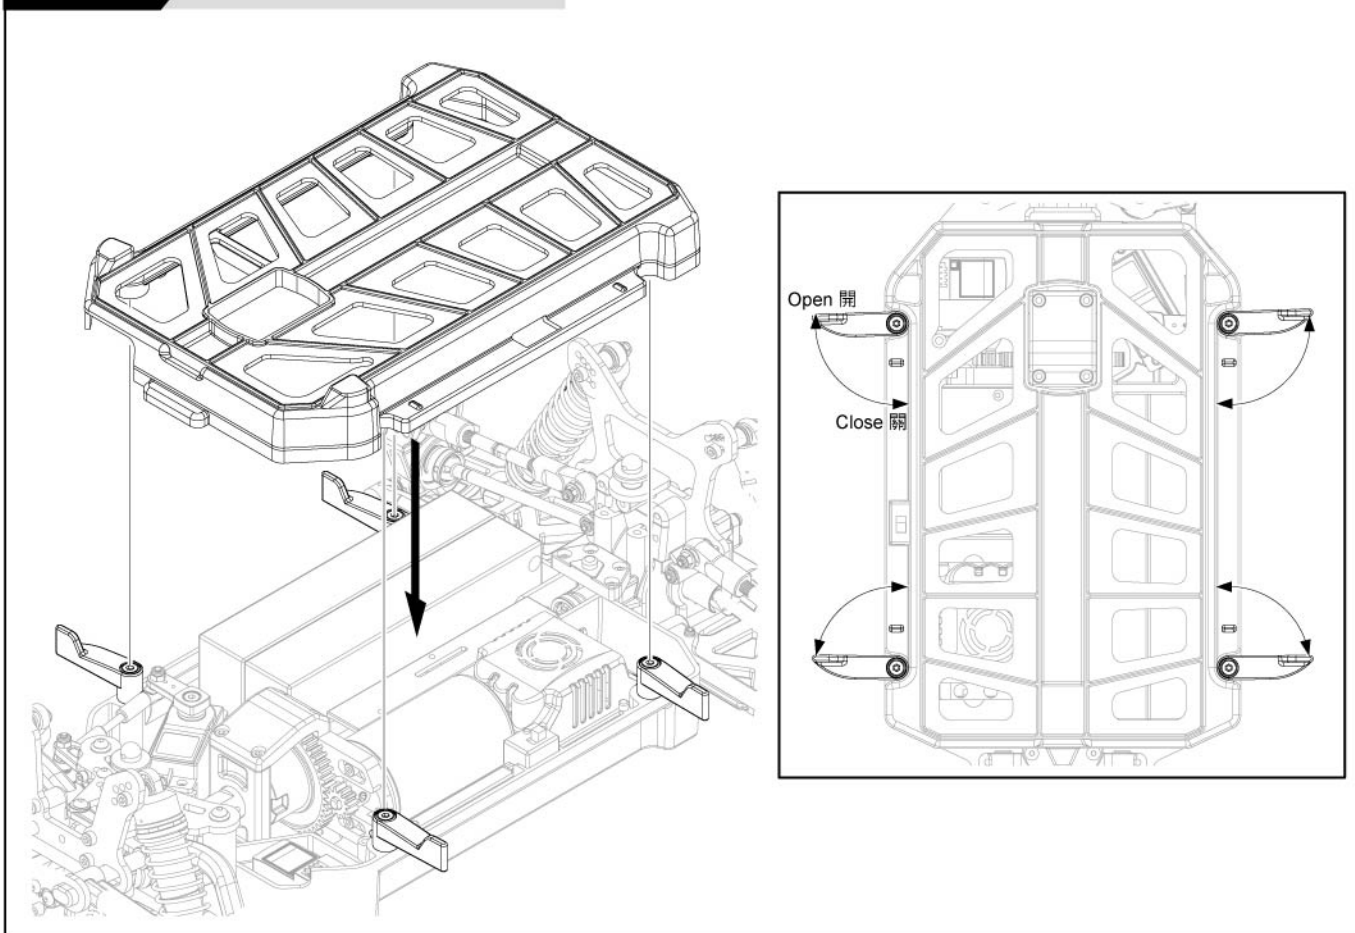

STEP38 Rear Body Mount 後車殼固定座 (1)

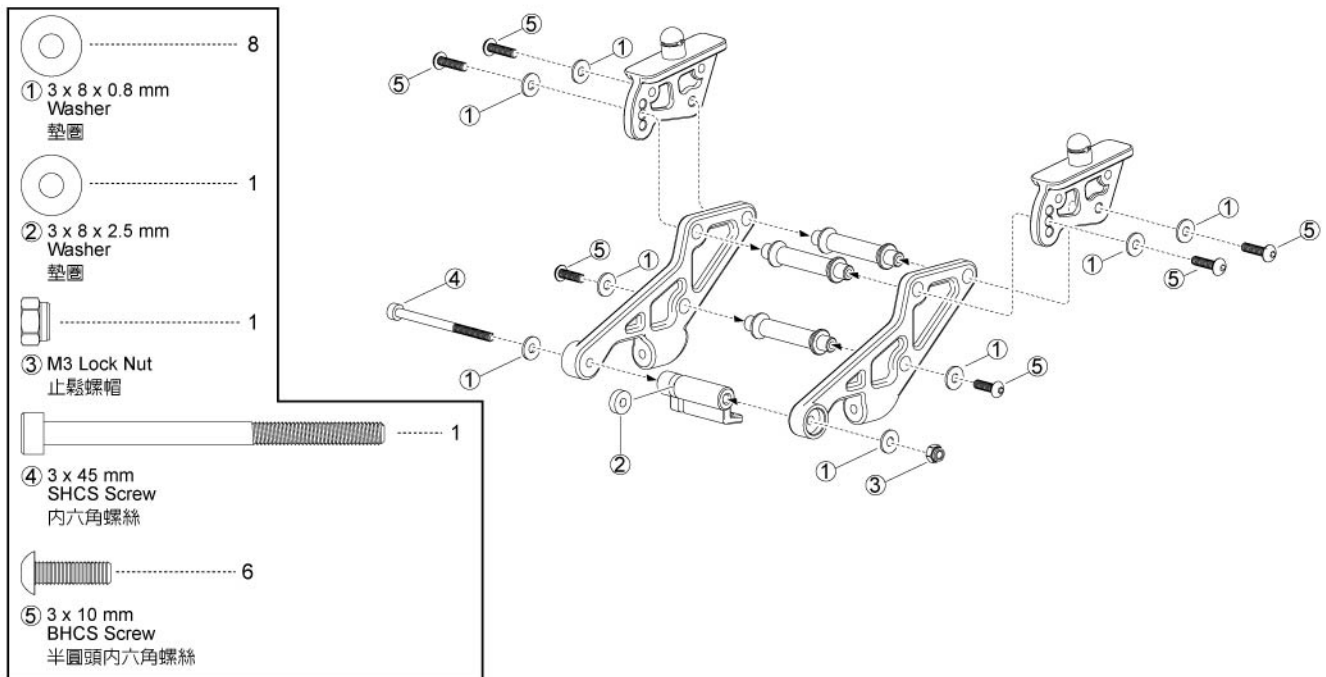



STEP39 Rear Body Mount 後車殼固定座 (2)

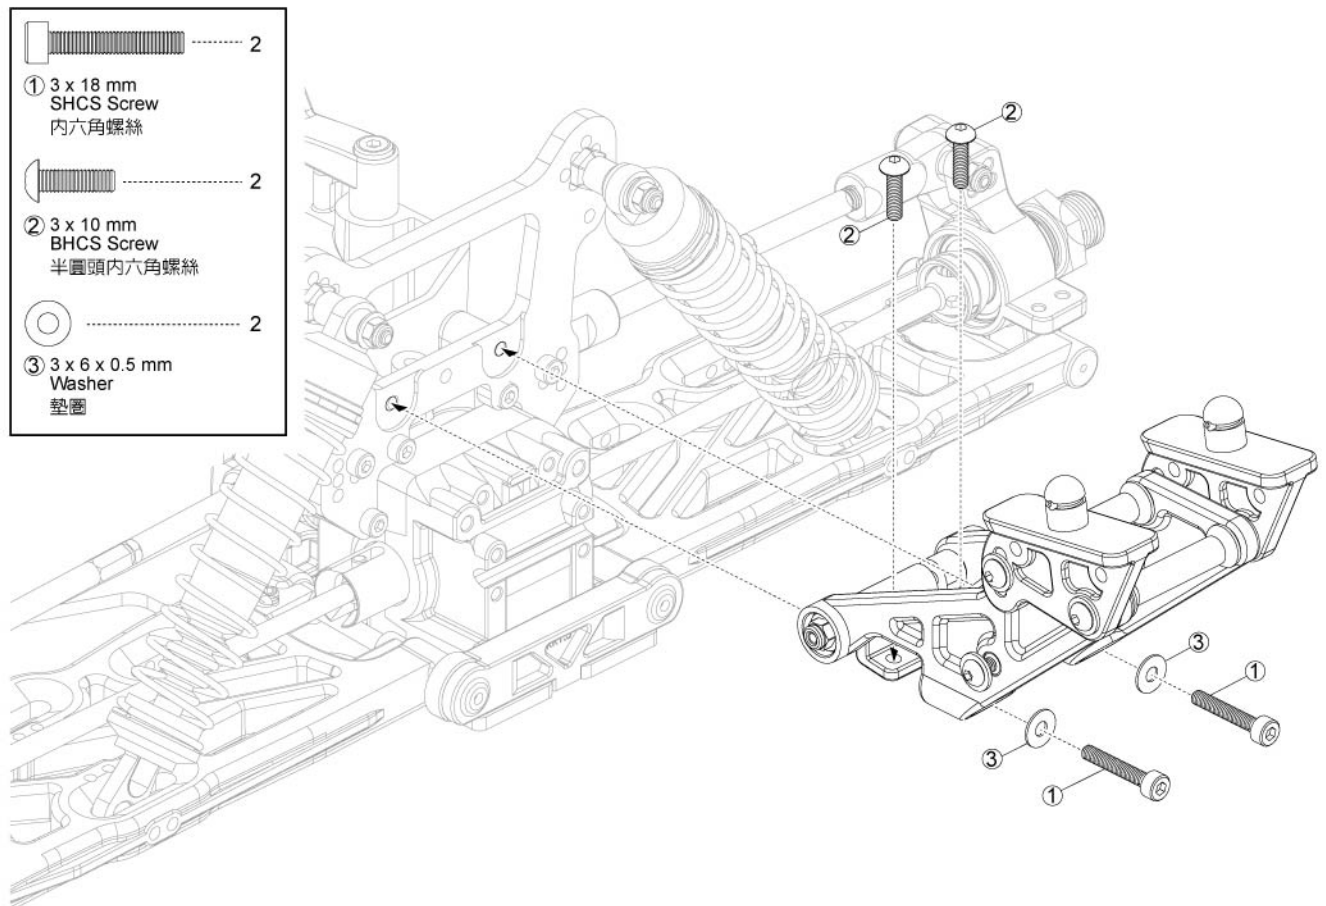





STEP40 Tires & Wheels 輪胎與輪轂 (1)



x4

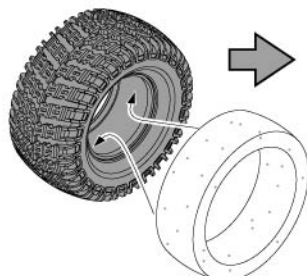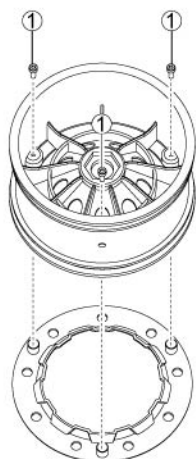

Tire insert foam
輪胎海綿內襯

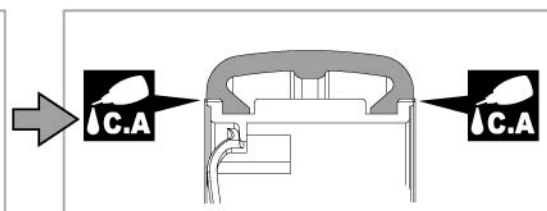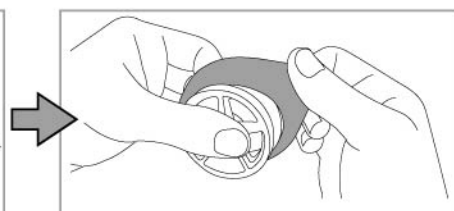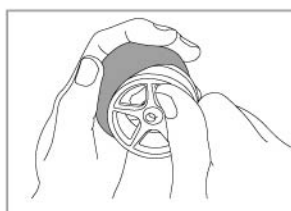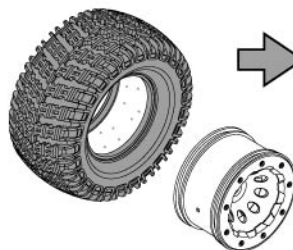


Install the tire onto the wheel. Glue the tire to the wheel with instant glue in several spots around the tire on both sides.

將輪胎（含內襯）與輪轂結合並在胎線內側點上快乾膠黏合。

Warning: Follow the adhesive instructions for proper use and safety. Wear eye and hand protection.

注意！！使用快乾膠時請注意安全，最好戴上手套及護目鏡以避免危險。

STEP41 Tires & Wheels 輪胎與輪轂 (2)

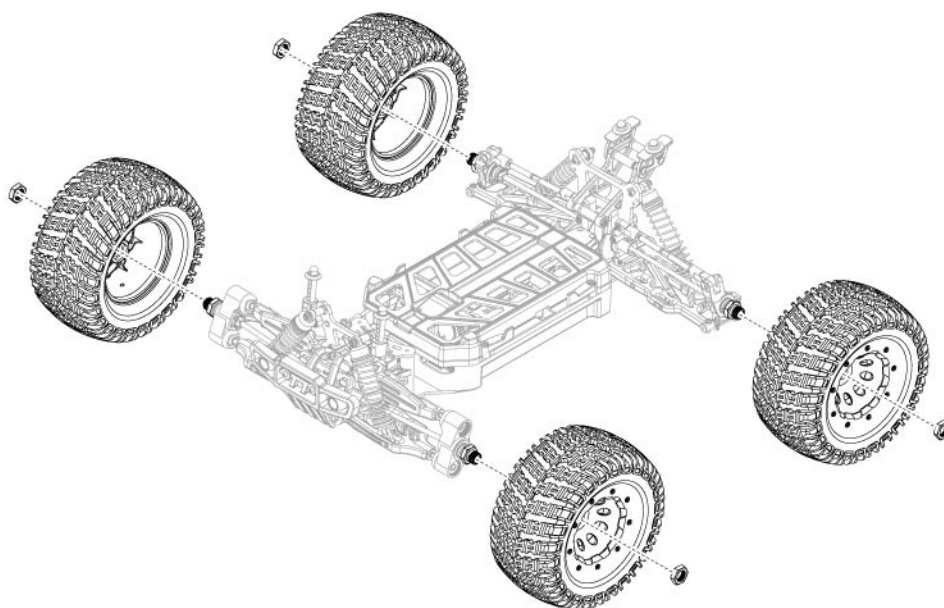

Hint
組裝提示









Pay attention
組裝注意

x4

Assemble as many times as specified
依指示組裝所需數量

STEP43 Wheelie Bar 翹頭輔助輪

-  1
- ① 3 x 25 mm SHCS Screw
內六角螺絲
-  2
- ② 3 x 8 x 4 mm Bearing
軸承
-  1
- ③ M3 Lock Nut
止鬆螺帽

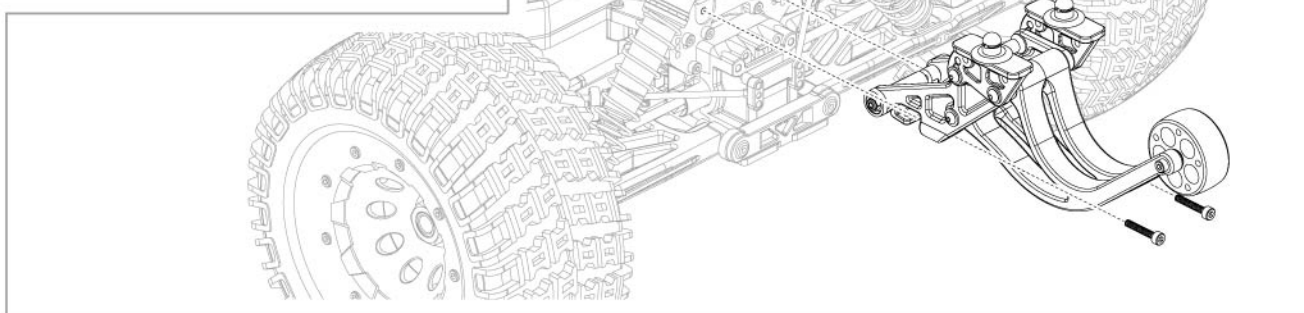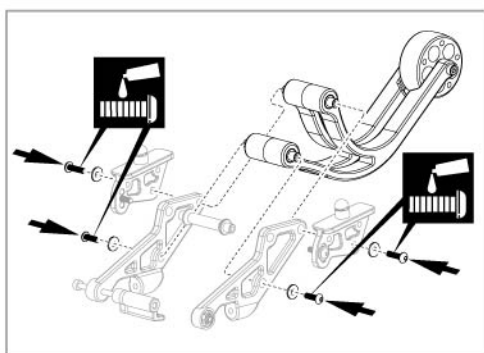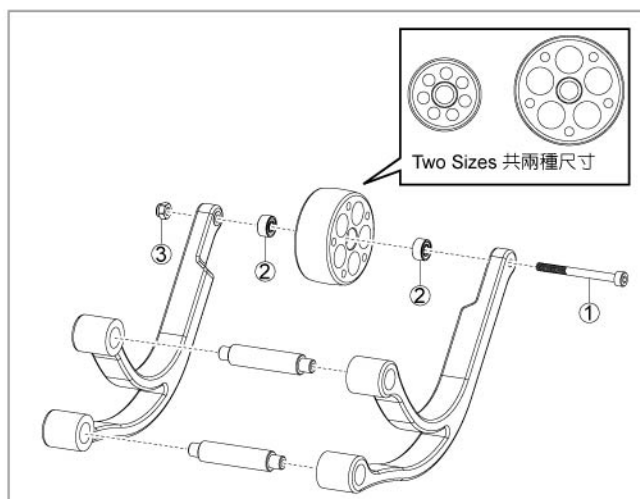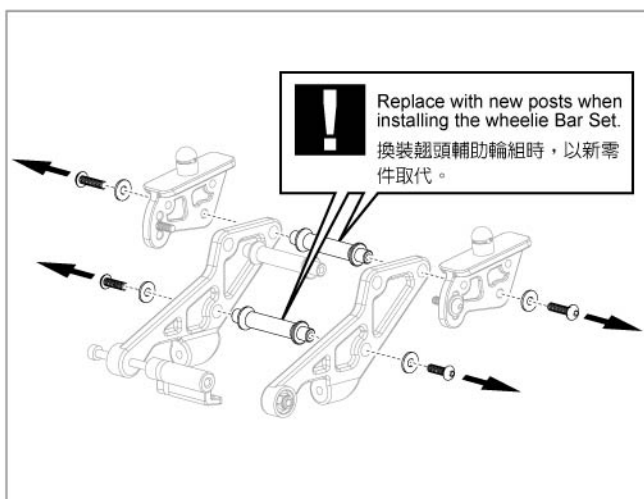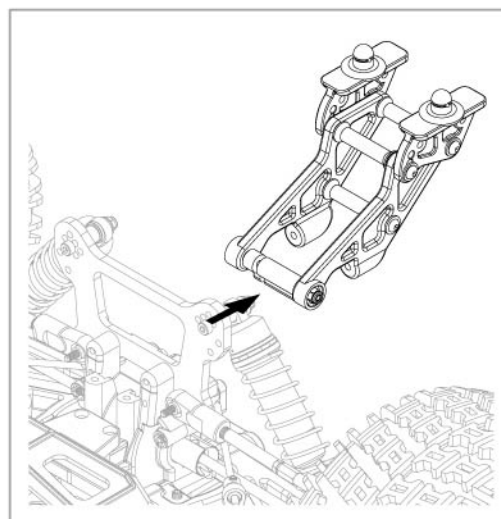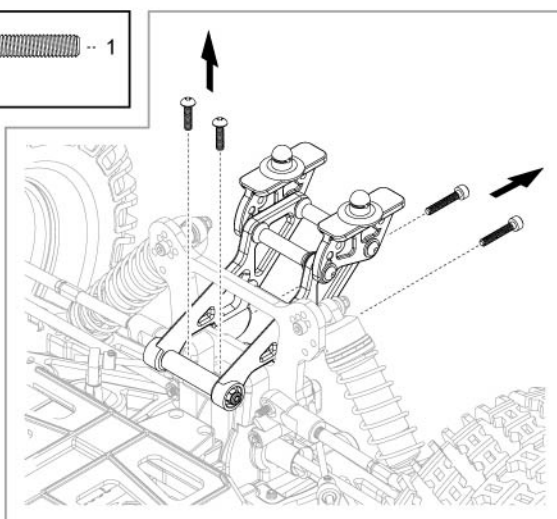

Apply threadlocker
使用螺絲防鬆膠

OPTIONAL PARTS

Front Sway Bar 前防傾桿 (選購零件)



① M3 x 16 mm
BHCS Screw
半圓頭內六角螺絲



② M3 x 10mm
BHCS Screw
半圓頭內六角螺絲







③ M3 x 3
無頭內六角螺絲



④ M3 x 5
無頭內六角螺絲



⑤ M3 x 15
無頭內六角螺絲

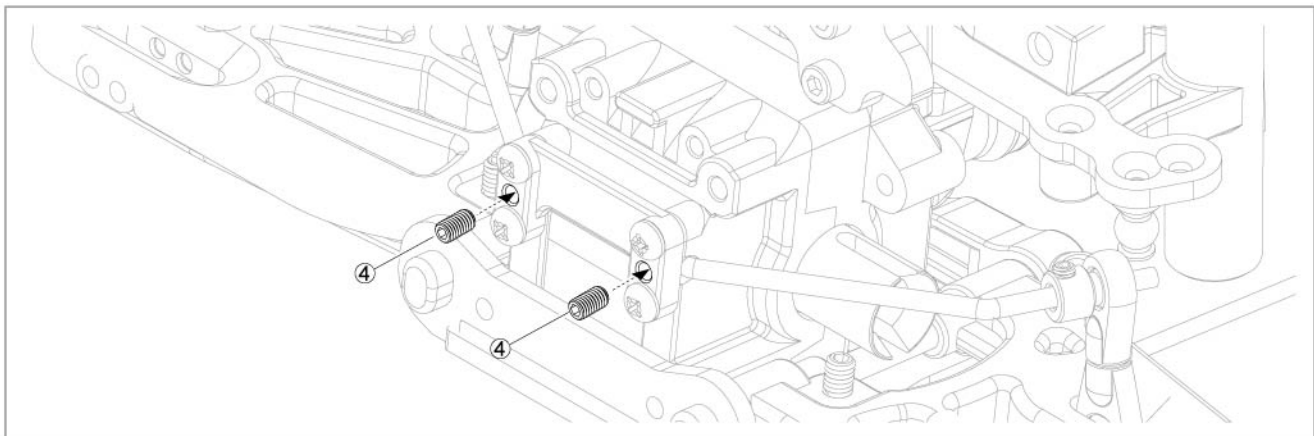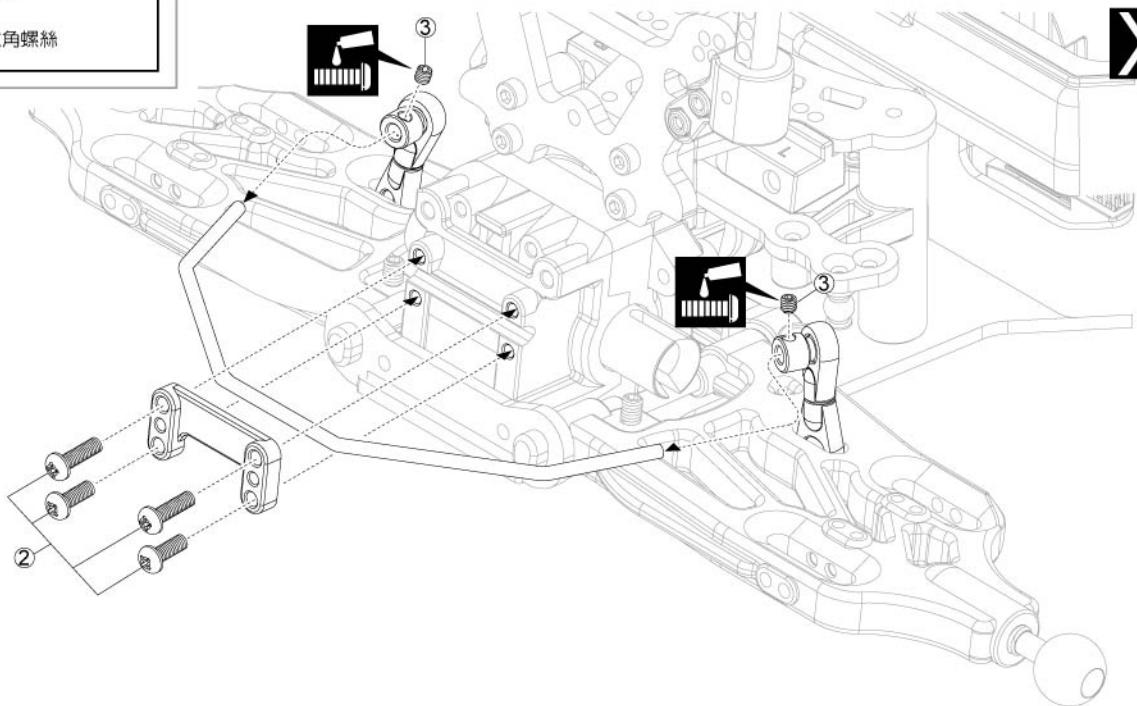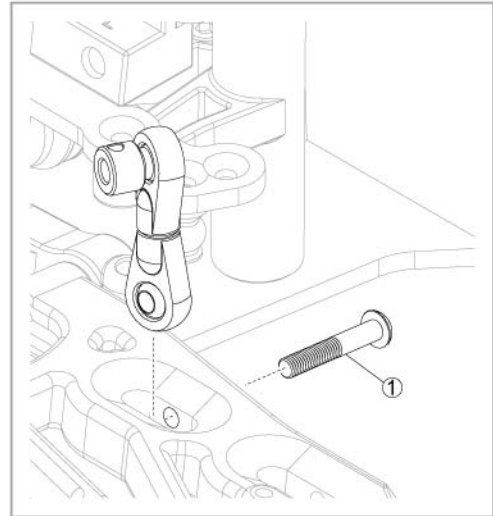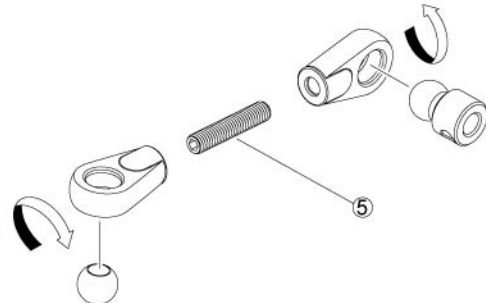

Apply threadlocker
使用螺絲防鬆膠



Must be purchased
separately
改裝品需另購

OPTIONAL PARTS

Rear Sway Bar 後防傾桿 (選購零件)



- ① M3 x 22 mm
BHCS Screw
半圓頭內六角螺絲



- ② M3 x 10mm
BHCS Screw
半圓頭內六角螺絲







- ③ M3 x 3
無頭內六角螺絲



- ④ M3 x 5
無頭內六角螺絲



- ⑤ M3 x 15
無頭內六角螺絲

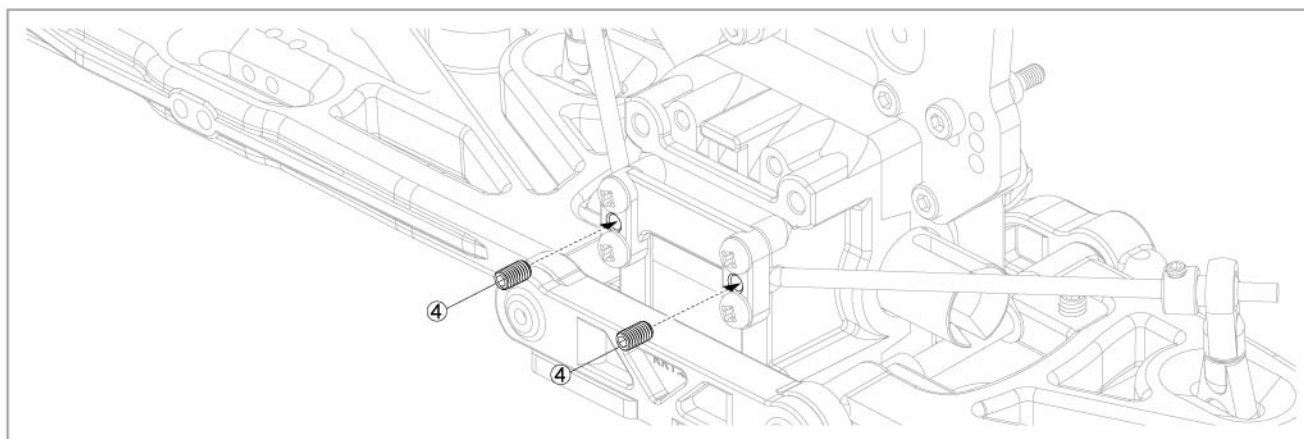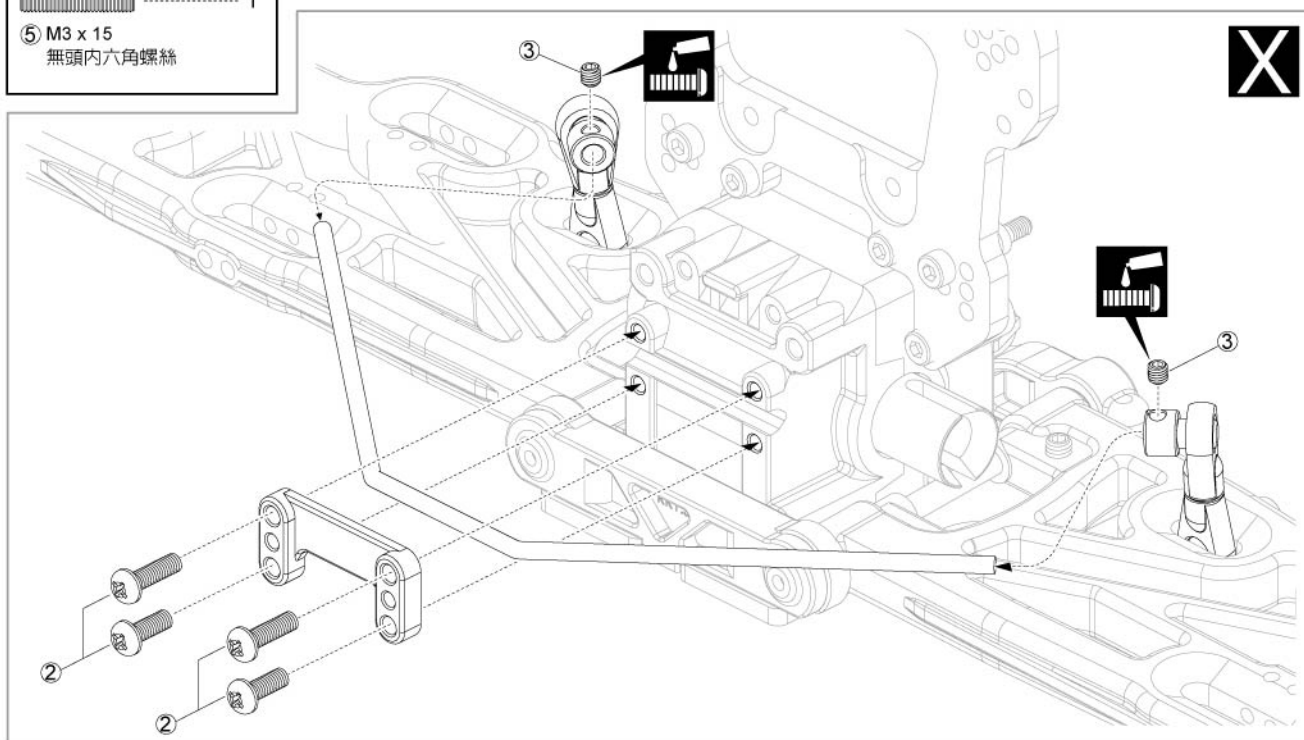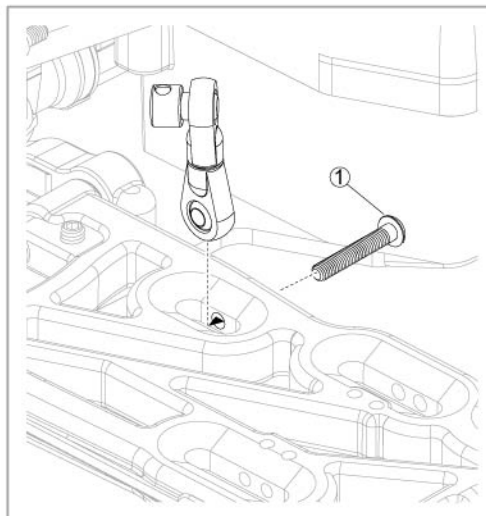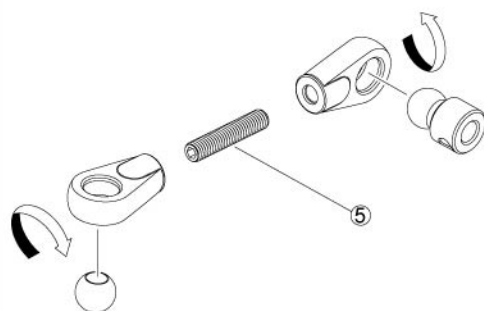

Apply threadlocker
使用螺絲防鬆膠



Must be purchased
separately
改裝品需另購

OPTIONAL PARTS


Changing Gear Ratio 更換齒比



This gear ratio chart shows the recommended combinations of spurs and pinions. Increasing the gear ratio will result in higher Max. Speed, but will also increase the temperature of the motor. Be note that the motor temperature does not exceed 190F / 88°C. If the motor temperature is too high, reduce the gear ratio by changing a smaller pinion gear and / or a bigger spur gear.


此表顯示最終驅動比與驅動大齒盤和馬達齒輪之間的關係。我們強烈建議操作者在更換齒輪 / 齒盤時應以這張表為更換基準。驅動齒比增大，將提升車子操控的極速，但馬達溫度也將相對升溫。為避免因為驅動齒比更換不當導致馬達過熱燒毀，請注意馬達操作溫度勿超過華氏溫度190度 / 攝氏溫度88度。調降更改齒比 (更換較小馬達齒輪和 / 或較大驅動齒盤) 將有助於馬達的降溫。

 ! Motor Max Temp.
馬達最高溫度



190°F
88°C

 
! Battery Max Temp.
電池最高溫度



140°F
60°C

Gear Ratio Chart 驅動齒比對照表

Pinion Gear 馬達齒輪			Standard 標準 12T	13T	14T	15T
Spur Gear 驅動大齒盤		48T	17.20	15.87	14.74	13.76
		Standard 標準 50T	17.91	16.53	15.35	14.33
Cautions 警告 ESC might be HOT. Check temperature often. 速控器可能會過熱，請隨時檢測溫度。						
Max. Speed 最高速			Slower 低速 ← → 高速 Faster			
Acceleration 加速			Quicker 快速 ← → 緩慢 Slower			

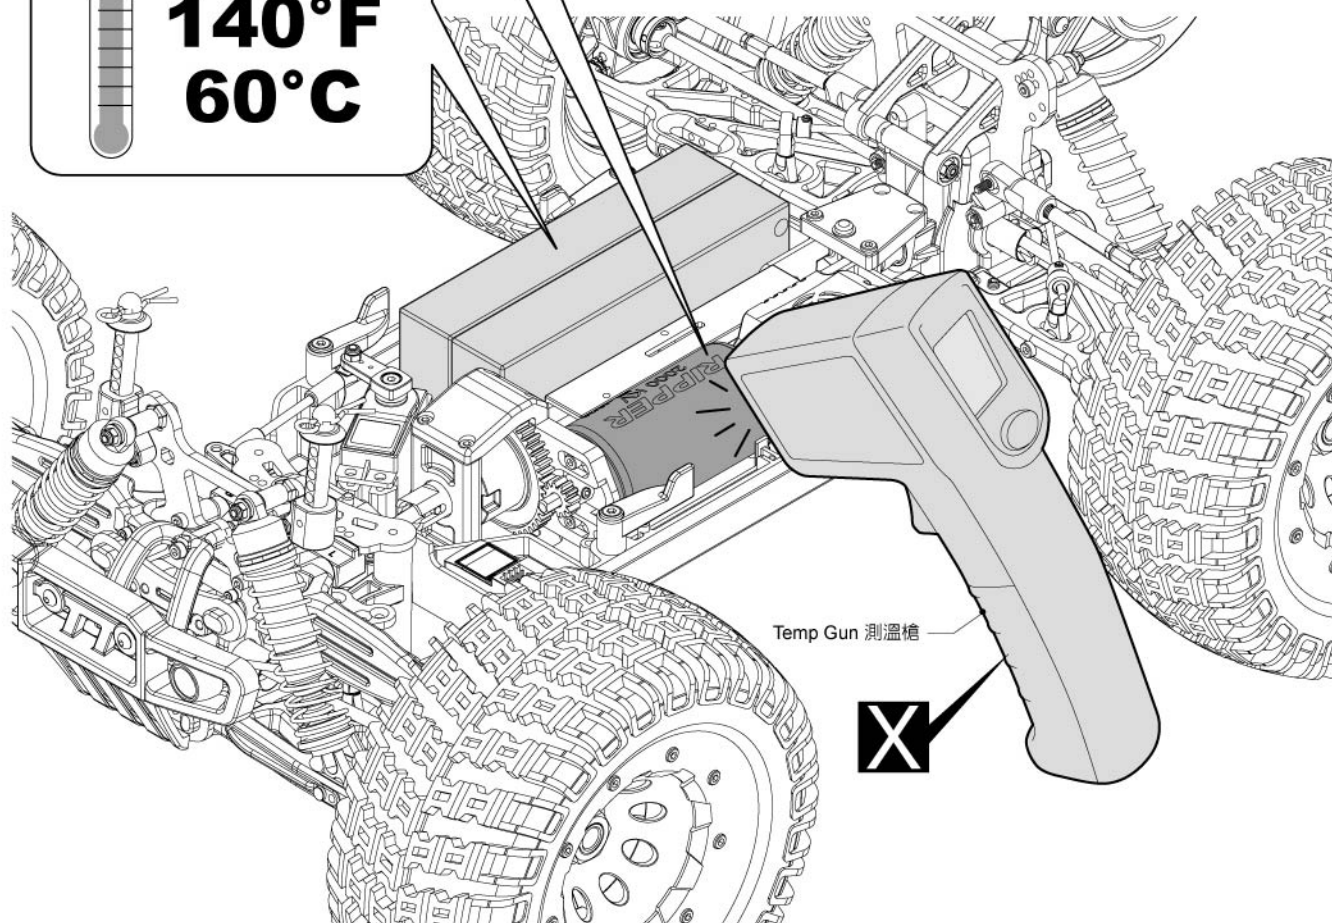

Temp Gun 測溫槍



Hint
組裝提示




Pay attention
組裝注意




Must be purchased separately
改裝品需另購


SERVO SAVER ASSEMBLY

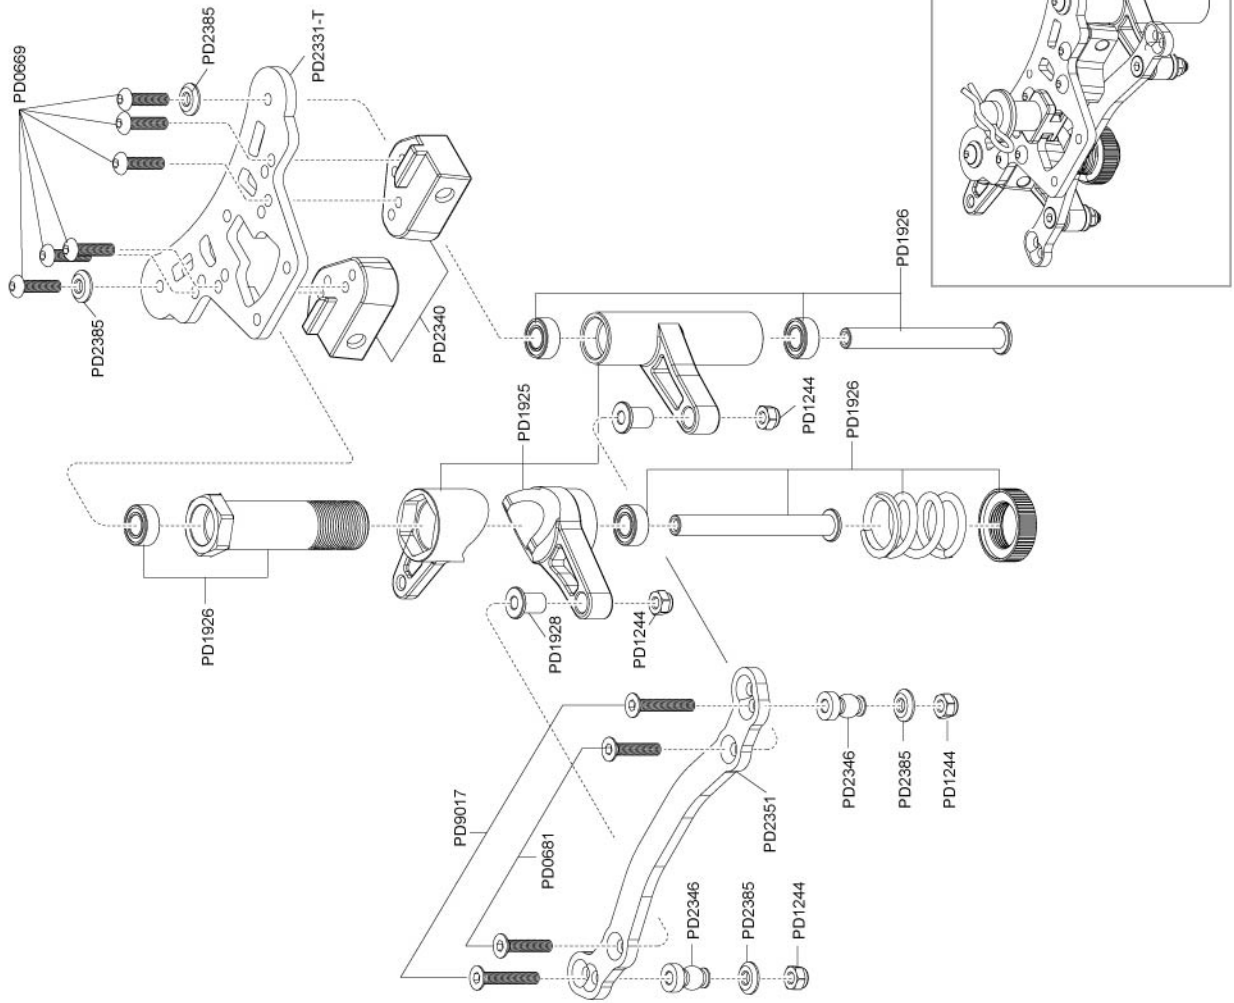

REAR SHOCK ASSEMBLY

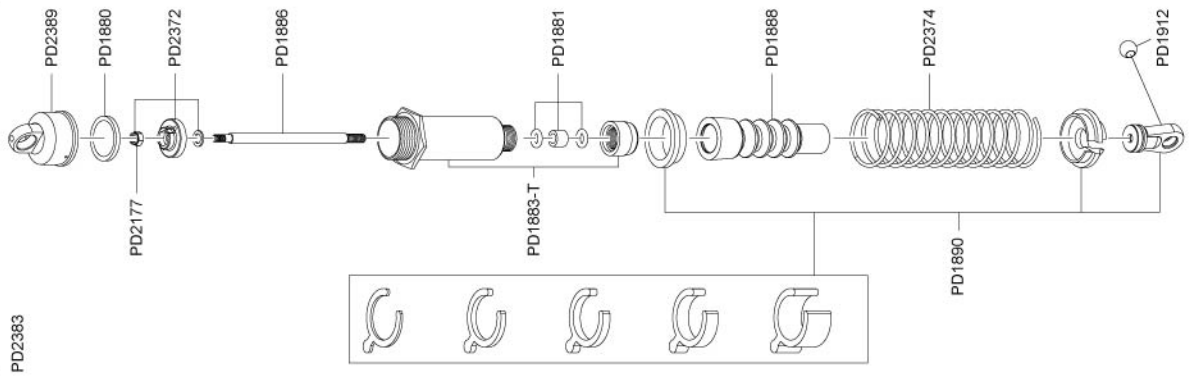

FRONT SHOCK ASSEMBLY

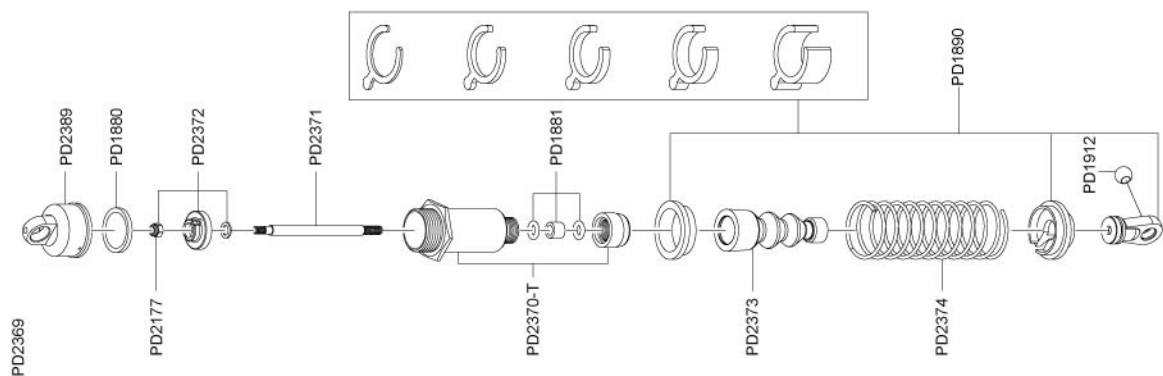

FR / RR DIFF. ASSEMBLY



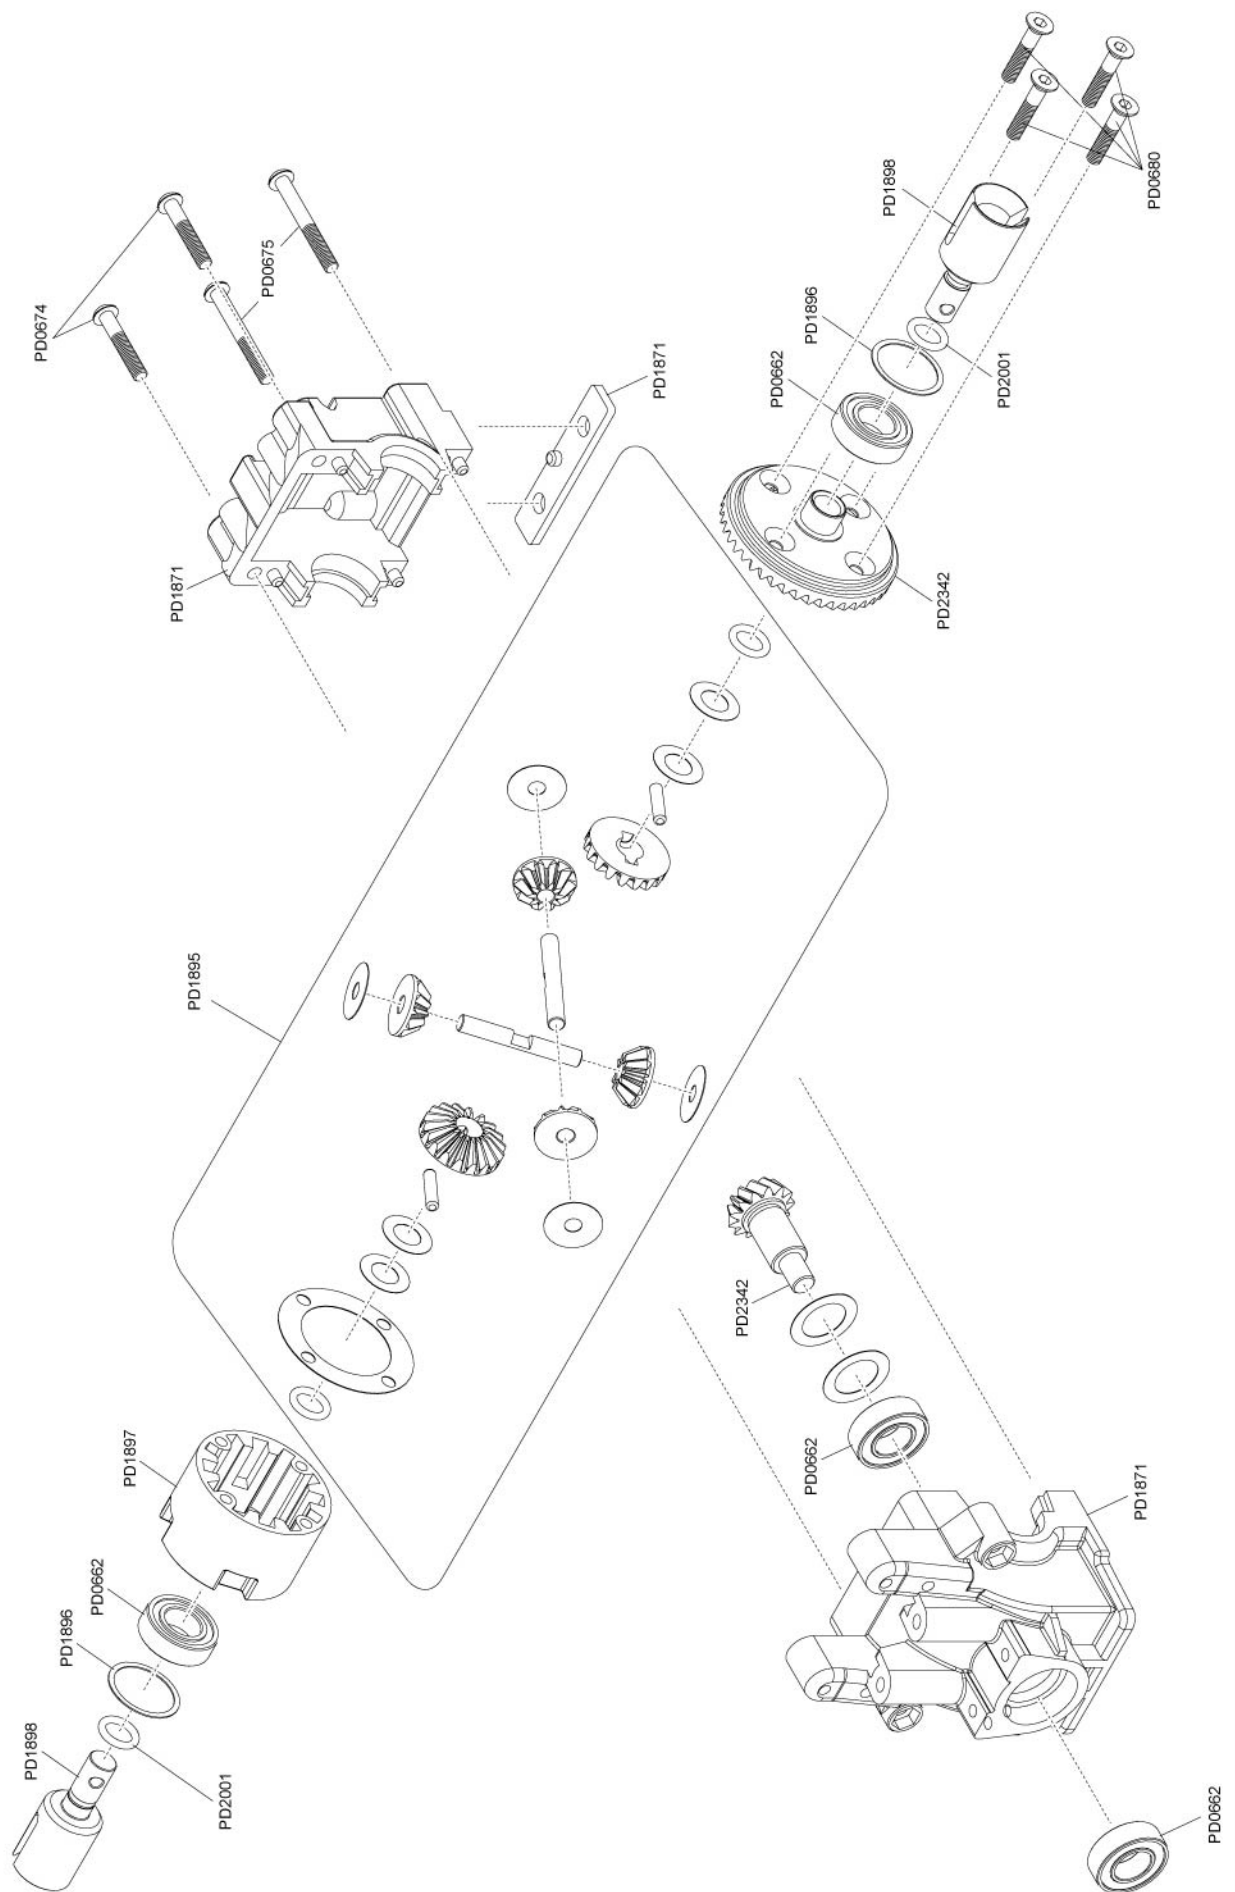


Diagram illustrating the assembly components for a wheel:

- PD7471**: A small bolt or screw used for assembly.
- PD8321**: The main wheel hub or rim component.
- PD8922**: A circular flange or rim component.
- PD7240**: A tire component.

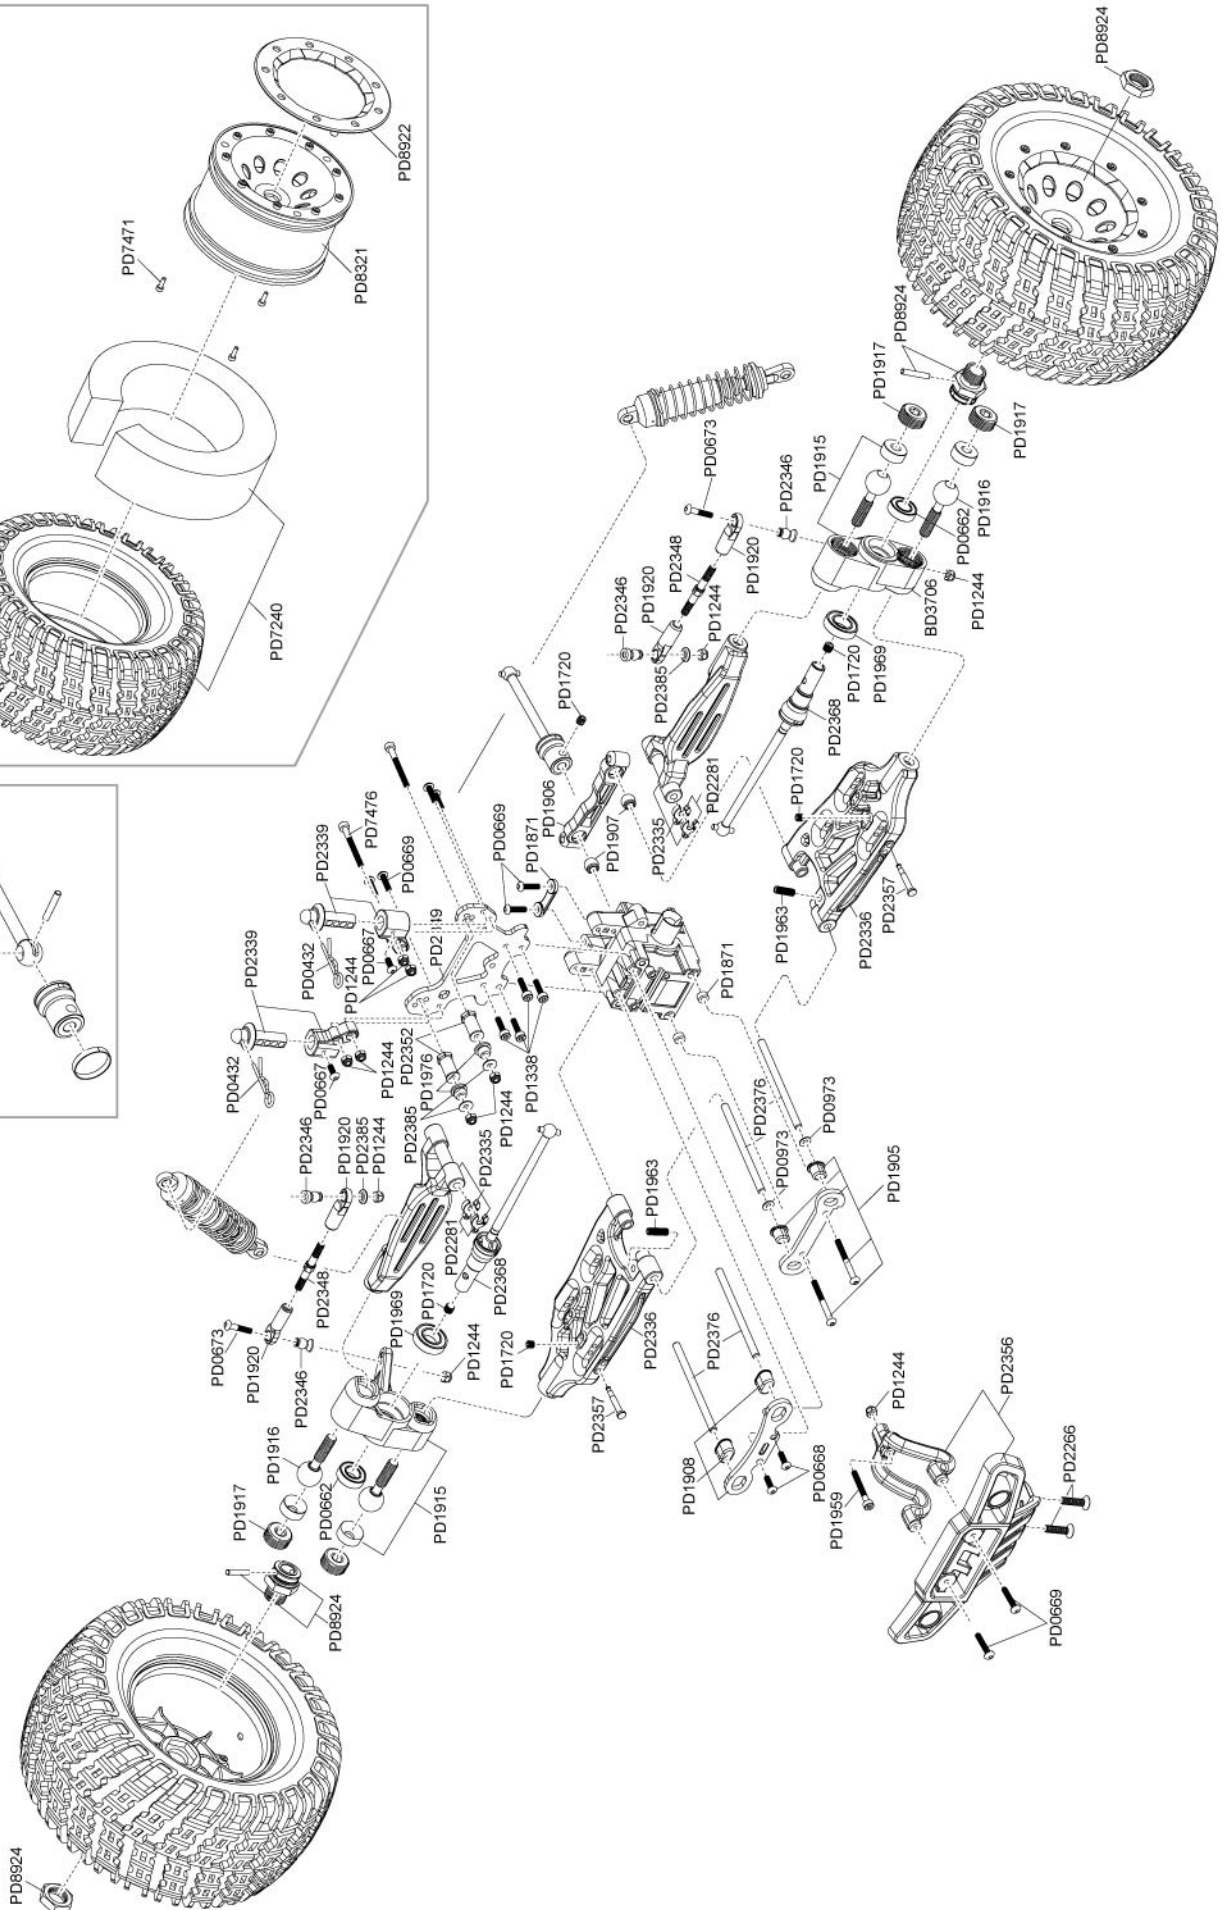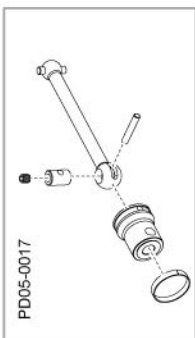


FRONT ASSEMBLY


Not Included




MT-4 G3 TRUCK SPARE PARTS LIST 零件表

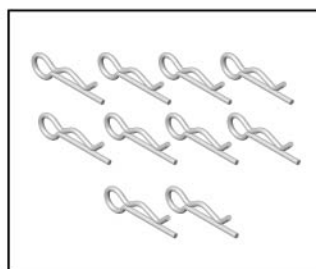


PD0432 R CLIPS (10), SHORT
R型插銷

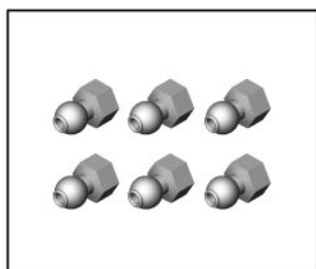

PD0547 STANDOFF BALL, (L)
懸吊球頭座

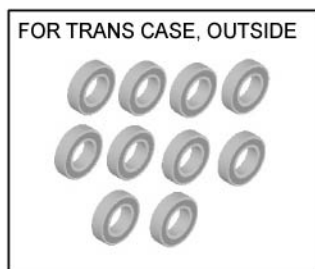


PD0662 BEARING, d8xd16xW5
軸承

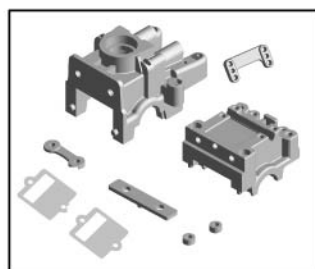


PD1871 TRANS CASE/BULKHEAD SET
差速箱本體




PD1875 UNIV. REBUILD KIT,S3
萬向接合套件

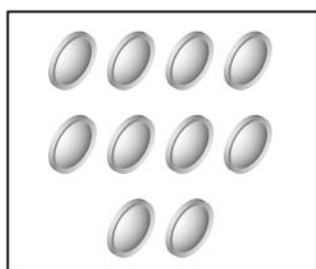

PD1880 SHOCK DIAPHRAGM
避震器空氣活門

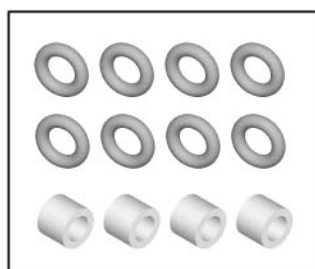


PD1881 O-RINGS & SPACER
避震器O型環&內環柱組

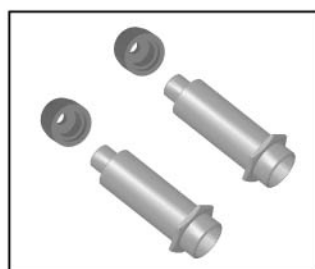


PD1883-T RR SHOCK BODY(2)
後避震器套筒




PD1886 FR SHOCK SHAFT(2)
後避震器軸

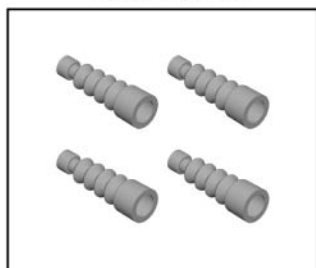


PD1888 RR SHOCK BOOT(4)
後避震器腹套

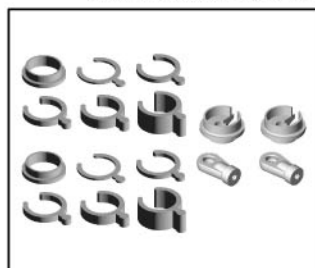

PD1890 SHOCK PLASTIC PARTS
避震器塑膠配件

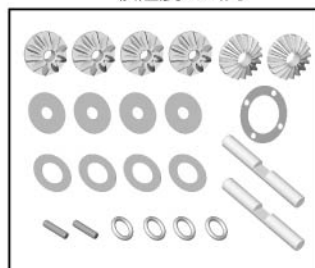

PD1895 DIFF INNER GEAR&PARTS
差速內傘齒維修包10T/18T

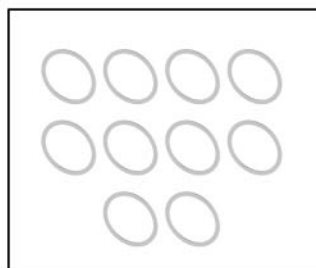


PD1896 DIFF SHIME(10),0.3mm
差速器墊片



PD1897 DIFF CASE
差速器本體




PD1898 DIFF OUTDRIVE, FR&RR
差速傳動軸套

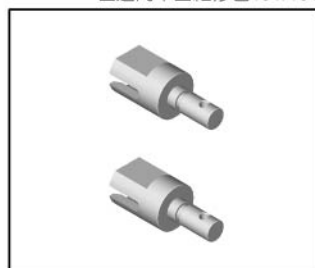


PD1899 DIFF OUTDRIVE(2),CTR
中央差速傳動軸套



PD1905 FR SUSP PLATE, FF0
前投影板FF0

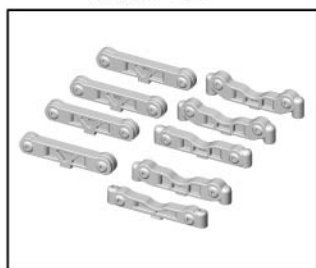


PD1906 SUSP. PLATE SET
投影板組

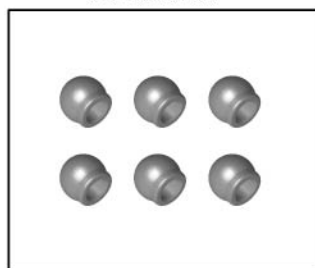

PD1907 SUSP. PLATE JOINT
球座




PD1908 UP SUSP. ARM PLATE
上擺臂固定板

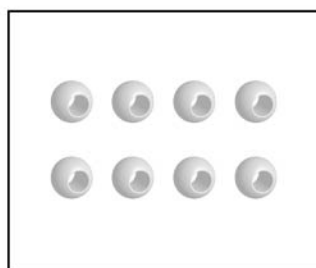


PD1912 PIVOT BALL
球頭



PD1914 RR LOWER HINGE PIN
後輪座固定銷

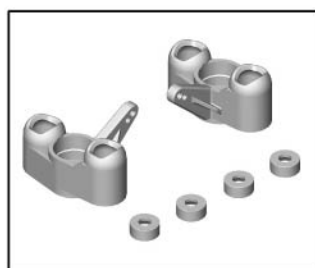


PD1915 KNUCKLE
轉向輪座組

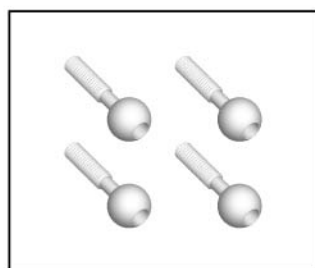

PD1916 ADJ. BALL (4)
擺臂球頭


MT-4 G3 TRUCK SPARE PARTS LIST 零件表

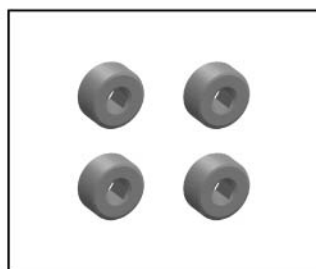

PD1917 ADJ. SCREW (4)
轉向球頭固定螺絲



PD1921 RR TIE END
後上擺臂拉桿頭

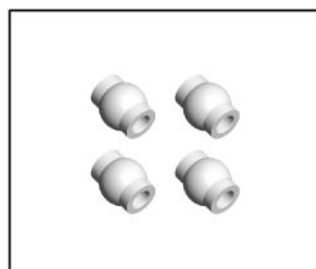


PD1922 RR.PIVOT BALL
後上擺臂拉桿球座




PD1923 REAR HUB SET
後輪組



PD1925 SEVO SAVER PL. PARTS
轉向搖臂塑件

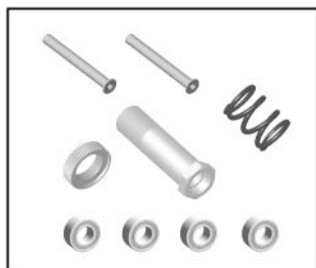


PD1926 SEVO SAVER ML. PARTS
轉向金屬配件

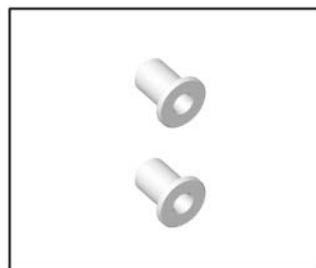


PD1928 SERVO SAVER BUSHING
轉向曲板襯套




PD1968 BEARING, d5xD10xW4
軸承

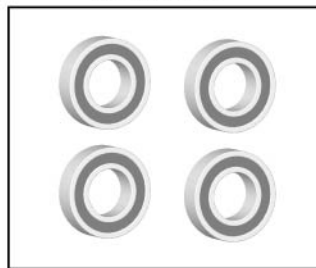


PD1969 BEARING, d10xD19xW5
軸承

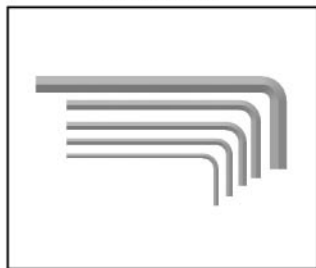

PD1975 HEX WRENCH SET
六角板手組

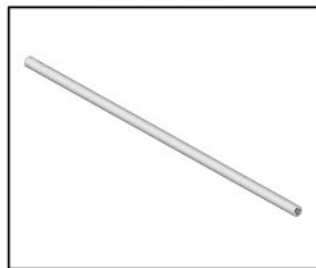

PD1983 ANTENNA BAG, 1/8
天線管

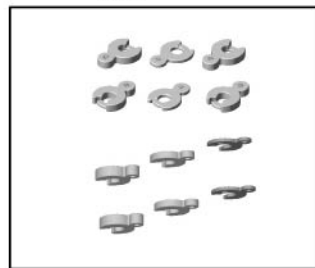

PD2281 CASTER SHIM (12)
傾角調整夾片



PD2331-T SERVO SAVER TOP PLATE
前補強板



PD2334 REAR SUSPN ARM SET
後擺臂組



PD2335 UP SUSPN ARM SET
上擺臂組




PD2336 LWR SUSPN ARM SET
下擺臂組




PD2339 FF/RR MOUNTS&POSTS
前車殼固定塊




PD2340 UP SUSP. ARM HOLDER
前上擺臂支撐座

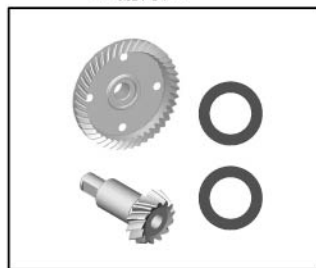


PD2342 DIFF BEVEL GEAR SET
傳動大/小斜齒輪

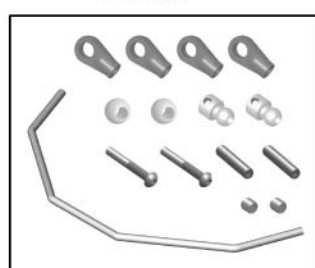

PD2343 FR SWAY BAR M&H, 2.7mm
前防傾桿附件

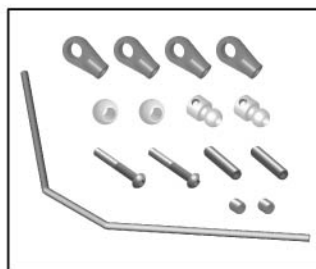

PD2344 RR SWAY BAR M&H
後防傾桿附件

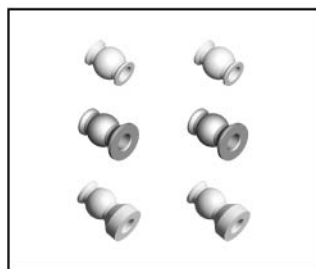

PD2346 ST.PIVOT BALL
轉向球座



PD2347 RR TURNBUCKLE
後上擺臂拉桿




PD2348 RR TURNBUCKLE
前轉向拉桿


MT-4 G3 TRUCK SPARE PARTS LIST 零件表




PD2349 FR SHOCK TOWER
前避震器支架

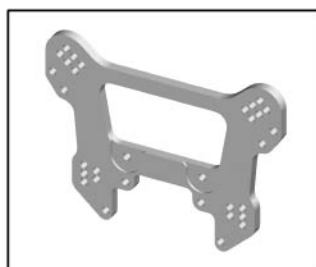

PD2350 RR SHOCK TOWER
後避震器支架

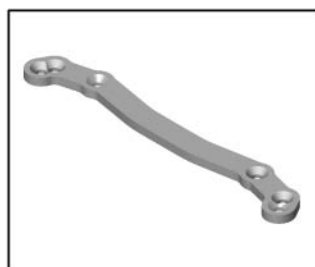


PD2351 STEERING SLIDER
轉向曲板

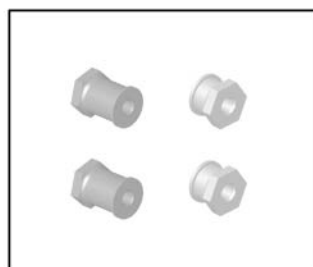


PD2352 FR/RR SHOCK STANDOFF
避震器上固定座



PD2356 FR BUMPER
前防撞板

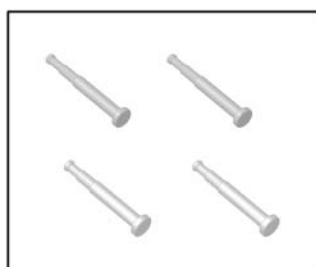

PD2357 FR/RR SHOCK SET PIN
避震器下固定銷

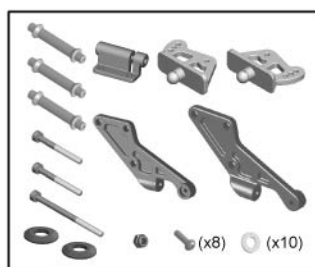


PD2359 WING ASSEMBLY
後車殼固定組




PD2367 RR BALL UNIVERSAL
後萬象傳動軸



PD2368 FR BALL UNIVERSAL
前萬象傳動軸

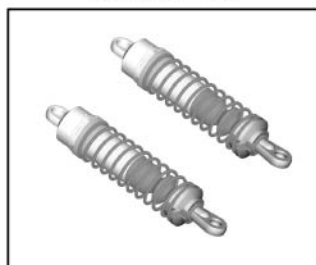


PD2369 FR SHOCK SET (2)
前避震器組

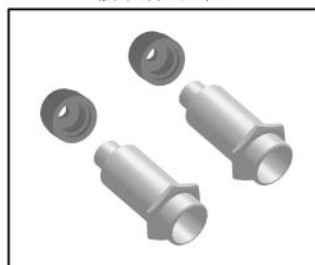


PD2370-T FR SHOCK BODY (2)
前避震器套筒




PD2371 FR SHOCK SHAFT (2)
前避震器軸

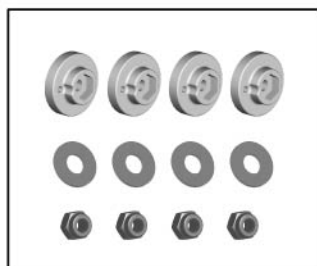


PD2372 SHOCK PSITON (4)
避震器活塞組

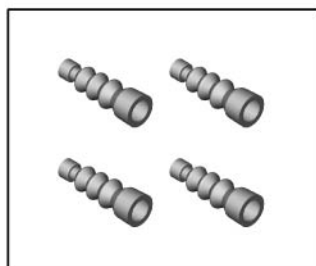

PD2373 FR SHOCK BOOT (4)
前避震器腹套

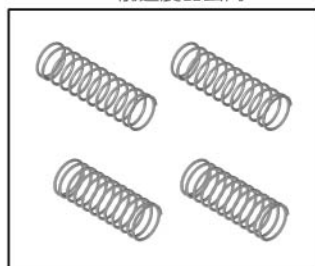


PD2374 FR/RR SHOCK SPRING (2)
避震器彈簧 (黑色)

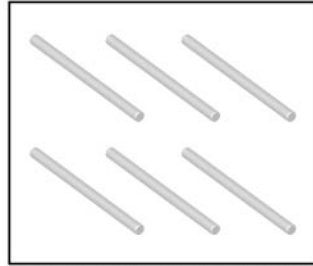


PD2376 SUSP. HINGE PIN SET
擺臂固定銷




PD2379 DIFFERENTIAL SET
差速器組

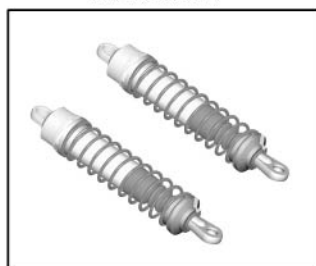

PD2383 RR SHOCK SET (2)
後避震器組

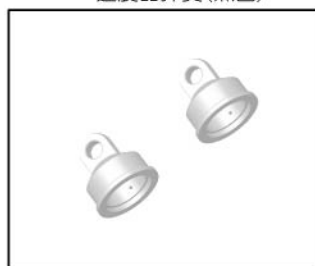


PD2389 FR SHOCK CAP (2)
避震器上蓋

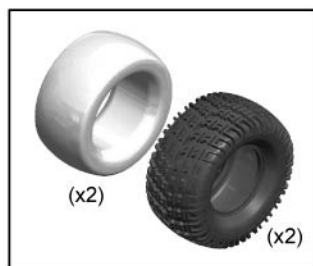


PD7240 TIRES (2), MTA4-V2
輪胎



PD8321 BEAD-LOCK WHEELS
輪轂組

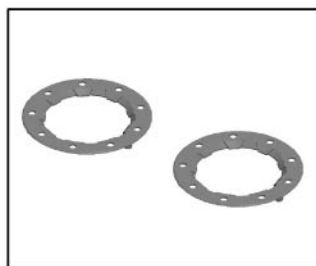

PD8922 BEAD-LOCK RING (L)
輪轂裝飾片 (藍)

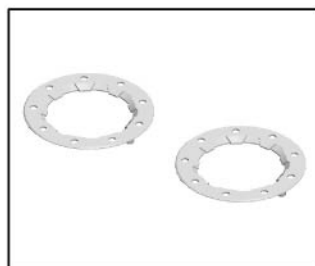


PD8923 BEAD-LOCK RING (R)
輪轂裝飾片 (紅)



PD8924 17mm HEX DRIVE (4)
六角輪轂轉換器組

MT-4 G3 TRUCK SPARE PARTS LIST 零件表

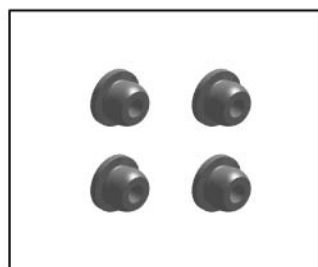

PD8934 SHOCK PLASTIC BUSHING
避震器襯套



PD9041 WHEELIE BAR SET.
翹頭輔助輪零件包




PD9042-R BODY SET (RED)
完成車殼 (紅)



PD9042-L BODY SET (BLUE)
完成車殼 (藍)



PD9043 CLEAR BODY SET+BODY DECAL
透明車殼+貼紙組

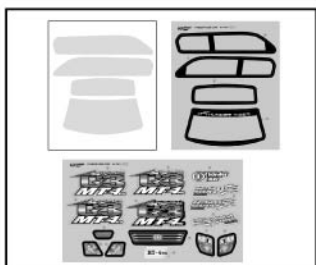


PD9044 BODY DECAL
貼紙組



PD01-0003 MOTOR MOUNT
馬達固定座




PD01-0005 PINION GEAR (12T)
馬達驅動齒輪

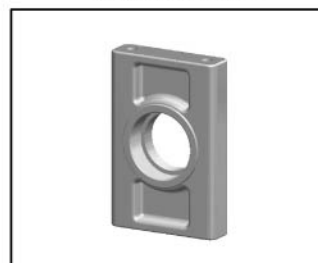

PD02-0009 CTR DIFF MNT.
中差支架組



PD02-0010 CTR DIFF PLT.
差速護蓋組

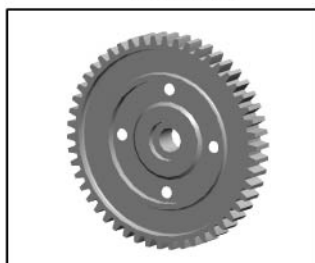

PD02-0011 SPUR GEAR (50T)
主齒輪



PD05-0016 SERVO ARM SET
伺服拉桿組



PD05-0017 FR UNINI SHAFT
前中央傳動軸組




PD05-0018 RR UNINI SHAFT
後中央傳動軸組



PD06-0008 SERVO HORN SET
伺服轉向組



PD09-0028 LEAD TRAY
導線護板組

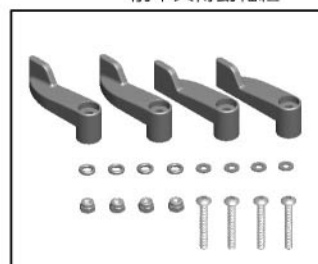


PD09-0029 CTR UNIT LOCK
本體固定旋鈕組



PD09-0030 UPPR CTR UNIT
本體上蓋




PD09-0031 LWR CTR UNIT
本體下蓋

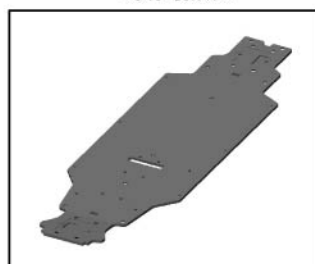


PD09-0033 CHASSIS
車底板



PD09-0034 RR CHASSIS BRC.
後補強塊組

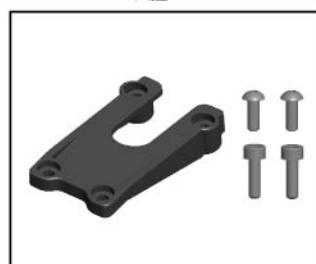

PD09-0035 FR CHASSIS BRC.
前補強板組

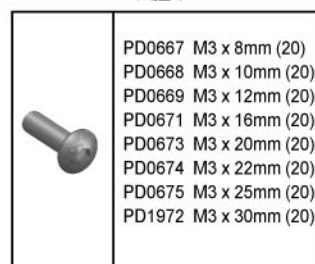

BHCS SCREW
半圓頭內六角螺絲



FHCS SCREW
平頭內六角螺絲

MT-4 G3 TRUCK SPARE PARTS LIST 零件表

 PD0961 M3 x 3mm (20) PD1720 M5 x 4mm (10) PD1961 M3 x 12mm (20) PD1963 M4 x 12mm (20)	 PD1194 M3 x 14mm (20) PD1338 M3 x 12mm (20) PD1339 M3 x 20mm (20) PD1543 M3 x 18mm (20) PD1958 M3 x 16mm (20) PD1959 M3 x 25mm (20) PD2377 M3 x 45mm (20) PD6308 M3 x 8mm (20) PD7475 M3 x 10mm (20) PD7476 M3 x 30mm (10)	 PD1244 M3 (10) PD2177 M2.5 (20)	 PD2001 Ø4.4 x 0.8 (10)
SET SCREW 無頭內六角螺絲	SHCS SCREW 內六角螺絲	LOCK NUT 止鬆螺帽	O-RING O型環
		 PD0973 d4mm (20) PD1199 d3mm (20) PD2385 CONWASHER d3mm (20)	 PD1971 M3 x 14mm (20)
		WASHER 墊圈	FHS SCREW 扁圓盤內六角螺絲



MT-4 G3 TRUCK SPARE PARTS LIST 零件表

PART#	DESCRIPTION	中文名稱	NOTE
PD0432	BODY CLIPS EB4	R形插銷	
PD0547	STANDOFF BALL, (L) 4mm	懸吊球頭座, LARGE 4mm	
PD0662	BALL BEARING (10), d8 x d16	滾珠軸承, MSEALED 8x16x5	
PD0667	BHCS SCREW (20), M3 x 8	半圓頭內六角螺絲 (20), M3 x 8	
PD0668	BHCS SCREW (20), M3 x 10	半圓頭內六角螺絲 (20), M3 x 10	
PD0669	BHCS SCREW (20), M3 x 12	半圓頭內六角螺絲 (20), M3 x 12	
PD0671	BHCS SCREW (20), M3 x 16	半圓頭內六角螺絲 (20), M3 x 16	
PD0673	BHCS SCREW (20), M3 x 20	半圓頭內六角螺絲 (20), M3 x 20	
PD0674	BHCS SCREW (20), M3 x 22	半圓頭內六角螺絲 (20), M3 x 22	
PD0675	BHCS SCREW (20), M3 x 25	半圓頭內六角螺絲 (20), M3 x 25	
PD0677	FHCS SCREW (20), M3 x 8	平頭內六角螺絲 (20), M3 x 8	
PD0678	FHCS SCREW (20), M3 x 10	平頭內六角螺絲 (20), M3 x 10	
PD0679	FHCS SCREW (20), M3 x 12	平頭內六角螺絲 (20), M3 x 12	
PD0680	FHCS SCREW (20), M3 x 14	平頭內六角螺絲 (20), M3 x 14	
PD0681	FHCS SCREW (20), M3 x 16	平頭內六角螺絲 (20), M3 x 16	
PD0961	SET SCREW (20), M3 x 3	無頭內六角螺絲 (20), M3 x 3	
PD0973	WASHER (20)	平墊圈 (20)	
PD1194	SHCS SCREW (20), M3 x 14	內六角螺絲 (20), M3 x 14	
PD1199	WASHER (20)	平墊圈 (20)	
PD1244	LOCK NUT (10)	止鬆螺帽 (10)	
PD1338	SHCS SCREW (20), M3 x 12	內六角螺絲 (20), M3 x 12	
PD1339	SHCS SCREW (20), M3 x 20	內六角螺絲 (20), M3 x 20	
PD1543	SHCS SCREW (20), M3 x 18	內六角螺絲 (20), M3 x 18	
PD1720	SET SCREW, S3	無頭內六角螺絲	
PD1871	TRANS CASE/BULKHEAD SET	差速箱本體	
PD1875	UNIV. REBUILD KIT	萬向接合套件	
PD1880	SHOCK DIAPHRAGM (10)	避震器空氣活門 (10)	
PD1881	O-RINGS & SPACER	避震器O型環&內環柱組	
PD1883-T	RR SHOCK BODY (2)	後避震器套筒 (2)	
PD1886	FR SHOCK SHAFT (2)	後避震器軸 (2)	
PD1888	RR SHOCK BOOT (4)	後避震器腹套 (4)	
PD1890	SHOCK PLASTIC PARTS	避震器塑膠配件	
PD1895	DIFF INNER GEAR & PARTS	差速內傘齒維修包10T/18T	
PD1896	DIFF SHIME (10), 0.3mm	差速器墊片 (0.3mm)	
PD1897	DIFF CASE	差速器本體	
PD1898	DIFF OUTDRIVE (2), FR & RR	差速傳動軸套 (2)	
PD1899	DIFF OUTDRIVE (2), CTR	中央差速傳動軸套 (2)	
PD1905	FR SUSP PLATE, FF0	前投影板FF0	
PD1906	SUSP. PLATE SET	投影板組	
PD1907	SUSP. PLATE JOINT	球座	
PD1908	UP SUSP. ARM PLATE	上擺臂固定板	
PD1912	PIVOT BALL	球頭	
PD1914	RR LOWER HINGE PIN	後輪座固定銷	
PD1915	KNUCKLE	轉向輪座組	
PD1916	ADJ. BALL (4)	擺臂球頭 (4)	

PART#	DESCRIPTION	中文名稱	NOTE
PD1917	ADJ. SCREW (4)	轉向球頭固定螺絲 (4)	
PD1921	RR TIE END	後上擺臂拉桿頭	
PD1922	RR.PIVOT BALL	後上擺臂拉桿球座	
PD1923	REAR HUB SET	後輪組	
PD1925	SEVO SAVER PL. PARTS	轉向搖臂塑件	
PD1926	SEVO SAVER ML. PARTS	轉向金屬配件	
PD1928	SERVO SAVER BUSHING	轉向曲板襯套	
PD1958	SHCS SCREW (20), M3 x 16	內六角螺絲 (20), M3 x 16	
PD1959	SHCS SCREW (20), M3 x 25	內六角螺絲 (20), M3 x 25	
PD1961	SET SCREW (20), M3 x 12	無頭內六角螺絲 (20), M3 x 12	
PD1963	SET SCREW (20), M4 x 12	無頭內六角螺絲 (20), M4 x 12	
PD1968	BEARING (4), d5 x D10 x W4	軸承 (4), d5 x D10 x W4	
PD1969	BEARING (4), d10 x D19 x W5	軸承 (4), d10 x D19 x W5	
PD1971	FLAT HEAD SOCKET SCREW, M3 x 14	扁圓盤內六角螺絲, M3 x 14	
PD1972	BHCS SCREW (20), M3 x 30	半圓頭內六角螺絲 (20), M3 x 30	
PD1973	FHCS SCREW (20), M4 x 12	平頭內六角螺絲 (20), M4 x 12	
PD1975	HEX WRENCH SET	六角板手組	
PD1983	ANTENNA BAG	天線管	
PD2001	O-RING, Ø4.4	O型環	
PD2177	LOCK NUT (20), M2.5	防鬆螺帽組, M2.5	
PD2266	FHCS SCREW (20), M4 x 16	平頭內六角螺絲 (20), M4 x 16	
PD2281	CASTER SHIM (12)	傾角調整夾片 (12)	
PD2331-T	SERVO SAVER TOP PLATE	前補強板	
PD2334	REAR SUSPN ARM SET (2)	後擺臂組 (2)	
PD2335	UP SUSP ARM SET (2)	上擺臂組 (2)	
PD2336	LWR SUSPN ARM SET	下擺臂組 (2)	
PD2339	FF/RR MOUNTS & POSTS	前車殼固定塊	
PD2340	UP SUSP. ARM HOLDER	前上擺臂支撐座	
PD2342	DIFF BEVEL GEAR SET	傳動大/小斜齒輪	
PD2343	FR SWAY BAR M & H, 2.7mm	前防傾桿附件	
PD2344	RR SWAY BAR M & H	後防傾桿附件	
PD2346	ST.PIVOT BALL	轉向球座	
PD2347	RR TURNBUCKLE	後上擺臂拉桿	
PD2348	RR TURNBUCKLE	前轉向拉桿	
PD2349	FR SHOCK TOWER	前避震器支架	
PD2350	RR SHOCK TOWER	後避震器支架	
PD2351	STEERING SLIDER	轉向曲板	
PD2352	FR/RR SHOCK STANDOFF	避震器上固定座	
PD2356	FR BUMPER	前防撞板	
PD2357	FR/RR SHOCK SET PIN	避震器下固定銷	
PD2359	WING ASSEMBLY	後車殼固定組	
PD2367	RR BALL UNIVERSAL (2)	後萬象傳動軸 (2)	
PD2368	FR BALL UNIVERSAL (2)	前萬象傳動軸 (2)	
PD2369	FR SHOCK SET (2)	前避震器組 (2)	
PD2370-T	FR SHOCK BODY (2)	前避震器套筒 (2)	
PD2371	FR SHOCK SHAFT (2)	前避震器軸 (2)	
PD2372	SHOCK PSITON (4)	避震器活塞組 (4)	
PD2373	FR SHOCK BOOT (4)	前避震器腹套 (4)	
PD2374	FR/RR SHOCK SPRING (2)	避震器彈簧 (2)	
PD2376	SUSP. HINGE PIN SET	擺臂固定銷	
PD2377	SHCS SCREW (20), M3 x 45	內六角螺絲 (20), M3 x 45	
PD2379	DIFFERENTIAL SET	差速器組	
PD2383	RR SHOCK SET (2)	後避震器組 (2)	
PD2385	WASHER SET	墊片組	
PD2389	FR SHOCK CAP (2)	避震器上蓋	
PD6308	SHCS SCREW (20), M3 x 8	內六角螺絲 (20), M3 x 8	
PD6310	FHCS SCREW (20), M4 x 10	平頭內六角螺絲 (20), M4 x 10	
PD7240	TIRES (2)	輪胎	
PD7475	SHCS SCREW (20), M3 x 10	內六角螺絲 (20), M3 x 10	
PD7476	SHCS SCREW (20), M3 x 30	內六角螺絲 (20), M3 x 30	
PD8321	BEAD-LOCK WHEELS	輪轂組	




MT-4 G3 TRUCK SPARE PARTS LIST 零件表

PART#	DESCRIPTION	中文名稱	NOTE
PD8922	BEAD-LOCK RING (L)	輪穀裝飾片 (藍)	
PD8923	BEAD-LOCK RING (R)	輪穀裝飾片 (紅)	
PD8924	HEX DRIVE (4), 17mm	六角輪穀轉換器組	
PD8934	SHOCK PLASTIC BUSHING	避震器襯套	
PD9016	FHCS SCREW (20), M3 x 5	平頭內六角螺絲 (20), M3 x 5	
PD9017	FHCS SCREW (20), M3 x 20	平頭內六角螺絲 (20), M3 x 20	
PD9041	WEELIE BAR SET	翹頭輔助輪零件包	
PD9042-R	BODY SET (RED)	完成車殼 (紅)	
PD9042-L	BODY SET (BLUE)	完成車殼 (藍)	
PD9043	CLEAR BODY SET + BODY DECAL	透明車殼+貼紙組	
PD9044	BODY DECAL	貼紙組	
PD01-0003	MOTOR MOUNT	馬達固定座	
PD01-0005	PINION GEAR (12T)	馬達驅動齒輪	
PD02-0009	CTR DIFF MNT.	中差支架組	
PD02-0010	CTR DIFF PLT.	差速護蓋組	
PD02-0011	SPUR GEAR (50T)	主齒輪	
PD05-0016	SERVO ARM SET	伺服拉桿組	
PD05-0017	FR UNINI SHAFT	前中央傳動軸組	
PD05-0018	RR UNINI SHAFT	後中央傳動軸組	
PD06-0008	SERVO HORN SET	伺服轉向組	
PD09-0028	LEAD TRAY	導線護板組	
PD09-0029	CTR UNIT LOCK	本體固定旋鈕組	
PD09-0030	UPPR CTR UNIT	本體上蓋	
PD09-0031	LWR CTR UNIT	本體下蓋	
PD09-0033	CHASSIS	車底板	
PD09-0034	RR CHASSIS BRC.	後補強塊組	
PD09-0035	FR CHASSIS BRC.	前補強板組	

MT-4 G3 TRUCK OPTIONAL PARTS LIST 選購零件表



 
PD0399 TURNBUCKLE WRENCH, 5mm
拉桿扳手




PD1843-R CARB SS TOP PLT(R)
轉向擺臂固定板零件包 (紅)



 
PD1843-S CARB SS TOP PLT(S)
轉向擺臂固定板零件包 (銀)



 PD1847 FR PLT FR TRANS, FF-1
前投影板 (FF-1) 零件包



 PD1848 FR PLT FR TRANS, FF0
前投影板 (FF0) 零件包



PD1849 FR PLT FR TRANS, FF+1
前投影板 (FF+1) 零件包



PD1850 A75RR PLT FR TRN, FR0
前投影板 (FR0) 零件包



PD1851 A75FR PLT RR TRN, RF0
後投影板 (RF0) 零件包



PD1852 A75FR PLT RR TRN, RF+4
後投影板 (RF+4) 零件包



 
PD1854 A75RR PLT RR TRN, RR+3
後投影板 (RR+3) 零件包



PD1857 ALUM S. SAVER SET
緩衝 / 轉向擺臂零件包



PD1860 HARD SWAY BAR BALL
防傾桿球頭零件包



PD1853 A75RR PLT RR TRN, RR+2
後投影板 (RR+2) 零件包



PD1855 A75UP ARM PLATE
上擺臂前固定板零件包



PD1899 RR TOE-IN BLOCK, RF+2
後投影板 (RF+2) 零件包



PD1862 WING POST
擾流板固定支柱零件包



PD1863 LITE PILLOW BALL
懸吊球頭零件包



 
PD1903 REAR WING
擾流尾翼



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1991 A75RR PLT RR TRN, RR+2.5
後投影板 (RR+2.5) 零件包



PD1865 LITE WHEEL NUT
六角輪殼止鬆螺帽



PD1903-B BLACK (黑)
PD1903-G GREEN (綠)
PD1903-O ORANGE (橘)
PD1903-P PINK (粉紅)
PD1903-Y YELLOW (黃)



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包




PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



 PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包




PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



 PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



PD2319 REAR WING
擾流尾翼



PD2319-B BLACK (黑)
PD2319-G GREEN (綠)
PD2319-O ORANGE (橘)
PD2319-W WHITE (白)
PD2319-Y YELLOW (黃)



PD1990 A75FR PLT RR TRN, RF+3
後投影板 (RF+3) 零件包



PD1992 A75RR PLT RR TRN, RR+4
後投影板 (RR+4) 零件包



MT-4 G3 TRUCK OPTIONAL PARTS LIST 選購零件表

PART#	DESCRIPTION	中文名稱	NOTE
PD0399	TURNBUCKLE WRENCH, 5mm	拉桿板手, 5mm	
PD1843-R	CARB SS TOP PLT (R)	轉向擺臂固定板零件包 (紅)	
PD1843-S	CARB SS TOP PLT (S)	轉向擺臂固定板零件包 (銀)	
PD1847	FR PLATR FR TRANS, FF-1	前投影板 (FF-1) 零件包	
PD1848	FR PLATR FR TRANS, FF0	前投影板 (FF0) 零件包	
PD1849	FR PLATR FR TRANS, FF+1	前投影板 (FF+1) 零件包	
PD1850	A75RR PLT FR TRN, FR0	前投影板 (FR0) 零件包	
PD1851	A75FR PLT RR TRN, RF0	後投影板 (RF0) 零件包	
PD1852	A75FR PLT RR TRN, RF4	後投影板 (RF+4) 零件包	
PD1853	A75RR PLT RR TRN, RR2	後投影板 (RR+2) 零件包	
PD1854	A75RR PLT RR TRN, RR3	後投影板 (RR+3) 零件包	
PD1855	A75UP ARM PLATE	上擺臂前固定板零件包	
PD1857	ALUM S.SAVER SET	緩衝/轉向擺臂零件包	
PD1860	HARD SWAY BAR BALL	防傾桿球頭零件包	
PD1862	WING POST	擾流板固定支柱零件包	
PD1863	LITE PILLOW BALL	懸吊球頭零件包	
PD1865	LITE WHEEL NUT	六角輪轂止鬆螺帽	
PD1903-B	REAR WING, BLACK	擾流尾翼 (黑)	
PD1903-G	REAR WING, GREEN	擾流尾翼 (綠)	
PD1903-O	REAR WING, ORANGE	擾流尾翼 (橘)	
PD1903-P	REAR WING, PINK	擾流尾翼 (粉紅)	
PD1903-Y	REAR WING, YELLOW	擾流尾翼 (黃)	
PD1989	RR TOE-IN BLOCK	後投影板 (RF+2) 零件包	
PD1990	A75FR PLT RR TRN, RF3	後投影板 (RF+3) 零件包	
PD1991	A75RR PLT RR TRN, RR2.5	後投影板 (RR+2.5) 零件包	
PD1992	A75RR PLT RR TRN, RR4	後投影板 (RR+4) 零件包	
PD2311-R	CFRP FR SHOCK TOWER (R)	前避震器支架 (紅)	
PD2311-S	CFRP FR SHOCK TOWER (S)	前避震器支架 (銀)	
PD2312-R	CFRP RR SHOCK TOWER (R)	後避震器支架零件包	
PD2312-S	CFRP RR SHOCK TOWER (S)	後避震器支架零件包	
PD2315	A75 ST.SLIDER W/BB	轉向曲板零件包	
PD2316-G	SWAY BAR (G), 3mm	防傾桿 (金Ø3mm)	
PD2316-S	SWAY BAR (S), 2.5mm	防傾桿 (銀Ø2.5mm)	
PD2317	FR SHOCK SPRING	前避震器彈簧零件包	
PD2318	RR SHOCK SPRING	後避震器彈簧零件包	
PD2319-B	REAR WING, BLACK	擾流尾翼 (黑)	
PD2319-G	REAR WING, GREEN	擾流尾翼 (綠)	
PD2319-O	REAR WING, ORANGE	擾流尾翼 (橘)	
PD2319-W	REAR WING, WHITE	擾流尾翼 (白)	
PD2319-Y	REAR WING, YELLOW	擾流尾翼 (黃)	
PD2320	REAR WING MOUNT	後尾翼固定座零件包	
PD8951	RR SHOCK BODY (2)	後避震器套筒	
PD8954	UP SUSP. ARM SET	上擺臂組	
PD8955	FR SHOCK BODY (2)	前避震器套筒	
PD8960	WRENCH SET, 17mm	套筒工具	
PD8961	WRENCH SET	開口板手	
PD02-0012	AL CTR DIFF MNT.	中差支撐架	
PD02-0013	AL CTR DIFF PLT.	中差連板	



Manufactured by

THUNDER TIGER GROUP © 2010

<http://www.thundertiger.com>

JD7632