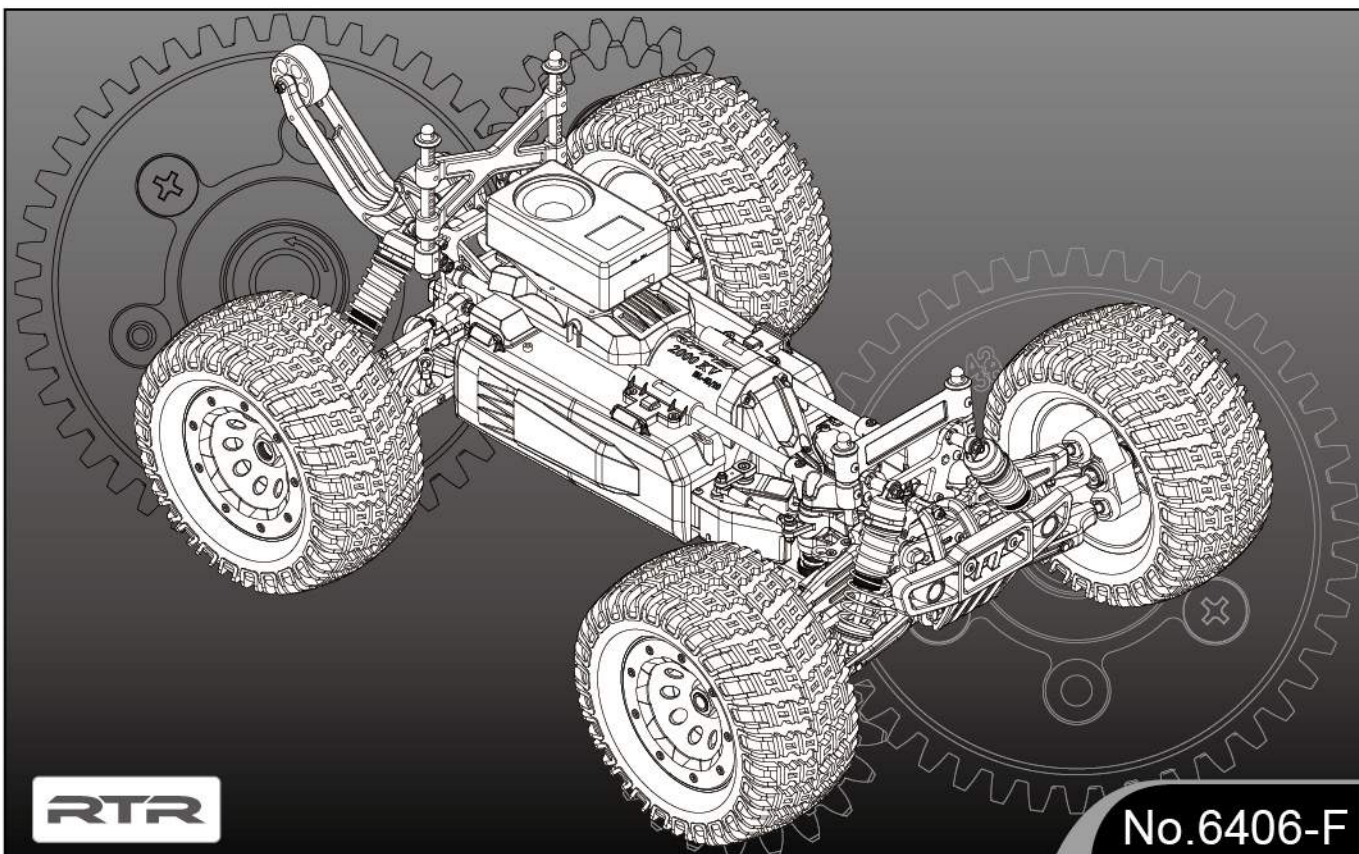


1/8TH SCALE BRUSHLESS 4WD MONSTER TRUCK 1:8 無刷電動四驅大腳卡車

**RTR****No.6406-F**

This radio control model car is not a toy! Before beginning assembly, please read this manual thoroughly.
本產品為高性能模型非一般玩具，組裝與操作前，請詳閱本產品說明書。

The contents are subject to change without prior notice due to product improvements and specification changes.
本套件所附之零件可能跟圖示有所差異。因產品後續之設計研發或功能不斷改善之因，我們將保留產品規格變更權利，不再另行通知使用者。

Thunder Tiger offers online help on thundertiger.com, our product specialists are ready to take your call if you have any technical questions. Have fun and enjoy the exciting world of R/C.

若您在產品的使用上有任何的疑問，歡迎多加利用我們所提供的即時諮詢留言版或洽詢雷虎科技授權經銷商。雷虎科技的全球英文網址為 thundertiger.com，我們將竭誠為您服務！

Maintenance Manual & Parts Catalogue 維修說明書及零件包型錄

WARRANTY 品質保證事項

Thunder Tiger Corporation guarantees this model is free from defects in both material and workmanship. The total monetary value under warranty will in no case exceed the cost of the original product purchased. This warranty does not cover any components damaged by use or modification. Part or parts missing from this product must be reported within 60 days of purchase. No part or parts will be sent under warranty without proof of purchase. To receive part or parts under warranty, the service center must receive a proof of purchase and/or the defective part or parts. Should you find a defective or missing part, contact the authorized Thunder Tiger Service/Distributor near you. Under no circumstances a dealer or distributor accept return the product has been used.

本公司對於製造過程中產生之瑕疵，負完全品質保證責任。保證事項僅限於產品本身與隨產品所附之零配件。品質保證不包含因使用、組裝或調整本產品或其他所有非產品本身品質所造成之損壞。

Safety Precautions 安全注意事項

Please read all of the instructions and familiarize yourself with the product and its controls before operation.

1. This product is not a toy. It is a high performance model car therefore it is important to familiarize yourself with the model, its manual, and its construction before assembly or operation. Adult supervision is necessary for children operating this model.
2. Always keep this instruction manual on hand during assembly and for operating reference.
3. Do not use a power screwdriver to install screws into plastic parts. A power screwdriver's high rotation speed can heat up the screw being installed which can result in some melting of the plastic parts or stripped threads.
4. For best performance, it is important to make sure all the moving parts can move freely without binding.
5. This product, its parts, and its assembly tools can be harmful to your health. Always exercise extreme caution when assembling and operating this product. Keep away from any high speed rotating parts during operation.


感謝您購買雷虎科技產品，在您開始操作本產品前，請詳閱本產品說明書。

1. 本產品為高性能模型產品非一般玩具，組裝與操作過程皆須由成人陪同。請詳讀此本使用說明書，避免因組裝錯誤與操作不當造成損壞。
2. 請妥善保管此說明書，對於後續維修、操控說明將可提供您協助。
3. 請勿使用電動工具旋緊自攻螺絲於塑膠零件上，可能導致塑膠零件融化或滑牙。
4. 請檢視所有活動部位零件是否不受干涉，可靈活活動，以達車輛最佳性能。
5. 此項產品具有相當之危險性，於組裝、調整、操控上的不熟悉都可能造成自身或他人的傷害，發生這些傷害事件時，製造商是可以免除責任的，建議您於初次使用本產品前，先行請教具有相程度經驗同好或是專業雷虎經銷商與模型專賣店。


Index 索引

Manual Format 說明書使用方式	P.2	STEP32 Dust Cover 防塵蓋	P.15
Symbols Used Throughout The Manual 符號說明	P.2	STEP33 Shock Assembly 避震組	P.16
STEP1 Front / Rear Differential 前/後差速器	P.3	STEP34 Front Shock Assembly 前避震組	P.17
STEP2 Front / Rear Gearbox 前/後齒輪箱	P.3	STEP35 Rear Shock Assembly 後避震組	P.17
STEP3 Front Shock Tower 前避震器支架	P.4	STEP36 Rod 補強桿	P.18
STEP4 Rear Shock Tower 後避震器支架	P.4	STEP38 ESC 速控器	P.19
STEP5 Motor & Pinion Gear 馬達&驅動齒	P.5	STEP39 Battery Cover 電池盒	P.19
STEP6 Slipper Clutch 限滑組	P.5	STEP40 Engine Sound Box 發聲器	P.20
STEP8 Steering System 轉向組	P.6	STEP41 Body Shell 車殼	P.20
STEP9 Front Suspension 前懸吊	P.6	STEP42 Roof Light Assembly 燈座	P.21
STEP14 Steering System 轉向組	P.9	STEP43 Roll Cage 護欄	P.21
STEP15 Steering Turnbuckle 轉向拉桿	P.9	STEP45 Tires & Wheels 輪胎與輪殼	P.23
STEP17 Rear Suspension 後懸吊	P.10	STEP47 Wheelie Bar 翹頭輔助輪	P.24
STEP21 Rear Turnbuckle 後拉桿	P.11	OPTIONAL PARTS Front Sway Bar 前防傾桿(選購零件)	P.25
STEP23 Slipper Clutch 限滑組	P.12	OPTIONAL PARTS Rear Sway Bar 後防傾桿(選購零件)	P.26
STEP24 Battery Box 電池盒	P.12	OPTIONAL PARTS Light Cover 車燈罩	P.27
STEP26 Servo 轉向伺服機	P.13	ASSEMBLY EXPLODED VIEW 組裝爆炸圖檢索	P.28
STEP27 Wire Routing 連接線	P.13	K-ROCK SPARE PARTS LIST 零件表	P.35
STEP28 Servo Mount 伺服機座	P.14	K-ROCK OPTIONAL PARTS LIST 選購零件表	P.43
STEP30 Receiver 接收機	P.14	Declaration of Conformity	P.45
STEP31 Spur Gear Cover 主齒輪罩	P.15		

Tools Included 內附工具

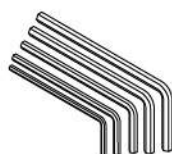


Hex Wrenches
1.5 / 2.0 / 2.5 / 3 / 5mm
六角板手組

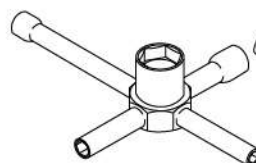

5-Way Cross Wrench
十字套筒

Tools Required For Assembly 組裝維修工具

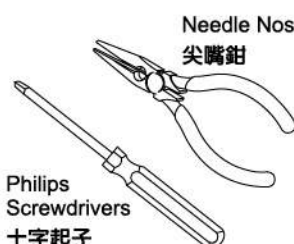

Needle Nose Pliers
尖嘴鉗

Philips
Screwdrivers
十字起子



Super Glue
(CA Glue)
快乾膠




Lexan Body curved Scissor
車殼專用剪

Body Reamer
車殼鑽孔器



Wire Cutter
斜口剪

Grease
潤滑油膏
(黃油)

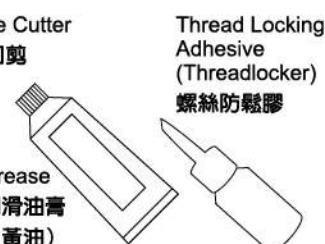


Thread Locking
Adhesive
(Threadlocker)
螺絲防鬆膠

Manual Format 說明書使用方式

How to read the instruction manual ? 說明書導讀

- A:** The manual indicates the assembly step number and the parts that are to be assembled.
- B:** The manual displays actual size drawings, and part quantities used.
- C:** All parts, except screws, are identified by their order numbers. When purchasing spare parts, identify the part required and cross reference this to the spare parts list at the end of this manual, which shows the spare parts and the corresponding order numbers.
- D:** This instruction manual uses several symbols. Pay careful attention to them during construction. Details are given at the bottom of each page.
- A:** 顯示組立步驟及需組立之零件部位。
- B:** 零件實際對照尺寸及使用數量。
- C:** 請比對零件形狀以及後附零件料號對照圖示找出需求零件料號。
- D:** 操作說明符號可更有效協助組裝者使用此說明書，請依說明書符號指示進行組裝步驟。

Example 說明範例

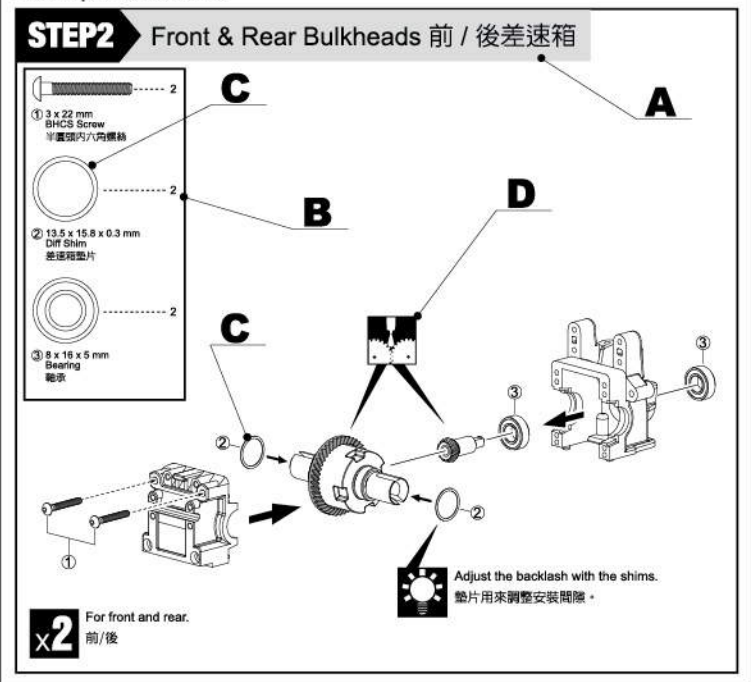

Symbols Used Throughout The Manual 符號說明



Apply C.A Glue
使用快乾膠黏合



Apply silicon oil
使用模型專用矽油



Assemble as many times as specified
依指示組裝所需數量



Assemble left and right side the same way
左右側組件相同



Assemble in right order
依標示順序組裝



Drill holes with the specified diameter
依標示尺寸鑽孔



Hint
組裝提示



Must be purchased separately
改裝品需另購



Cut off shaded portion
依標示部分裁切



Ensure smooth, non-binding movement when assembling
確認組件靈活度



Pay attention
組裝注意



Cut off excess
裁剪多餘部分



Apply threadlocker
使用螺絲防鬆膠




Apply grease
使用潤滑油膏(黃油)

STEP1 Front / Rear Differential 前 / 後差速器


x2 For front and rear.
前/後

- ① 3 x 14 mm FHCS Screw
平頭內六角螺絲
- ② 5.8 x 1.9 mm O-Ring
O型環
- ③ 4.4 x 0.8 mm O-Ring
O型環
- ④ 6.1 x 11 x 0.15 mm Washer
墊圈
- ⑤ 2.5 x 11 mm Pin
銷
- ⑥ 3.6 x 12 x 0.2 mm Washer
墊圈
- ⑦ 8 x 16 x 5 mm Bearing
軸承

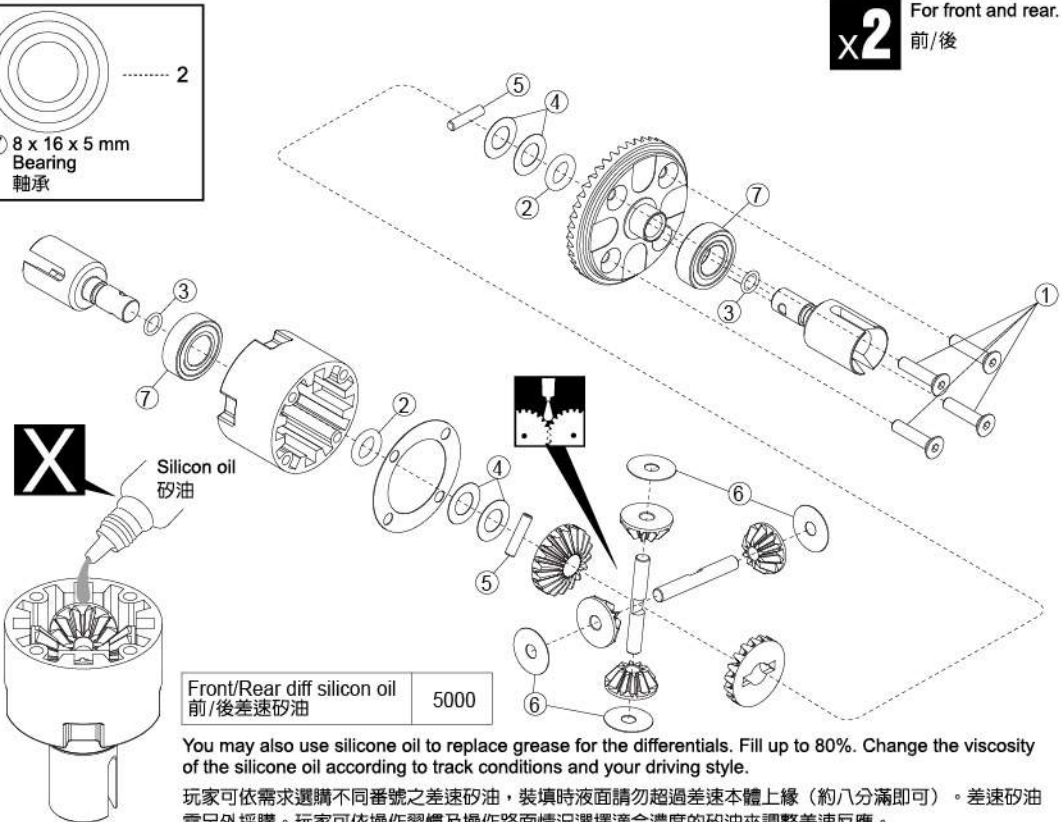

STEP2 Front / Rear Gearbox 前 / 後齒輪箱

- ① 3 x 22 mm BHCS Screw
半圓頭內六角螺絲
- ② 13.5 x 15.8 x 0.3 mm Diff Shim
差速箱墊片
- ③ 8 x 16 x 5 mm Bearing
軸承
- ④ 8.2 x 12.5 x 0.15 mm Washer
墊圈
- ⑤ 4 x 4 mm Set Screw
無頭內六角螺絲
- ⑥ 3 x 25 mm BHCS Screw
半圓頭內六角螺絲

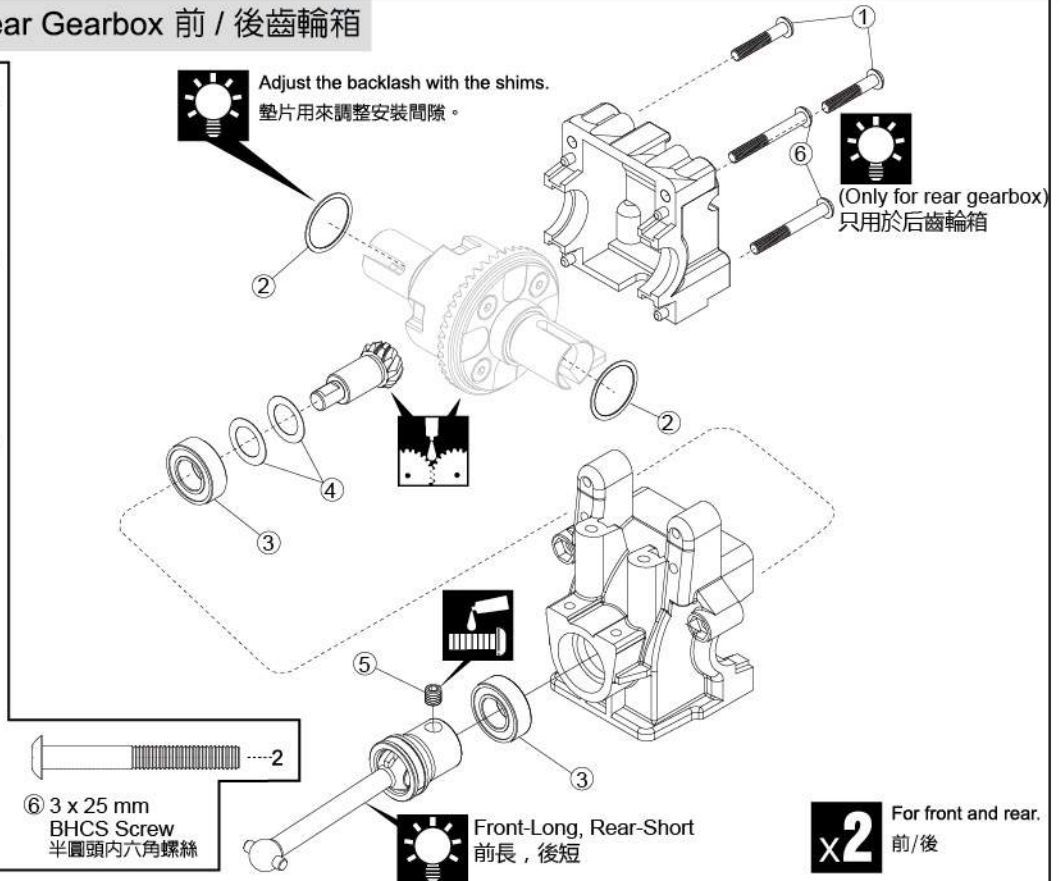

Apply grease
使用潤滑油膏(黃油)



Must be purchased
separately
改裝品需另購



Assemble as many times
as specified
依指示組裝所需數量




Hint
組裝提示




Apply threadlocker
使用螺絲防鬆膠

STEP3 Front Shock Tower 前避震器支架

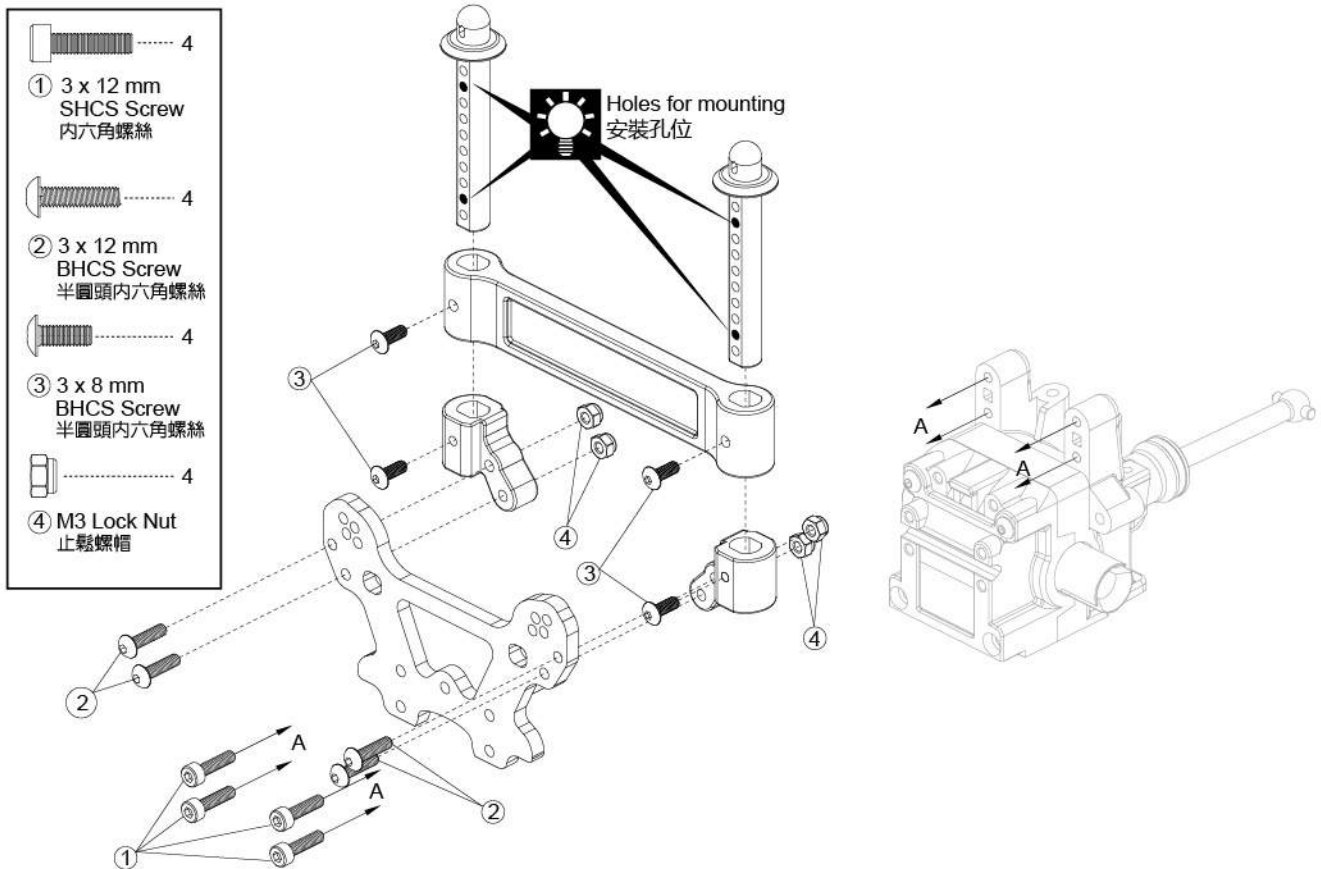


STEP4 Rear Shock Tower 後避震器支架

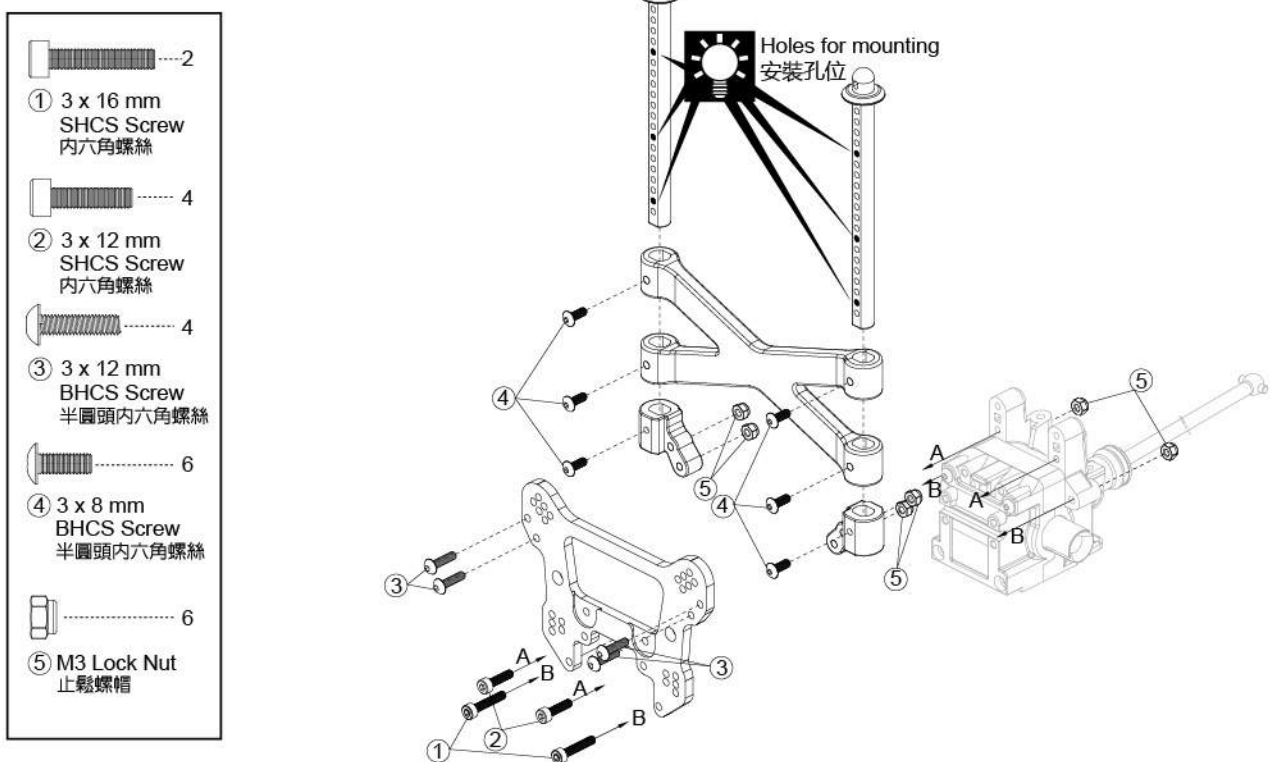


STEP5 Motor & Pinion Gear 馬達&驅動齒

- ① 3 x 14 mm SHCS Screw 內六角螺絲
- ② 3 x 12 mm SHCS Screw 內六角螺絲
- ③ 3 x 6 x 0.5 mm Washer 墊圈
- ④ 4 x 4 mm Set Screw 無頭內六角螺絲

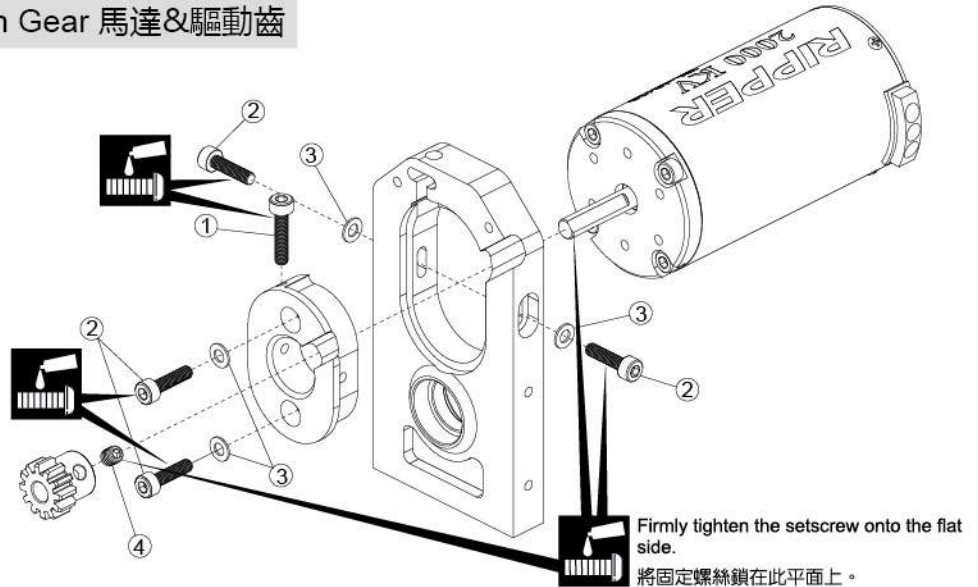



STEP6 Slipper Clutch 限滑組 (1)

- ① 3 x 8 mm BHCS Screw 半圓頭內六角螺絲
- ② 2.5 x 10 mm Pin 銷
- ③ 6 x 8.5 x 1 mm Washer 墊圈
- ④ M6 E-Clip E型鉗環
- ⑤ 8 x 16 x 5 mm Bearing 軸承

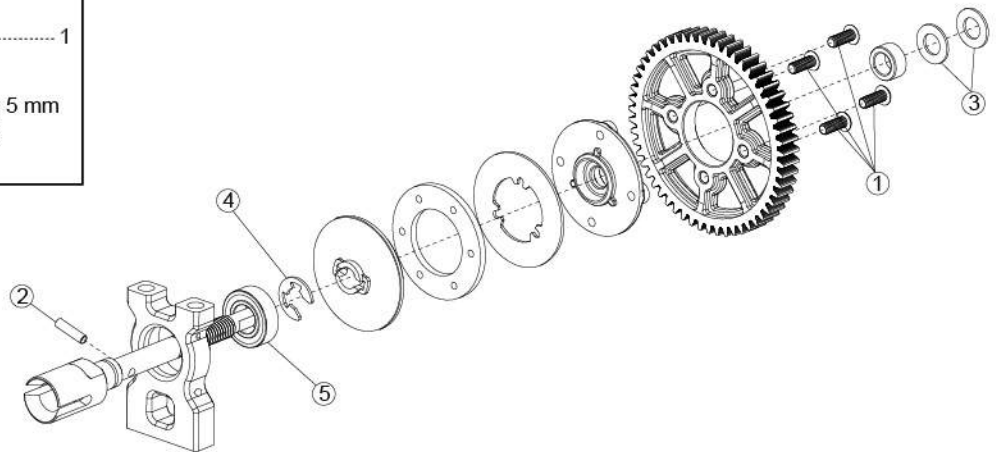

STEP7 Slipper Clutch 限滑組 (2)

- ① 4 x 4 mm Set Screw 無頭內六角螺絲
- ② 6 x 11 x 1 mm Washer 墊圈
- ③ 8 x 16 x 5 mm Bearing 軸承

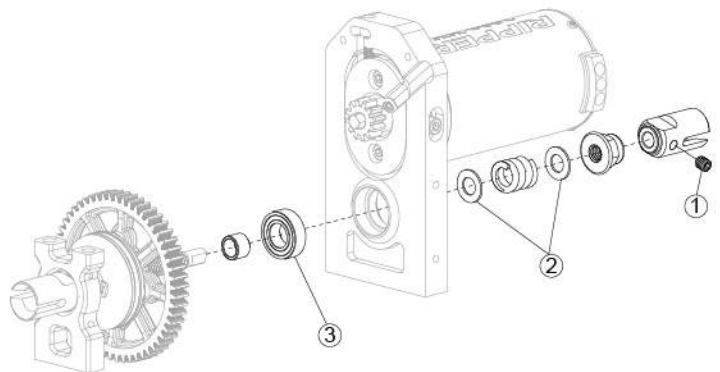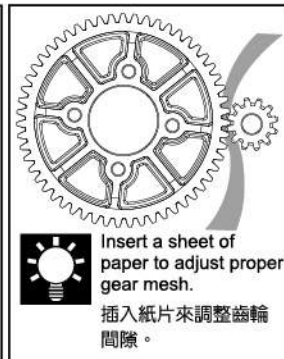


Apply threadlocker
使用螺絲防鬆膠



Hint
組裝提示


STEP8 Steering System 轉向組 (1)

- ① 3 x 16 mm
FHCS Screw
平頭內六角螺絲
- ② 3 x 12 mm
BHCS Screw
半圓頭內六角螺絲
- ③ 5 x 10 x 4 mm
Bearing
軸承
- ④ M3 Lock Nut
止鬆螺帽

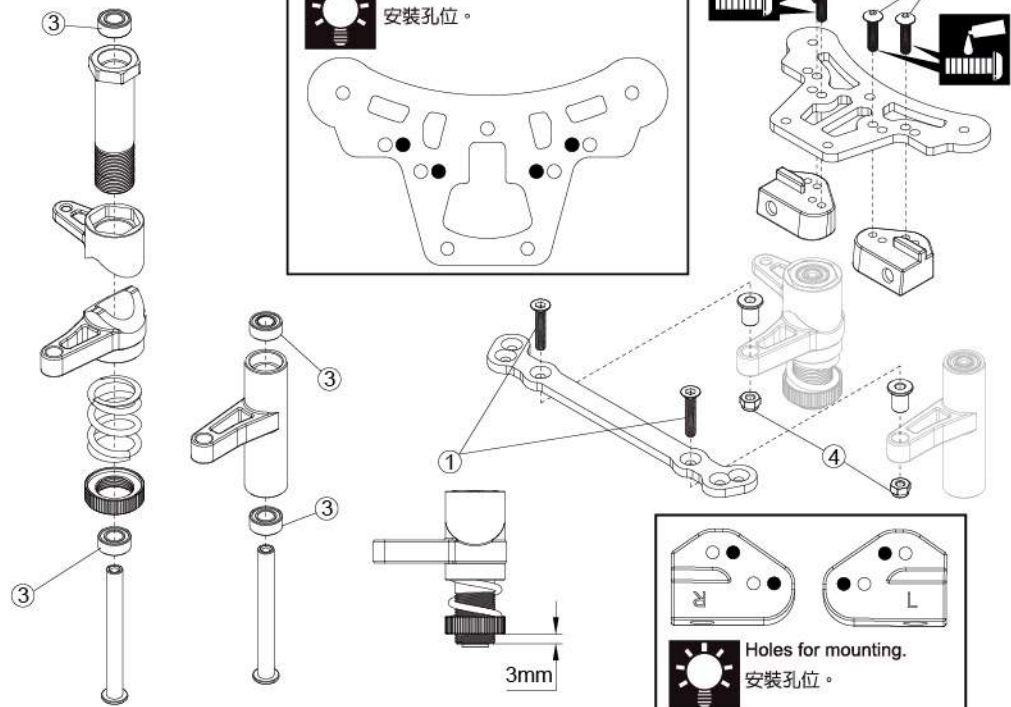



STEP9 Front Suspension 前懸吊 (1)

- ① 4 x 65 mm
Susp. Pin
擺臂銷
- ② 3 x 30 mm
BHCS Screw
半圓頭內六角螺絲
- ③ 4 x 12 mm
Set Screw
無頭內六角螺絲

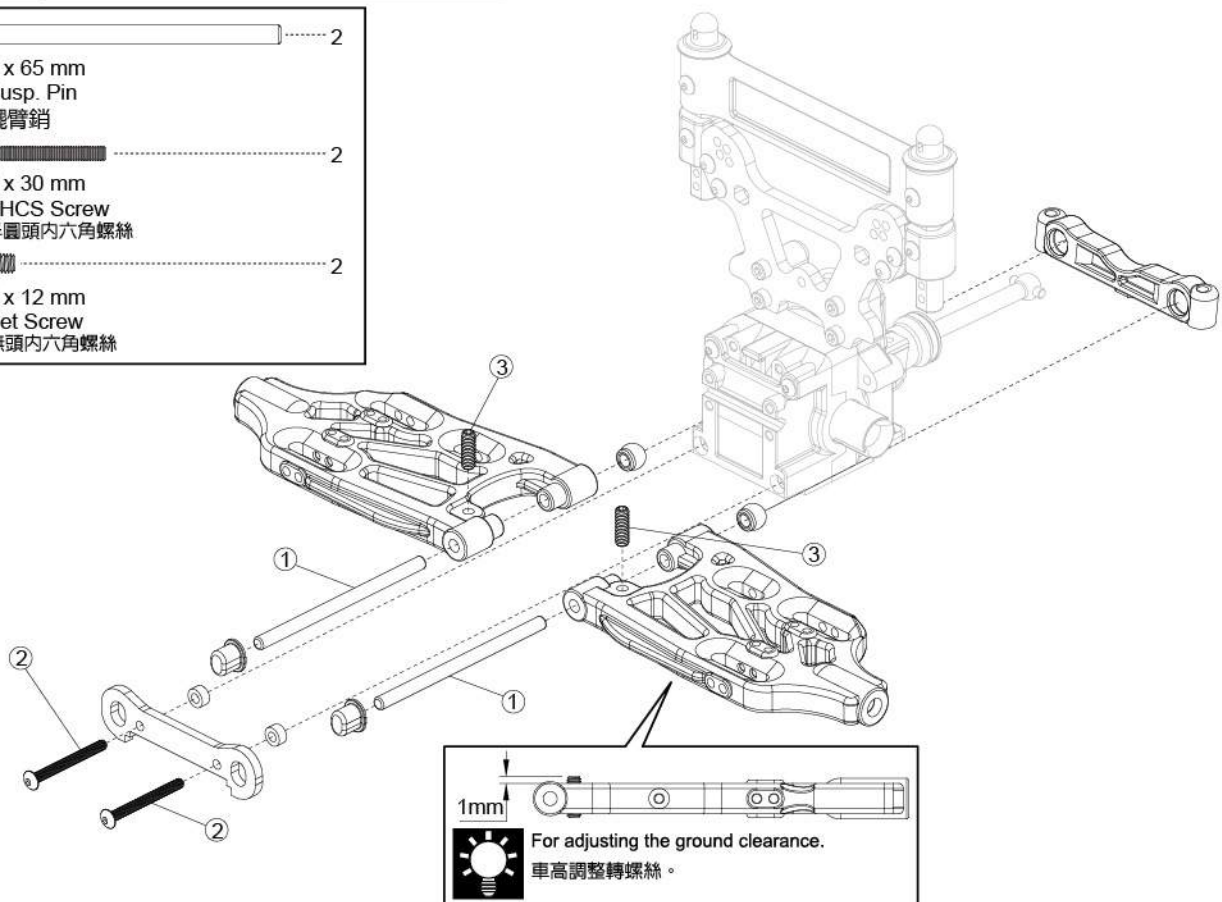


STEP10 Front Suspension 前懸吊 (2)

- ① 4 x 43 mm
Susp. Pin
擺臂銷
- ② 3 x 10 mm
BHCS Screw
半圓頭內六角螺絲

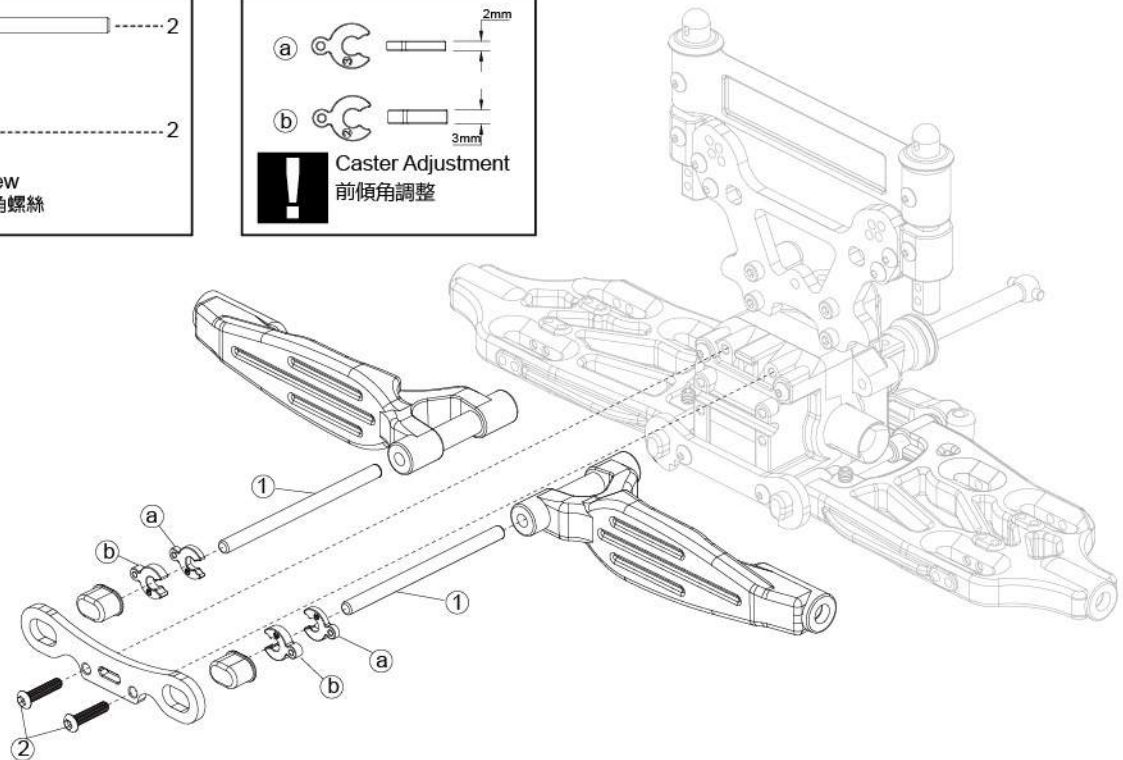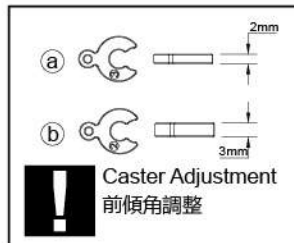

STEP11 Front Suspension 前懸吊 (3)



- ① 3 x 15 mm
Pin
銷
- ② 5 x 4 mm
Set Screw
無頭內六角螺絲
- ③ 8 x 16 x 5 mm
Bearing
軸承
- ④ 10 x 19 x 5 mm
Bearing
軸承

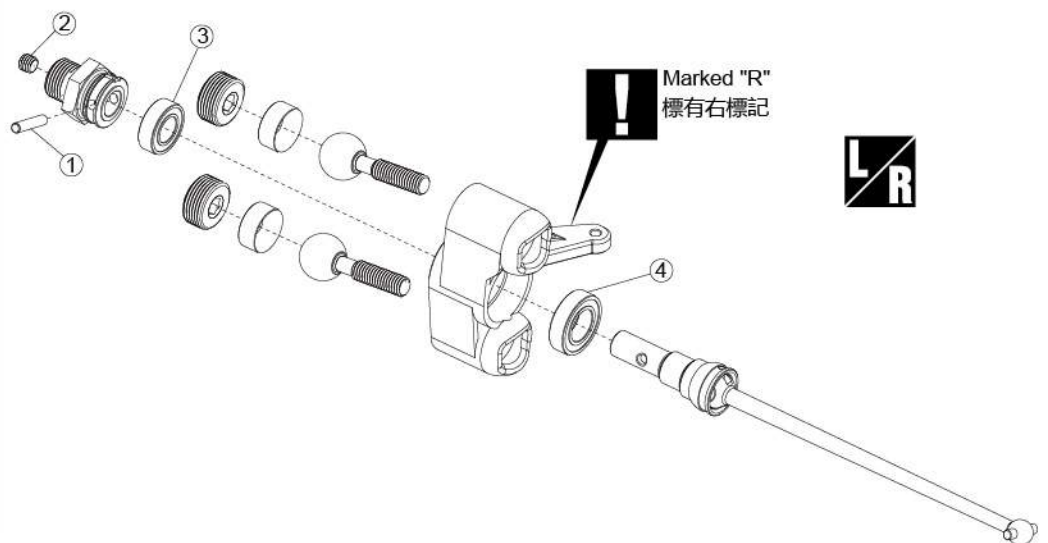


! Pay attention
組裝注意

L R Assemble left and right side the same way
左右側組件相同

STEP12 Front Suspension 前懸吊 (4)

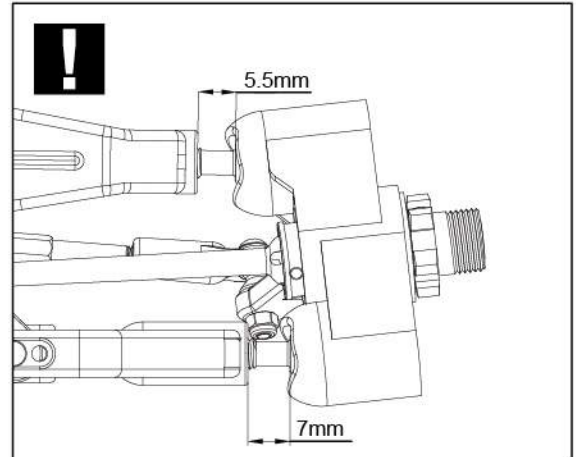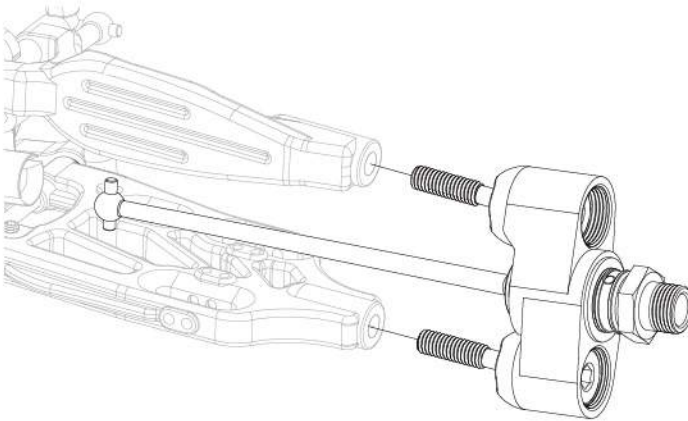

 STEP13 Front Suspension 前懸吊 (5)



① 4 x 16 mm
FHCS Screw
平頭內六角螺絲



② 4 x 10 mm
FHCS Screw
平頭內六角螺絲




③ 3 x 25 mm
SHCS Screw
內六角螺絲



④ 3 x 16 mm
BHCS Screw
半圓頭內六角螺絲




⑤ M3 Lock Nut
止鬆螺帽

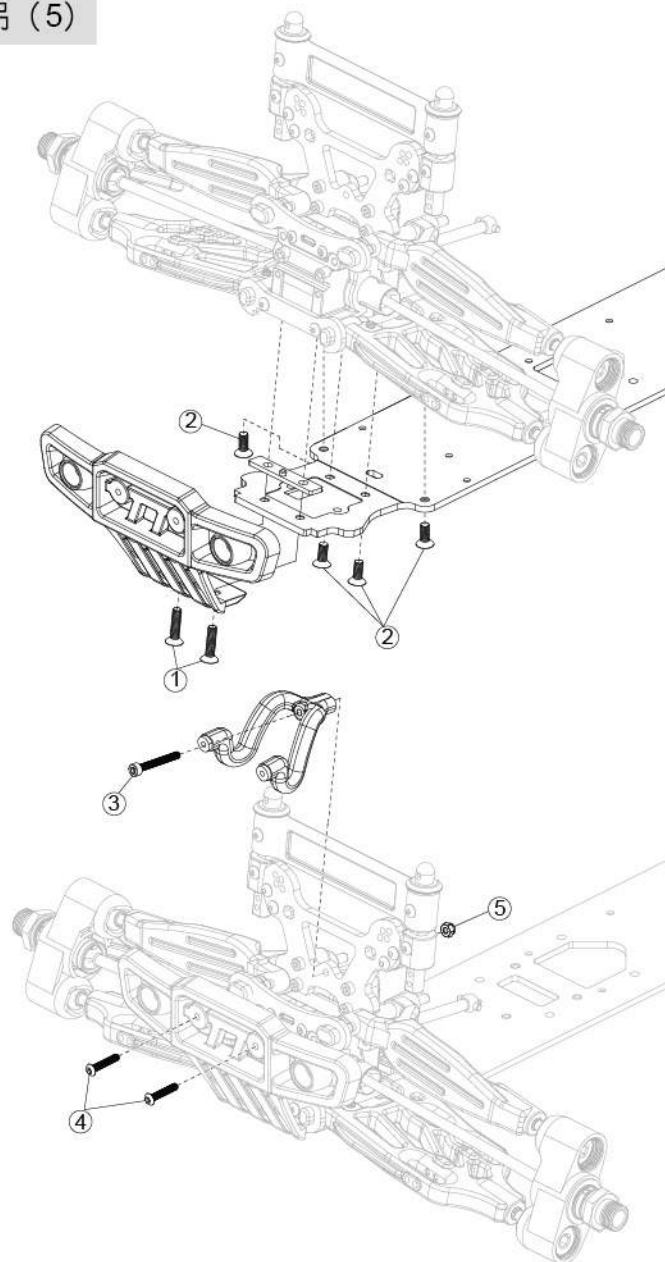

Pay attention
組裝注意



STEP14 Steering System 轉向組

- ① 3 x 10 mm
FHCS Screw
平頭內六角螺絲

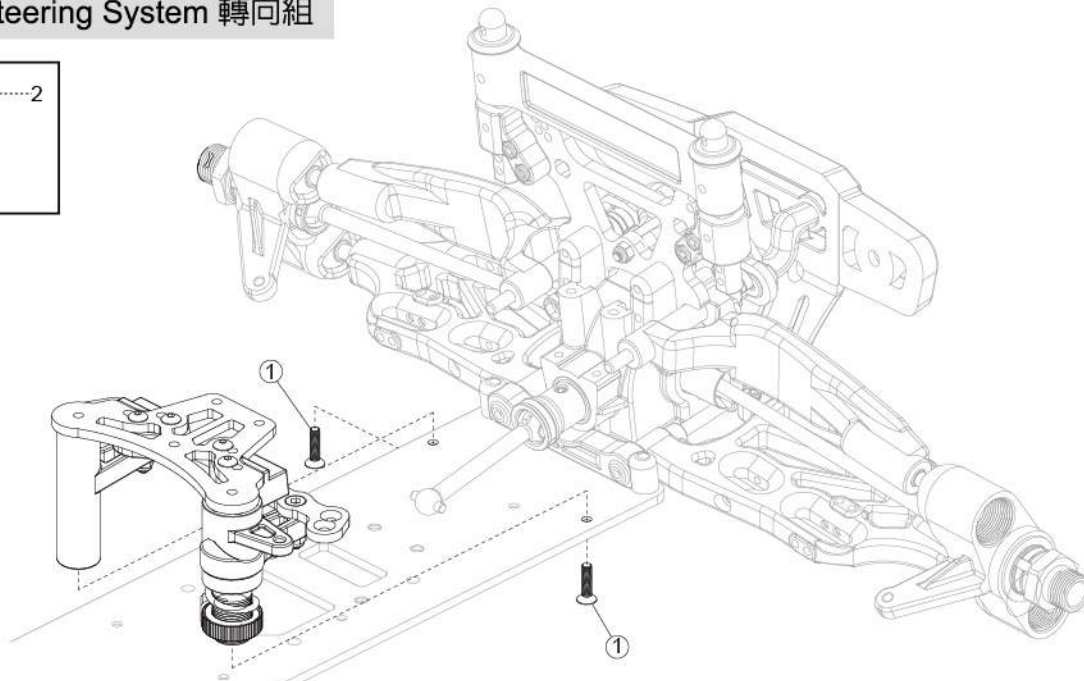

STEP15 Steering Turnbuckle 轉向拉桿(1)

 
x2

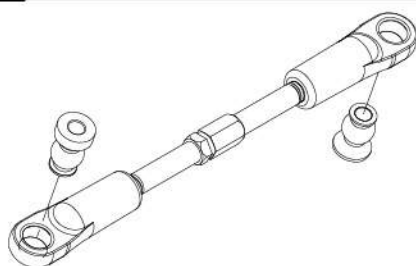

STEP16 Steering Turnbuckle 轉向拉桿(2)

- ① 3 x 20 mm
FHCS Screw
平頭內六角螺絲
- ② 3 x 18 mm
BHCS Screw
半圓頭內六角螺絲
- ③ M3 Lock Nut
止鬆螺帽

L/R

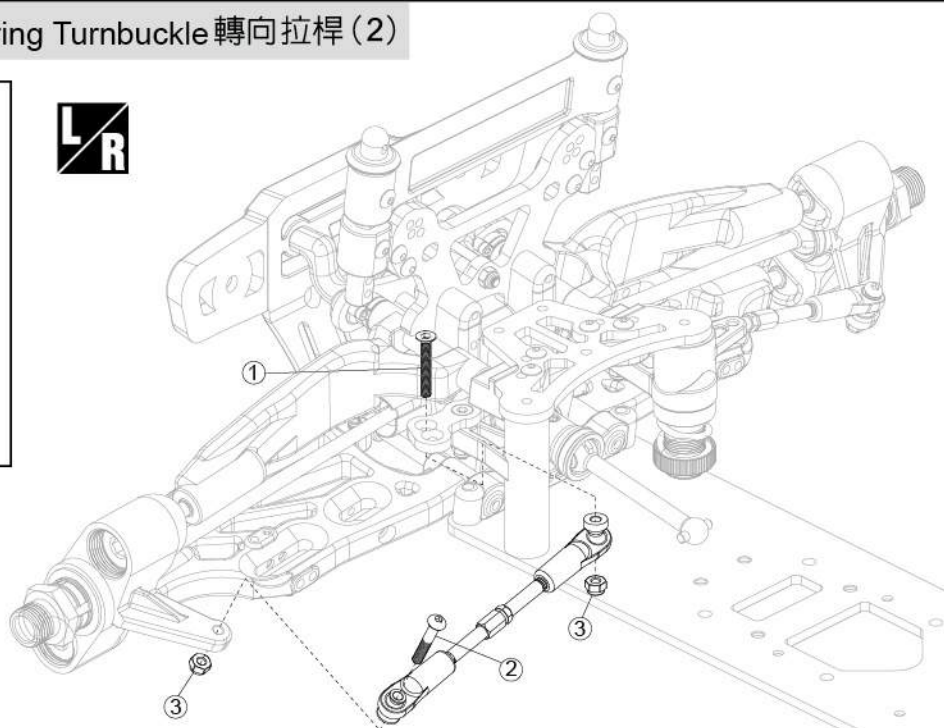

x2


Assemble as many times as specified
依指示組裝所需數量

L/R

Assemble left and right side the same way
左右側組件相同


STEP17 Rear Suspension 後懸吊 (1)

-  4
- ① 4 x 10 mm
FHCS Screw
平頭內六角螺絲
-  2
- ② 4 x 12 mm
Set Screw
無頭內六角螺絲

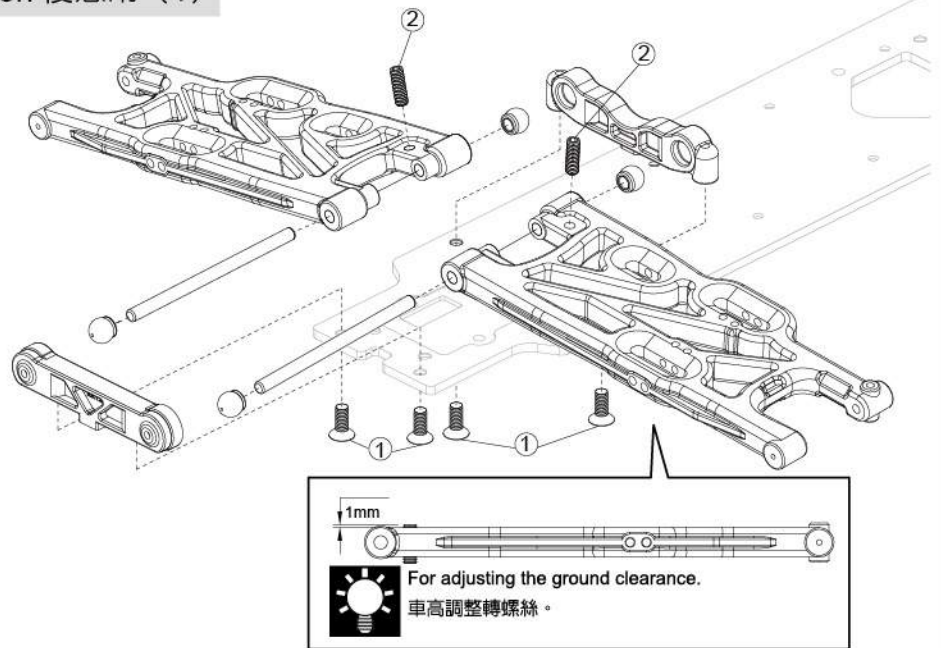




STEP18 Rear Suspension 後懸吊 (2)

-  4
- ① 4 x 10 mm
FHCS Screw
平頭內六角螺絲

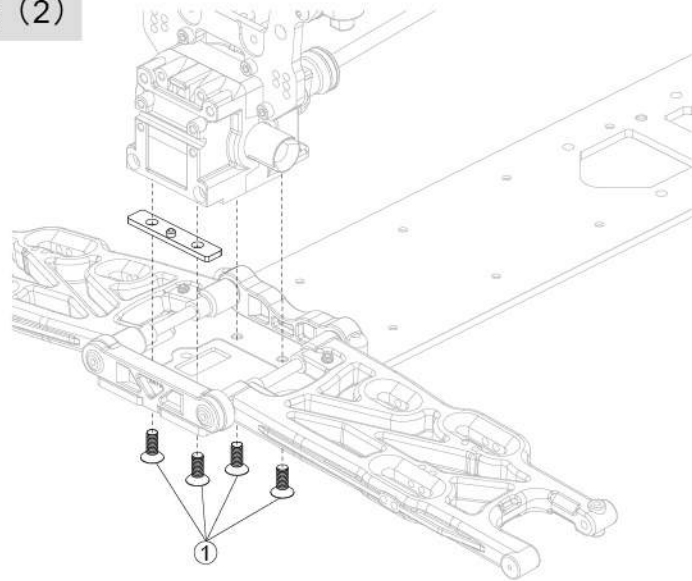



STEP19 Rear Suspension 後懸吊 (3)

  -  1
- ① 5 x 4 mm
Set Screw
無頭內六角螺絲
-  1
- ② 3 x 15 mm
Pin
銷
-  1
- ③ 8 x 16 x 5 mm
Bearing
軸承
-  1
- ④ 10 x 19 x 5 mm
Bearing
軸承

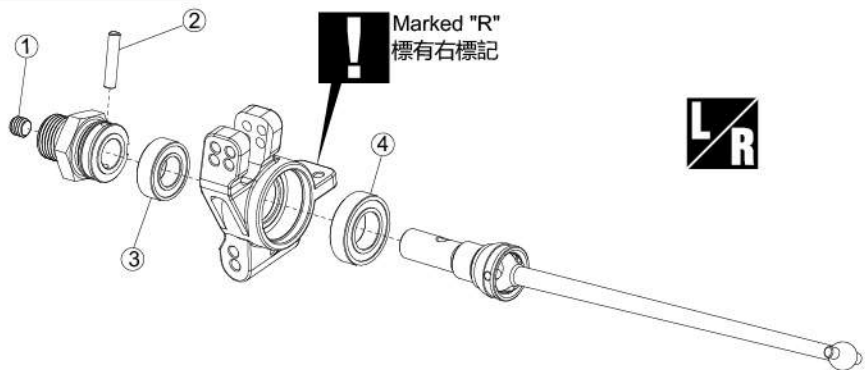


STEP20 Rear Suspension 後懸吊 (4)

- ① 3 x 50 mm Pin 銷
- ② 3 x 5 mm Set Screw 無頭內六角螺絲

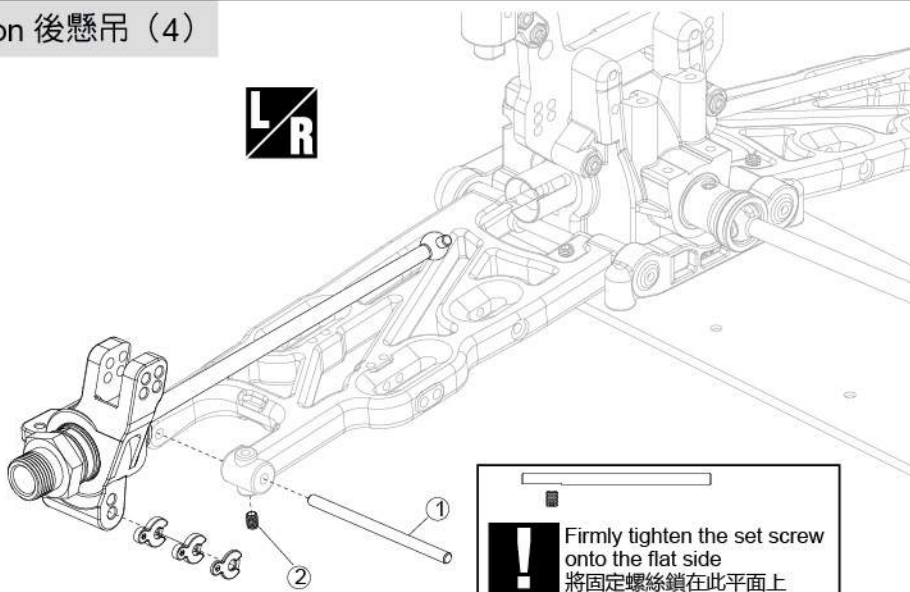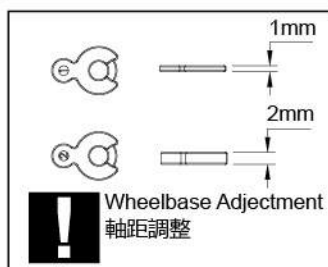


STEP21 Rear Turnbuckle 後拉桿 (1)

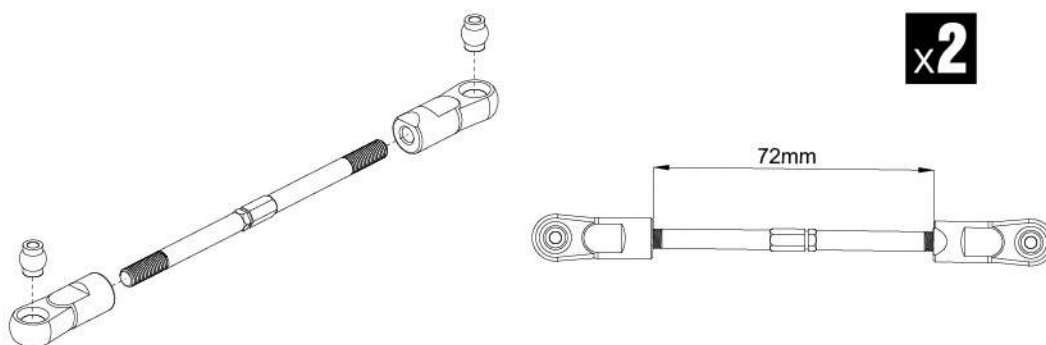

STEP22 Rear Turnbuckle 後拉桿 (2)


- ① 3 x 22 mm BHCS Screw 半圓頭內六角螺絲
- ② M3 Lock Nut 止鬆螺帽

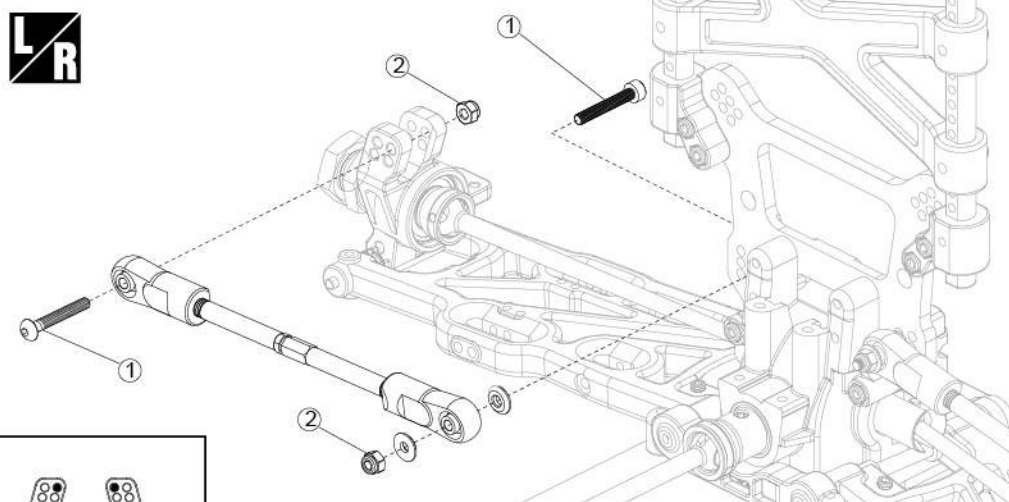


x2 Assemble as many times as specified 依指示組裝所需數量

L/R Assemble left and right side the same way 左右側組件相同


STEP23 Slipper Clutch 限滑組 (3)

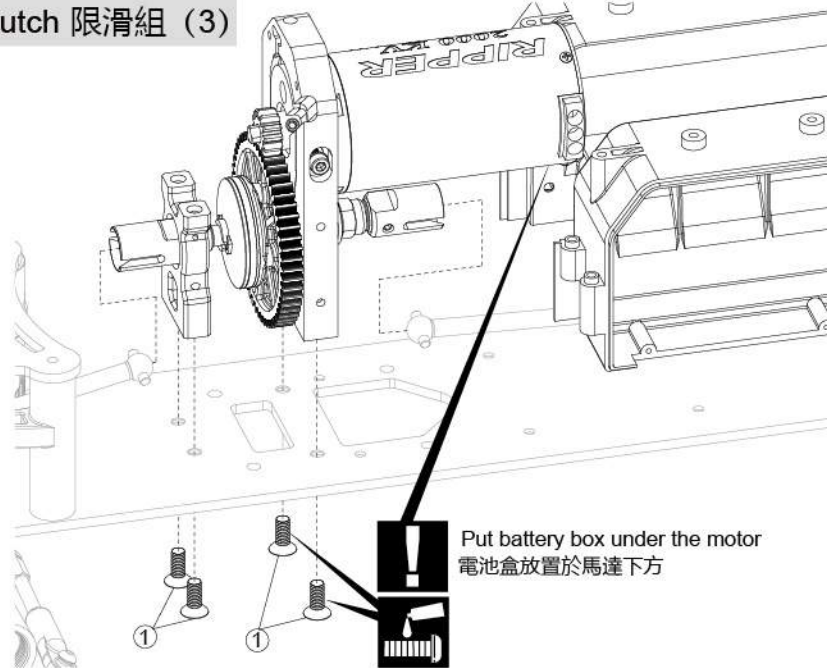


STEP24 Battery Box 電池盒 (1)

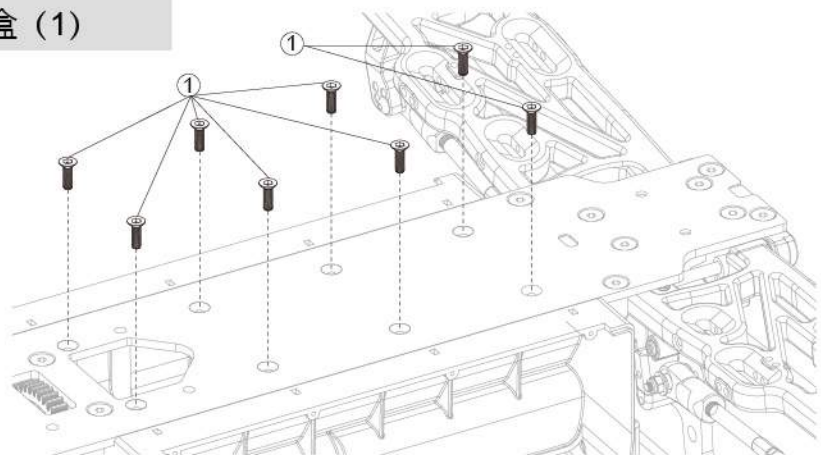


STEP25 Battery Box 電池盒 (2)

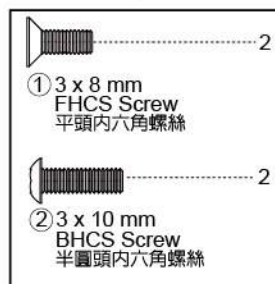

FRONT
前

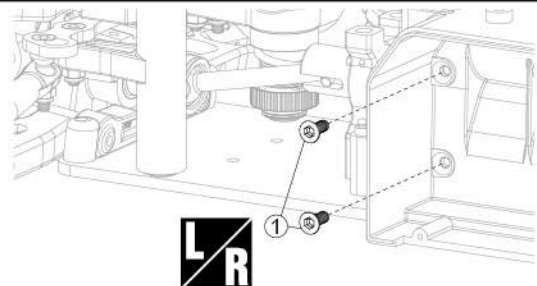

REAR
後

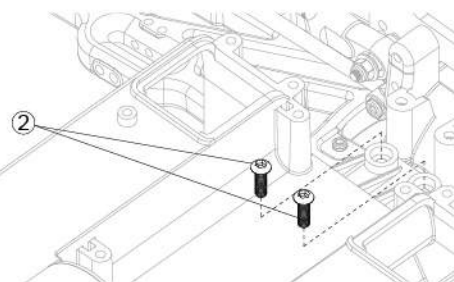

Apply threadlocker
使用螺絲防鬆膠




Pay attention
組裝注意




Assemble left and right side the same way
左右側組件相同

STEP26 Servo 轉向伺服機

- ① 3 x 12 mm BHCS Screw
半圓頭內六角螺絲
- ② 3 x 6 mm FHCS Screw
平頭內六角螺絲
- ③ M3 Lock Nut
止鬆螺帽

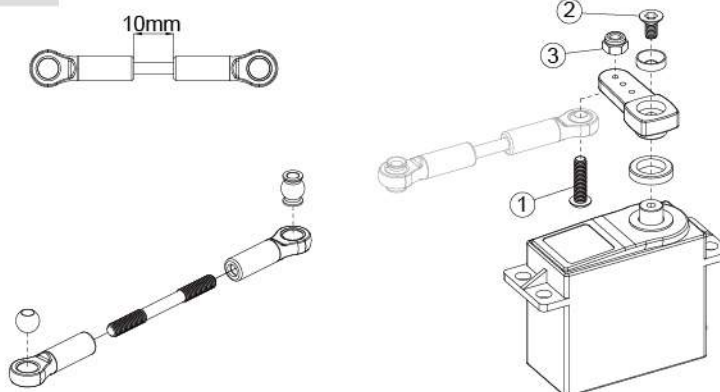


STEP27 Wire Routing 連接線

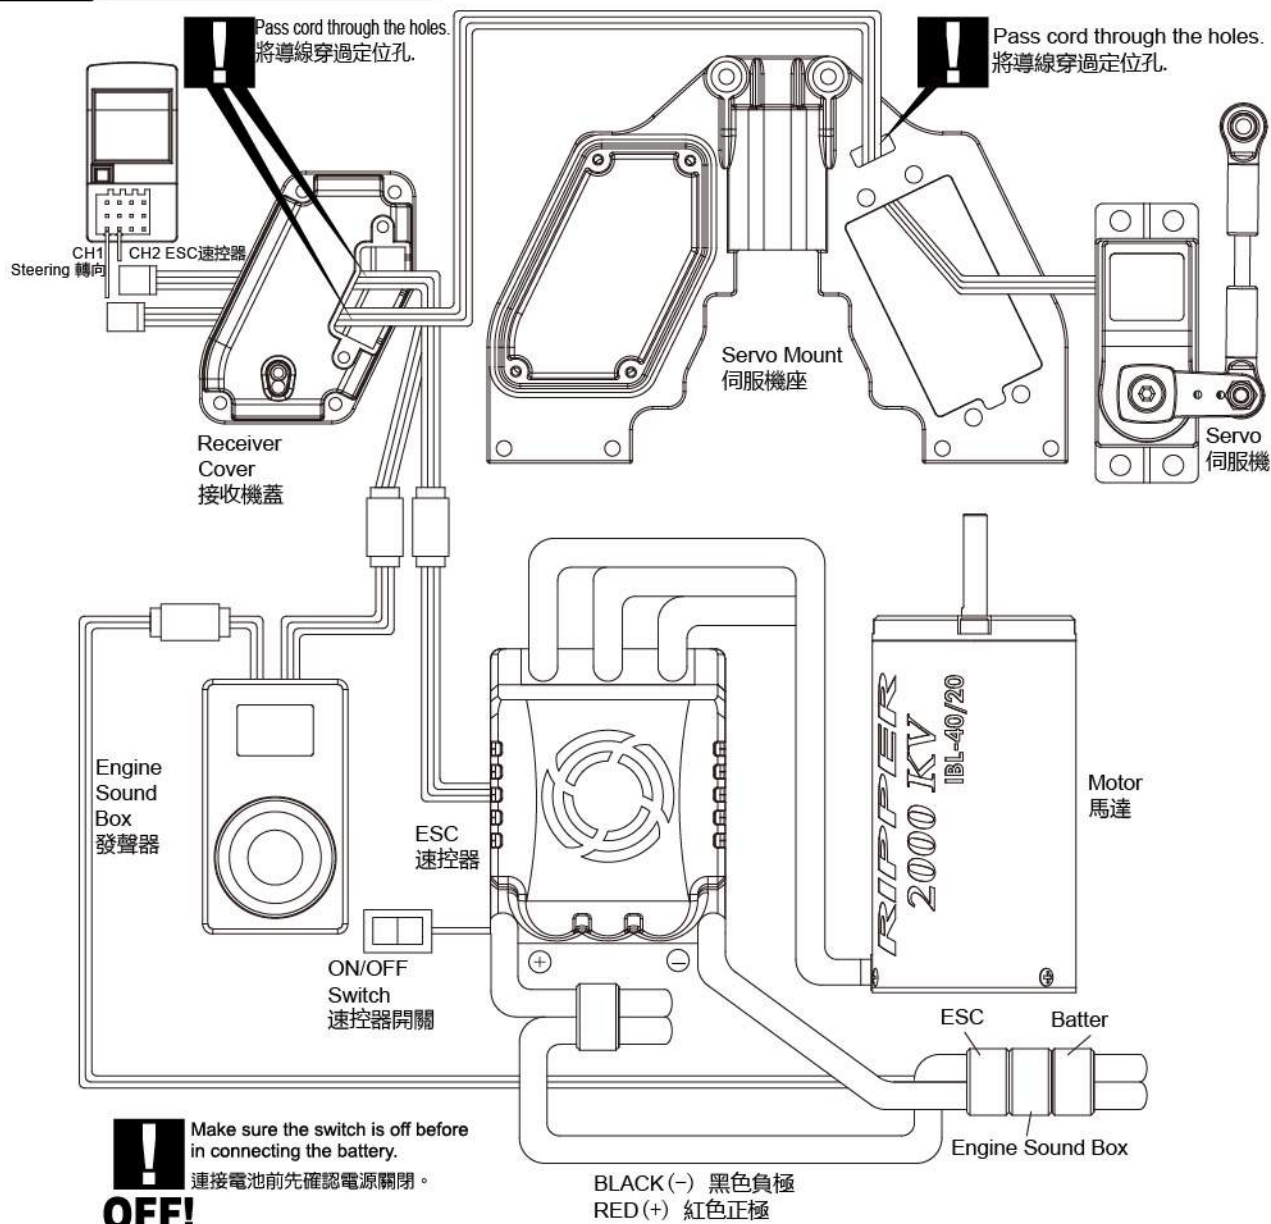

! Pay attention
組裝注意


STEP28 Servo Mount 伺服機座 (1)

- ① 4 x 10 mm
BHCS Screw
半圓頭內六角螺絲

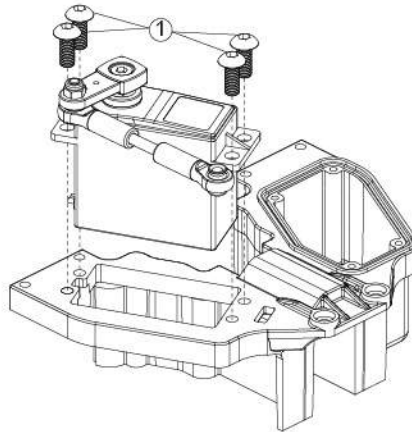

STEP29 Servo Mount 伺服機座 (2)


- ① 3 x 16 mm
BHCS Screw
半圓頭內六角螺絲
- ② 3 x 12 mm
BHCS Screw
半圓頭內六角螺絲
- ③ M3 Lock Nut
止鬆螺帽
- ④ 3 x 8 mm
BHCS Screw
半圓頭內六角螺絲

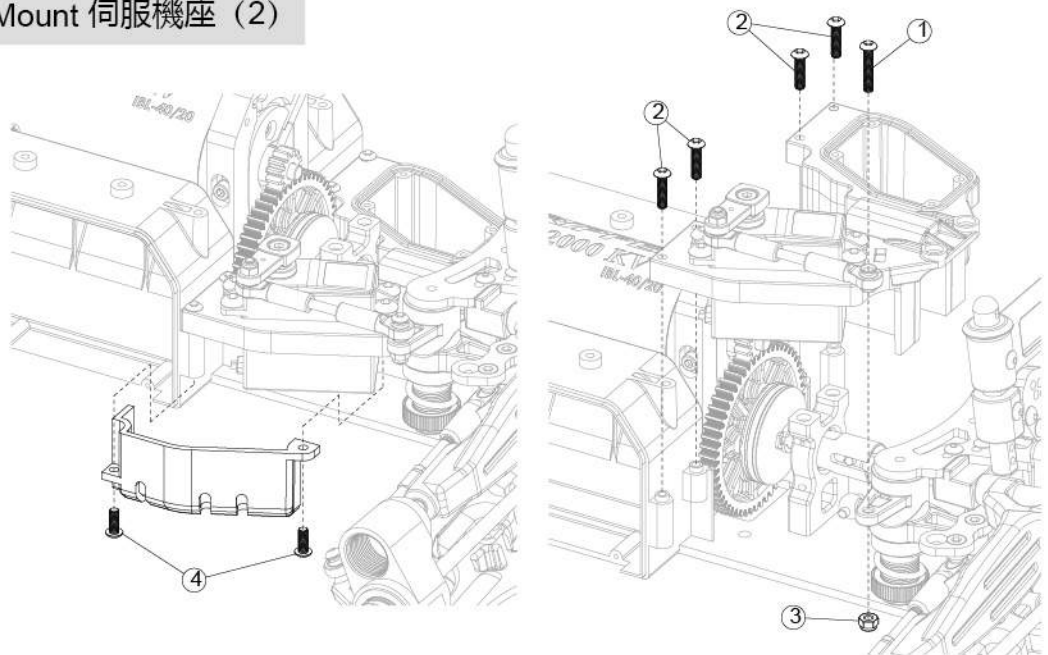

STEP30 Receiver 接收機

- ① 2.5 x 10 mm
SHCS Screw
平頭內六角螺絲
- ② 2.5 x 10 mm
SHCS Screw
平頭內六角螺絲
- ③ 3 x 4 mm
Set Screw
無頭內六角螺絲

Use double-sided tape.
使用標準雙面膠帶黏貼。

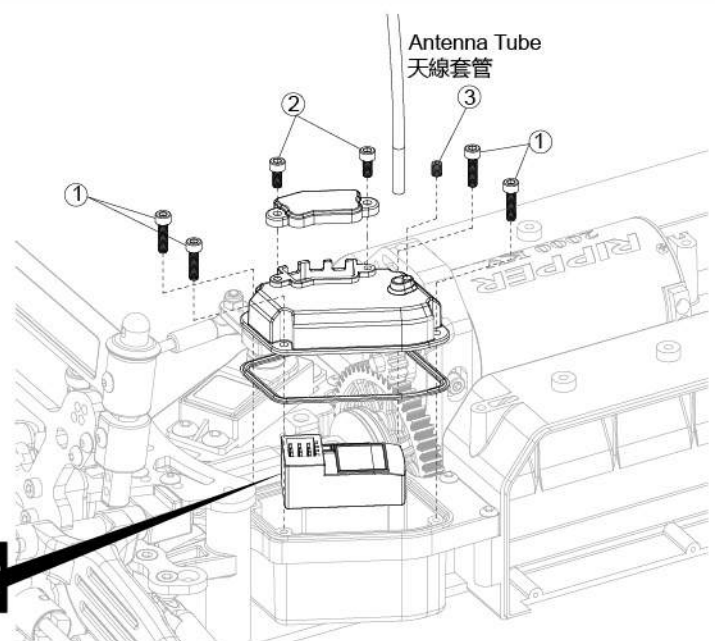


Antenna Tube
天線套管

STEP31 Spur Gear Cover 主齒輪罩




- ① 3 x 10 mm
SHCS Screw
內六角螺絲

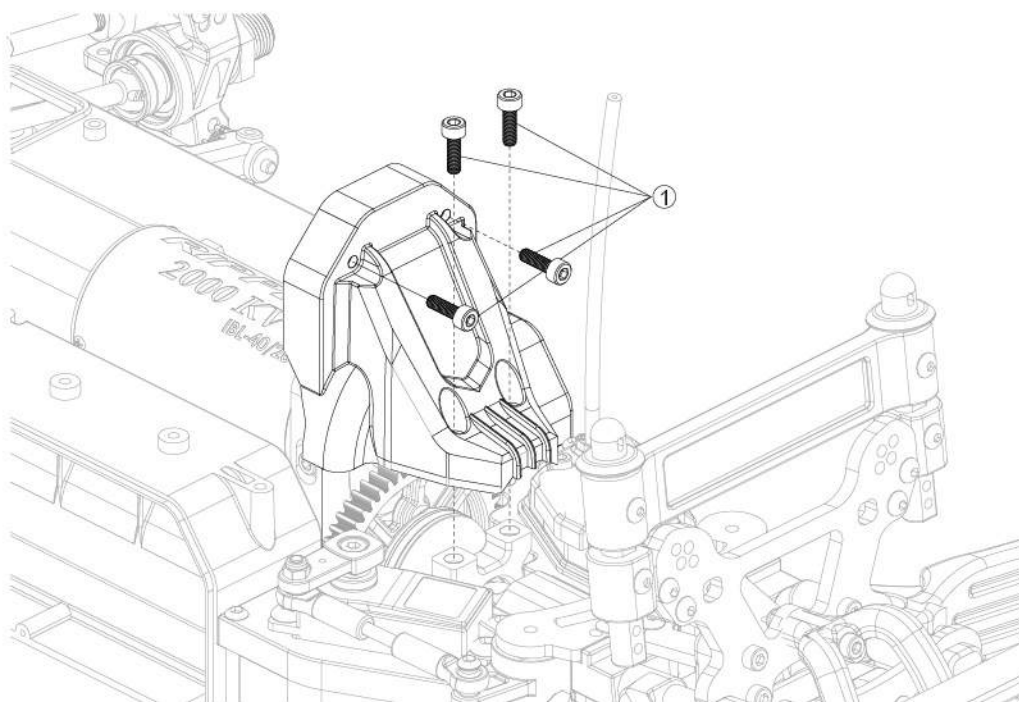

STEP32 Dust Cover 防塵蓋








- ① 3 x 10 mm
FHCS Screw
平頭內六角螺絲

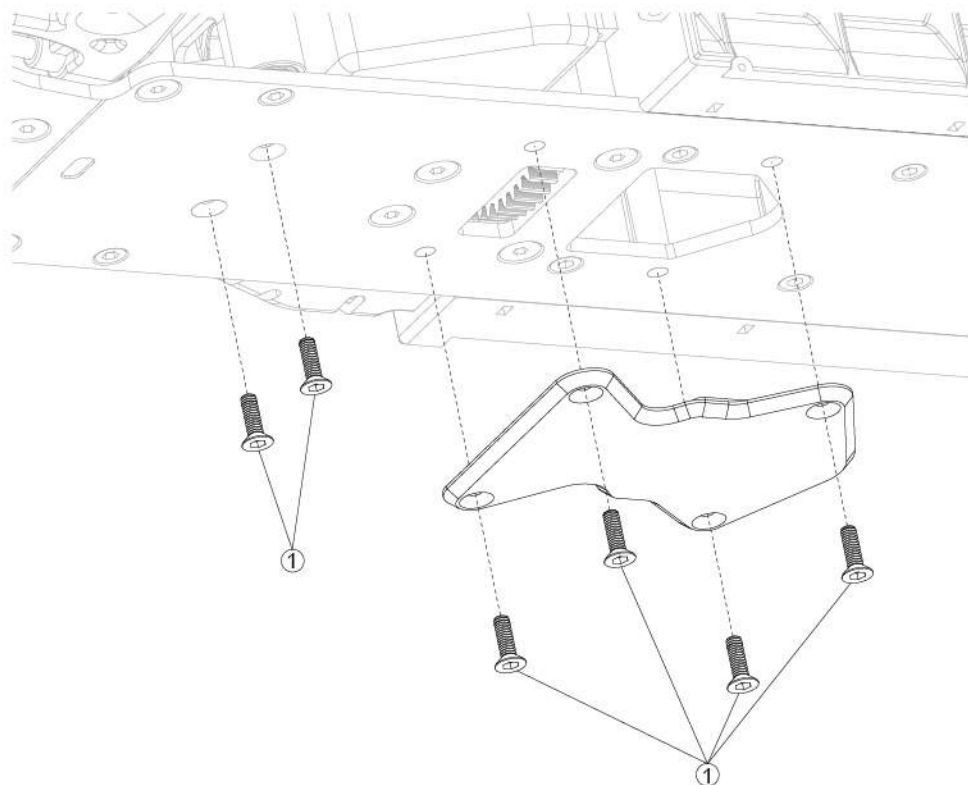

STEP33 Shock Assembly 避震組


-  1
- ① M2.5 Lock Nut
止鬆螺帽
-  1
- ② 2.6 x 6 x 0.5 mm
Washer
墊圈
-  2
- ③ 3.4 x 1.5 mm
O-ring
O型環

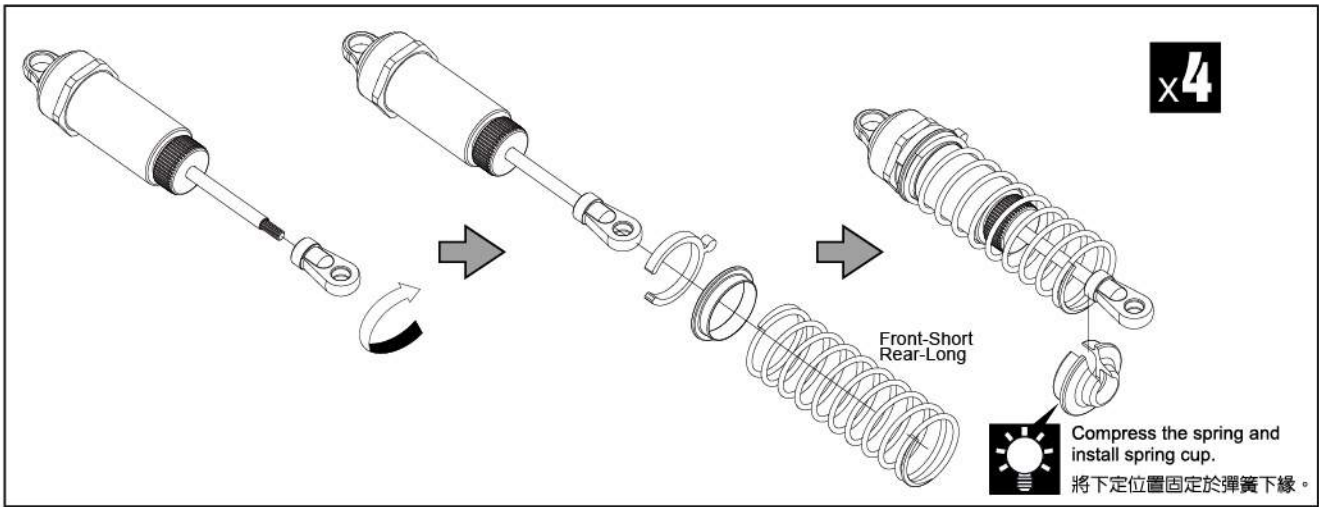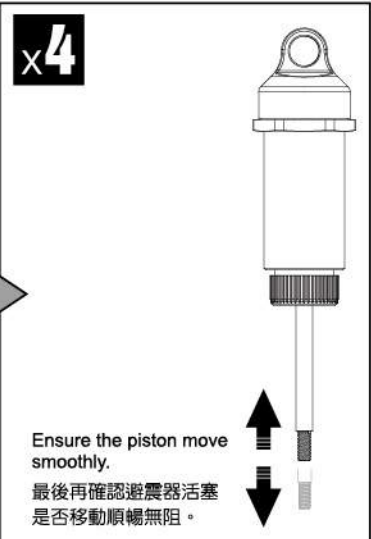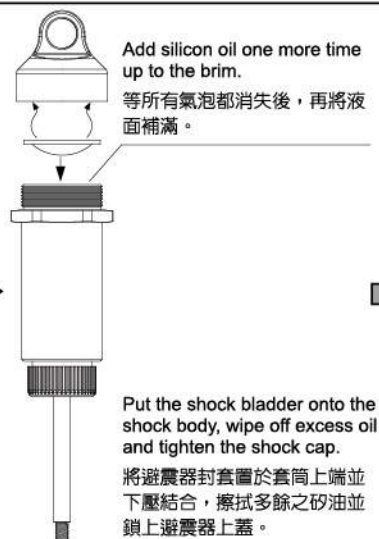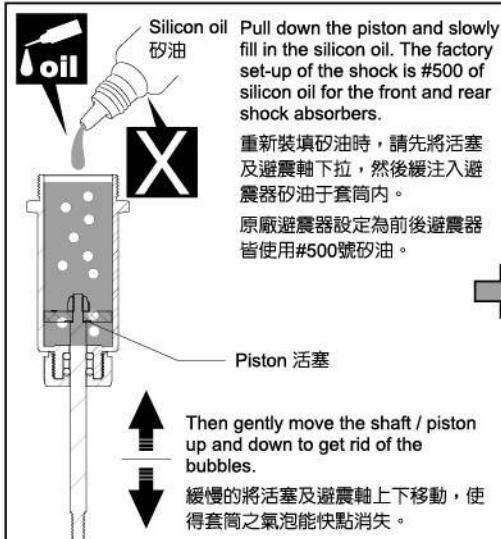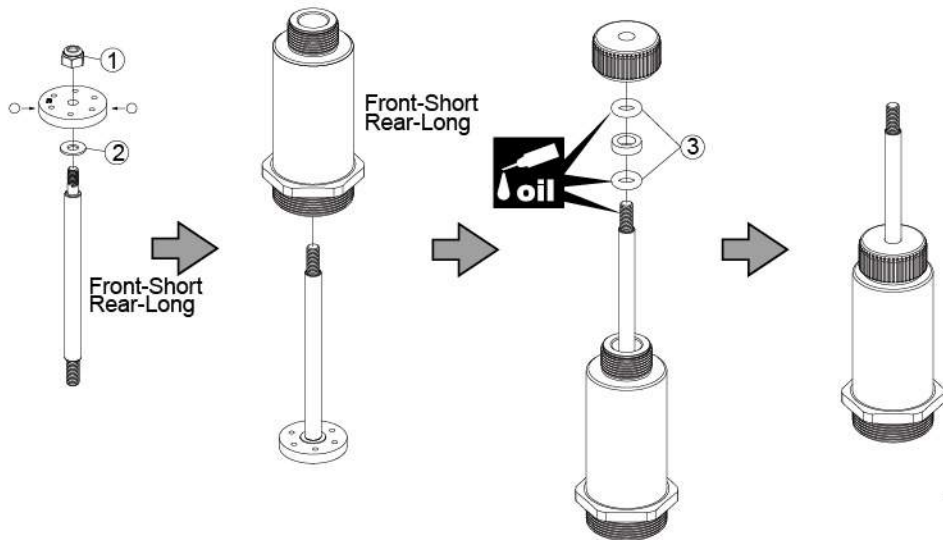


x4 Assemble as many times as specified
依指示組裝所需數量



STEP34 Front Shock Assembly 前避震組



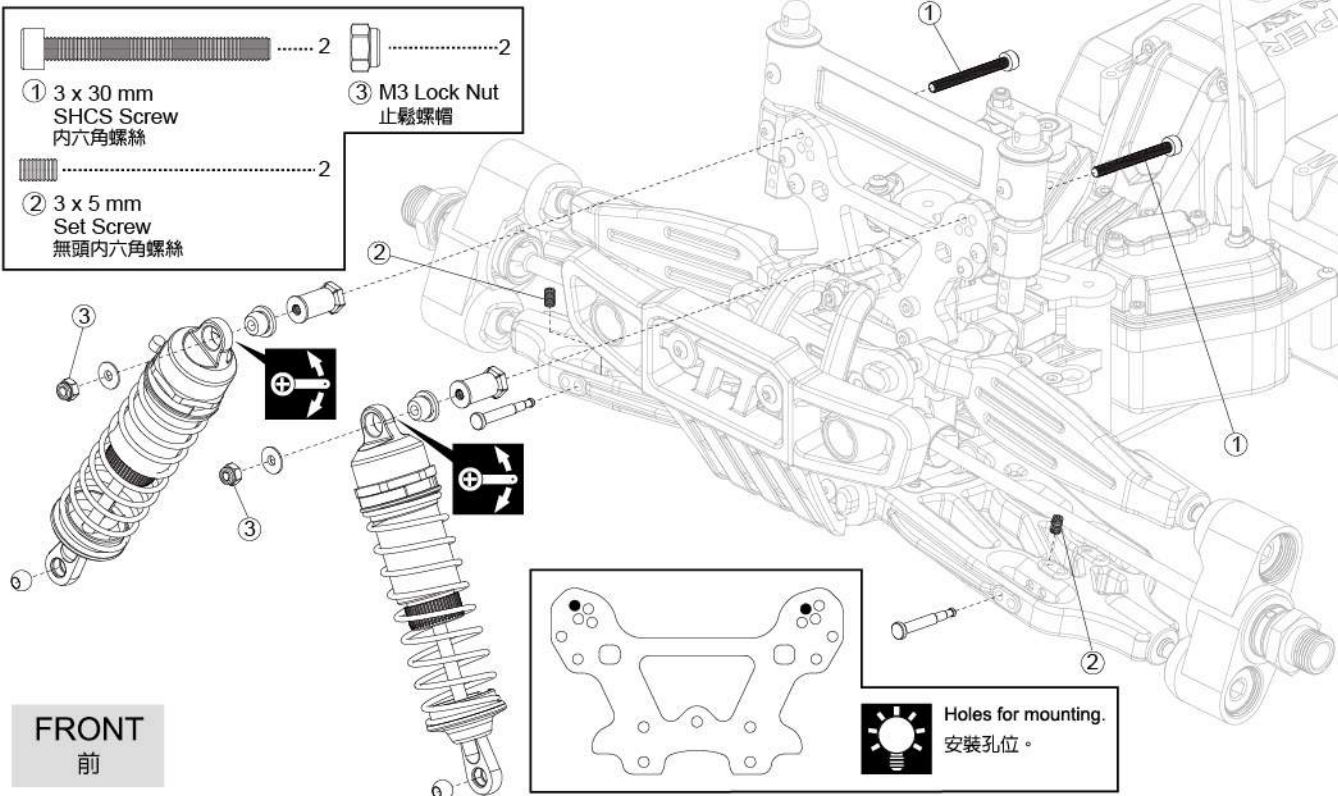



STEP35 Rear Shock Assembly 後避震組

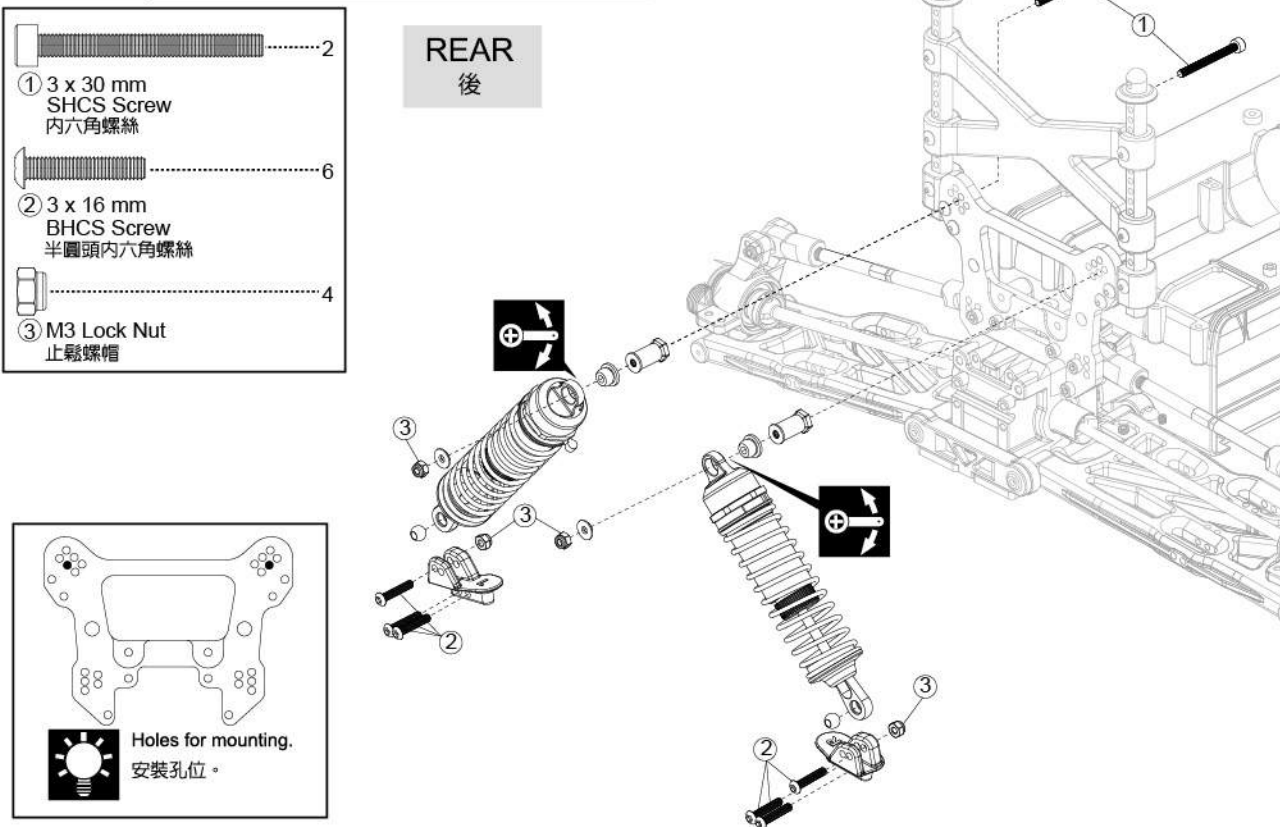

Ensure smooth, non-binding movement when assembling
確認組件靈活度

   
STEP36 Rod 補強桿 (1)

-  4
① 3 x 14 mm
BHCS Screw
半圓頭內六角螺絲
-  4
② 3 x 8 mm
BHCS Screw
半圓頭內六角螺絲
-  4
③ 2.5 x 14 mm
FHCS Screw
平頭內六角螺絲
-  4
④ 3 x 8 mm
FHCS Screw
平頭內六角螺絲

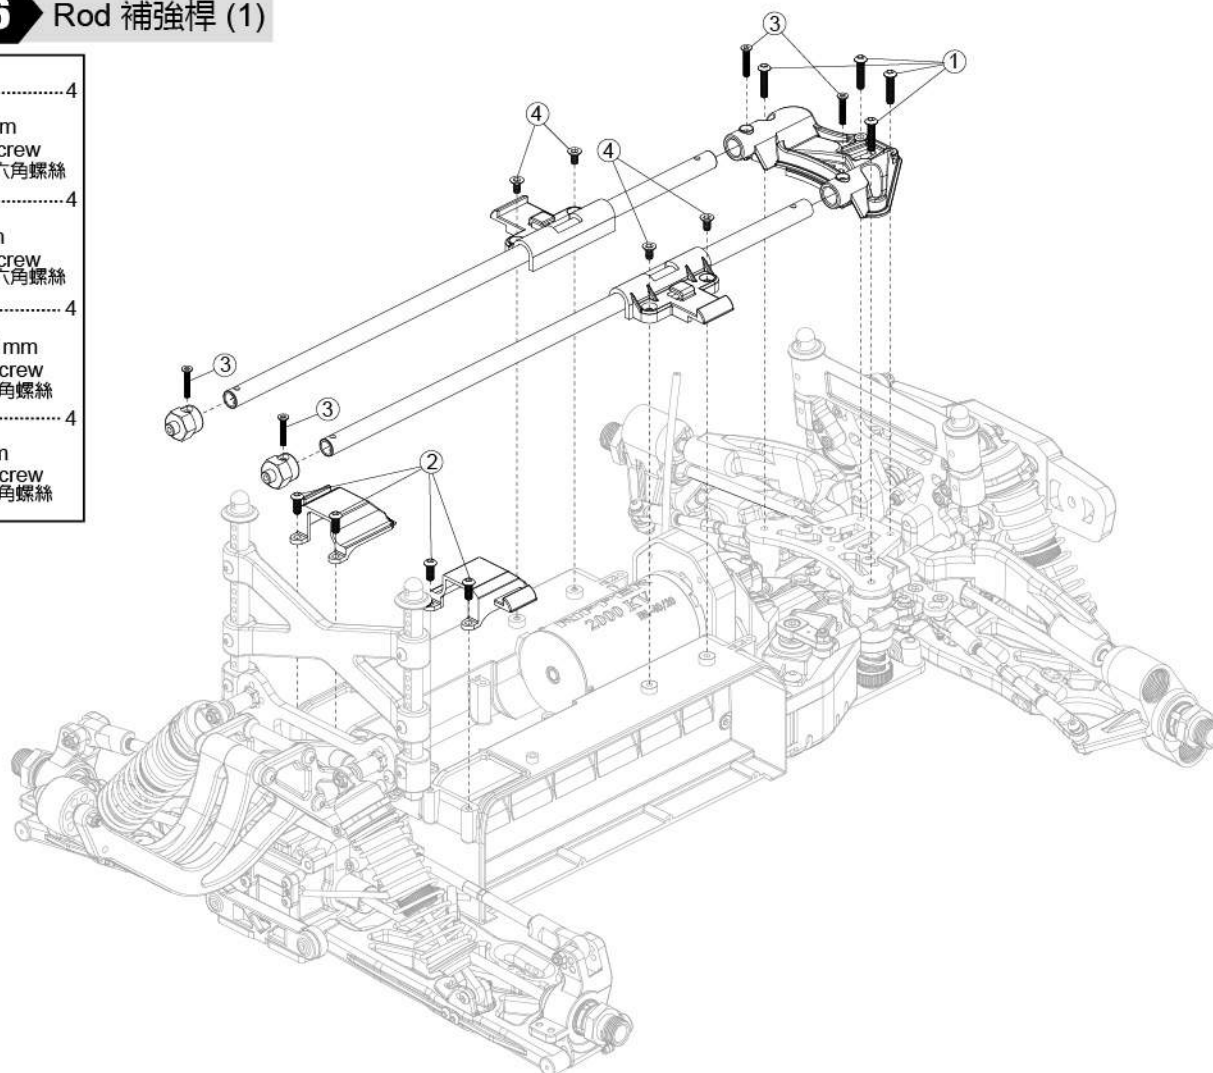

STEP37 Rod 補強桿 (2)

-  2
① 3 x 10 mm
SHCS Screw
內六角螺絲

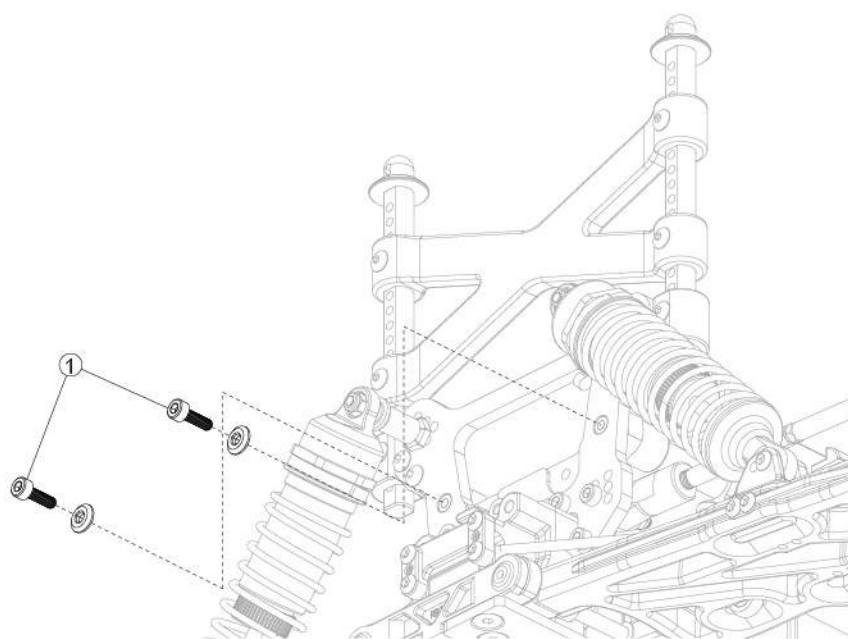


STEP38 ESC 速控器

.....2

- ① 3 x 8 mm
BHCS Screw
半圓頭內六角螺絲

Use double-sided tape.



使用標準雙面膠帶黏貼。

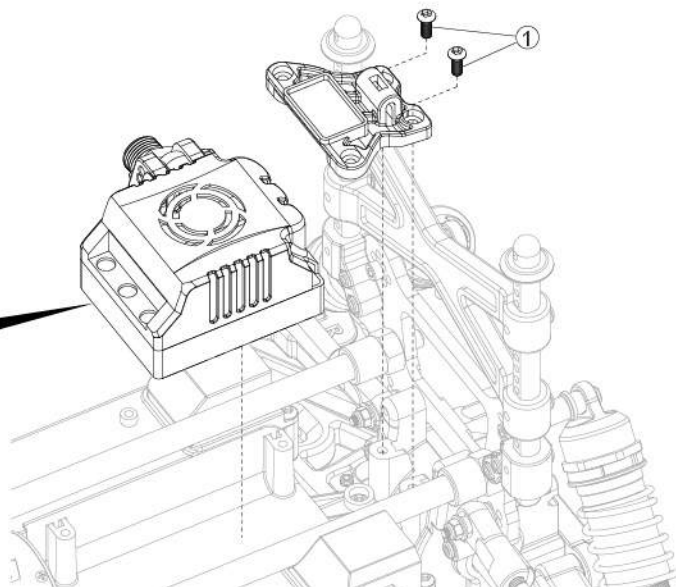

STEP39 Battery Cover 電池盒(3)

.....4

- ① 2 x 8 mm
SHCS Screw
內六角螺絲

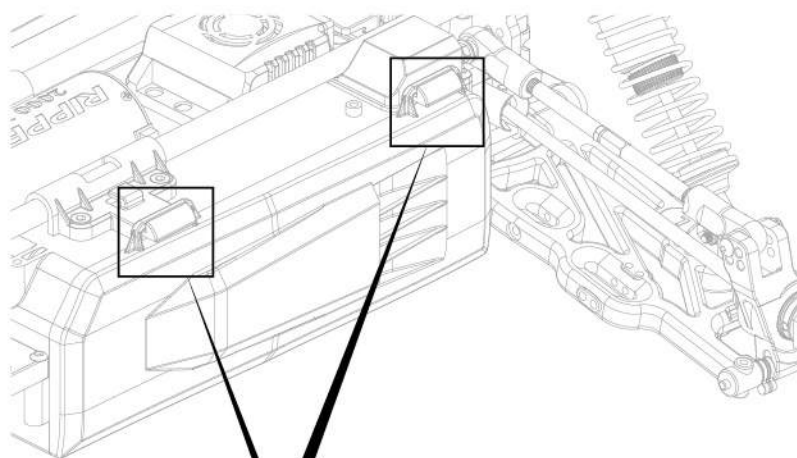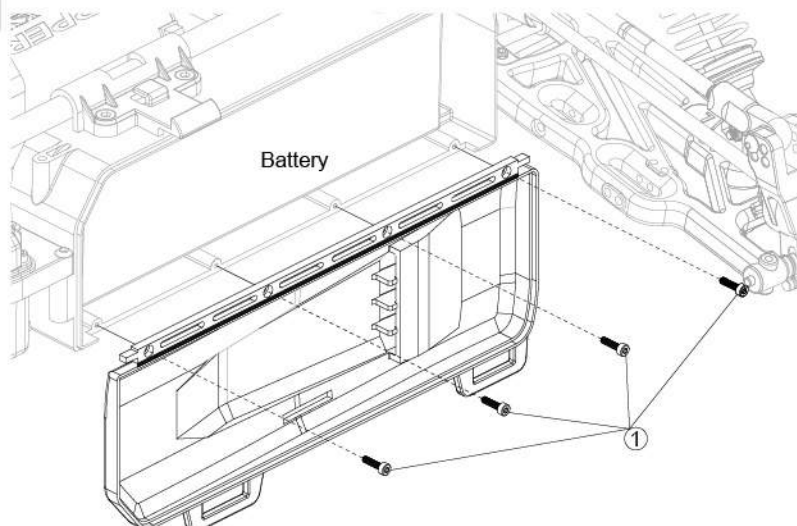

Reverse the battery cover pressed into fixed
翻轉電池蓋壓入倒扣固定



Pay attention
組裝注意



Assemble left and right side the same way
左右側組件相同



Hint
組裝提示

STEP40 Engine Sound Box 發聲器






- ① 3 x 10 mm
FHCS Screw
平頭內六角螺絲




- ② 3 x 10 mm
BHCS Screw
半圓頭內六角螺絲

Use double-sided tape.
使用標準雙面膠帶黏貼。

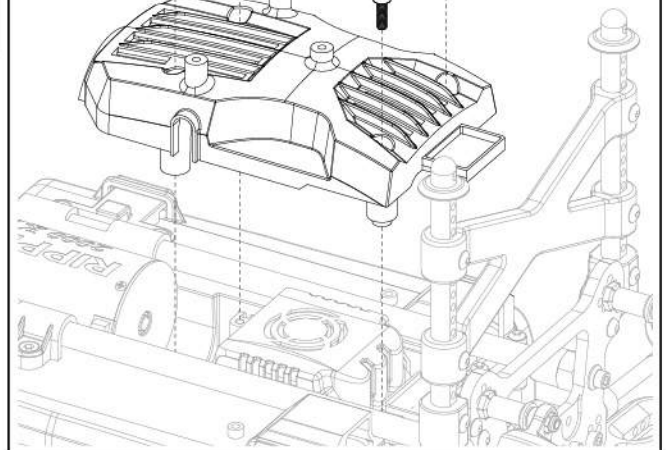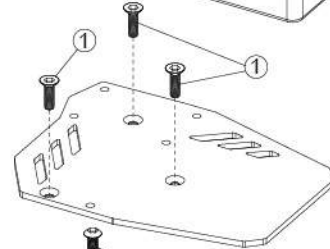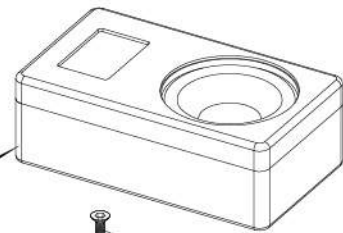






 
STEP41 Body 車殼



- ① 3 x 12 mm
SHCS Screw
內六角螺絲



- ② 2.5 x 8 mm
BHCS Screw
半圓頭內六角螺絲

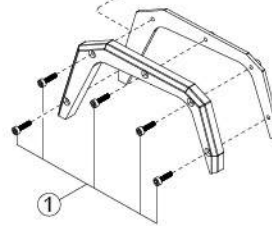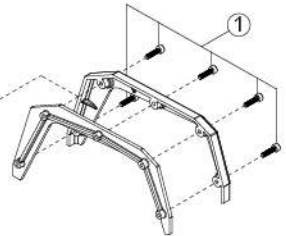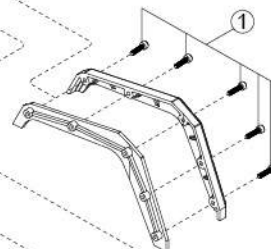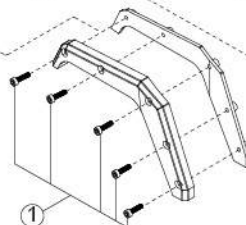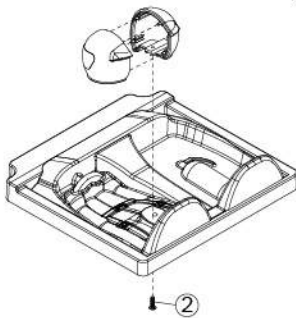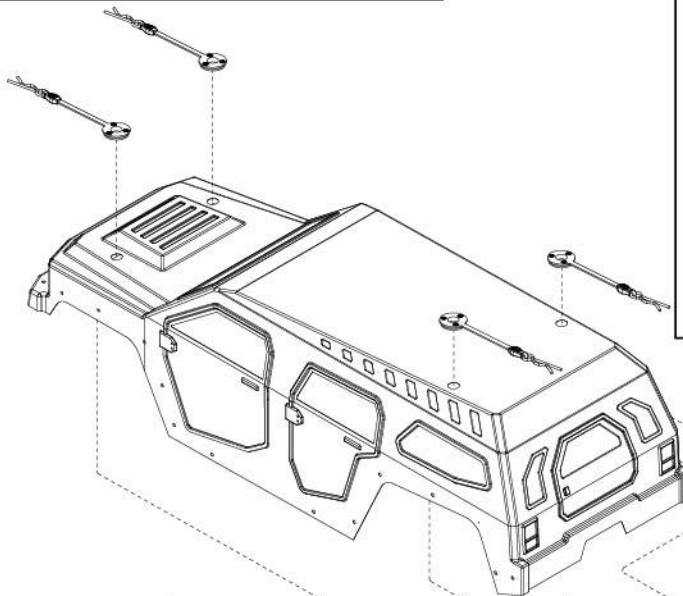


Hint
組裝提示

STEP42 Roof Light Assembly 燈座


X Lamp & wire not included
不含燈與線材

- ① 3 x 16 mm
SHCS Screw
內六角螺絲
- ② 2.5 x 6 mm
SHCS Screw
內六角螺絲

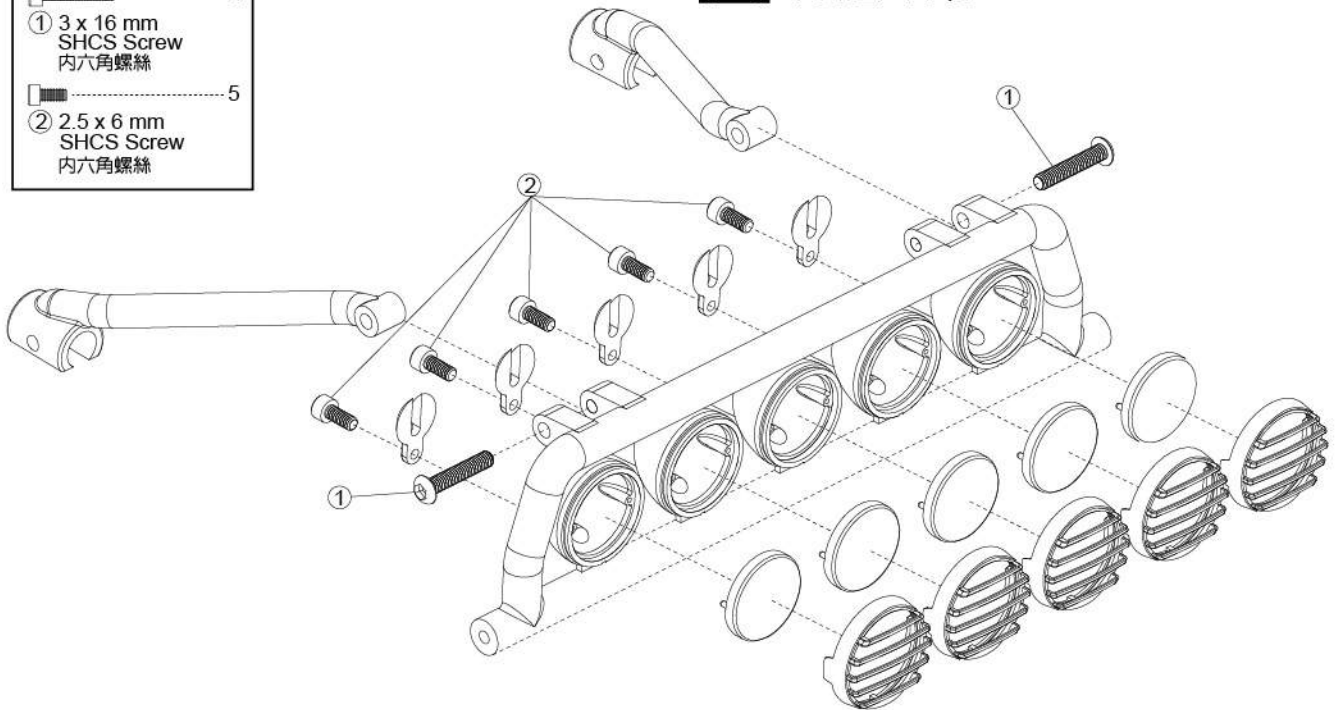

STEP43 Roll Cage 護欄 (1)


- ① 3 x 10 mm
BHCS Screw
半圓頭內六角螺絲
- ② 3 x 8 mm
BHCS Screw
半圓頭內六角螺絲

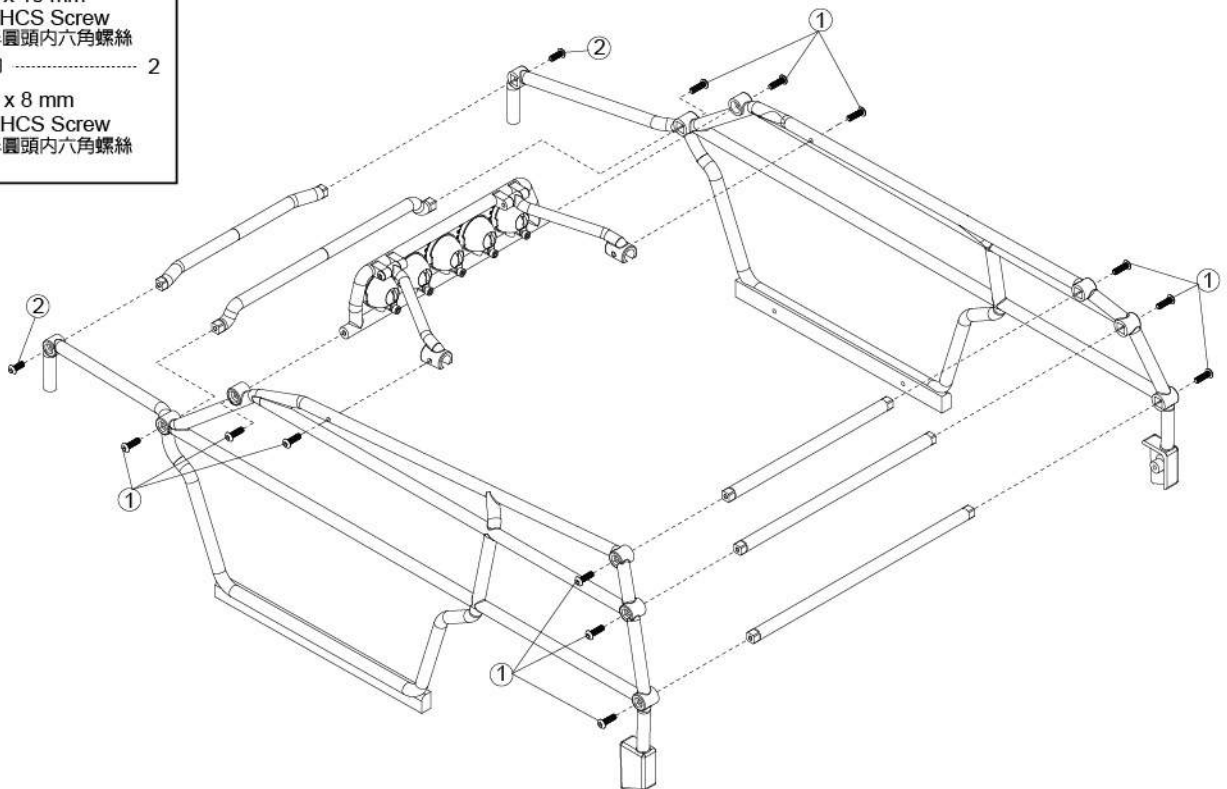

X Must be purchased
separately
改裝品需另購


STEP44 Roll Cage 護欄 (2)

- ① 3 x 6 mm
BHCS Screw
半圓頭內六角螺絲

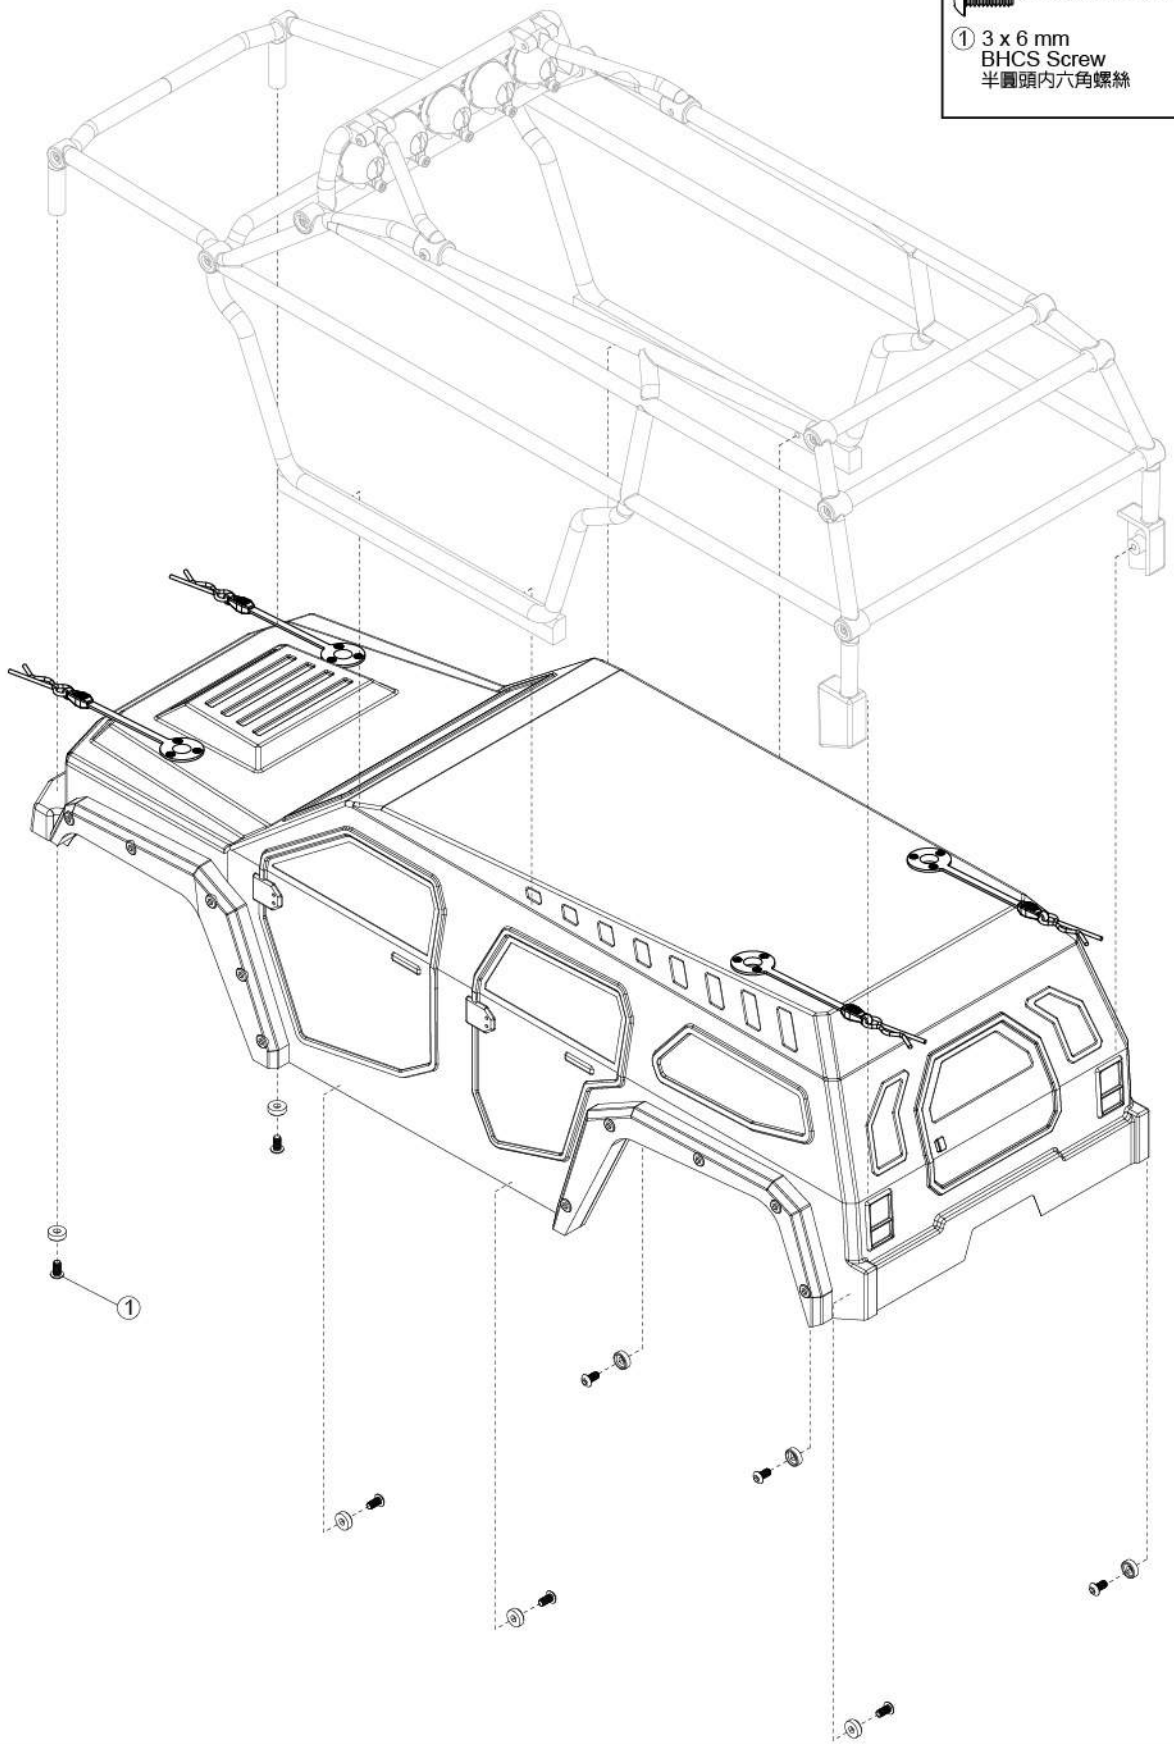

STEP45 Tires & Wheels 輪胎與輪轂 (1)

..... 3
① 2.5 x 6 mm
BHCS Screw
半圓頭內六角螺絲

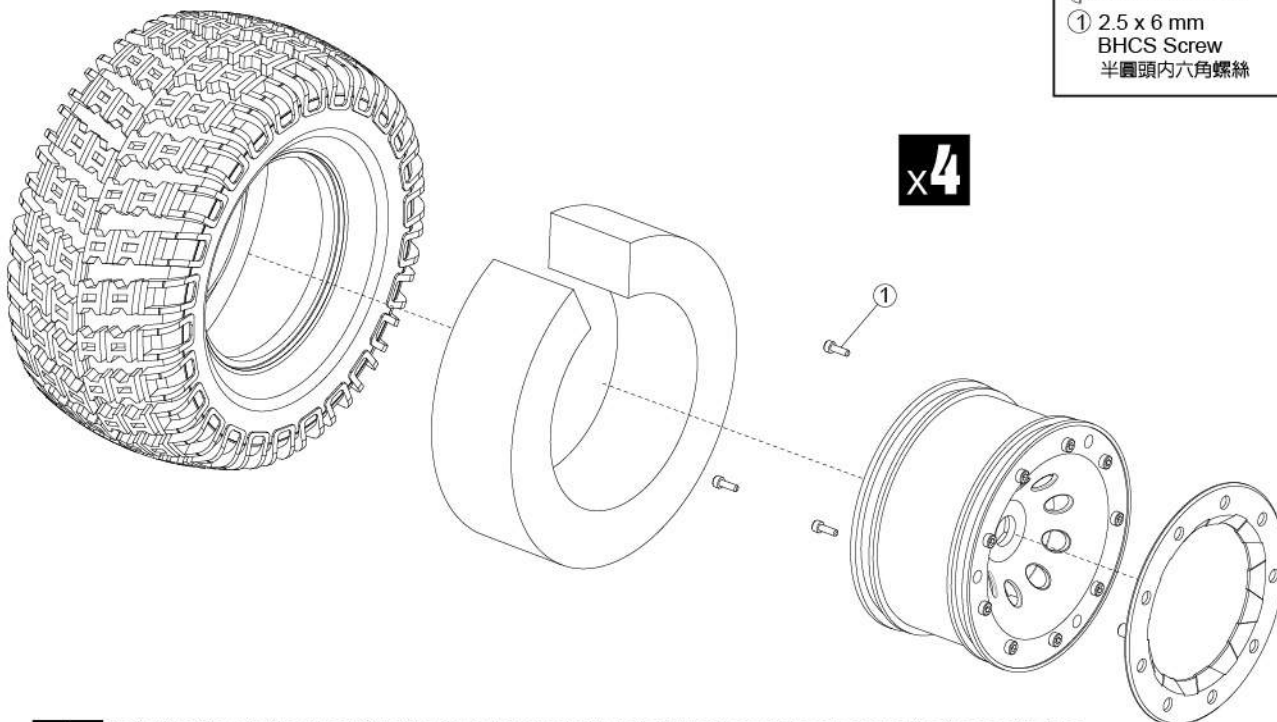


Install the tire onto the wheel. Glue the tire to the wheel with instant glue in several spots around the tire on both sides.

將輪胎（含內襯）與輪轂結合並在胎緣內側點上快乾膠黏合。

Warning: Follow the adhesive instructions for proper use and safety. Wear eye and hand protection.

注意!!! 使用快乾膠時請注意安全，最好戴手套及護目鏡以避免危險。

STEP46 Tires & Wheels 輪胎與輪轂 (2)

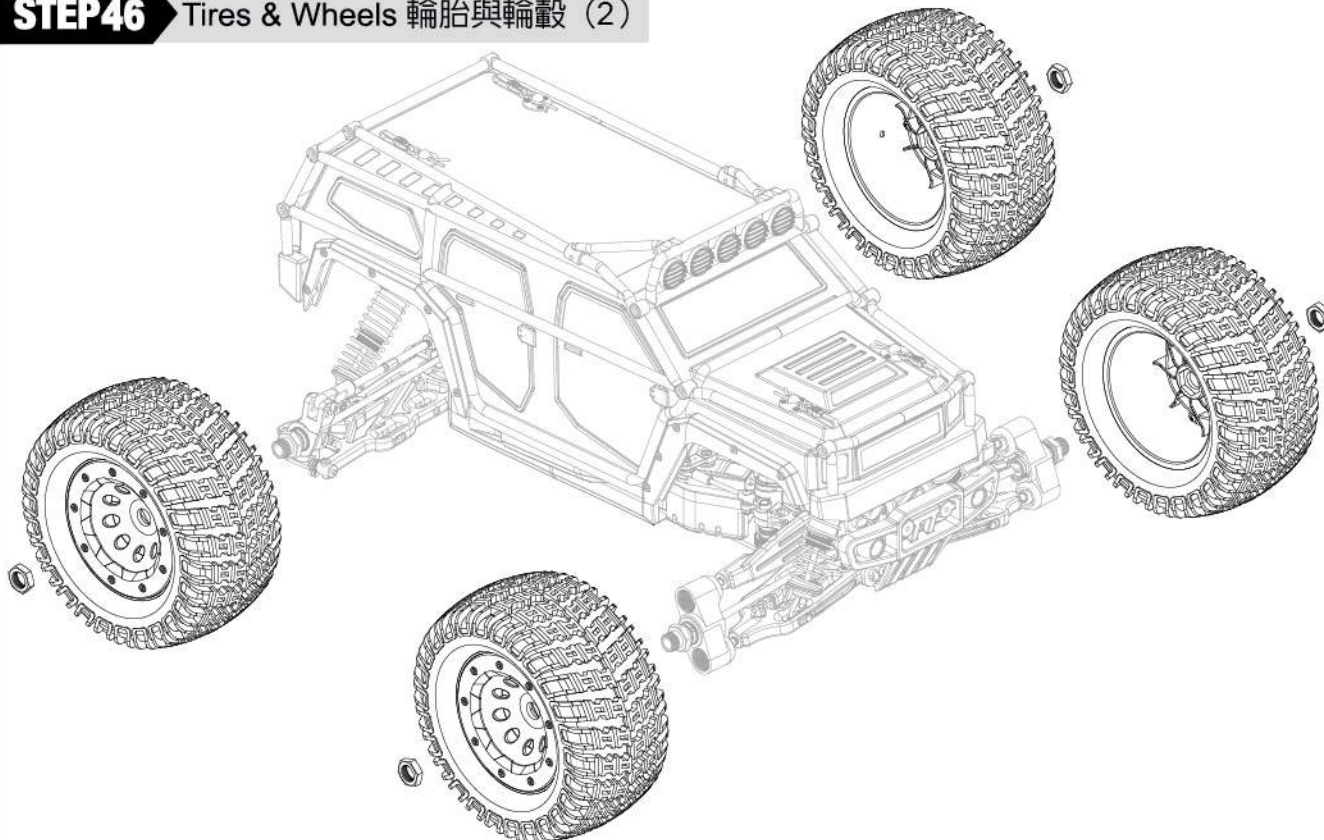

x4


Assemble as many times as specified
依指示組裝所需數量



Hint
組裝提示


STEP47 Wheelie Bar 翹頭輔助輪 (1)

-  1
① 3 x 35 mm SHCS Screw
內六角螺絲
-  6
② 3 x 10 mm BHCS Screw
半圓頭內六角螺絲
-  2
③ 3 x 8 x 4 mm Bearing
軸承
-  6
④ 3.2 x 8 x 0.8 mm Washer
墊圈
-  1
⑤ M3 Lock Nut
止鬆螺帽

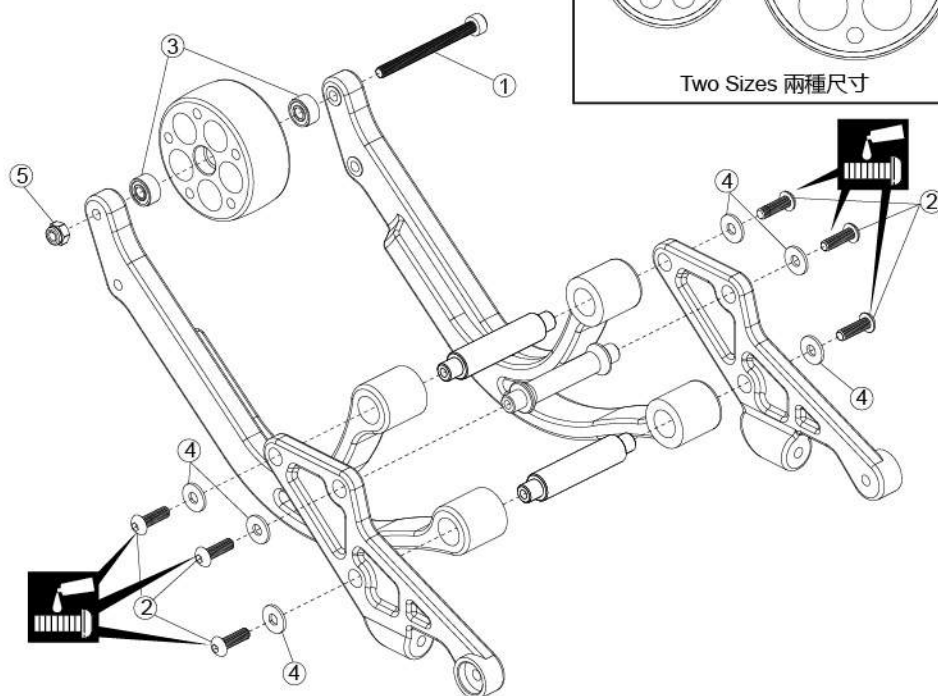

STEP48 Wheelie Bar 翹頭輔助輪 (2)

-  1
① 3 x 45 mm SHCS Screw
內六角螺絲
-  2
② 3 x 18 mm SHCS Screw
內六角螺絲
-  3
③ 3.2 x 8 x 0.8 mm Washer
墊圈
-  1
④ M3 Lock Nut
止鬆螺帽

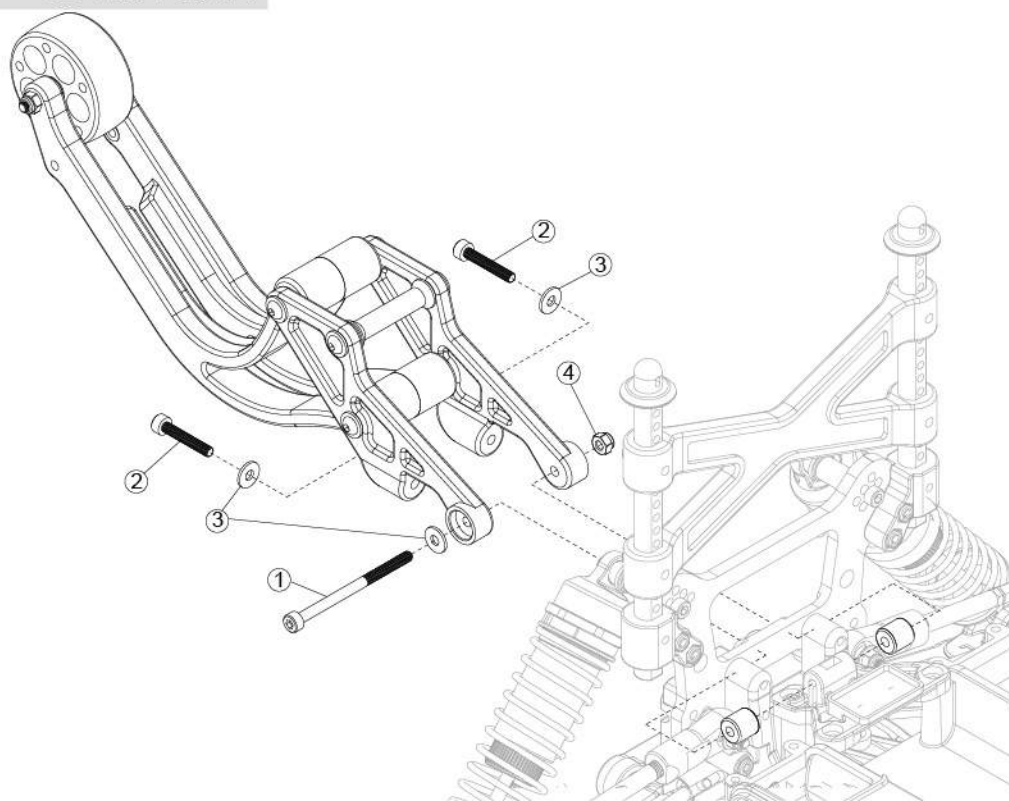

Apply threadlocker
使用螺絲防鬆膠

OPTIONAL PARTS

Front Sway Bar 前防傾桿 (選購零件)



- ① M3 x 16 mm
BHCS Screw
半圓頭內六角螺絲



- ② M3 x 10mm
BHCS Screw
半圓頭內六角螺絲







- ③ M3 x 3
無頭內六角螺絲



- ④ M3 x 5
無頭內六角螺絲



- ⑤ M3 x 15
無頭內六角螺絲

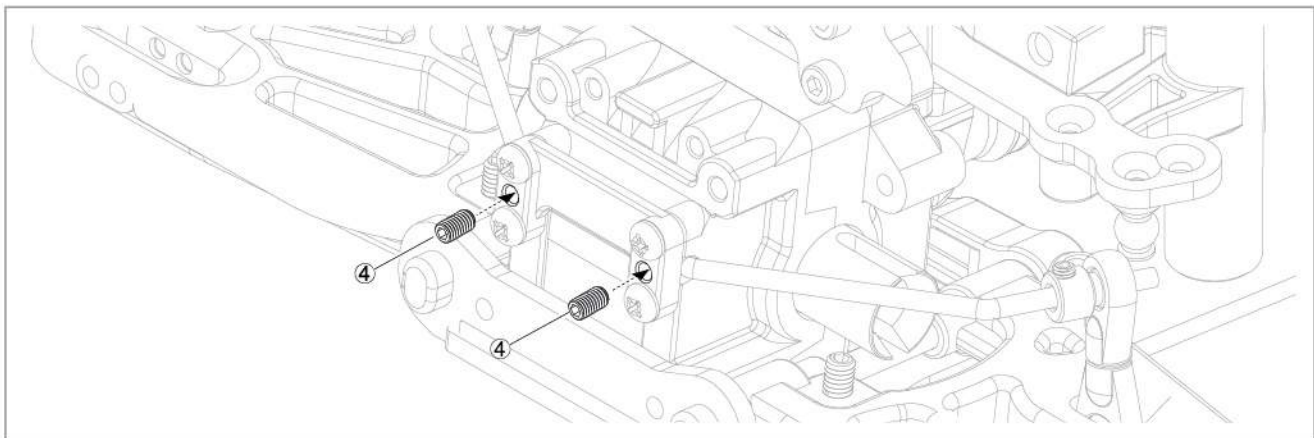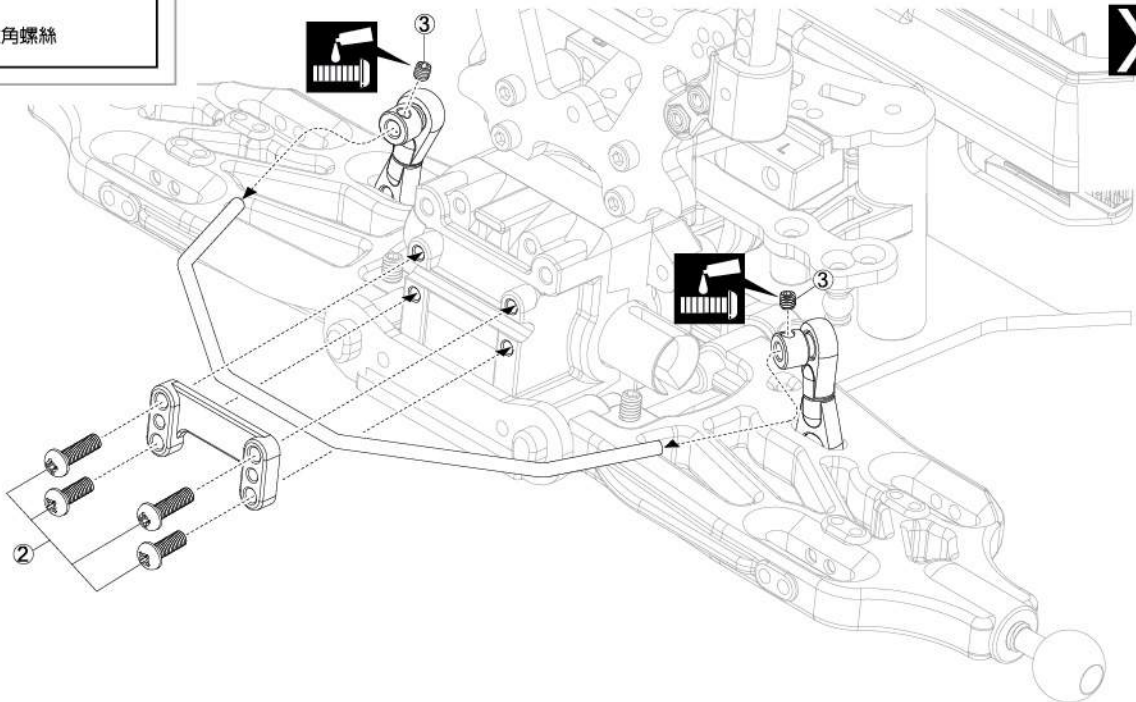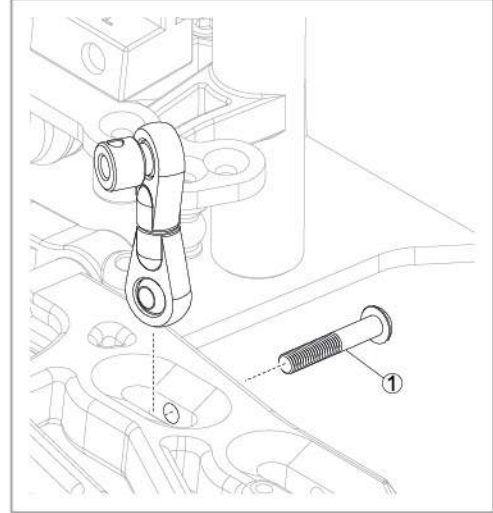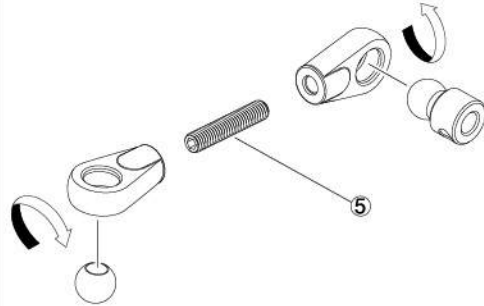

Apply threadlocker
使用螺絲防鬆膠



Must be purchased
separately
改裝品需另購

OPTIONAL PARTS

Rear Sway Bar 後防傾桿 (選購零件)



 
- ① M3 x 22 mm
BHCS Screw
半圓頭內六角螺絲



- ② M3 x 10mm
BHCS Screw
半圓頭內六角螺絲







- ③ M3 x 3
無頭內六角螺絲



- ④ M3 x 5
無頭內六角螺絲



- ⑤ M3 x 15
無頭內六角螺絲

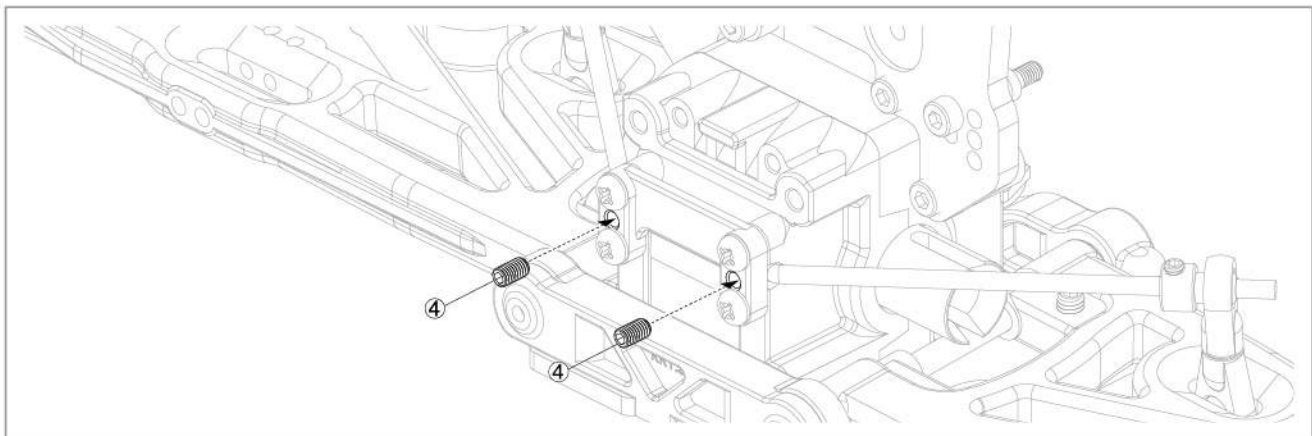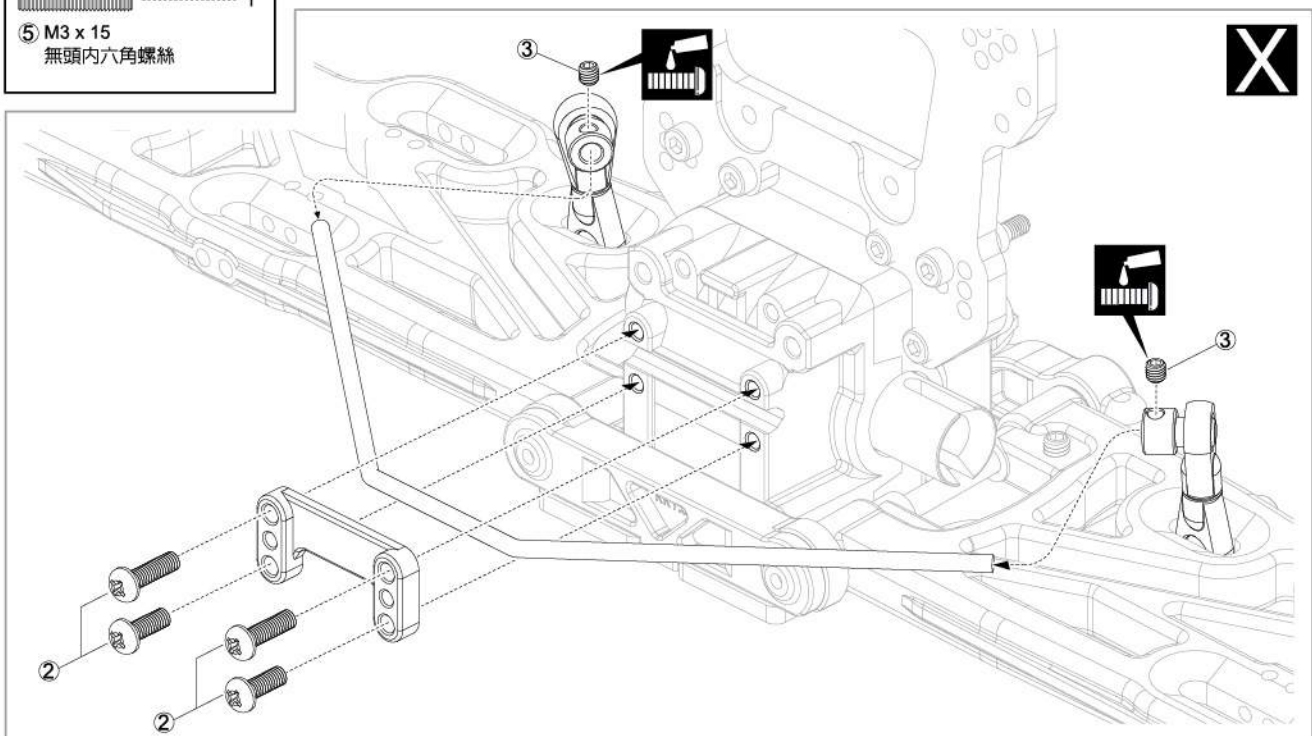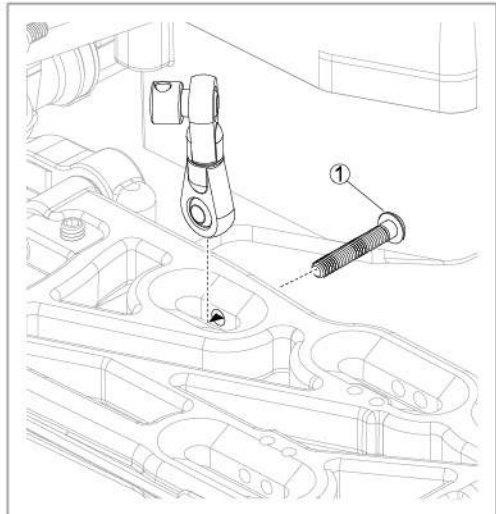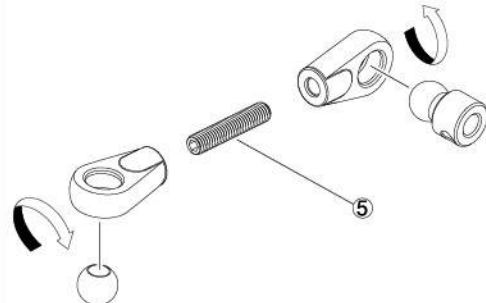


Apply threadlocker
使用螺絲防鬆膠



Must be purchased
separately
改裝品需另購


OPTIONAL PARTS

Lights Cover 車燈罩

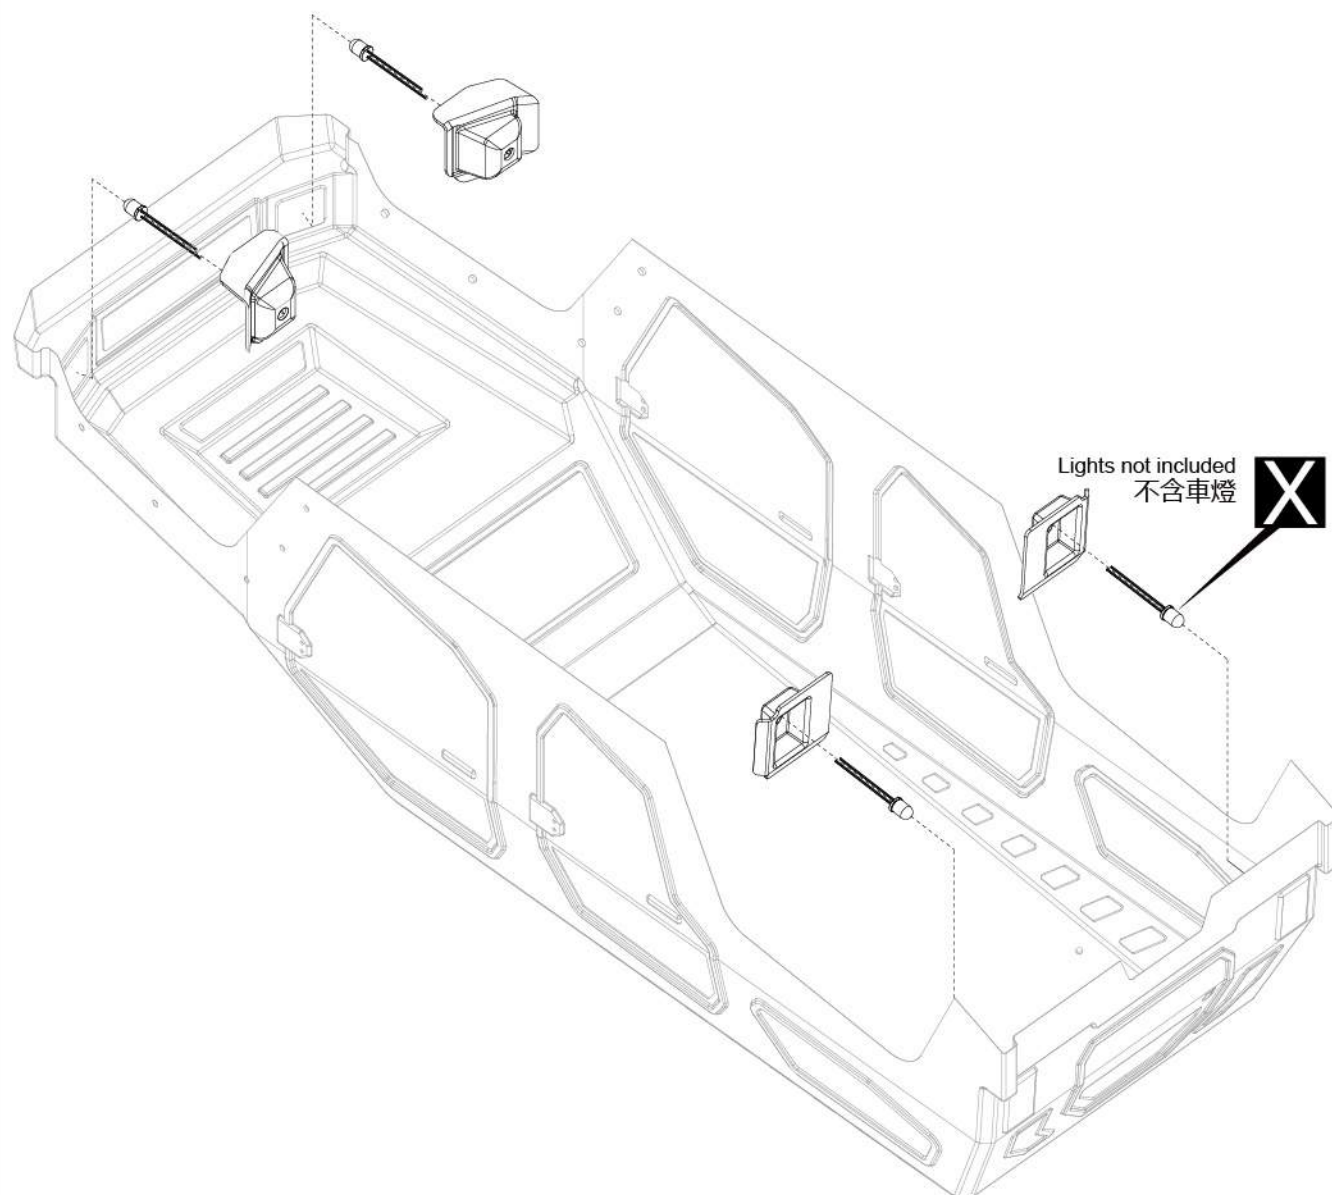


Must be purchased
separately
改裝品需另購

FR / RR DIFF. ASSEMBLY

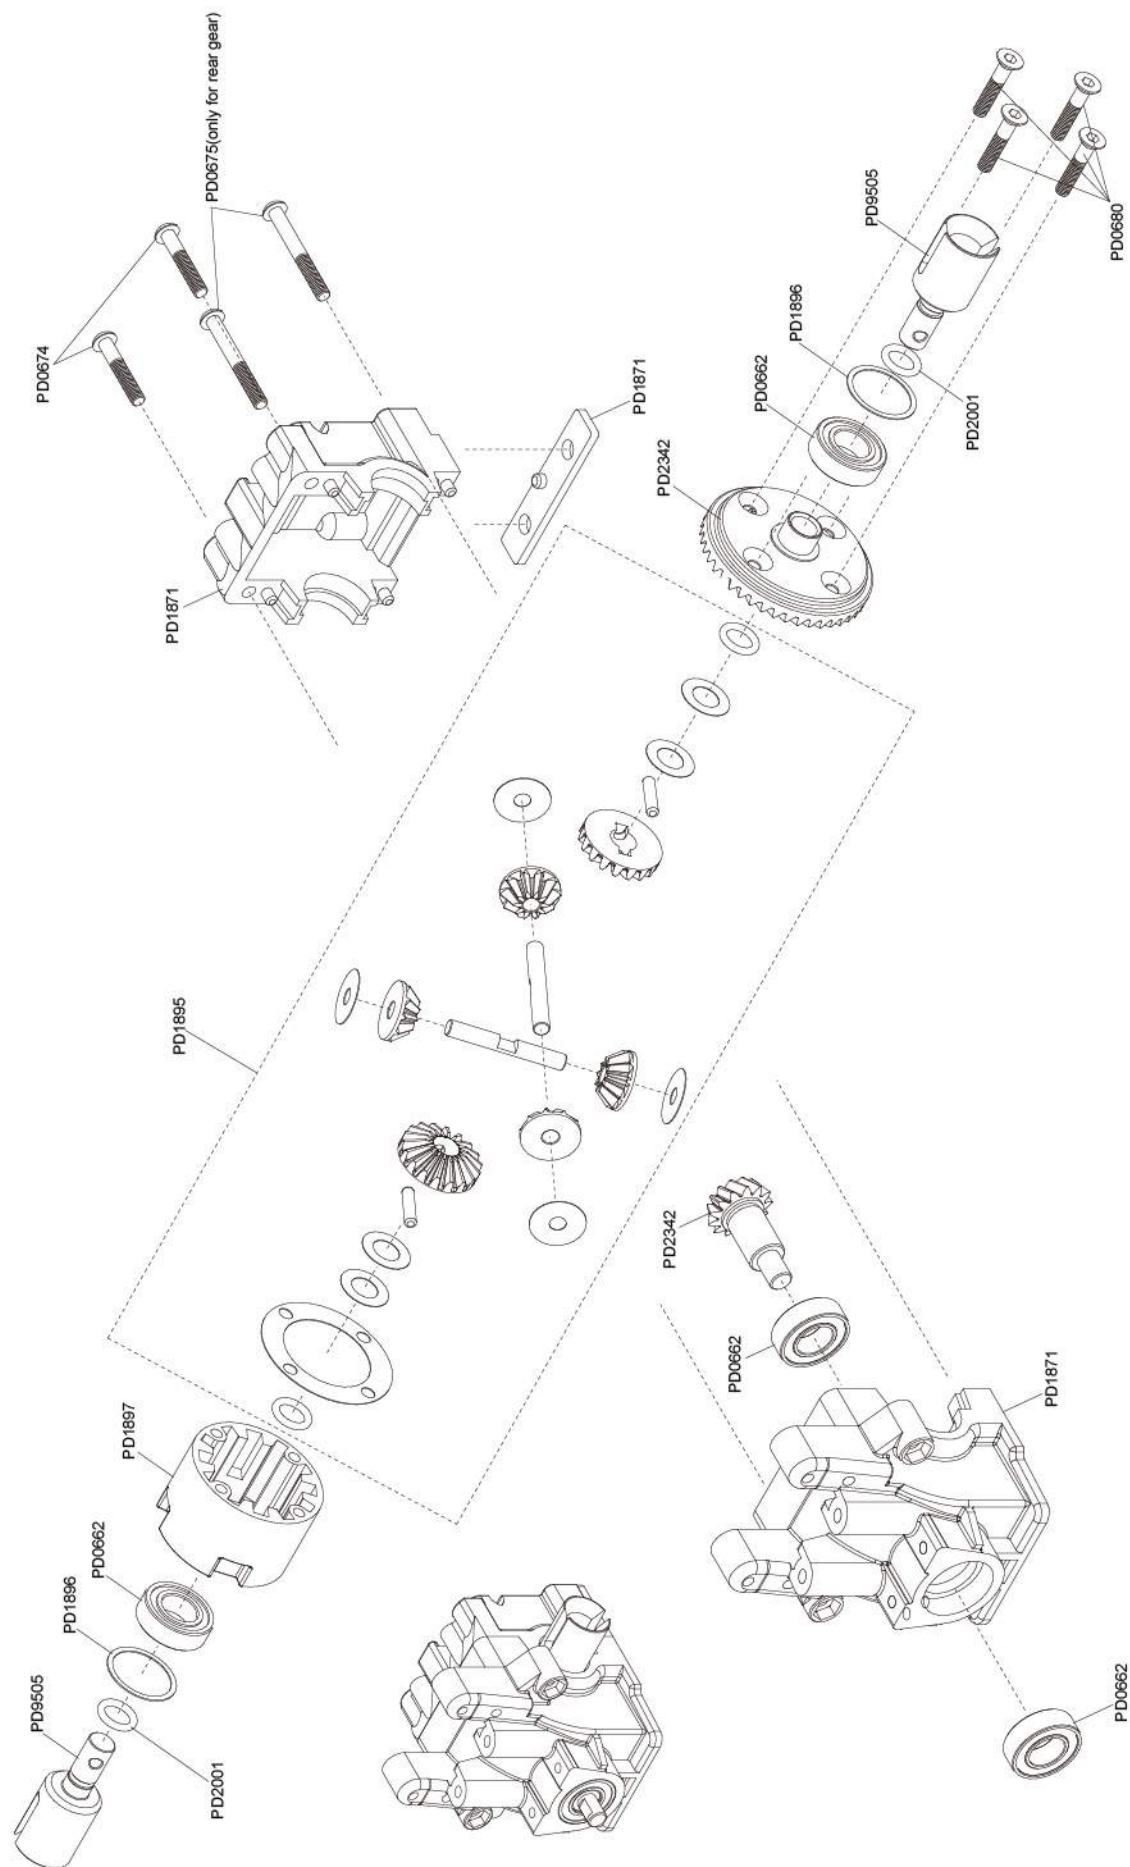


FRONT ASSEMBLY

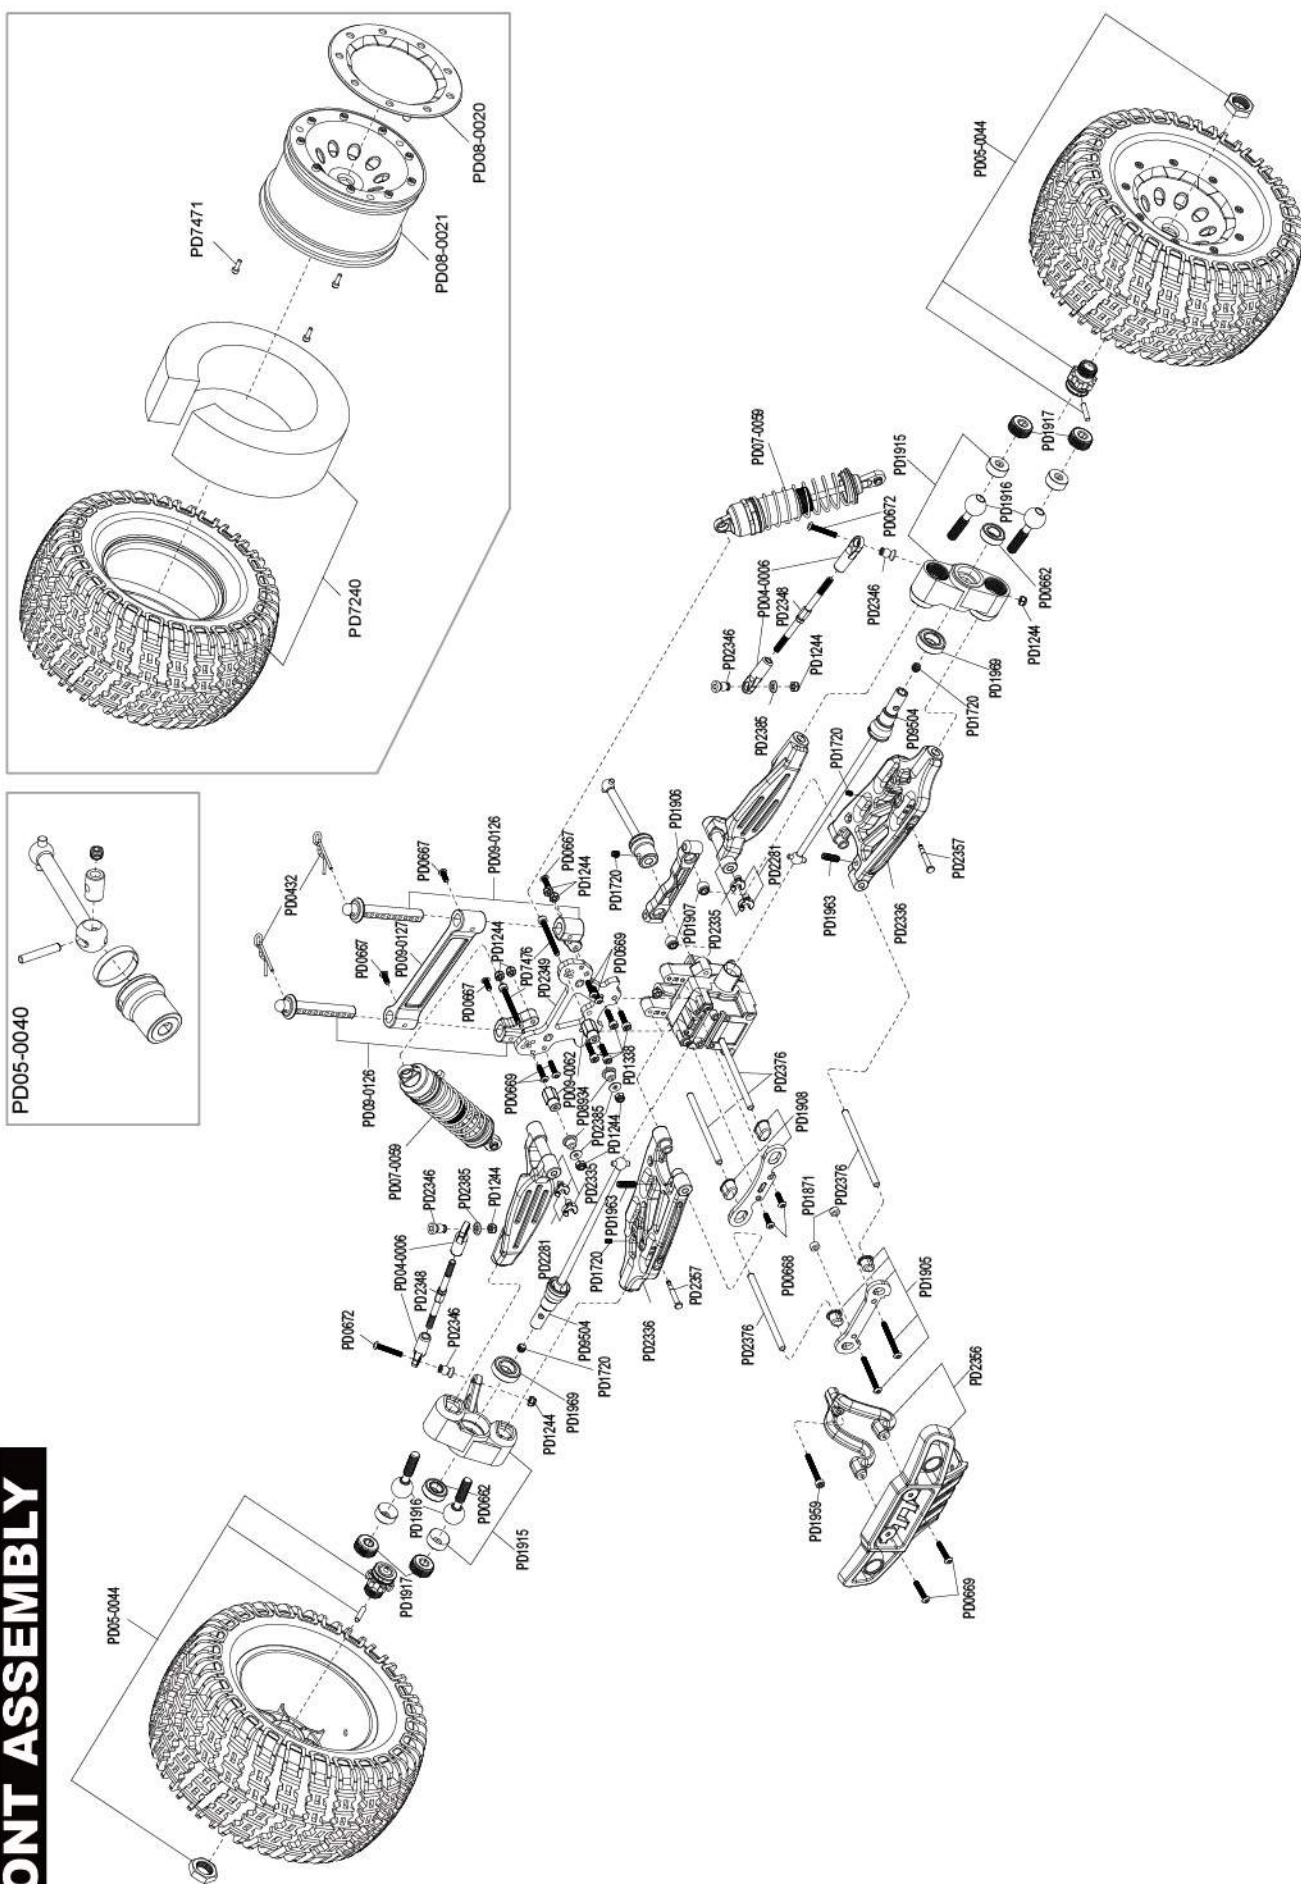


R ASSEMBLY

CHASSIS ASSEMBLY

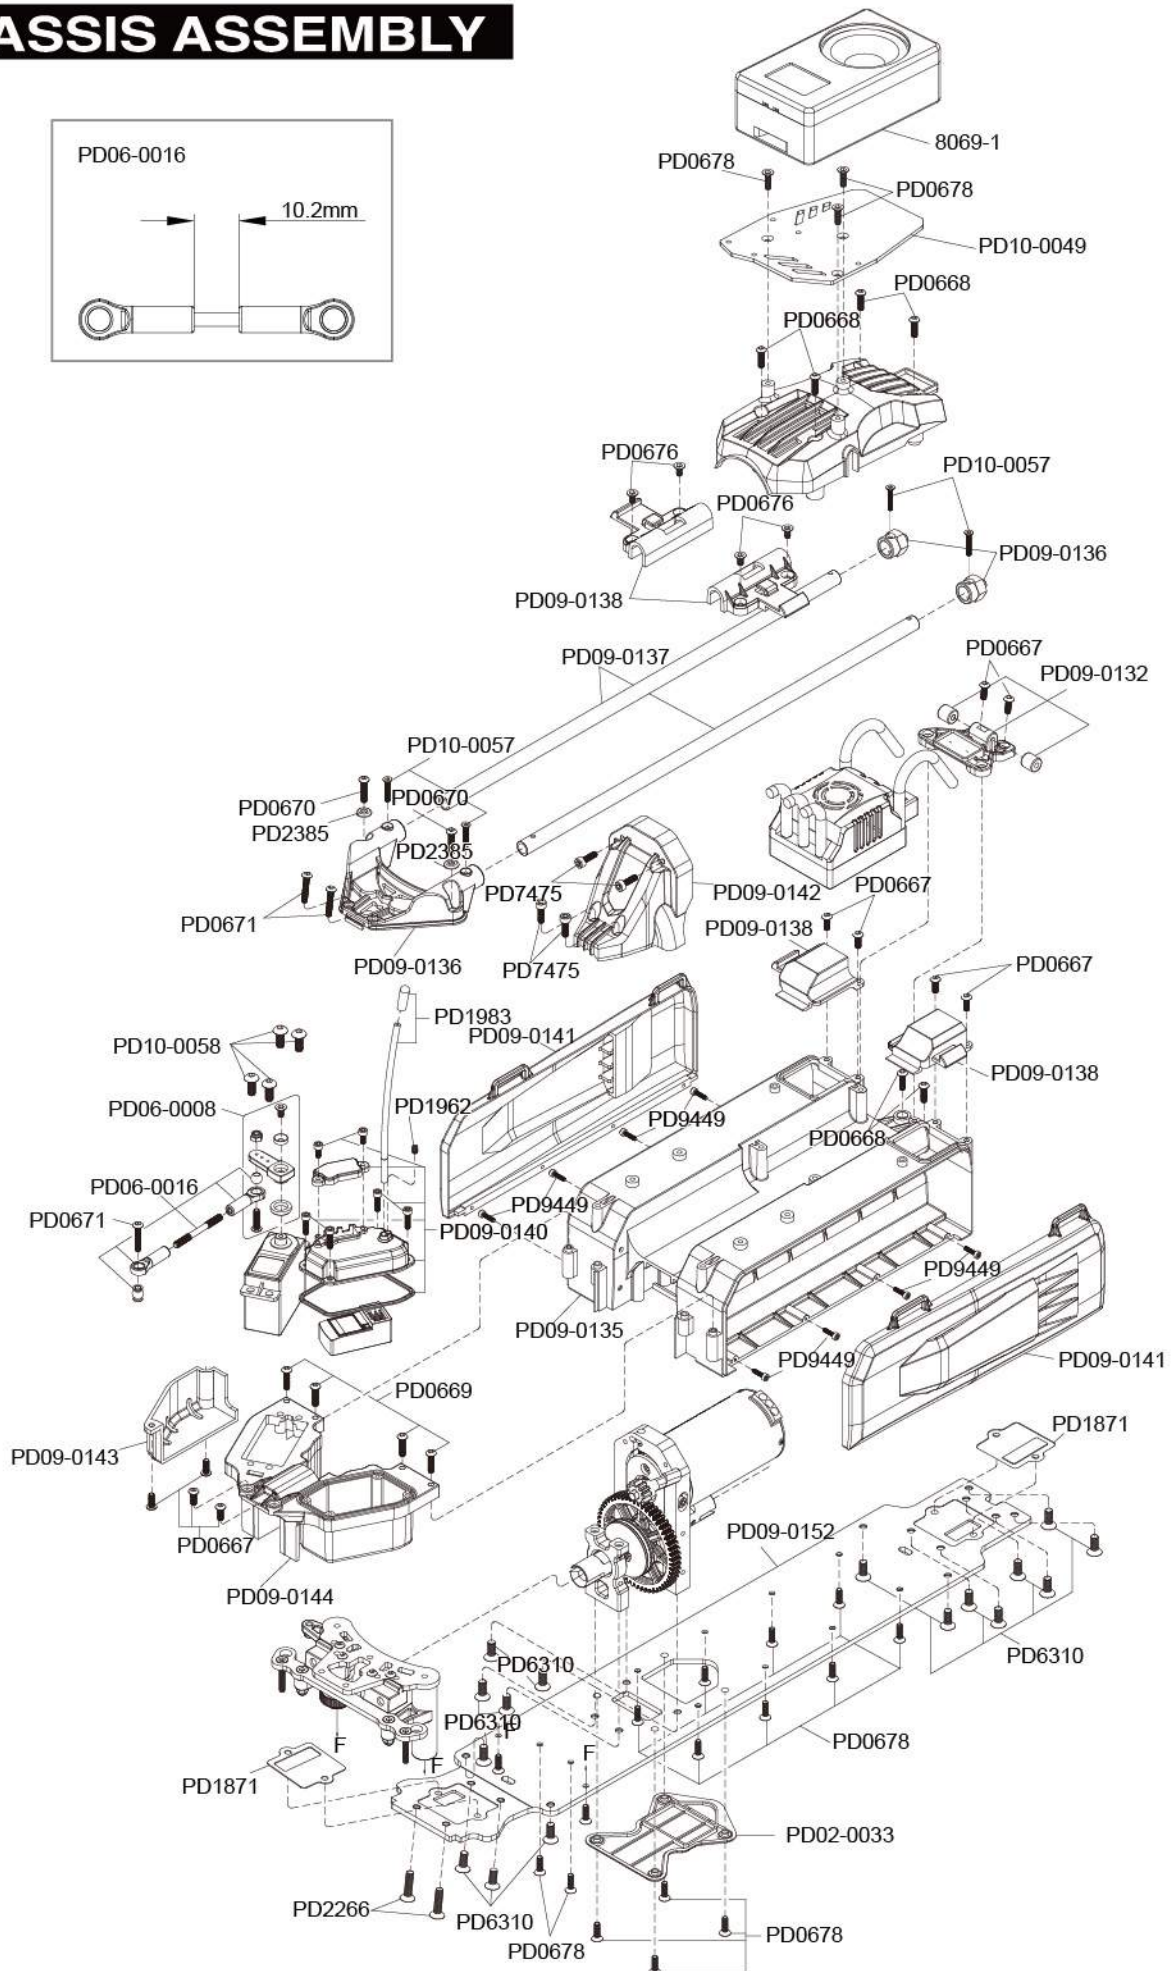

SLIPPER CLUTCH ASSEMBLY

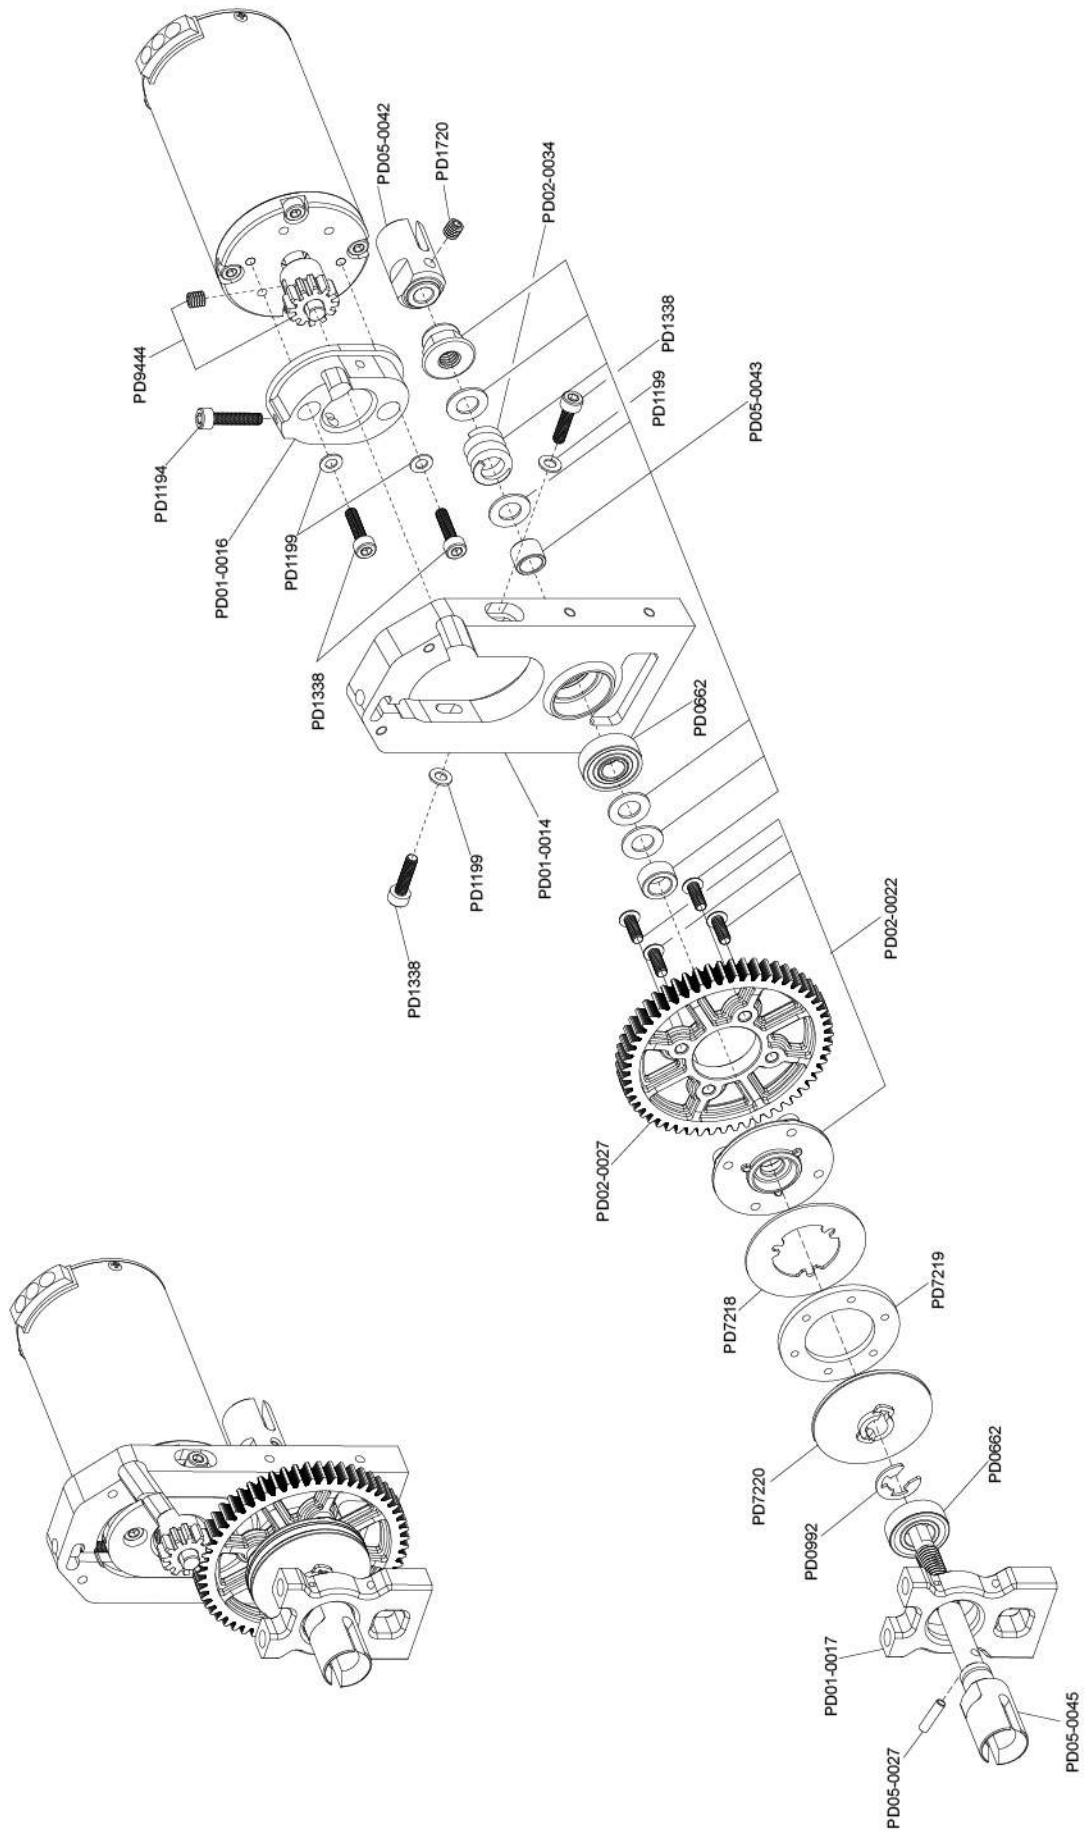

ROLL CAGE ASSEMBLY

This technical diagram illustrates the assembly of a roll cage. The main structure is a rectangular frame composed of multiple tubes and cross-braces. Key components and their labels include:

- PD0668**: Vertical support tubes.
- PD0666**: Horizontal cross-braces.
- PD09-0145**: Diagonal cross-braces.
- PD0667**: End caps or connectors for the vertical tubes.
- PD09-0150**: A central horizontal brace.
- PD09-0147**: A component used in the base assembly.
- PD07233**: A base plate or support.
- PD0671**: A component used in the base assembly.
- PD10-0059**: A long, thin component, possibly a shock absorber or a long brace.
- PD09-0154**: A component used in the base assembly.
- PD09-0148**: A component used in the base assembly.
- PD07314**: A component used in the base assembly.

The diagram shows the roll cage being assembled onto a base structure, which includes a central platform with four rectangular cutouts. The base structure is labeled with **PD09-0148** and **PD07314**. The roll cage is shown in an exploded view, indicating the sequence of assembly.


K-ROCK SPARE PARTS LIST 零件表




PD01-0014 MOTOR MOUNT, 6406
馬達固定座



PD01-0016 MOTOR PLATE, 6406
馬達基座

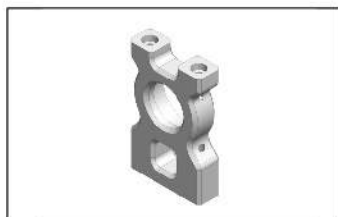

PD01-0017 CTR DIFF MOUNT, 6406
主齒輪支撐座

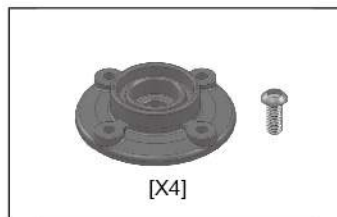

PD02-0022 SPUR GEAR HUB, 6403
主齒輪固定座



PD02-0027 SPUR GEAR(55T), 6403
主齒輪, 55T




PD02-0033 DUST COVER
防塵蓋




PD02-0034 SLIPPER SPRING, 6406
扭限彈簧



PD04-0006 TURNBUCKLE END, 6406
球頭連桿

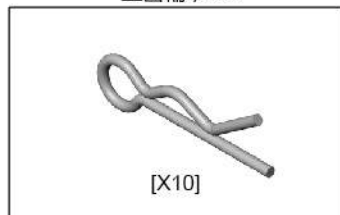

PD0432 BODY CLIPS EB4
R形插銷

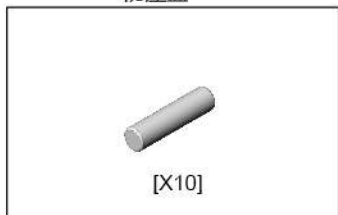

PD05-0027 TRANS PIN 2.5X10
軸承銷 2.5X10



PD05-0040 FR DRIVE SHAFT, 6406
前中央傳動軸組



PD05-0041 RR DRIVE SHAFT, 6406
後中央傳動軸組



PD05-0042 CENTER DRIVE HUB, 6406
傳動軸套



PD05-0043 SLIPPER HARDWARE, 6406
滑動套件



PD05-0044 17MM HEX DRIVE(4), 6406
六角輪轆轉換器組



PD05-0045 SPUR GEAR SHAFT, 6406
主齒輪軸



PD05-0046 DIFFERENTIAL SET ST-1
差速器組 ST-1



PD9505 DIFF OUTDRIVE(2) FR&RR,S
差速傳動軸套,S3




PD06-0008 SERVO HORN SET
伺服轉向組




PD06-0016 SERVO ARM SET, 6406
伺服拉桿組



PD0662 BALL BEARING(10)d8*d16
滾珠軸承

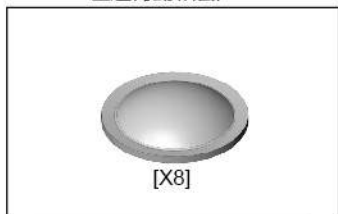


PD07-0013 SHOCK DIAPHRAGM
避震器空氣活門

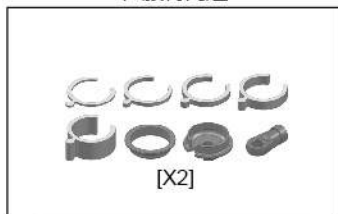

PD07-0017 SHOCK PLASTIC PARTS
避震器塑膠配件



PD07-0018 FR SHOCK CAP (2)
避震器上蓋 (2)

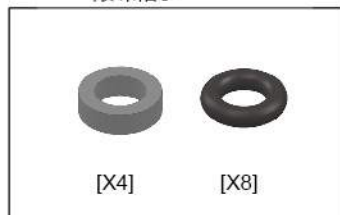

PD07-0024 O-RING&SPACERS, 6402
避震器O型環&內環柱組



PD07-0025 SHOCK PISTON, 6402
避震器活塞組



PD07-0038 FR SHOCK SHAFT 前避震器軸
PD07-0039 RR SHOCK SHAFT 後避震器軸




PD07-0041 RR SHCK SPRNG(S)6404
後避震器彈簧(2)

K-ROCK SPARE PARTS LIST 零件表




PD07-0043 RR SHOCK SET(2)6404
後避震器組(2sets)

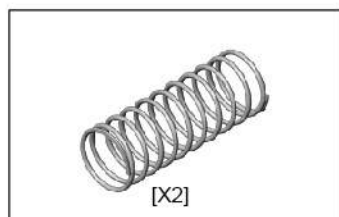

PD07-0050 FR SHCK SPRNG(H)6404
前避震器彈簧



PD07-0052 FR SHOCK BODY 前套筒
PD07-0053 RR SHOCK BODY 後套筒

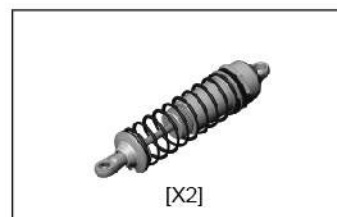

PD07-0059 FR SHOCK SET(2), 6406
前避震器組



PD08-0020 BEAD-LOCK RING, 6406
輪殼裝飾片



PD08-0021 WHEELS, 6406
輪殼



PD09-0062 FR/RR SHCK STNDF6404
避震器固定座組



PD09-0064 SHOCK RISER,6404
避震器座組



PD09-0126 FF MOUNTS POSTS, 6406
前車殼支架/支柱



PD09-0127 FF BRACKET POSTS, 6406
前車殼支柱補強座



PD09-0128 RR MOUNTS POSTS, 6406
後車殼支架/支柱



PD09-0129 RR BRACKET POSTS
後車殼支柱補強座



PD09-0130 RR SHOCK TOWER
後避震器支架



PD09-0131 WHEELIE BAR MOUNT
翹頭輔助輪支撐座




PD09-0132 STIFFENER MOUNT, 6406
車體補強座



PD09-0133 K-ROCK BODY, BLACK 車殼
PD09-0153 K-ROCK BODY, IRON-GRAY 車殼




PD09-0134 K-ROCK DECAL SET
K-ROCK 貼紙組

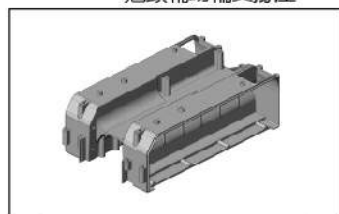

PD09-0135 BATTERY BOX, 6406
電池盒主體



PD09-0136 ROD MOUNTS, 6406
前後補強桿座

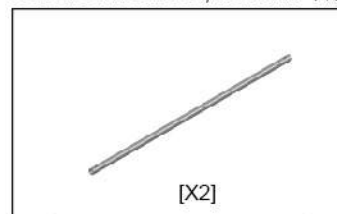

PD09-0137 TORQUE ROD, 6406
補強桿



PD09-0138 COVER LOCKS, 6406
電池蓋扣件



PD09-0139 ESC COVER, 6406
速控器蓋



PD09-0140 RECEIVER COVER, 6406
接收機盒蓋



PD09-0141 BATTERY COVER, 6406
電池蓋




PD09-0142 SPUR GEAR COVER
主齒輪罩



PD09-0143 SERVO COVER, 6406
伺服機護板




PD09-0144 SERVO MOUNT, 6406
伺服機座

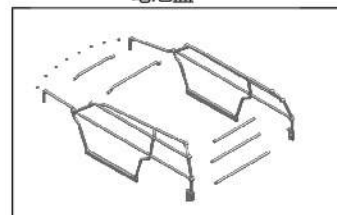

PD09-0145 ROLL CAGE, 6406
防滾架


K-ROCK SPARE PARTS LIST 零件表

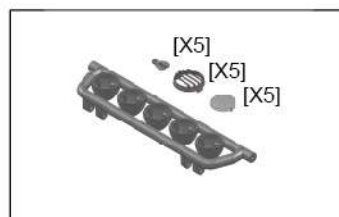

PD09-0147 ROOF LIGHT SET
燈座組




PD09-0148 FRONT FENDER TRIM
前輪拱

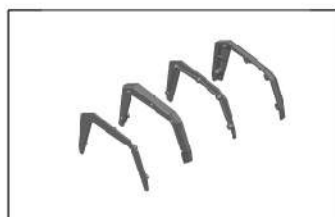

PD09-0149 REAR FENDER TRIM
後輪拱




PD09-0150 LAMP SET SUPPORT
燈座支撐柱

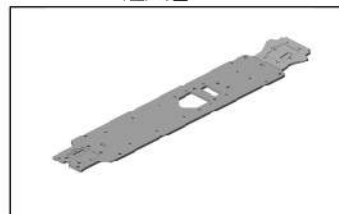

PD09-0152 CHASSIS, 6406
車底板



PD10-0049 ENGINE SOUND BOX MOUNT
發聲器固定板

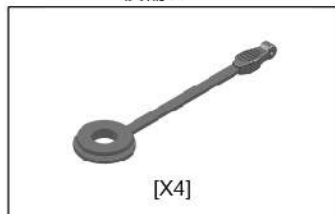


PD10-0059 BODY CLIP RUBBER
R銷橡膠墊




PD1871 TRANS CASE/BULKHEAD SET
差速箱本體, S3



PD1875-1 UNIV. REBUILD KIT, S3
萬向接合套件, S3

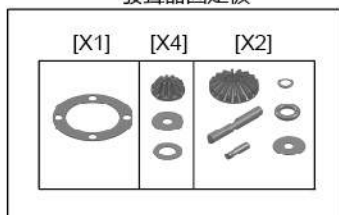

PD1895 DIFF INNER GEAR&PARTS
差速內傘齒維修包10T/18T

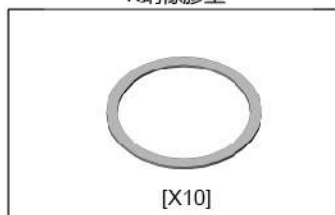

PD1896 DIFFERENTIAL SHIME
差速器墊片



PD1897 DIFF CASE, S3
差速器本體, S3



PD1905 FR SUSP PLATE, FF0, S3
前投影板FF0, S3




PD1906 SUSP. PLATE SET, S3
投影板組, S3



PD1907 SUSP. PLATE JOINT, S3
球座, S3



PD1908 SUSP. PLATE SET, S3
上擺臂固定板, S3

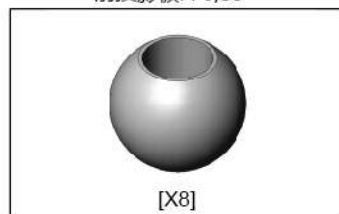


PD1912 PIVOT BALL, S3
球頭, S3



PD1914 RR LOWER HINGE PIN, S3
後輪座固定銷, S3




PD1915 KNUCKLE, S3
轉向輪座組, S3

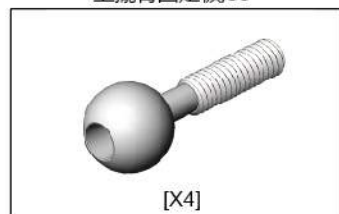


PD1916 ADJ. BALL (4), S3
擺臂球頭, S3



PD1917 ADJ. SCREW (4), S3
轉向球頭固定螺絲, S3

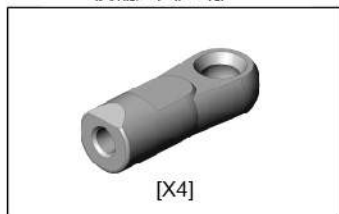

PD1921 RR TIE END, S3
後上擺臂拉桿頭, S3

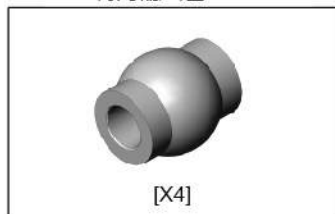

PD1922 RR PIVOT BALL, S3
後上擺臂拉桿球座, S3



PD1923 REAR HUB SET, S3
後輪組, S3



PD1925 SEVO SAVER PL. PARTS, S3
轉向搖臂塑件, S3



PD1926 SEVO SAVER ML. PARTS, S3
轉向金屬配件, S3



PD1928 SERVO SAVER BUSHING, S3
轉向曲板襯套, S3




PD1968 B. BEARING (4), d5*D10*W4
滾珠軸承(HMV1050LLY)


K-ROCK SPARE PARTS LIST 零件表




PD1969 BEARING(4), d10*D19*W5
滾珠軸承(HMV6800LLYX4)

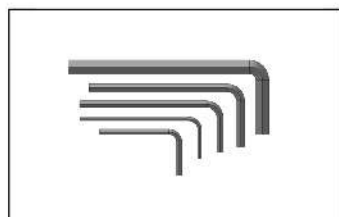


PD1975 HEX WRENCH SET, S3
六角板手組, S3

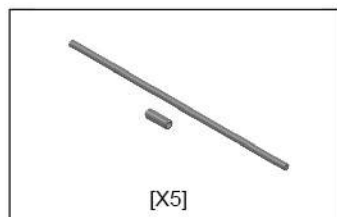

PD1983 ANENNA BAG, 1/8
天線管

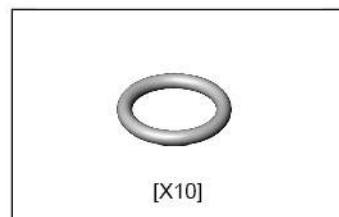


PD2001 O-RING, φ 4.4, S3
O型環, S3

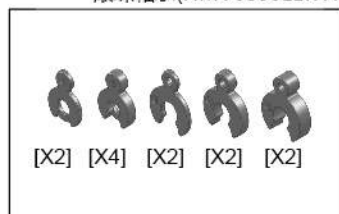


PD2281 CASTER SHIM, S3
傾角調整夾片, S3



PD2331-T SERVO SAVER TOP PLATE ST
前補強板

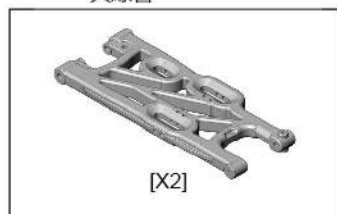


PD2334 REAR SUSPN ARM SET(2), ST
後擺臂組(2) ST-1

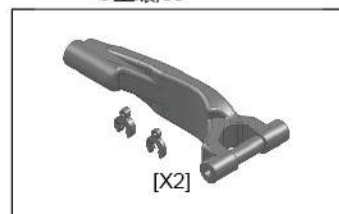

PD2335 UP SUSPN ARM SET(2), ST
球頭連桿上擺臂組(2) ST-1




PD2336 LWR SUSPN ARM SET ST-1
下擺臂組(2) ST-1

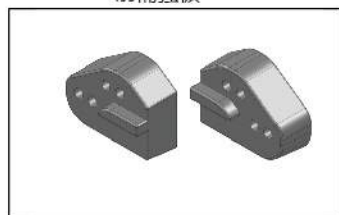

PD2340 UP SUSP. ARM HOLDER ST-1
前上擺臂支撐座 ST-1



PD2342 DIFF BEVEL GEAR SET ST-1
傳動大/小斜齒輪, ST-1

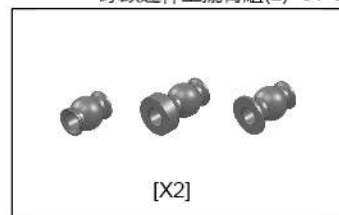

PD2346 ST.PIVOT BALL ST-1
轉向球座 ST-1



PD2347 SLIPPER HARDWARE, 6406
後上擺臂拉桿 ST-1



PD2348 RR TURNBUCKLE ST-1
前轉向拉桿 ST-1



PD2349 FR SHOCK TOWER ST-1
前避震器支架 ST-1



PD2351 STEERING SLIDER ST-1
轉向曲板 ST-1




PD2356 FR BUMPER ST-1
前防撞板



PD2357 FR/RR SHOCK SET PIN ST-1
避震器下固定銷 ST-1



PD2376 SUSP. HINGE PIN SET ST-1
擺臂固定銷 ST-1

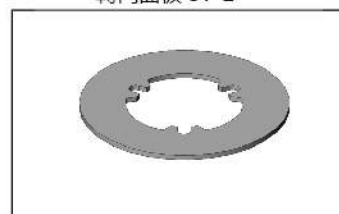


PD7218 SLIPPER FRICTION RING
摩擦片




PD7219 SLIPPER LINGING PAD
限滑來令片




PD7220 SLIPPER HUB
限滑固定座

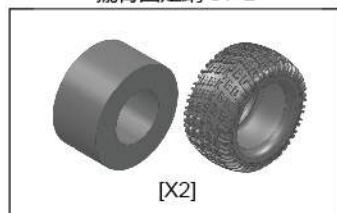

PD7240 TIRES
輪胎

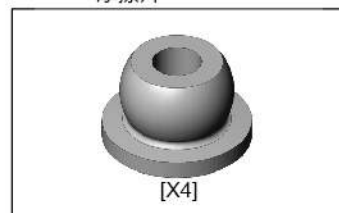

PD8934 SHOCK BUSHING, 6401
避震器襯套

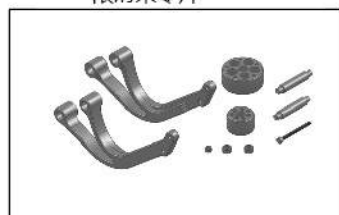

PD9041 WHEELIE BAR SET, 6401
翹頭輔助輪零件包



PD9444 12T PINION
驅動齒, 12T




PD9503 RR BALL UNIVERSAL(2) ST-1
後萬象傳動軸 ST-1



PD9504 FR BALL UNIVERSAL(2) ST-1
前萬象傳動軸 ST-1

K-ROCK SPARE PARTS LIST 零件表

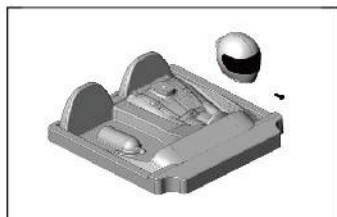

PD09-0154 COCKPIT UNDERBODY
MT4 K-ROCK車內座艙



2340 IBL 40/20 1/8 BLS MOTOR
1/8 車用無刷馬達2000Kv




8069-1 ENGINE SOUND BOX
發聲器




8179 DIGITAL SERVO, DS1510MG
數位伺服機



8311 COUGAR GP3 RADIO, 2.4GHz
COUGAR GP3 2.4GHz 遙控器

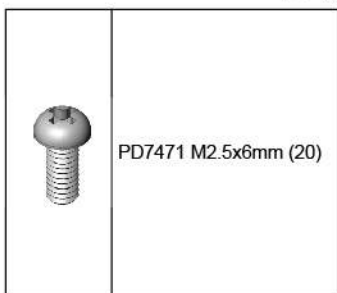

PMS M. SCREW
圓頭十字螺絲

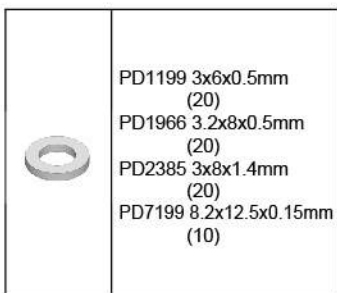


WASHER
墊圈



SET SCREW
無頭內六角螺絲



SHCS SCREW
內六角螺絲

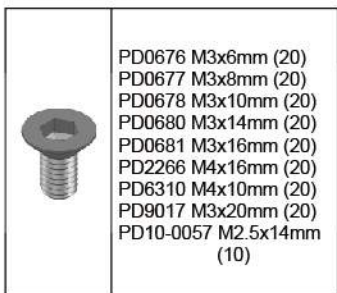


FHCS SCREW
平頭內六角螺絲



BHCS SCREW
半圓頭內六角螺絲



LOCK NUT
止鬆螺帽

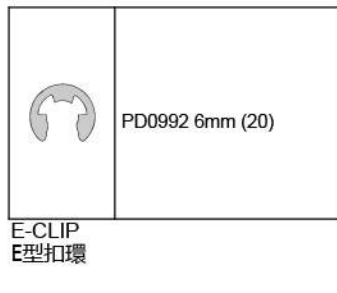

E-CLIP
E型扣環

PART#	DESCRIPTION	中文名稱	NOTE
PD01-0014	MOTOR MOUNT, 6406	馬達固定座	
PD01-0016	MOTOR PLATE, 6406	馬達基座	
PD01-0017	CTR DIFF MOUNT, 6406	主齒輪支撐座	
PD02-0022	SPUR GEAR HUB, 6403	主齒輪固定座	
PD02-0027	SPUR GEAR(55T), 6403	主齒輪, 55T	
PD02-0033	DUST COVER, 6406	防塵蓋	
PD02-0034	SLIPPER SPRING, 6406	扭限彈簧	
PD04-0006	TURNBUCKLE END, 6406	球頭連桿	
PD0432	BODY CLIPS EB4	R形插銷	
PD05-0027	TRANS PIN 2.5X10	軸承銷 2.5X10	
PD05-0040	FR DRIVE SHAFT, 6406	前中央傳動軸組	
PD05-0041	RR DRIVE SHAFT, 6406	後中央傳動軸組	
PD05-0042	CENTER DRIVE HUB, 6406	傳動軸套	
PD05-0043	SLIPPER HARDWARE, 6406	滑動套件	
PD05-0044	17MM HEX DRIVE(4), 6406	六角輪軸轉換器組	
PD05-0045	SPUR GEAR SHAFT, 6406	主齒輪軸	
PD05-0046	DIFFERENTIAL SET ST-1	差速器組 ST-1	
PD06-0008	SERVO HORN SET, 6400/6401	伺服轉向組	
PD06-0016	SERVO ARM SET, 6406	伺服拉桿組	
PD0662	BALL BEARING(10)d8*d16	滾珠軸承, SEALED 8x16x5	
PD0666	BHCS SCREW(20)M3x6	半圓頭內六角螺絲	
PD0667	BHCS SCREW(20)M3x8	半圓頭內六角螺絲	
PD0668	BHCS SCREW(20), M3x10	半圓頭內六角螺絲	
PD0669	BHCS SCREW(20), M3x12	半圓頭內六角螺絲	
PD0670	BHCS SCREW(20), M3x14	半圓頭內六角螺絲	
PD0671	BHCS SCREW(20), M3x16	半圓頭內六角螺絲	
PD0672	BHCS SCREW(20), M3x18	半圓頭內六角螺絲	
PD0674	BHCS SCREW(20), M3x22	半圓頭內六角螺絲	
PD0675	BHCS SCREW(20)M3x25	半圓頭內六角螺絲	
PD0676	FHCS SCREW(20), M3x6	平頭內六角螺絲	
PD0677	FHCS SCREW(20), M3x8	平頭內六角螺絲	
PD0678	FHCS SCREW(20), M3x10	平頭內六角螺絲	
PD0680	FHCS SCREW(20), M3x14	平頭內六角螺絲	
PD0681	FHCS SCREW(20), M3x16	平頭內六角螺絲	
PD07-0013	SHOCK DIAPHRAGM, 6402	避震器空氣活門	
PD07-0017	SHOCK PLASTIC PARTS, 6402	避震器塑膠配件	
PD07-0018	FR SHOCK CAP (2) 6404	避震器上蓋 (2)	
PD07-0024	O-RING&SPACERS, 6402	避震器O型環&內環柱組	
PD07-0025	SHOCK PISTON, 6402	避震器活塞組	
PD07-0038	FR SHOCK SHAFT(2)6404	前避震器軸(2)	
PD07-0039	RR SHOCK SHAFT(2)6404	後避震器軸(2)	
PD07-0041	RR SHCK SPRNG(S)6404	後避震器彈簧(2)	
PD07-0043	RR SHOCK SET(2)6404	後避震器組(2sets)	
PD07-0050	FR SHCK SPRNG(H)6404	前避震器彈簧K=0.094	
PD07-0052	FR SHOCK BODY(2)6404	前避震器套筒(2)	
PD07-0053	RR SHOCK BODY(2)6404	後避震器套筒(2)	
PD07-0059	FR SHOCK SET(2), 6406	前避震器組	
PD08-0020	BEAD-LOCK RING, 6406	輪轂裝飾片	
PD08-0021	WHEELS, 6406	輪轂	
PD09-0062	FR/RR SHCK STNDFF6404	避震器固定座組	
PD09-0064	SHOCK RISER, 6404	避震器座組	
PD09-0126	FF MOUNTS POSTS, 6406	前車殼支架/支柱	
PD09-0127	FF BRACKET POSTS, 6406	前車殼支柱補強座	
PD09-0128	RR MOUNTS POSTS, 6406	後車殼支架/支柱	
PD09-0129	RR BRACKET POSTS, 6406	後車殼支柱補強座	
PD09-0130	RR SHOCK TOWER, 6406	後避震器支架	
PD09-0131	WHEELIE BAR MOUNT, 6406	翹頭輔助輪支撐座	
PD09-0132	STIFFENER MOUNT, 6406	車體補強座	
PD09-0133	MT4 K-ROCK BODY, BLACK	MT4 K-ROCK車殼 黑	
PD09-0134	MT4 K-ROCK DECAL SET	MT4 K-ROCK貼紙組	

PART#	DESCRIPTION	中文名稱	NOTE
PD09-0135	BATTERY BOX, 6406	電池盒主體	
PD09-0136	ROD MOUNTS, 6406	前後補強桿座	
PD09-0137	TORQUE ROD, 6406	補強桿	
PD09-0138	COVER LOCKS, 6406	電池蓋扣件	
PD09-0139	ESC COVER, 6406	速控器蓋	
PD09-0140	RECEIVER COVER, 6406	接收機盒蓋	
PD09-0141	BATTERY COVER, 6406	電池蓋	
PD09-0142	SPUR GEAR COVER, 6406	主齒輪罩	
PD09-0143	SERVO COVER, 6406	伺服機護板	
PD09-0144	SERVO MOUNT, 6406	伺服機座	
PD09-0145	ROLL CAGE, 6406	防滾架	
PD09-0147	ROOF LIGHT SET, 6406	燈座組	
PD09-0148	FRONT FENDER TRIM, 6406	前輪拱	
PD09-0149	REAR FENDER TRIM, 6406	後輪拱	
PD09-0150	LAMP SET SUPPORT, 6406	燈座支撐柱	
PD09-0152	CHASSIS, 6406	車底板	
PD09-0153	K-ROCK BODY, IRON-GRAY	MT4 K-ROCK車殼, 鐵灰	
PD09-0154	COCKPIT UNDERBODY, 6406	MT4 K-ROCK車內座艙	
PD0961	SET SCREWS(20), M3x3	無頭內六角螺絲	
PD0992	E-CLIP(20),6mm	E型扣環	
PD10-0049	ENGINE SOUND BOX MOUNT	發聲器固定板	
PD10-0057	FHCS SCREW(10), M25x14	平頭內六角螺絲	
PD10-0058	BHCS SCREW(10)M4x10	半圓頭內六角螺絲	
PD10-0059	BODY CLIP RUBBER, 6406	R銷橡膠墊	
PD1194	SHCS SCREW(20), M3x14	內六角螺絲	
PD1199	WASHER(20)	平墊圈(20)	
PD1244	LOCK NUT(10), M3	止鬆螺帽(10)	
PD1338	SHCS SCREW(20), M3x12	內六角螺絲	
PD1339	SHCS SCREW(20), M3x20	內六角螺絲	
PD1543	SHCS SCREW(20), M3x18	內六角螺絲	
PD1720	SET SCREW(10), M3x5 M4x4 M5x4	無頭內六角螺絲	
PD1871	TRANS CASE/BULKHEAD SET	差速箱本體,S3	
PD1875-1	UNIV. REBUILD KIT,S3	萬向接合套件,S3	
PD1895	DIFF INNER GEAR&PARTS,S3	差速內傘齒維修包10T/18T	
PD1896	DIFFERENTIAL SHIME	差速器墊片	
PD1897	DIFF CASE,S3	差速器本體,S3	
PD1905	FR SUSP PLATE,FF0,S3	前投影板FF0,S3	
PD1906	SUSP. PLATE SET,S3	投影板組,S3	
PD1907	SUSP. PLATE JOINT,S3	球座,S3	
PD1908	SUSP. PLATE SET,S3	上擺臂固定板,S3	
PD1912	PIVOT BALL,S3	球頭,S3	
PD1914	RR LOWER HINGE PIN,S3	後輪座固定銷,S3	
PD1915	KNUCKLE ,S3	轉向輪座組,S3	
PD1916	ADJ. BALL (4),S3	擺臂球頭,S3	
PD1917	ADJ. SCREW (4),S3	轉向球頭固定螺絲,S3	
PD1921	RR TIE END,S3	後上擺臂拉桿頭,S3	
PD1922	RR.PIVOT BALL,S3	後上擺臂拉桿球座,S3	
PD1923	REAR HUB SET.S3	後輪組,S3	
PD1925	SEVO SAVER PL. PARTS,S3	轉向搖臂塑件,S3	
PD1926	SEVO SAVER ML. PARTS,S3	轉向金屬配件,S3	
PD1928	SERVO SAVER BUSHING,S3	轉向曲板襯套,S3	
PD1958	SHCS.SCREW(20), M3x16	內六角螺絲	
PD1959	SHCS SCREW(20), M3x25	內六角螺絲	
PD1960	SHCS SCREW(20), M3x35	內六角螺絲	
PD1961	SET SCREW(20), M3x12	無頭內六角螺絲	
PD1962	SET SCREW(20), M3x4	無頭內六角螺絲	
PD1963	SET SCREW(20), M4x12	無頭內六角螺絲	
PD1966	WASHER(20),d3.2xD8x0.5	平板墊圈	
PD1968	B.BEARING(4),d5xD10xW4	滾珠軸承(HMV1050LLY)	
PD1969	BEARING(4),d10xD19xW5	滾珠軸承(HMV6800LLYX4)	

PART#	DESCRIPTION	中文名稱	NOTE
PD1972	BHCS SCREW(20)M3x30	半圓頭內六角螺絲	
PD1975	HEX WRENCH SET,S3	六角板手組,S3	
PD1983	ANENNA BAG, 1/8	天線管	
PD2001	O-RING, 4.4x0.8	O型環,S3	
PD2177	LOCK NUT(20), M2.5	防鬆螺帽組	
PD2266	FHCS SCREW(20), M4x16	平頭內六角螺絲	
PD2281	CASTER SHIM,S3	傾角調整夾片,S3	
PD2331-T	SERVO SAVER TOP PLATE ST	前補強板	
PD2334	REAR SUSPN ARM SET(2),ST	後擺臂組(2) ST-1	
PD2335	UP SUSPN ARM SET(2),ST	上擺臂組(2) ST-1	
PD2336	LWR SUSPN ARM SET ST-1	下擺臂組(2) ST-1	
PD2340	UP SUSP. ARM HOLDER ST-1	前上擺臂支撐座 ST-1	
PD2342	DIFF BEVEL GEAR SET ST-1	傳動大小斜齒輪,ST-1	
PD2346	ST.PIVOT BALL ST-1	轉向球座 ST-1	
PD2347	RR TURNBUCKLE ST-1	後上擺臂拉桿 ST-1	
PD2348	RR TURNBUCKLE ST-1	前轉向拉桿 ST-1	
PD2349	FR SHOCK TOWER ST-1	前避震器支架 ST-1	
PD2351	STEERING SLIDER ST-1	轉向曲板 ST-1	
PD2356	FR BUMPER ST-1	前防撞板	
PD2357	FR/RR SHOCK SET PIN ST-1	避震器下固定銷 ST-1	
PD2376	SUSP. HINGE PIN SET ST-1	擺臂固定銷 ST-1	
PD2377	SHCS SCREW(20), M3x45	內六角螺絲	
PD2385	WASHER SET ST-1	墊片組	
PD6310	FHCS SCREW(20), M4x10	平頭內六角螺絲	
PD7199	WASHER(10)0.1mm S2	墊片零件包	
PD7218	SLIPPER FRICTION RING	摩擦片	
PD7219	SLIPPER LINGING PAD	限滑來令片	
PD7220	SLIPPER HUB	限滑固定座	
PD7240	TIRES	輪胎	
PD7293	SHCS SCREW(20), M2.5x6	內六角螺絲	
PD7314	SHCS SCREW(20), M3x12	內六角螺絲	
PD7471	PMS M. SCREW(20), M2.5x6	圓頭十字螺絲	
PD7475	SHCS SCREW(20), M3x10	內六角螺絲	
PD7476	SHCS SCREW(10), M3x30	內六角螺絲	
PD8934	SHOCK BUSHING,6401	避震器襯套	
PD9017	FHCS SCREW(20), M3x20	平頭內六角螺絲	
PD9041	WHEELIE BAR SET,6401	翹頭輔助輪零件包	
PD9444	12T PINION	驅動齒,12T	
PD9449	SHCS SCREW(20),M2x8	內六角螺絲	
PD9503	RR BALL UNIVERSAL(2)ST-1	後萬象傳動軸 ST-1	
PD9504	FR BALL UNIVERSAL(2)ST-1	前萬象傳動軸 ST-1	
PD9505	DIFF OUTDRIVE(2) FR&RR,S	差速傳動軸套,S3	
2340	IBL 40/20 1/8 BLS MOTOR	1/8車用無刷馬達2000Kv	
8069-1	ENGINE SOUND BOX	發聲器	
8179	DIGITAL SERVO, DS1510MG	數位伺服機, DS1510MG	
8311	COUGAR GP3 RADIO, 2.4GHz	COUGAR GP3 2.4GHz 遙控器	

K-ROCK OPTIONAL PARTS LIST 選購零件表




PD0399 TURNBUCKLE WRENCH
拉桿扳手,5mm



PD07-0046 AL FR SHOCK BODY(2)
前避震器套筒-鈦色(2)



PD07-0047 RR SHOCK BODY(2)
後避震器套筒-鈦色(2)

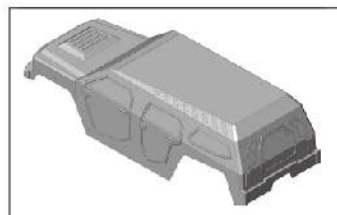

PD09-0151 MT4 K-ROCK CLEAR BODY
MT4 K-ROCK 透明車殼



PD1847 FR PLT FR TRANS,FF-1S3
前投影板(FF-1)零件包



PD1848 FR PLT FR TRANS,FF0,S3
前投影板(FF0)零件包



PD1849 FR PLT FR TRANS,FF+1S3
前投影板(FF+1)零件包



PD1850 A75RR PLT FR TRN,FR0S3OP
前投影板(FR0)零件包



PD1851 A75FR PLT RR TRN,RF0S3OP
後投影板(RF0)零件包



PD1852 A75FR PLT RR TRN,RF4S3OP
後投影板(RF+4)零件包,S3



PD1853 A75RR PLT RR TRN,RR2S3OP
後投影板(RR+2)零件包,S3



PD1854 A75RR PLT RR TRN,RR3S3OP
後投影板(RR+3)零件包



PD1855 A75UP ARM PLATE,S3OP
上擺臂前固定板零件包



PD1857 ALUM S.SAVER SET,S3OP
緩衝/轉向擺臂零件包



PD1860 HARD SWAY BAR BALL,S3OP
防傾桿球頭零件包



PD1862 WING POST,S3
擾流板固定支柱零件包



PD1863 LITE PILLOW BALL,S3
懸吊球頭零件包



PD1889 A75FR PLTRR TRN,RF2S3OP
後投影板(RF+2)零件包



PD1900 A75FR PLT RR TRN,RF3S3
後投影板(RF+3)零件包



PD1991 A75RR PLT RR TRN,RR2.5S3
後投影板(RR+2.5)零件包



PD1992 A75RR PLT RR TRN,RR4S3OP
後投影板(RR+4)零件包



PD2311-R CFRP FR SHOCK TOWER(R)
前避震器支架



PD2311-S CFRP FR SHOCK TOWER(S)
前避震器支架



PD2312-R CFRP RR SHOCK TWR-R
後避震器支架零件包




PD2312-S CFRP RR SHOCK TWR-S
後避震器支架零件包



PD2315 A75 ST.SLIDER W/BB ST-1
轉向曲板零件包 ST-1



PD2316-G SWAY BAR (G),3mm ST-1
防傾桿(金φ3mm) ST-1

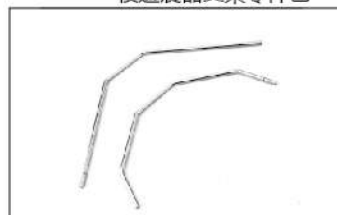

PD2316-S SWAY BAR (S),2.5mm ST-1
防傾桿(銀φ2.5mm) ST-1


K-ROCK OPTIONAL PARTS LIST 選購零件表



PD2343 FR SWAY BAR M&H, 2.7mm
前防傾桿附件 ST-1



PD2344 RR SWAY BAR M&H ST-1
後防傾桿附件 ST-1

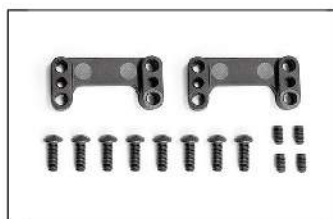

PD9308 SWAY BAR MOUNT
平衡桿壓板



THUNDER TIGER

K-ROCK OPTIONAL PARTS LIST 零件表

PART#	DESCRIPTION	中文名稱	NOTE
AT6161	GOLDEN PLUG SERIES CONNE	金插串聯接頭組(Y線+連接)	
AT6179	DEANS SERIES ADAPTER, 40	串聯短接頭40mm(2公1母)	
AT6180	DEANS SERIES Y-HARNESS	串聯長接線70mm(2公1母)	
PD0399	TURNBUCKLE WRENCH, 5mm	拉桿扳手, 5mm	
PD07-0046	AL FR SHOCK BODY(2) 6404	前避震器套筒-鈦色(2)	
PD07-0047	RR SHOCK BODY(2) 6404	後避震器套筒-鈦色(2)	
PD09-0151	MT4 K-ROCK CLEAR BODY	MT4 K-ROCK透明車殼	
PD1847	FR PLT FR TRANS, FF-1S3	前投影板(FF-1)零件包	
PD1848	FR PLT FR TRANS, FF0, S3	前投影板(FF0)零件包	
PD1849	FR PLT FR TRANS, FF+1S3	前投影板(FF+1)零件包	
PD1850	A75RR PLT FR TRN, RF0S3OP	前投影板(RF0)零件包	
PD1851	A75FR PLT RR TRN, RF0S3OP	後投影板(RF0)零件包	
PD1852	A75FR PLT RR TRN, RF4S3OP	後投影板(RF+4)零件包, S3	
PD1853	A75RR PLT RR TRN, RR2S3OP	後投影板(RR+2)零件包, S3	
PD1854	A75RR PLT RR TRN, RR3S3OP	後投影板(RR+3)零件包	
PD1855	A75UP ARM PLATE, S3OP	上擺臂前固定板零件包	
PD1857	ALUM S.SAVER SET, S3OP	緩衝/轉向擺臂零件包	
PD1860	HARD SWAY BAR BALL, S3OP	防傾桿球頭零件包	
PD1862	WING POST, S3	擾流板固定支柱零件包	
PD1863	LITE PILLOW BALL, S3	懸吊球頭零件包	
PD1989	A75FR PLTRR TRN, RF2S3OP	後投影板(RF+2)零件包	
PD1990	A75FR PLT RR TRN, RF3S3	後投影板(RF+3)零件包	
PD1991	A75RR PLT RR TRN, RR2.5S3	後投影板(RR+2.5)零件包	
PD1992	A75RR PLT RR TRN, RR4S3OP	後投影板(RR+4)零件包	
PD2311-R	CFRP FR SHOCK TOWER(R)	前避震器支架	
PD2311-S	CFRP FR SHOCK TOWER(S)	前避震器支架	
PD2312-R	CFRP RR SHOCK TWR-R ST-1	後避震器支架零件包 ST-1	
PD2312-S	CFRP RR SHOCK TWR-S ST-1	後避震器支架零件包 ST-1	
PD2315	A75 ST.SLIDER W/BB ST-1	轉向曲板零件包 ST-1	
PD2316-G	SWAY BAR (G), 3mm ST-1	防傾桿(金 3mm) ST-1	
PD2316-S	SWAY BAR (S), 2.5mm ST-1	防傾桿(銀 2.5mm) ST-1	
PD2343	FR SWAY BAR M&H, 2.7mm ST	前防傾桿附件 ST-1	
PD2344	RR SWAY BAR M&H ST-1	後防傾桿附件 ST-1	
PD9308	SWAY BAR MOUNT	平衡桿壓板	



Declaration of Conformity

according to R&TTE Directive 1999/5/EC

For the following equipment:

Product : K-ROCK

Type Designation/Trademark : 6406-F / Thunder Tiger

Manufacturer's Name : Thunder Tiger Corp. (Ningbo)

Manufacturer's Address : 28 Jin-Feng Road, Liang Hui Industrial Park, Yuyao,
Zhejiang 315400 China

- Council Directive 1995/5/EC R&TTE on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity

For the evaluation of the compliance with this Directives, the following standards were applied :

EN 301 48901:V1.9.2 (2011)

EN 301 489-17:V2.2.1 (2012)

EN 300 328 (v1.8.1, 2012-6)

EN 62311:2008

EN 55022:2010+AC:2011

EN 55024:2010

EN 61000-3-2:2006+A2:2009

EN 61000-3-3:2013

EN 55103-1:2009

EN 55103-2:2009

EN 61000-6-3 (2007+A1:2011)

EN 61000-6-1 (2007)

IEC/EN 61000-4-2 (2009)/ -3 (2006+A2:2010)/ -8 (2010)

Responsible for making this declaration is the :

Manufacturer



Authorized representative established within the EU



EC Distribution

Company Name : THUNDER TIGER EUROPE GmbH

Company Address : Rudolf-Diesel-Str. 1, 86453 Dasing, Germany

Person responsible for making this declaration

Name, Surname

:

Jay Trellis

is 

Position/Title

:

Assist Manager

Date

:

April 2015



THUNDER TIGER GROUP
thundertiger.com

Manufactured by :

Thunder Tiger Corp.(Ningbo)
28 Jin-Feng Road, Liang Hui
Industrial Park, Yuyao, Zhejiang
315400 China

JD7849