


1/8TH SCALE BRUSHLESS 4WD DESERT BUGGY RTR

1:8 無刷電動四驅越野完成車

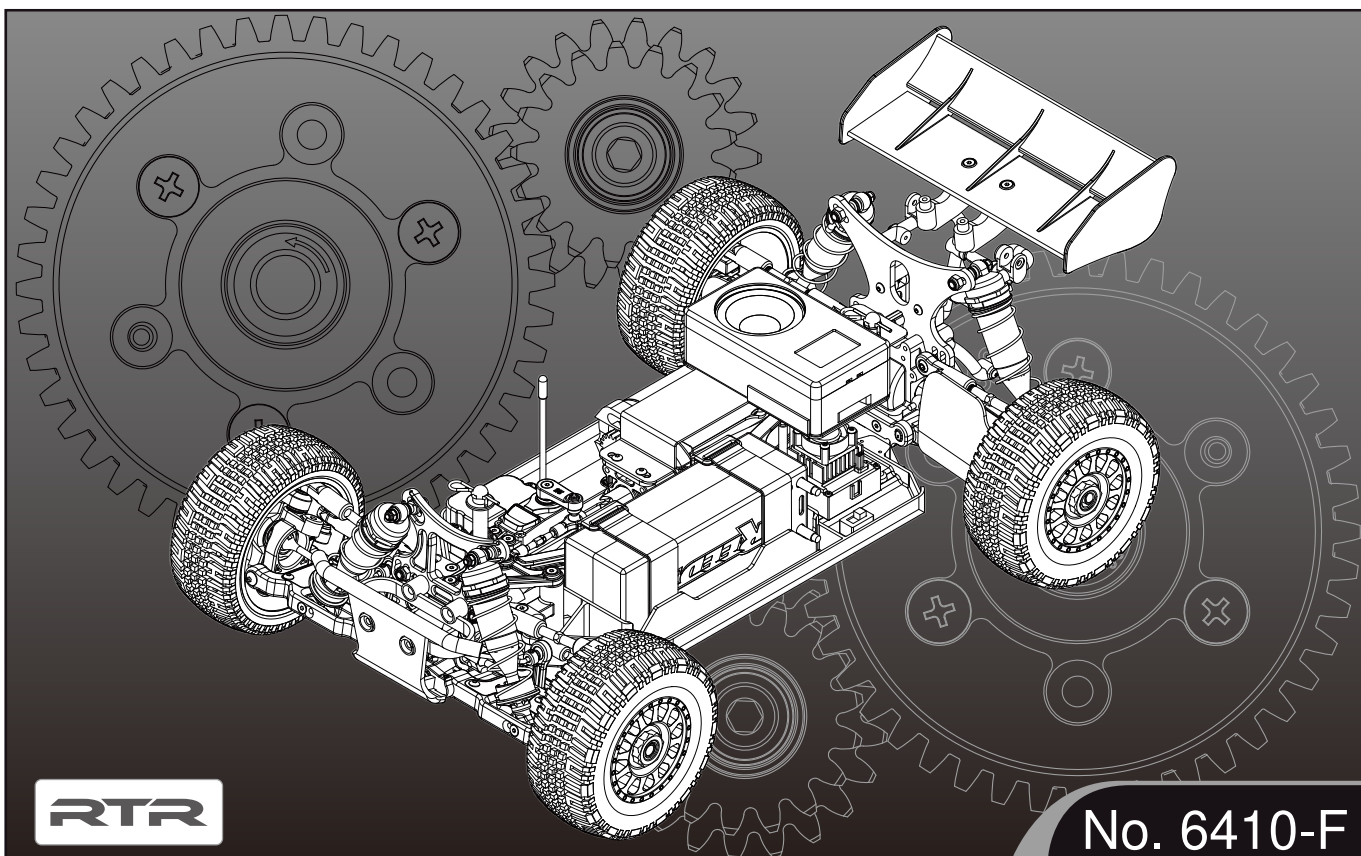

This radio control model car is not a toy! Before beginning assembly, please read this manual thoroughly.
本產品為高性能模型非一般玩具，組裝與操作前，請詳閱本產品說明書。

The contents are subject to change without prior notice due to product improvements and specification changes.
本套件所附之零件可能跟圖示有所差異。因產品後續之設計研發或功能不斷改善之因，我們將保留產品規格變更權利，不再另行通知使用者。

Thunder Tiger offers online help on thundertiger.com, our product specialists are ready to take your call if you have any technical questions. Have fun and enjoy the exciting world of R/C.

若您在產品的使用上有任何的疑問，歡迎多加利用我們所提供的即時諮詢留言版或洽詢雷虎科技授權經銷商。雷虎科技的全球英文網址為 thundertiger.com，我們將竭誠為您服務！

Maintenance Manual & Parts Catalogue

維修說明書及零件包型錄

WARRANTY 品質保證事項

Thunder Tiger Corporation guarantees this model is free from defects in both material and workmanship. The total monetary value under warranty will in no case exceed the cost of the original product purchased. This warranty does not cover any components damaged by use or modification. Part or parts missing from this product must be reported within 60 days of purchase. No part or parts will be sent under warranty without proof of purchase. To receive part or parts under warranty, the service center must receive a proof of purchase and/or the defective part or parts. Should you find a defective or missing part, contact the authorized Thunder Tiger Service/Distributor near you. Under no circumstances a dealer or distributor accept return the product has been used.

本公司對於製造過程中產生之瑕疵，負完全品質保證責任。保證事項僅限於產品本身與隨產品所附之零配件。品質保證不包含因使用、組裝或調整本產品或其他所有非產品本身品質所造成之損壞。

Safety Precautions 安全注意事項

Please read all of the instructions and familiarize yourself with the product and its controls before operation.

1. This product is not a toy. It is a high performance model car therefore it is important to familiarize yourself with the model, its manual, and its construction before assembly or operation. Adult supervision is necessary for children operating this model.
2. Always keep this instruction manual on hand during assembly and for operating reference.
3. Do not use a power screwdriver to install screws into plastic parts. A power screwdriver's high rotation speed can heat up the screw being installed which can result in some melting of the plastic parts or stripped threads.
4. For best performance, it is important to make sure all the moving parts can move freely without binding.
5. This product, its parts, and its assembly tools can be harmful to your health. Always exercise extreme caution when assembling and operating this product. Keep away from any high speed rotating parts during operation.


感謝您購買雷虎科技產品，在您開始操作本產品前，請詳閱本產品說明書。

1. 本產品為高性能模型產品非一般玩具，組裝與操作過程皆須由成人陪同。請詳讀此本使用說明書，避免因組裝錯誤與操作不當造成損壞。
2. 請妥善保管此說明書，對於後續維修、操控說明將可提供您協助。
3. 請勿使用電動工具旋緊自攻螺絲於塑膠零件上，可能導致塑膠零件融化或滑牙。
4. 請檢視所有活動部位零件是否不受干涉，可靈活活動，以達車輛最佳性能。
5. 此項產品具有相當之危險性，於組裝、調整、操控上的不熟悉都可能造成自身或他人的傷害，發生這些傷害事件時，製造商是可以免除責任的，建議您於初次使用本產品前，先行請教具有相程度經驗同好或是專業雷虎經銷商與模型專賣店。


Index 索引

Manual Format 說明書使用方式	P.2	STEP25 Steering System 轉向組	P.13
Symbols Used Throughout The Manual 符號說明	P.2	STEP26 Steering Servo 轉向伺服機	P.13
STEP1 Front / Rear Differential 前/後差速器	P.3	STEP28 Chassis Brace 後底盤支撐座	P.14
STEP2 Front / Rear Diff Housing 前/後差速箱	P.3	STEP29 Shock Assembly 避震組	P.15
STEP3 Front / Rear Shock Tower 前/後避震器支架	P.4	STEP32 Battery Installation 電池安裝	P.17
STEP4 Center Differential 中央差速組	P.4	STEP33 Wire Routing 連接線	P.17
STEP5 Center Gearbox 中央齒輪箱	P.5	STEP34 ESC, Receiver 速控器,接收機	P.18
STEP6 Guard & Battery Tray 防撞板/電池盒	P.5	STEP35 Radio Antenna 接收天線	P.18
STEP7 Turnbuckle 拉桿	P.6	STEP36 Engine Sound Box 發聲器	P.19
STEP8 Steering System 轉向組	P.6	STEP38 Rear Cage 後護欄	P.20
STEP10 Front Suspension 前懸吊	P.7	STEP39 Driver & Roll Cage 駕駛&護欄	P.21
STEP13 Sway Bar 防傾桿	P.8	STEP40 Body 車殼	P.21
STEP14 Front Sway Bar 前防傾桿	P.9	STEP42 Wing 尾翼	P.22
STEP15 Front Bumper 前保險桿	P.9	STEP43 Tires & Wheels 輪胎與輪轂	P.23
STEP16 Rear Turnbuckle 後拉桿	P.10	ASSEMBLY EXPLODED VIEW 組裝爆炸圖檢索	P.24
STEP17 Rear Suspension 後懸吊	P.10	BUSHMASTER SPARE PARTS LIST 零件表	P.30
STEP22 Rear Sway Bar 後防傾桿	P.12	BUSHMASTE OPTIONAL PARTS LIST 選購零件表	P.36
STEP23 Mud Guard 擋泥板	P.12	Declaration of Conformity	P.37
STEP24 Drivetrain 傳動軸	P.12		

Tools Included 內附工具

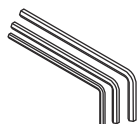


Hex Wrenches
1.5 / 2.0 / 2.5mm
六角板手組

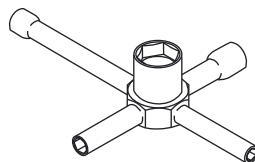

5-Way Cross Wrench
十字套筒

Tools Required For Assembly 組裝維修工具

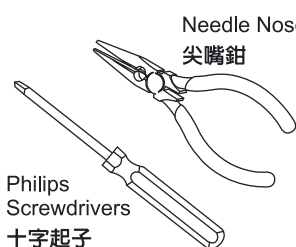

Needle Nose Pliers
尖嘴鉗

Philips
Screwdrivers
十字起子



Super Glue
(CA Glue)
快乾膠




Lexan Body curved Scissor
車殼專用剪



Body Reamer
車殼鑽孔器



Wire Cutter
斜口剪

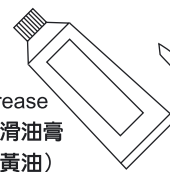

Grease
潤滑油膏
(黃油)


Thread Locking
Adhesive
(Threadlocker)
螺絲防鬆膠

Manual Format 說明書使用方式

How to read the instruction manual ? 說明書導讀

- A:** The manual indicates the assembly step number and the parts that are to be assembled.
 - B:** The manual displays actual size drawings, and part quantities used.
 - C:** All parts, except screws, are identified by their order numbers. When purchasing spare parts, identify the part required and cross reference this to the spare parts list at the end of this manual, which shows the spare parts and the corresponding order numbers.
 - D:** This instruction manual uses several symbols. Pay careful attention to them during construction. Details are given at the bottom of each page.
- A:** 顯示組立步驟及需組立之零件部位。
- B:** 零件實際對照尺寸及使用數量。
- C:** 請比對零件形狀以及後附零件料號對照圖示找出需求零件料號。
- D:** 操作說明符號可更有效協助組裝者使用此說明書，請依說明書符號指示進行組裝步驟。

Example 說明範例

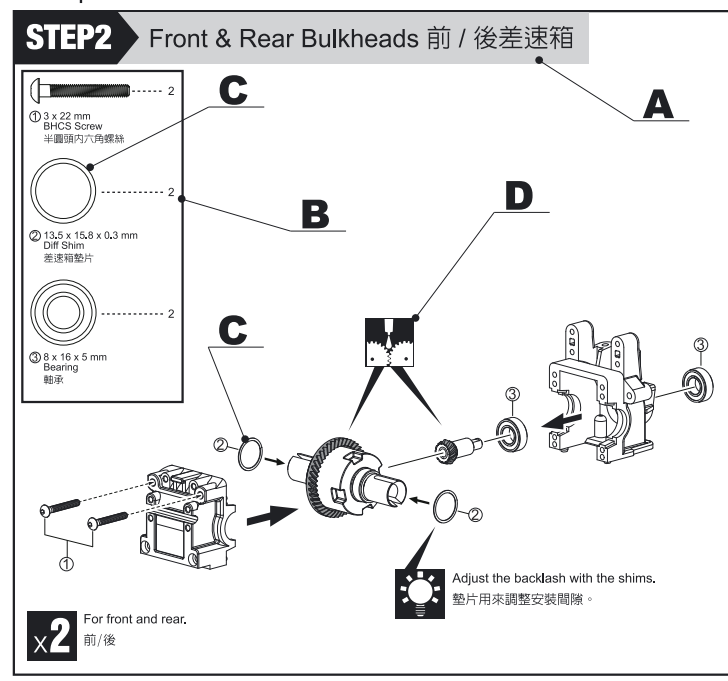

Symbols Used Throughout The Manual 符號說明



Apply C.A Glue
使用快乾膠黏合



Apply silicon oil
使用模型專用矽油



Assemble as many times as specified
依指示組裝所需數量



Assemble left and right side the same way
左右側組件相同



Assemble in right order
依標示順序組裝



Drill holes with the specified diameter
依標示尺寸鑽孔



Hint
組裝提示



Must be purchased separately
改裝品需另購



Cut off shaded portion
依標示部分裁切



Ensure smooth, non-binding movement when assembling
確認組件靈活度



Pay attention
組裝注意



Cut off excess
裁剪多餘部分





Apply threadlocker
使用螺絲防鬆膠




Apply grease
使用潤滑油膏(黃油)

STEP1 Front / Rear Differential 前 / 後差速器


x2 For front and rear.
前/後

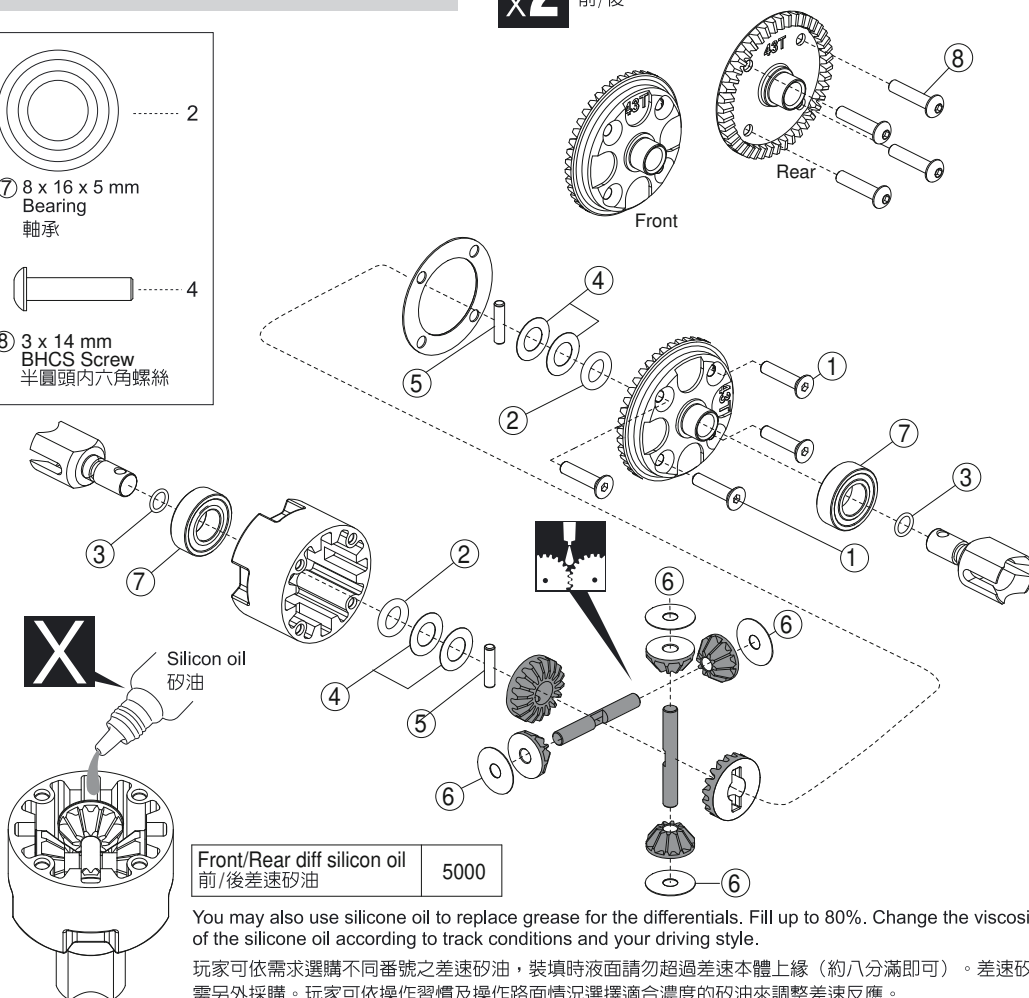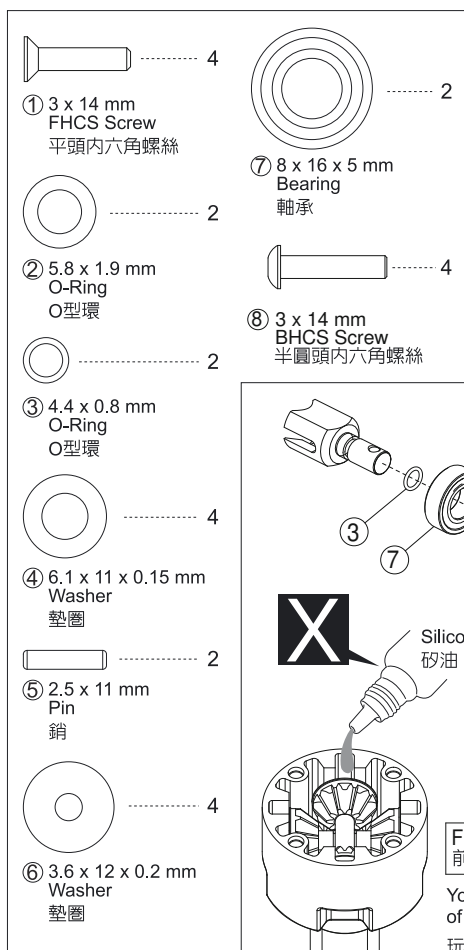

STEP2 Front / Rear Diff Housing 前 / 後差速箱

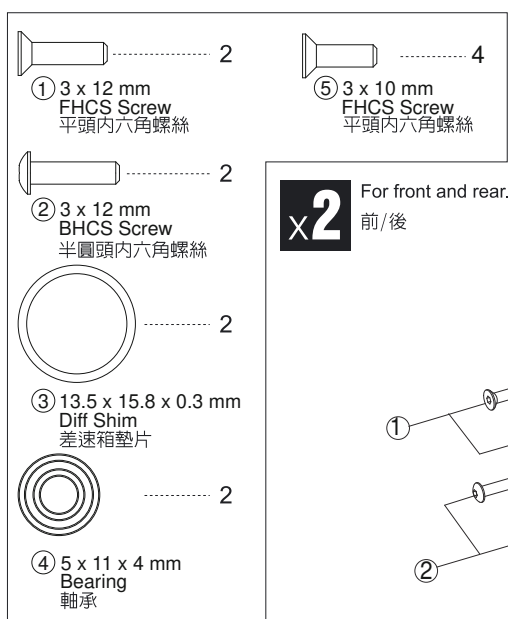

x2 For front and rear.
前/後

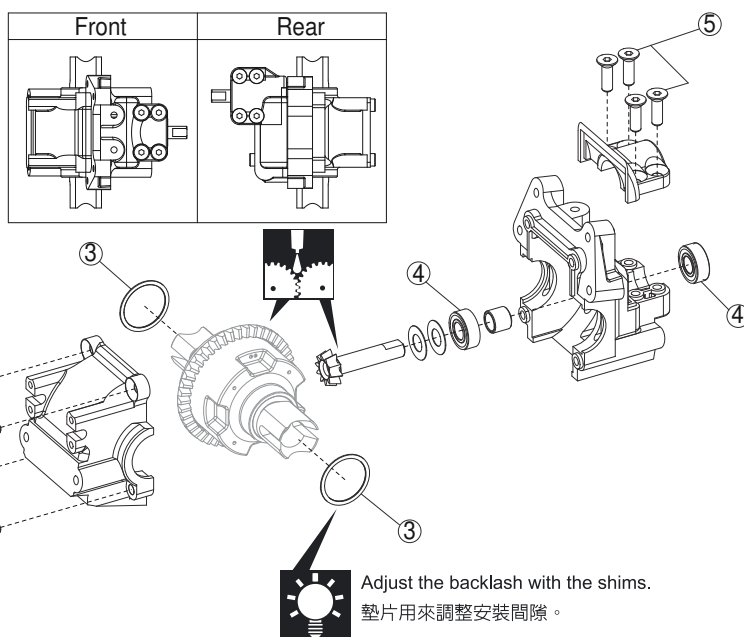

Apply grease
使用潤滑油膏(黃油)



Must be purchased
separately
改裝品需另購



 
Assemble as many times
as specified
依指示組裝所需數量




Hint
組裝提示

STEP3 Front / Rear Shock Tower 前 / 後避震器支架


FRONT
前




① 3 x 12 mm
FHCS Screw
平頭內六角螺絲

 


② 3 x 20 mm
FHCS Screw
平頭內六角螺絲

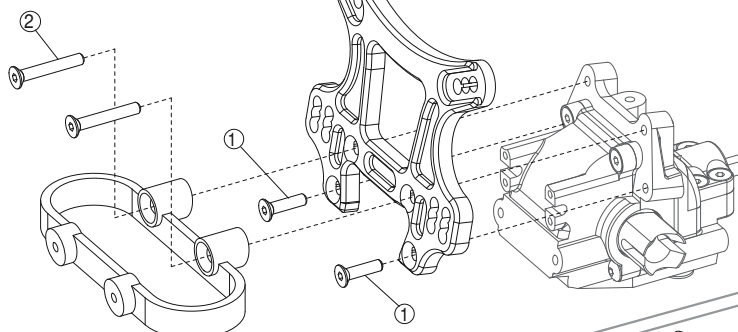


REAR
後

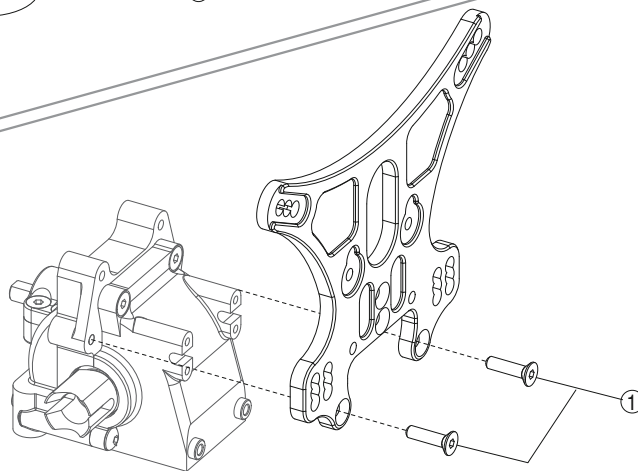

 STEP4 Center Differential 中央差速組



① 3 x 14 mm
FHCS Screw
平頭內六角螺絲

 

⑤ 2.5 x 11 mm
Pin
銷



② 5.8 x 1.9 mm
O-Ring
O型環



⑥ 3.6 x 12 x 0.2 mm
Washer
墊圈




③ 4.4 x 0.8 mm
O-Ring
O型環



⑦ 8 x 16 x 5 mm
Bearing
軸承



④ 6.1 x 11 x 0.15 mm
Washer
墊圈

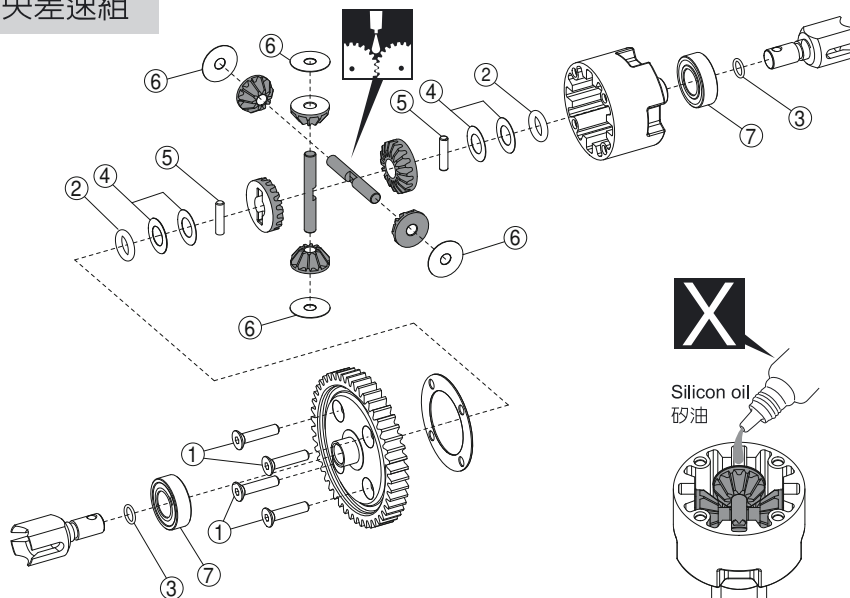


You may also use silicone oil to replace grease for the differentials. Fill up to 80%. Change the viscosity of the silicone oil according to track conditions and your driving style.

玩家可依需求選購不同番號之差速矽油，裝填時液面請勿超過差速本體上緣（約八分滿即可）。差速矽油需另外採購。玩家可依操作習慣及操作路面情況選擇適合濃度的矽油來調整差速反應。



Silicon oil
矽油

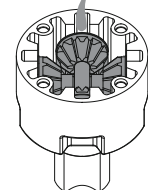

Center diff silicon oil
中差速矽油

5000





Apply grease
使用潤滑油膏(黃油)



Must be purchased separately
改裝品需另購


STEP5 Center Gearbox 中央齒輪箱

-  2
- ① 3 x 8 mm FHCS Screw
平頭內六角螺絲
-  2
- ② 3 x 12 mm SHCS Screw
內六角螺絲
-  1
- ③ 4 x 3 mm Set Screw
無頭內六角螺絲
-  2
- ④ 3 x 6 x 0.5 mm Washer
墊圈

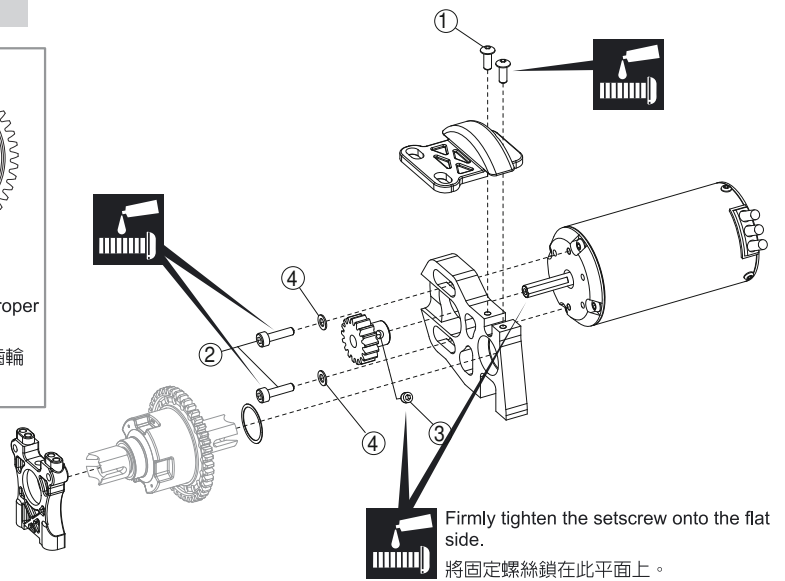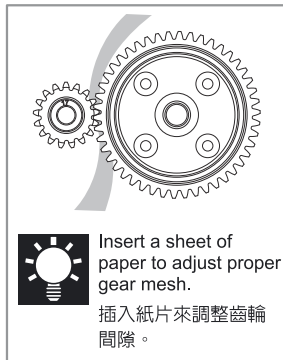

STEP6 Guard & Battery Tray 防撞板/電池盒

-  7
- ① 3 x 8 mm FHCS Screw
平頭內六角螺絲
-  1
- ② 3 x 10 mm FHCS Screw
平頭內六角螺絲
-  2
- ③ 4 x 8 mm BHCS Screw
半圓頭內六角螺絲

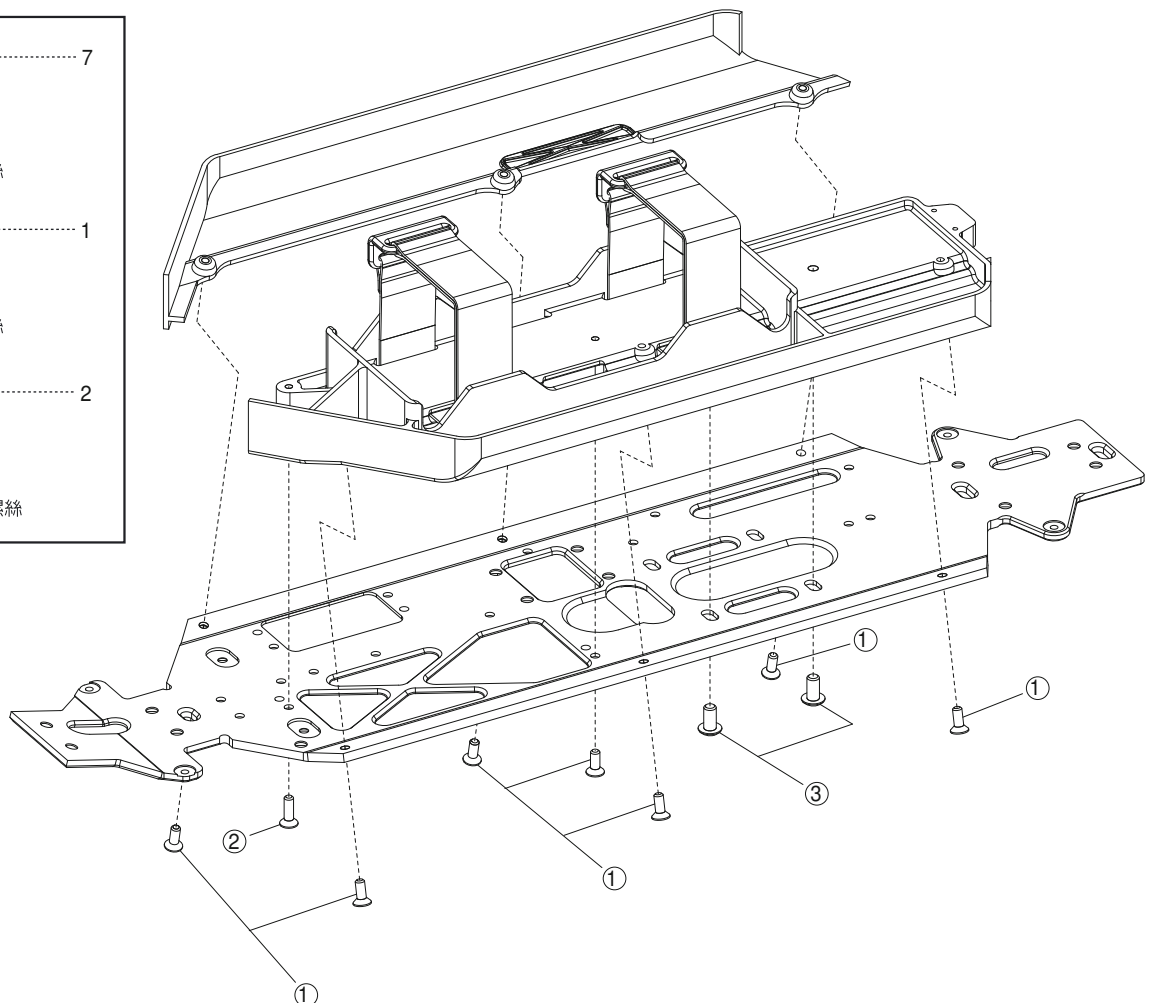


Apply threadlocker
使用螺絲防鬆膠




Hint
組裝提示

STEP7 Turnbuckle 拉桿


STEERING TURNBUCKLE

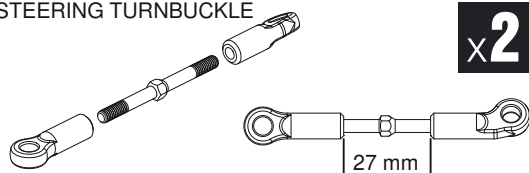

SERVO TIE ROD

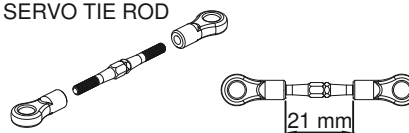


CAMBER TURNBUCKLE

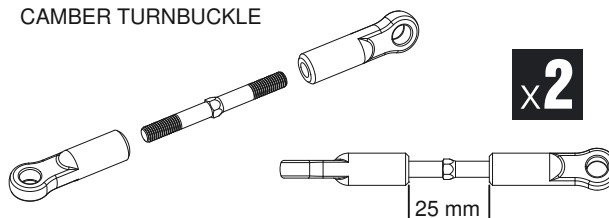


STEP8 Steering System 轉向組 (1)



 ① 6 x 10 x 3 mm
Bearing
軸承



② 5 x 8 x 2.5 mm
Bearing
軸承

 


③ 3 x 16 mm
FHCS Screw
平頭內六角螺絲



④ 3 x 10 mm
FHCS Screw
平頭內六角螺絲




⑤ M3 Lock Nut
止鬆螺帽

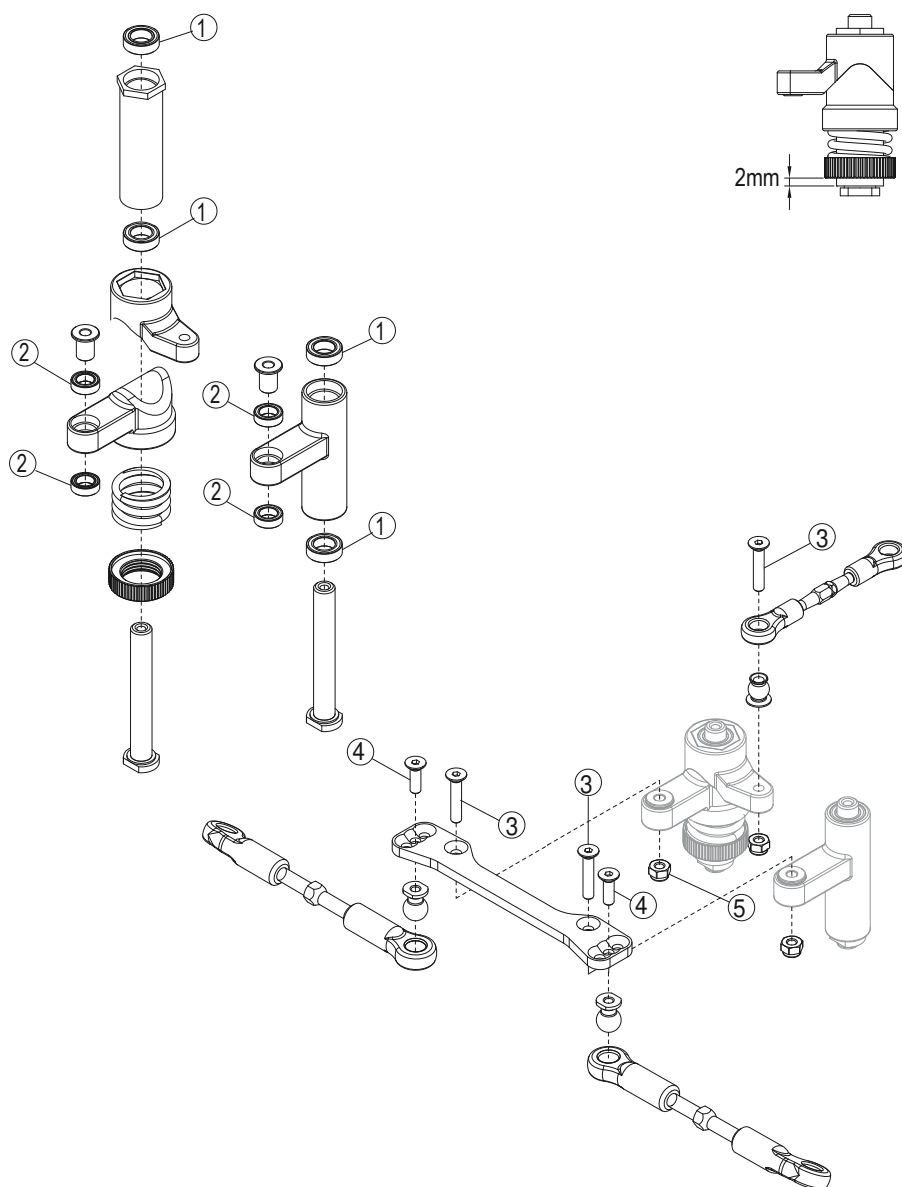


x2

Assemble as many times as specified
依指示組裝所需數量


STEP9 Steering System 轉向組 (2)

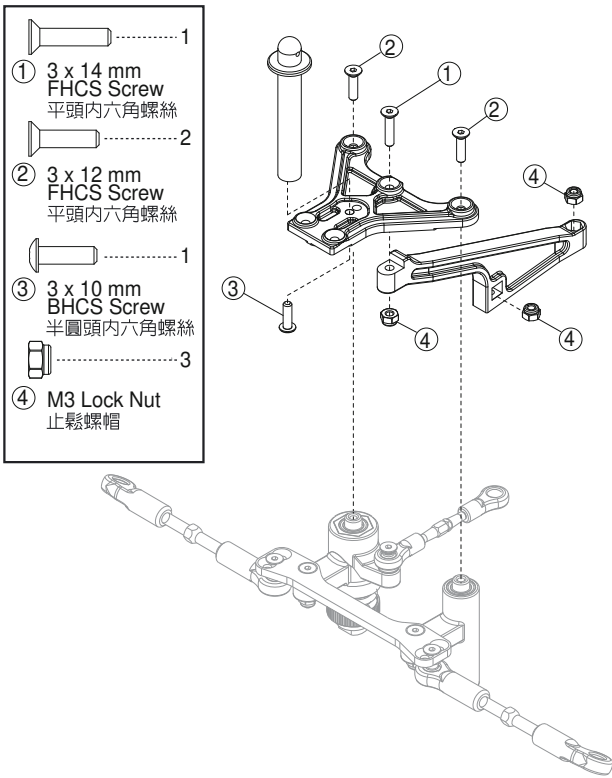

STEP10 Front Suspension 前懸吊 (1)

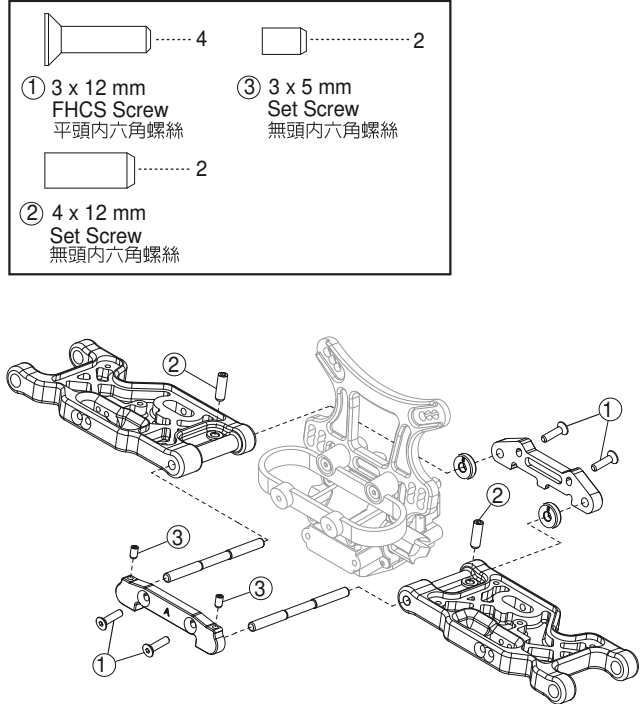

STEP11 Front Suspension 前懸吊 (2)

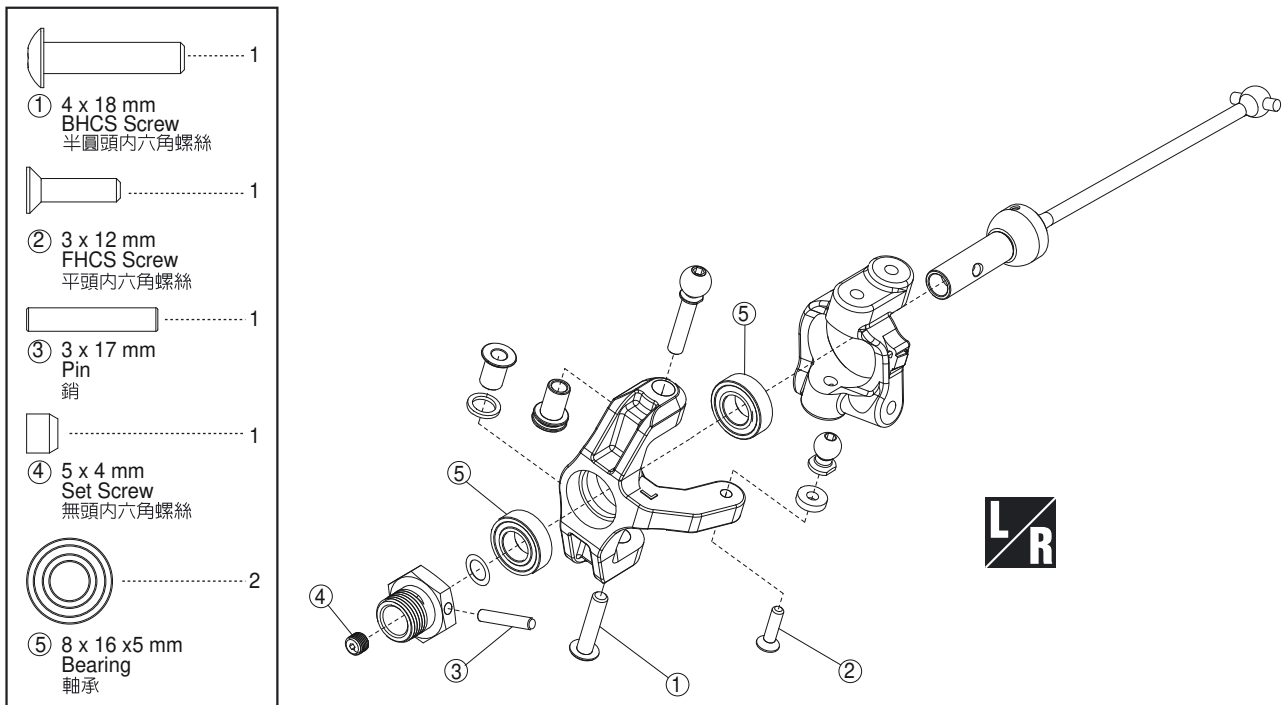



Assemble left and right side the same way
左右側組件相同

STEP12 Front Suspension 前懸吊 (3)

- ① 4 x 18 mm BHCS Screw
半圓頭內六角螺絲
- ② 4 mm Lock Nut
止鬆螺帽





Holes for mounting.
安裝孔位。

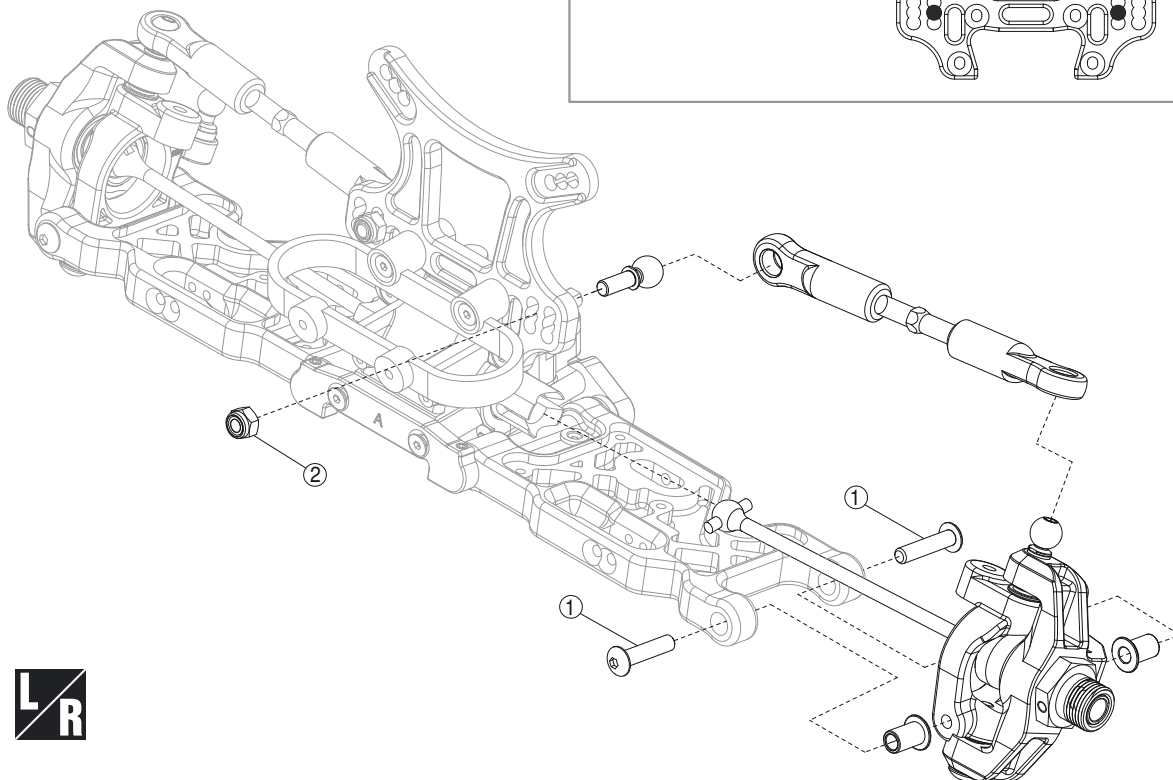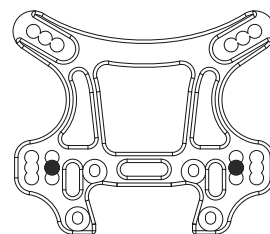

STEP13 Sway Bar 防傾桿

- ① 3 x 3 mm Set Screw
無頭內六角螺絲

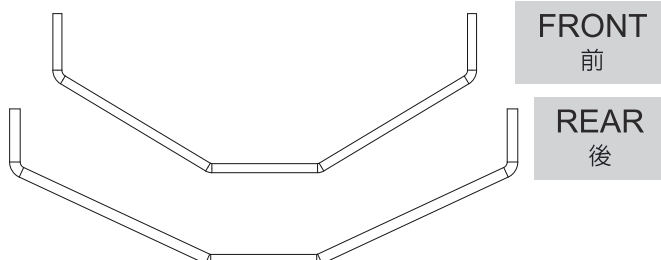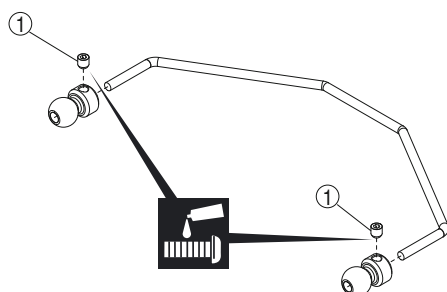

Hint
組裝提示

 



Assemble left and right side the same way
左右側組件相同



Apply threadlocker
使用螺絲防鬆膠


STEP14 Front Sway Bar 前防傾桿

-  2
- ① 3 x 20 mm
FHCS Screw
平頭內六角螺絲
-  4
- ② 2 x 8 mm
SHCS Screw
內六角螺絲
-  2
- ③ 3 x 5 mm
Set Screw
無頭內六角螺絲

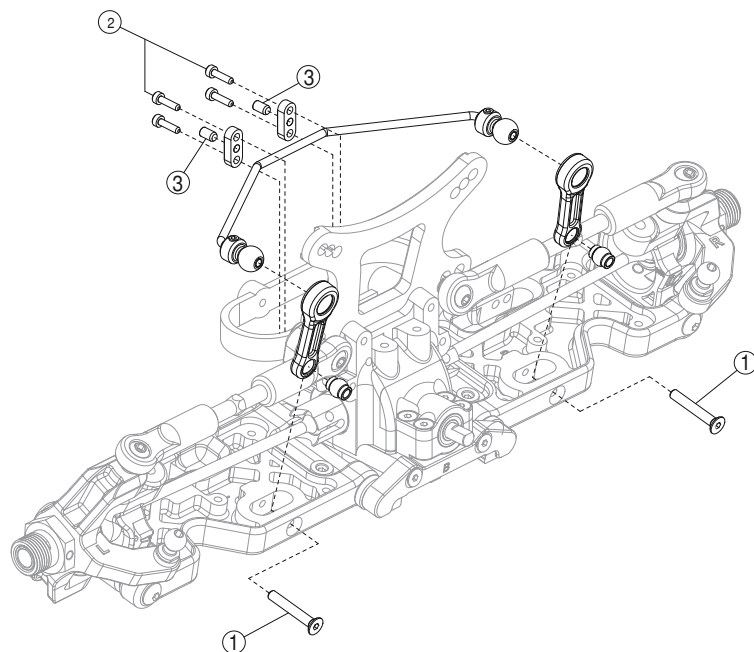


STEP15 Front Bumper 前保險桿


-  4
- ① 4 x 12 mm
FHCS Screw
平頭內六角螺絲
-  2
- ② 3 x 8 mm
BHCS Screw
半圓頭內六角螺絲

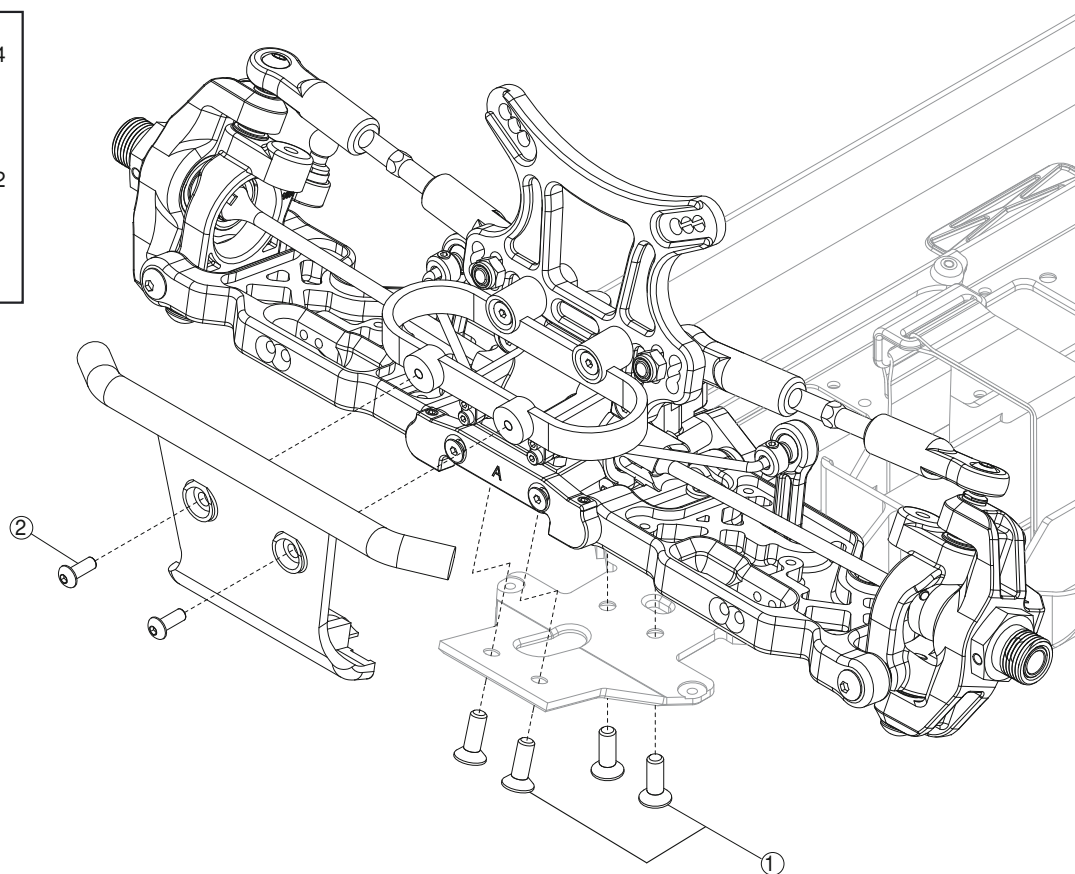

STEP16 Rear Turnbuckle 後拉桿

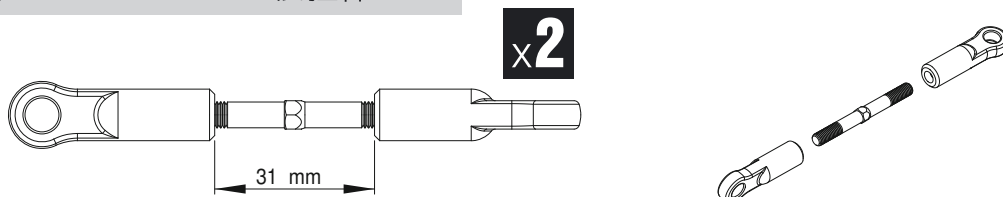

 
STEP17 Rear Suspension 後懸吊 (1)

-  4
- ① 3 x 12 mm
FHCS Screw
平頭內六角螺絲
-  2
- ② 4 x 12 mm
Set Screw
無頭內六角螺絲


Hinge Pin Bushing
擺臂銷軸套




Hole down
孔朝下

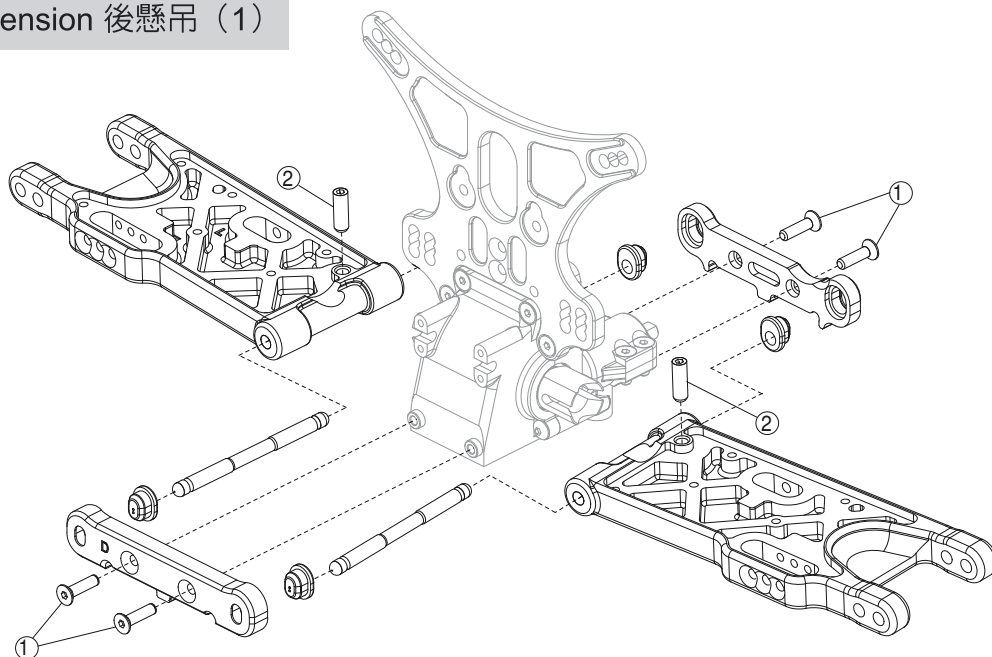


 
STEP18 Rear Suspension 後懸吊 (2)

-  10
- ① 3 x 8 mm
BHCS Screw
半圓頭內六角螺絲


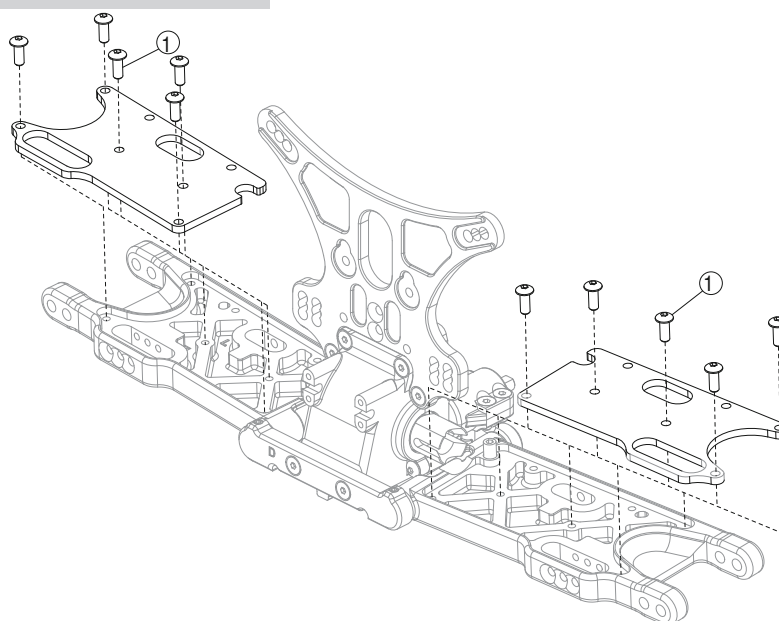


x2 Assemble as many times as specified
依指示組裝所需數量



STEP19 Rear Suspension 後懸吊 (3)

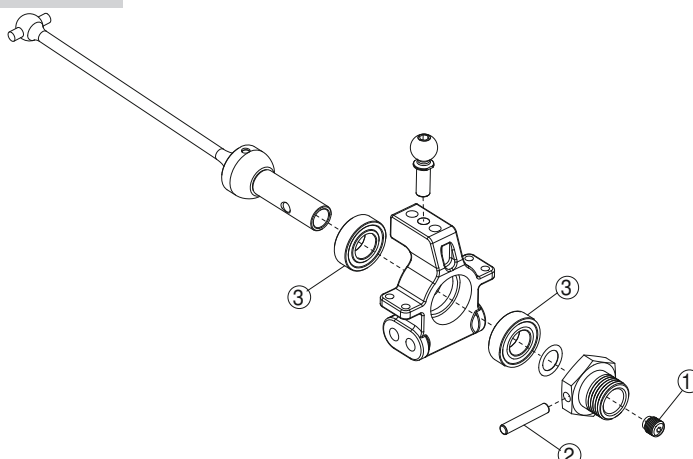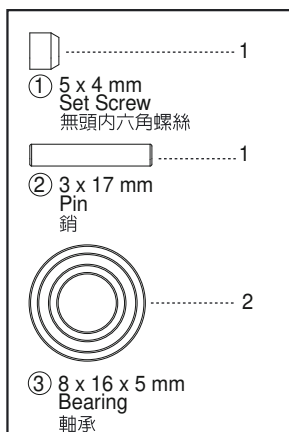

STEP20 Rear Suspension 後懸吊 (4)

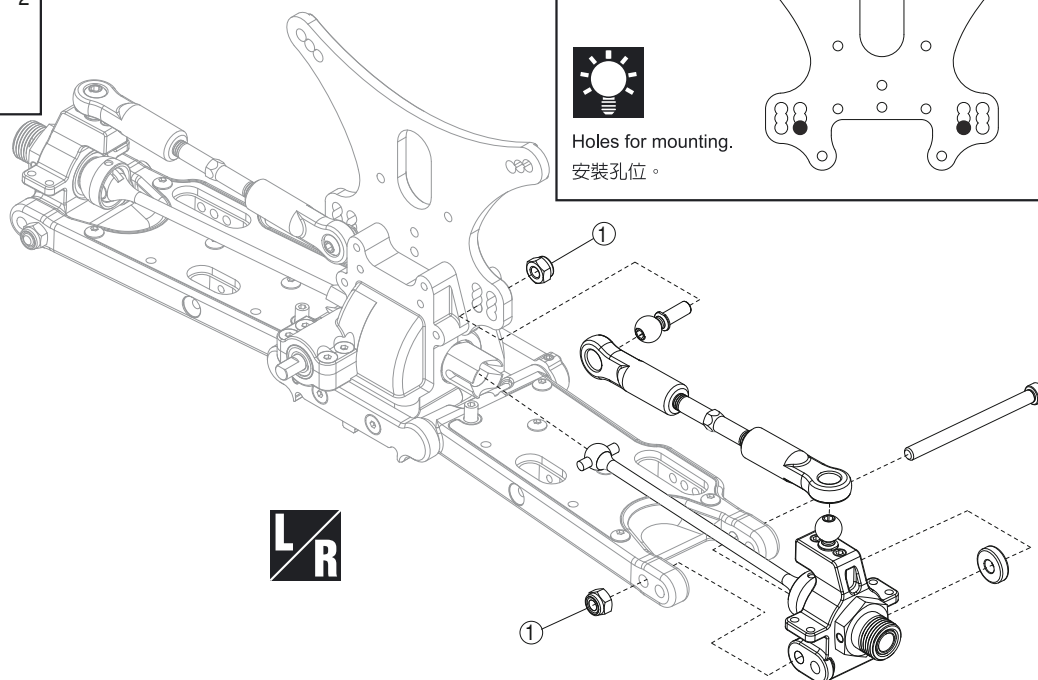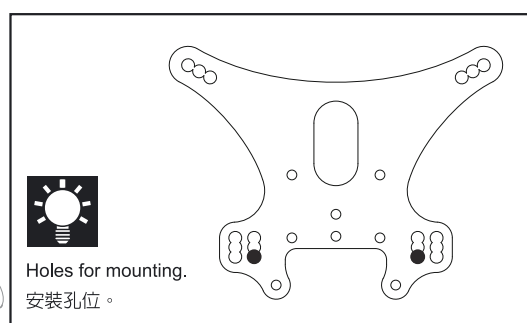

STEP21 Rear Suspension 後懸吊 (5)

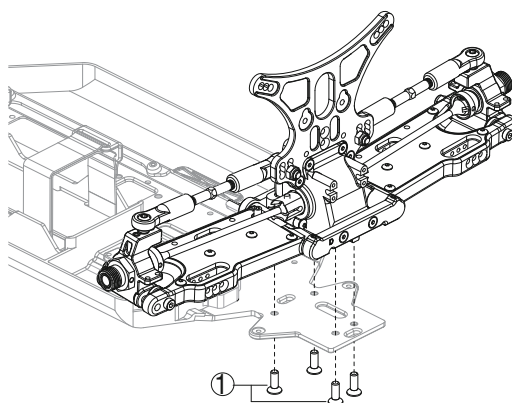
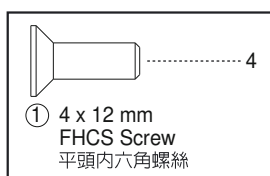


Assemble left and right side the same way
左右側組件相同




Hint
組裝提示



STEP22 Rear Sway Bar 後防傾桿

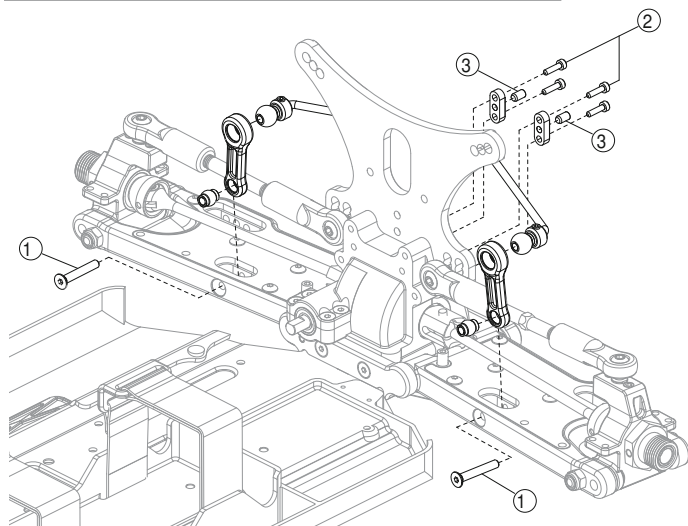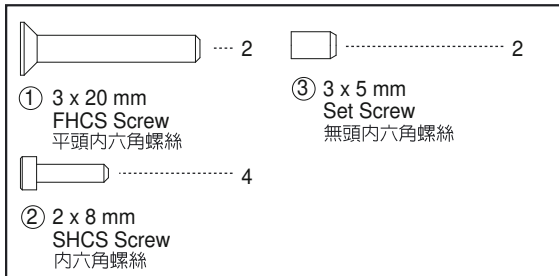

STEP23 Mud Guard 擋泥板

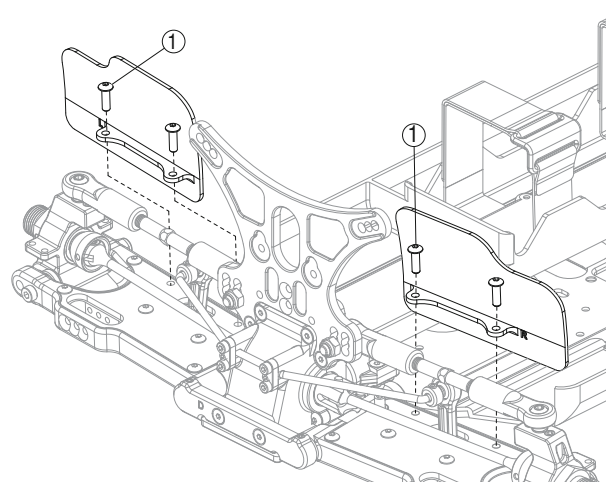


STEP24 Drivetrain 傳動軸

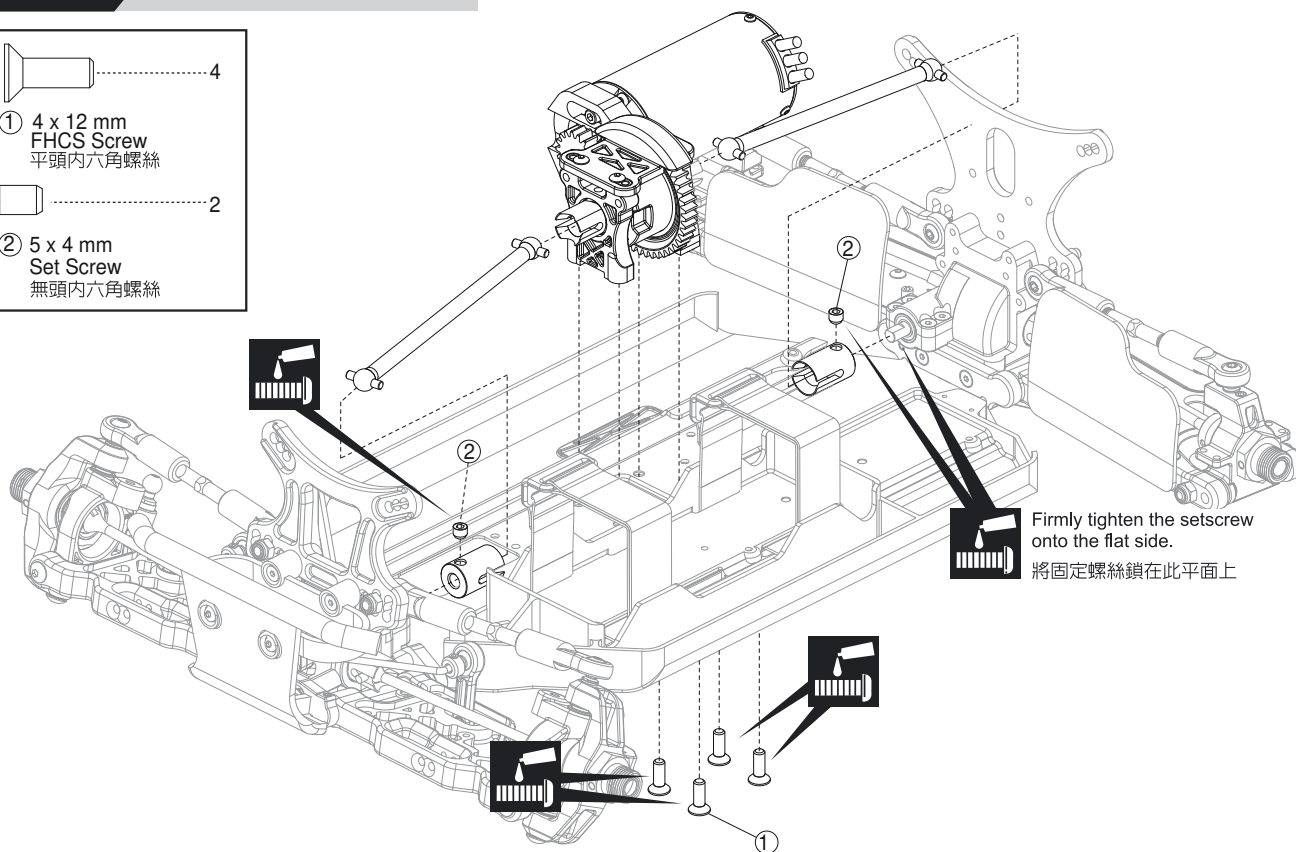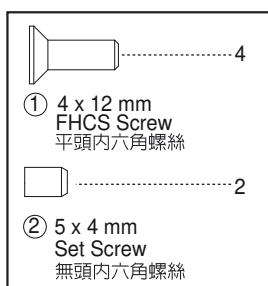

Apply threadlocker
使用螺絲防鬆膠


STEP27 Steering Servo 轉向伺服機 (2)

- ① 3 x 18 mm
BHCS Screw
半圓頭內六角螺絲
- ② 3 x 12 mm
FHCS Screw
平頭內六角螺絲
- ③ M3 Lock Nut
止鬆螺帽

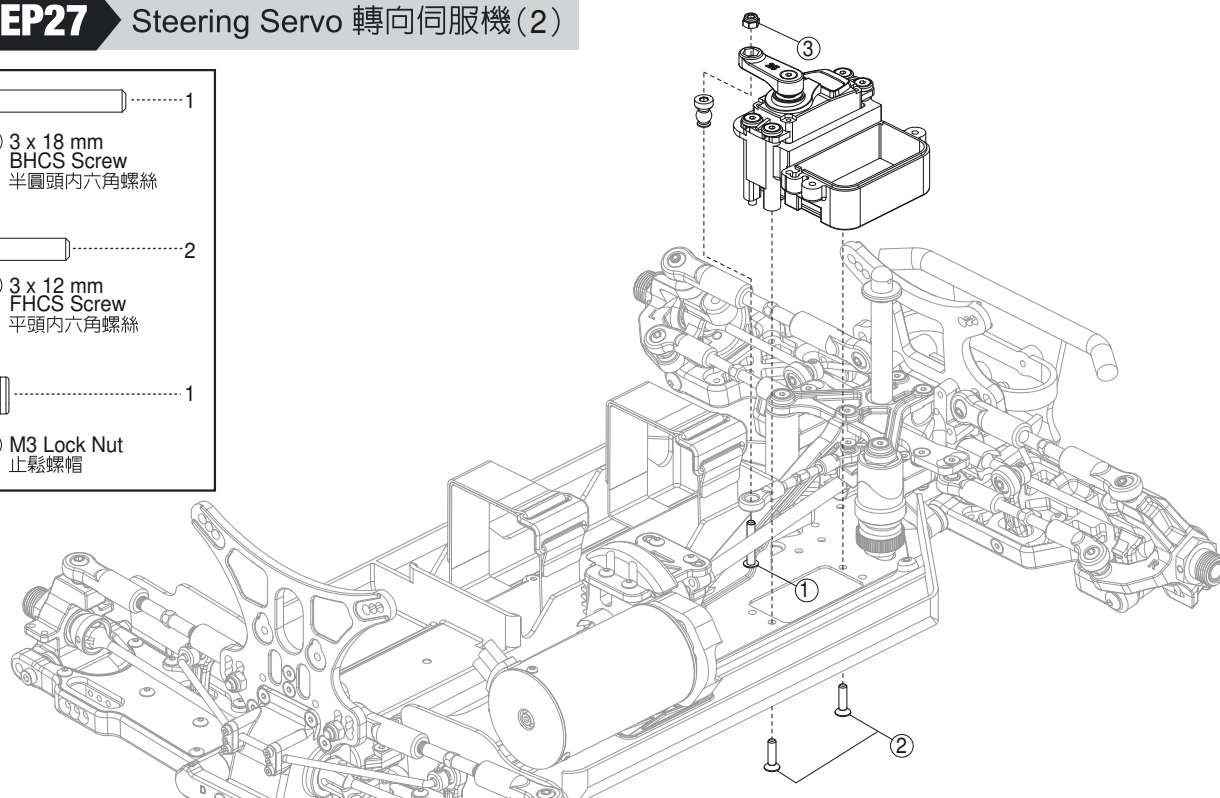


STEP28 Chassis Brace 後底盤支撐座

- ① 3 x 14 mm
FHCS Screw
平頭內六角螺絲
- ② 4 x 8 mm
BHCS Screw
半圓頭內六角螺絲
- ③ M3 Lock Nut
止鬆螺帽



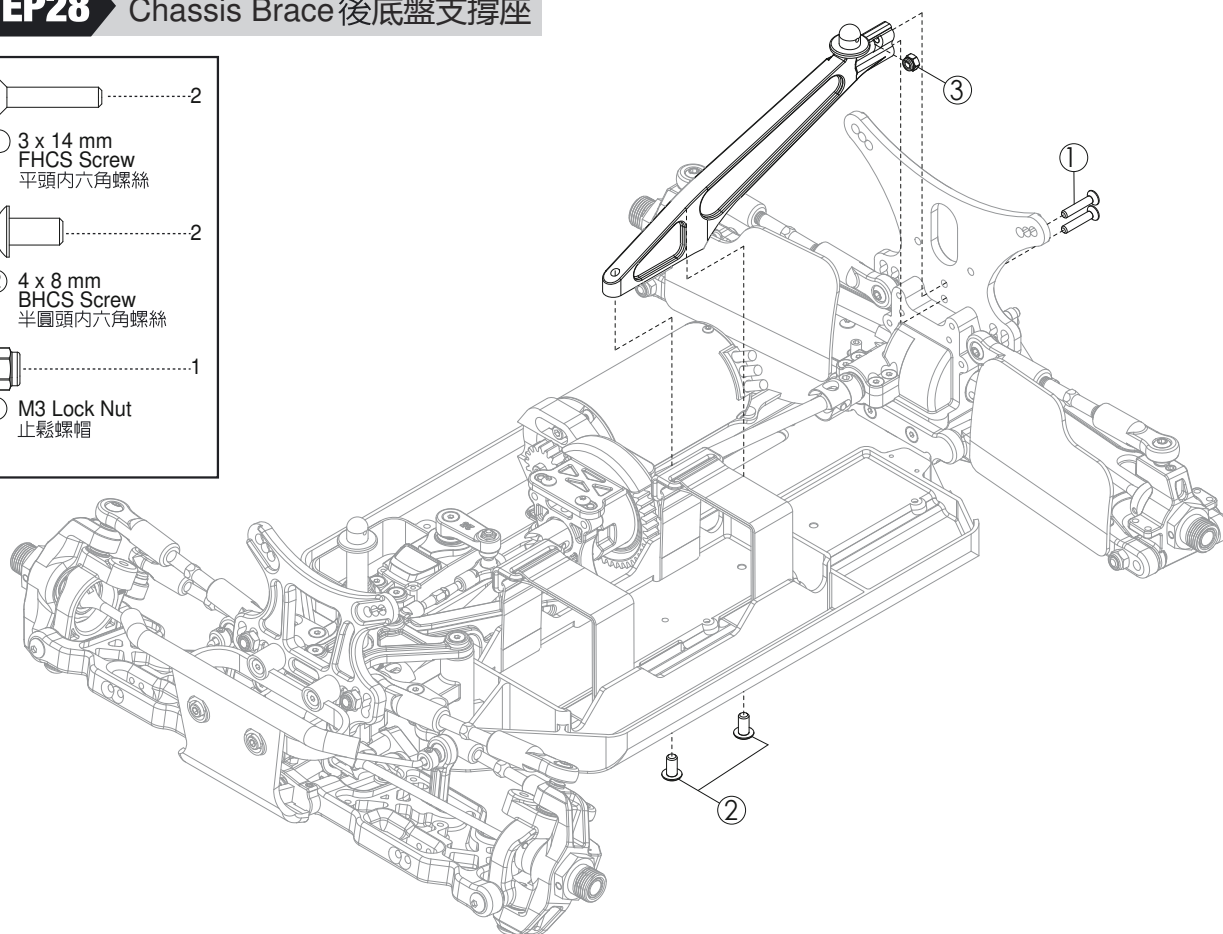


STEP29 Shock Assembly 避震組 (1)


- ① 11 x 1 mm O-Ring O型環
- ② 3.68 X 1.78 mm O-Ring O型環
- ③ 2.6 x 6 x 0.5 mm Washer 墊圈
- ④ 2.5 x 6 mm BHCS Screw 半圓頭內六角螺絲

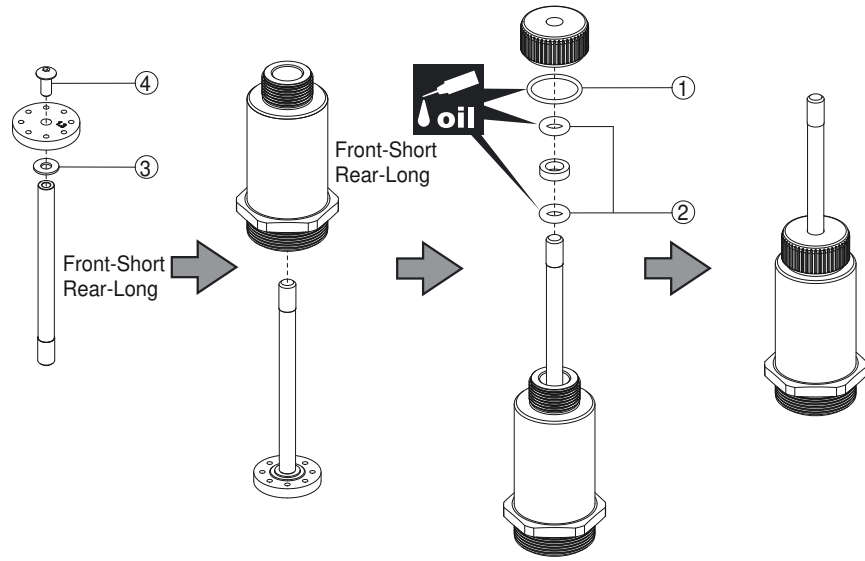

x4

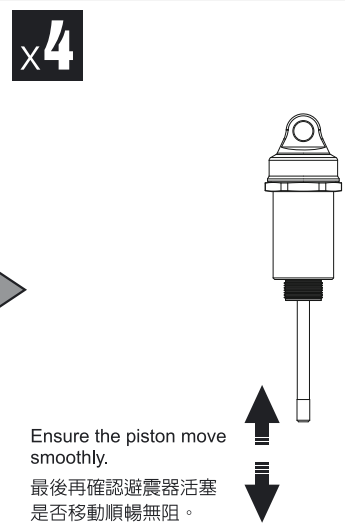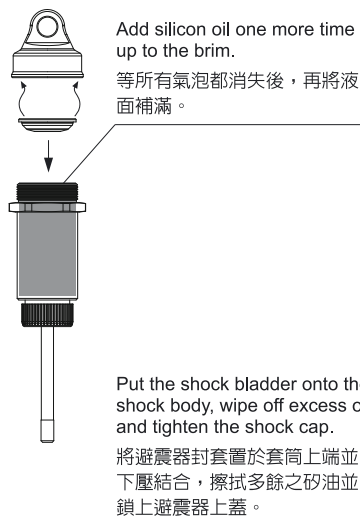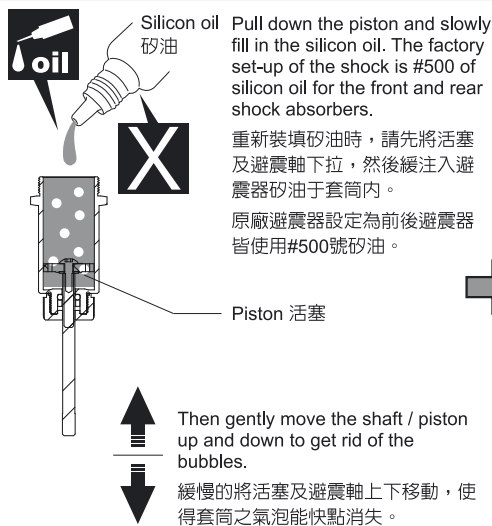

x4

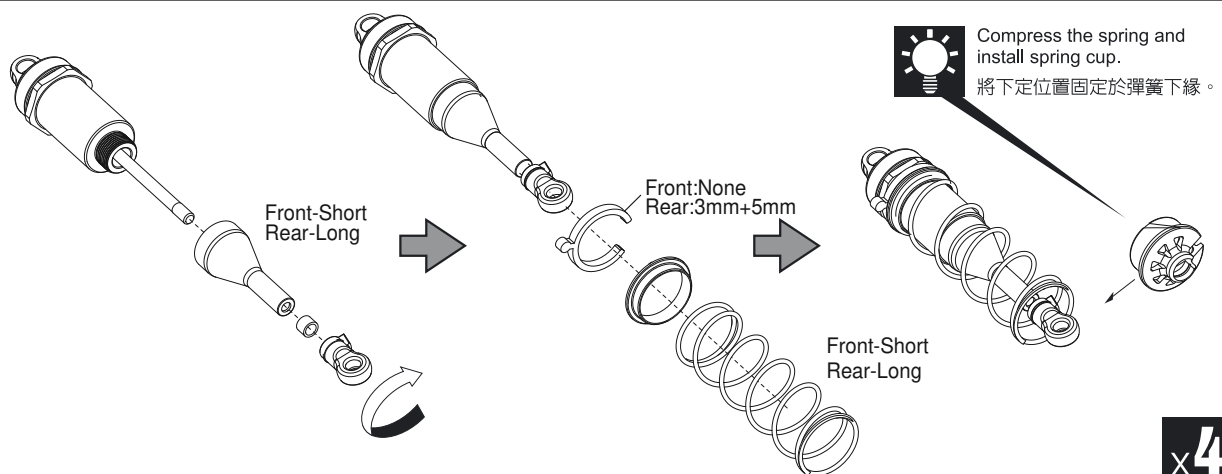


x4





x4 Assemble as many times as specified
依指示組裝所需數量




STEP30 Shock Assembly 避震組 (2)

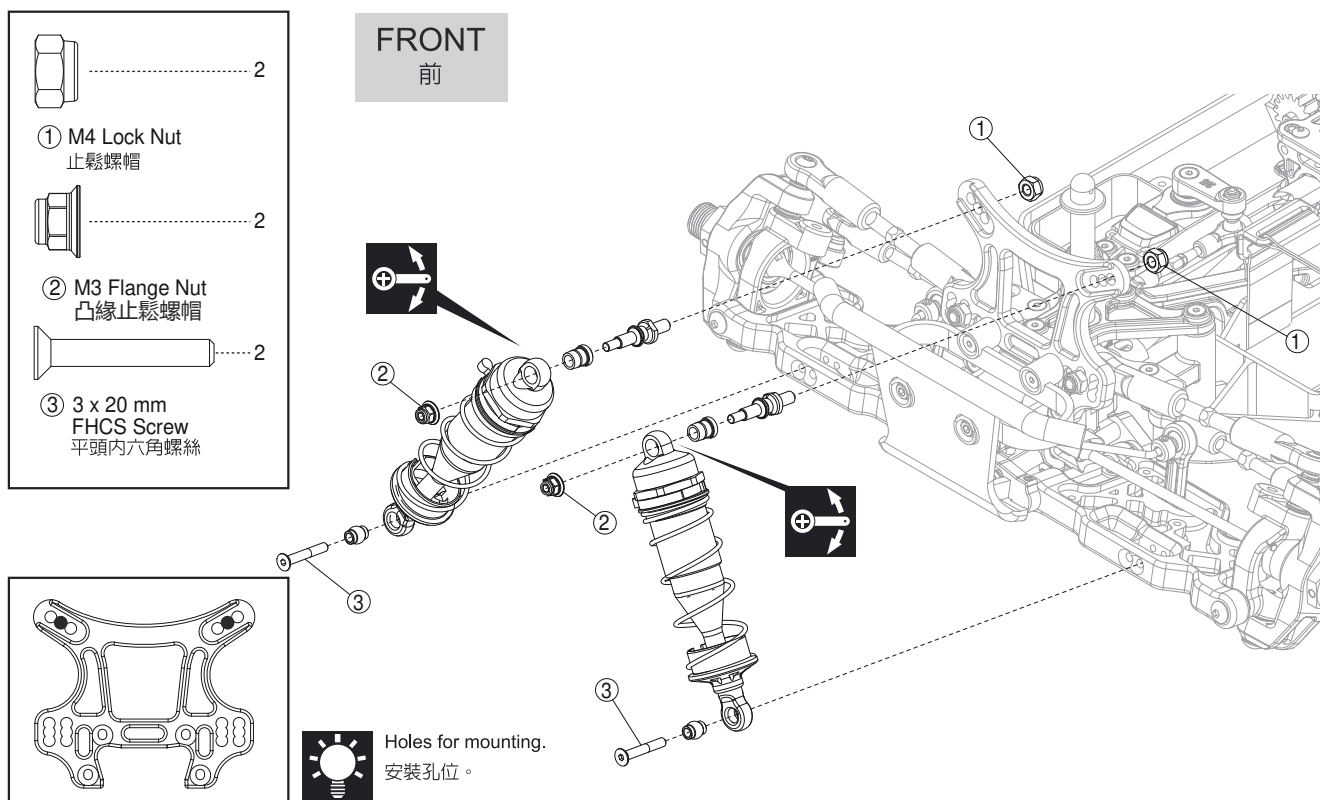

 
STEP31 Shock Assembly 避震組 (3)

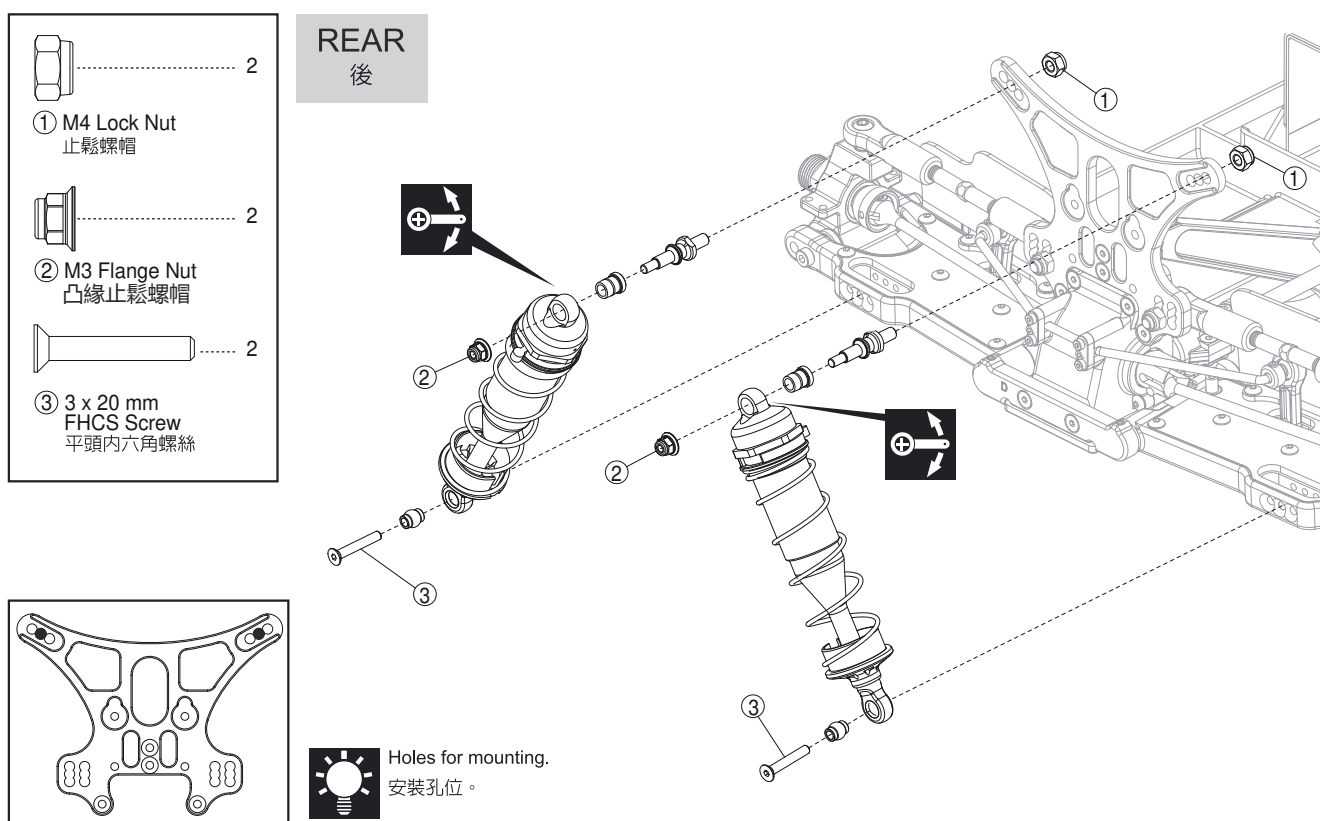

STEP32 Battery Installation 電池安裝

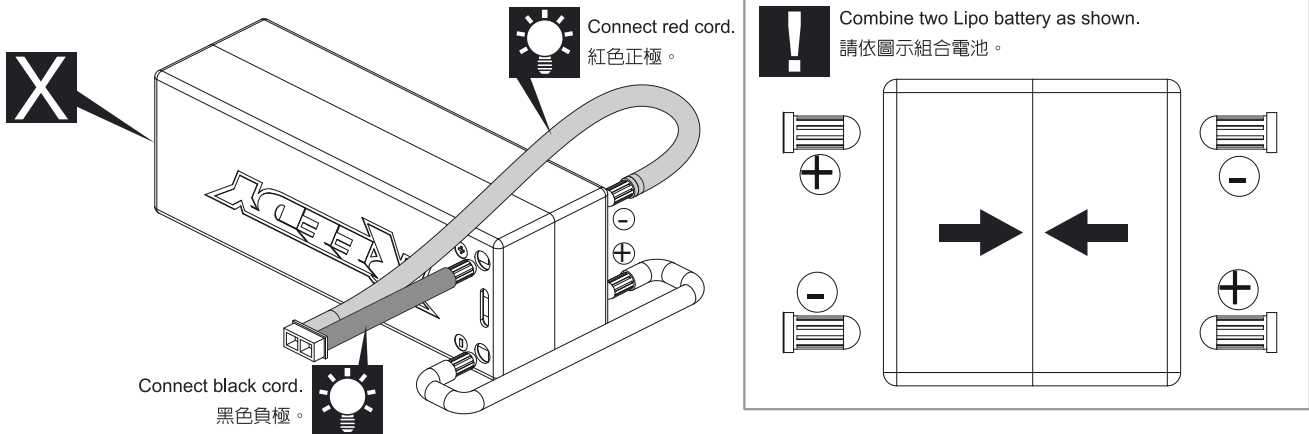

STEP33 Wire Routing 連接線

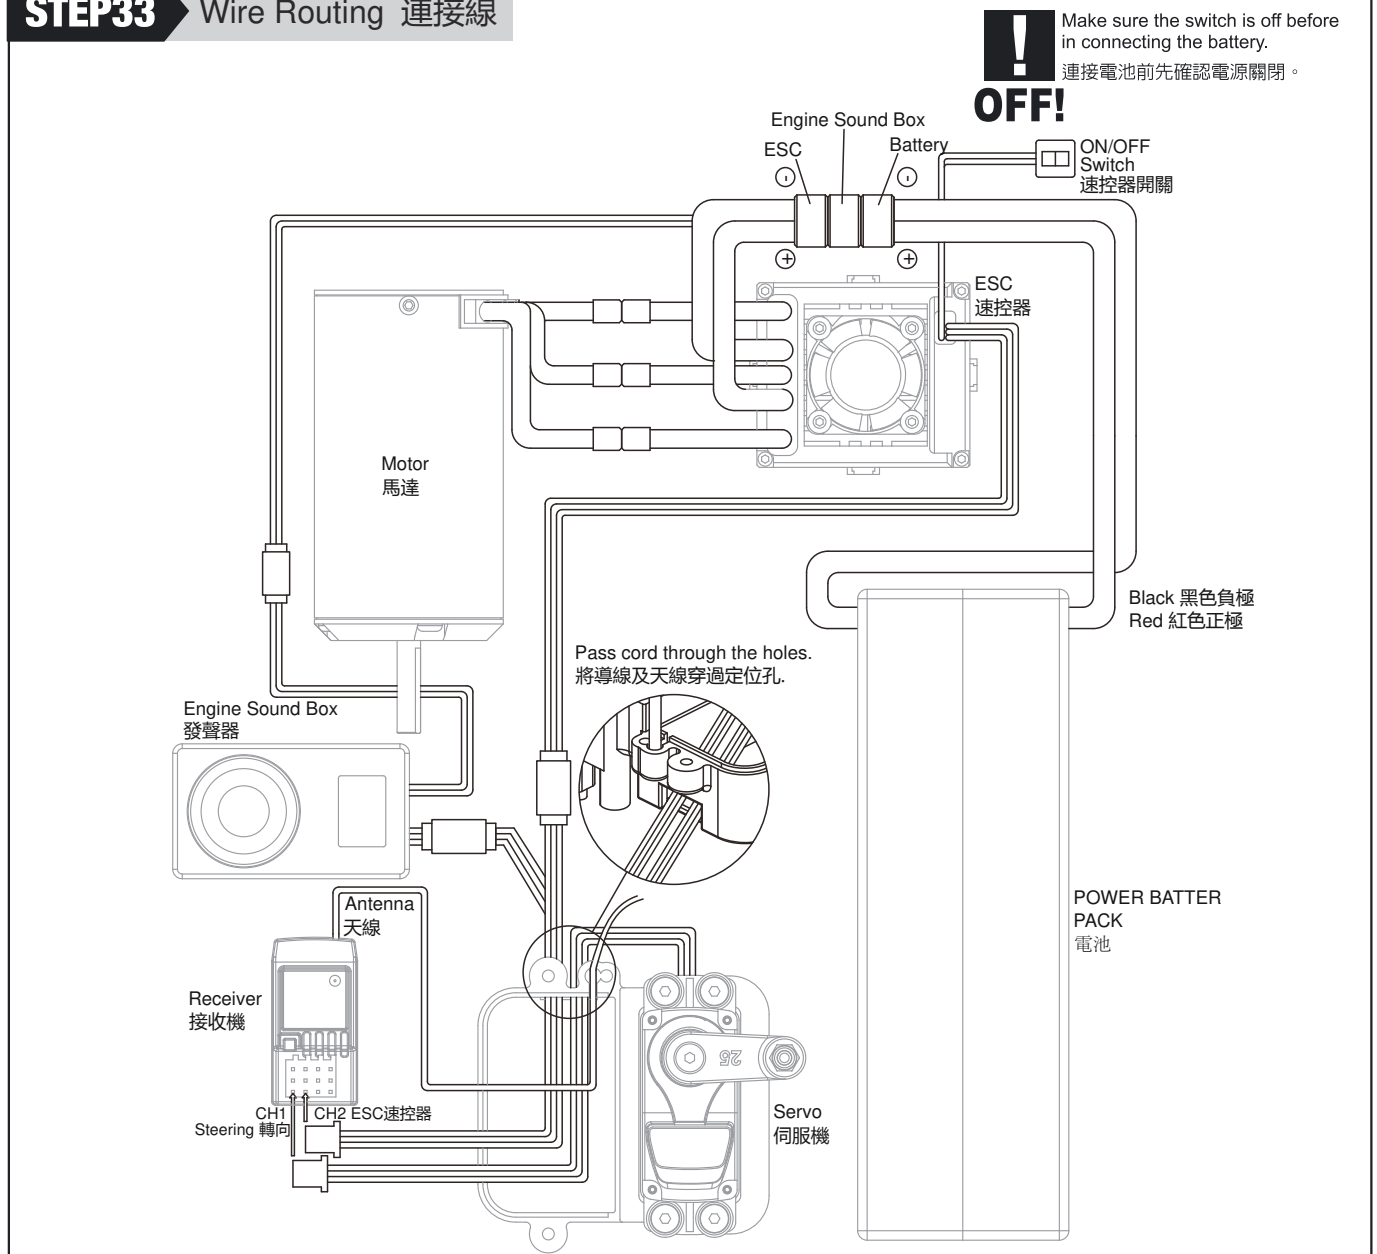

Pay attention
組裝注意




Hint
組裝提示




Must be purchased separately
改裝品需另購

STEP34 ESC, Receiver 速控器, 接收機

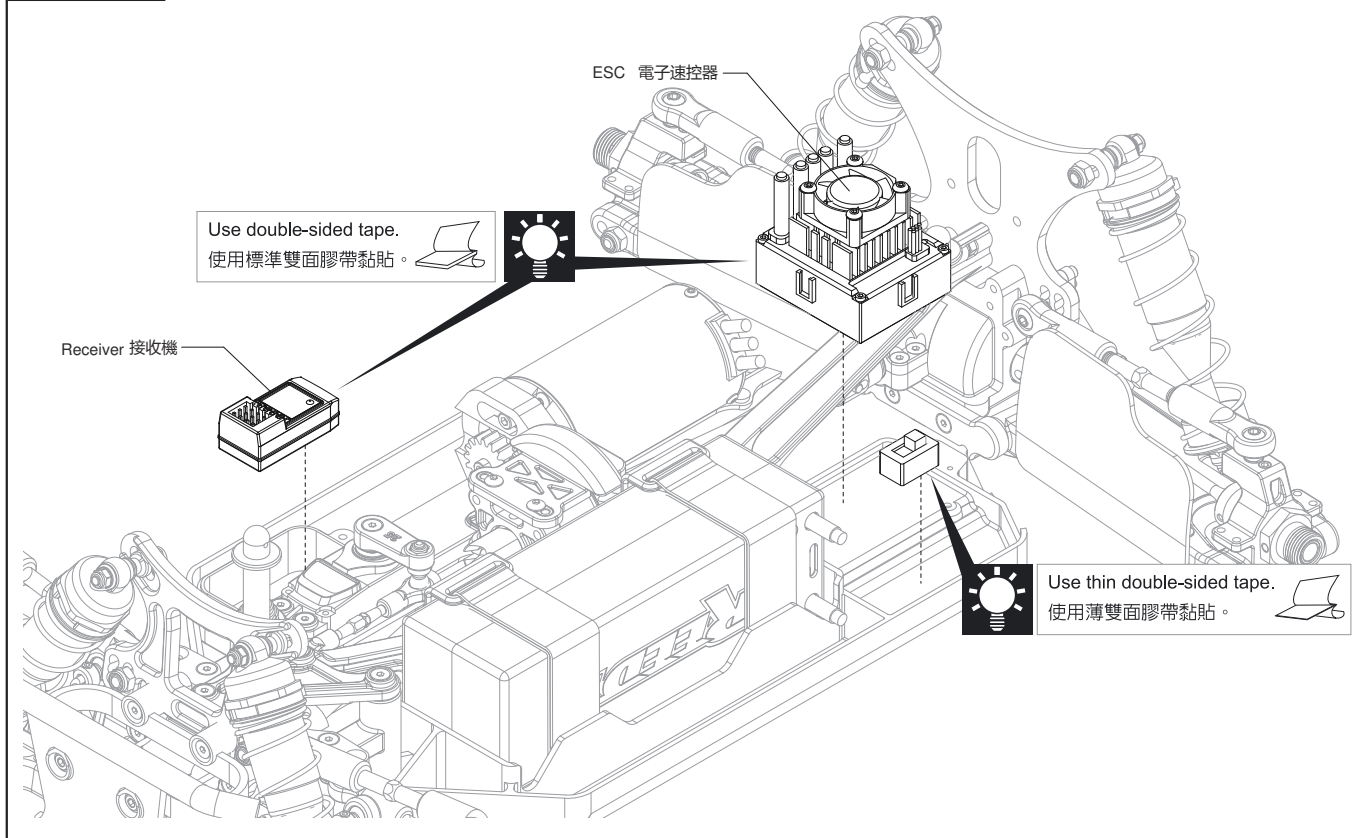

STEP35 Radio Antenna 接收天線

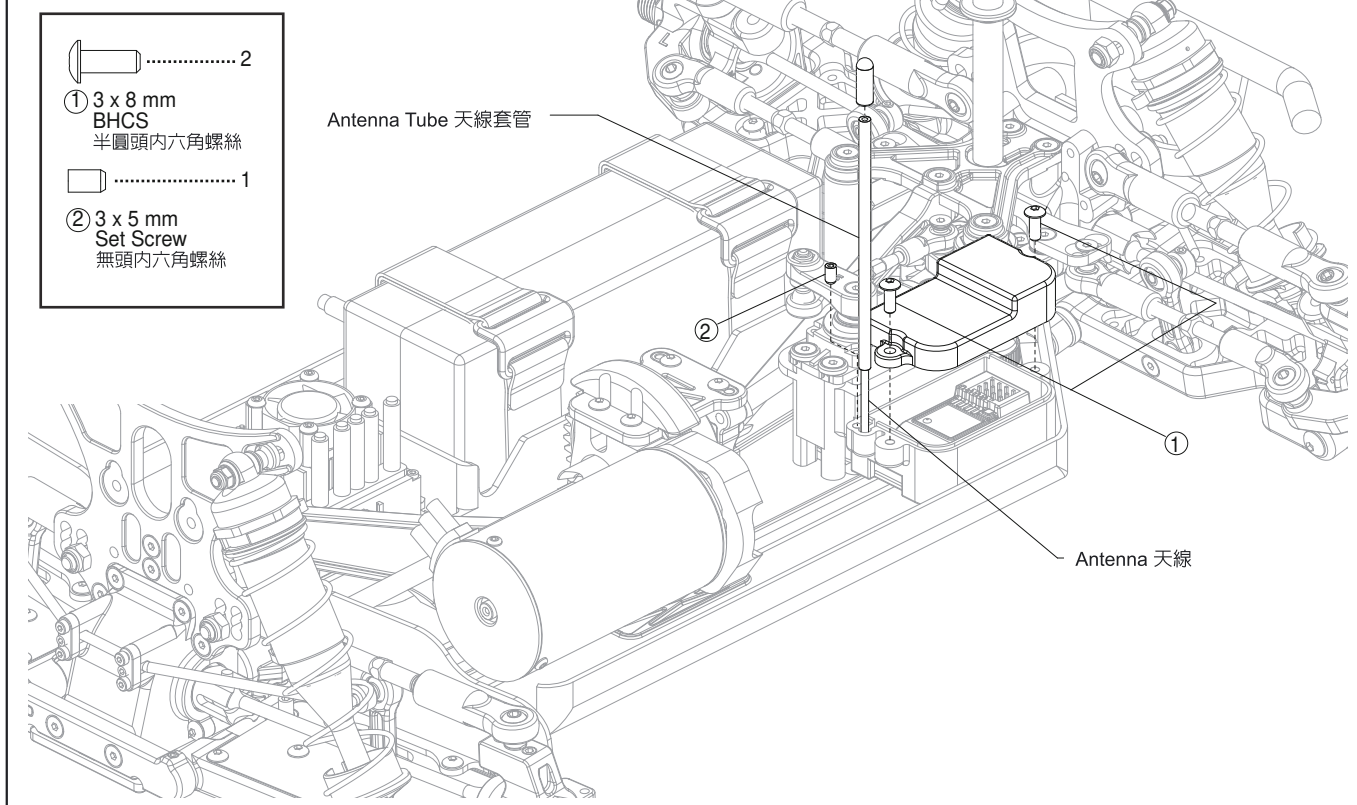


Hint
組裝提示

STEP36 Engine Sound Box 發聲器 (1)




① 3 x 10 mm
BHCS Screw
半圓頭內六角螺絲

Use double-sided tape.
使用標準雙面膠帶黏貼。



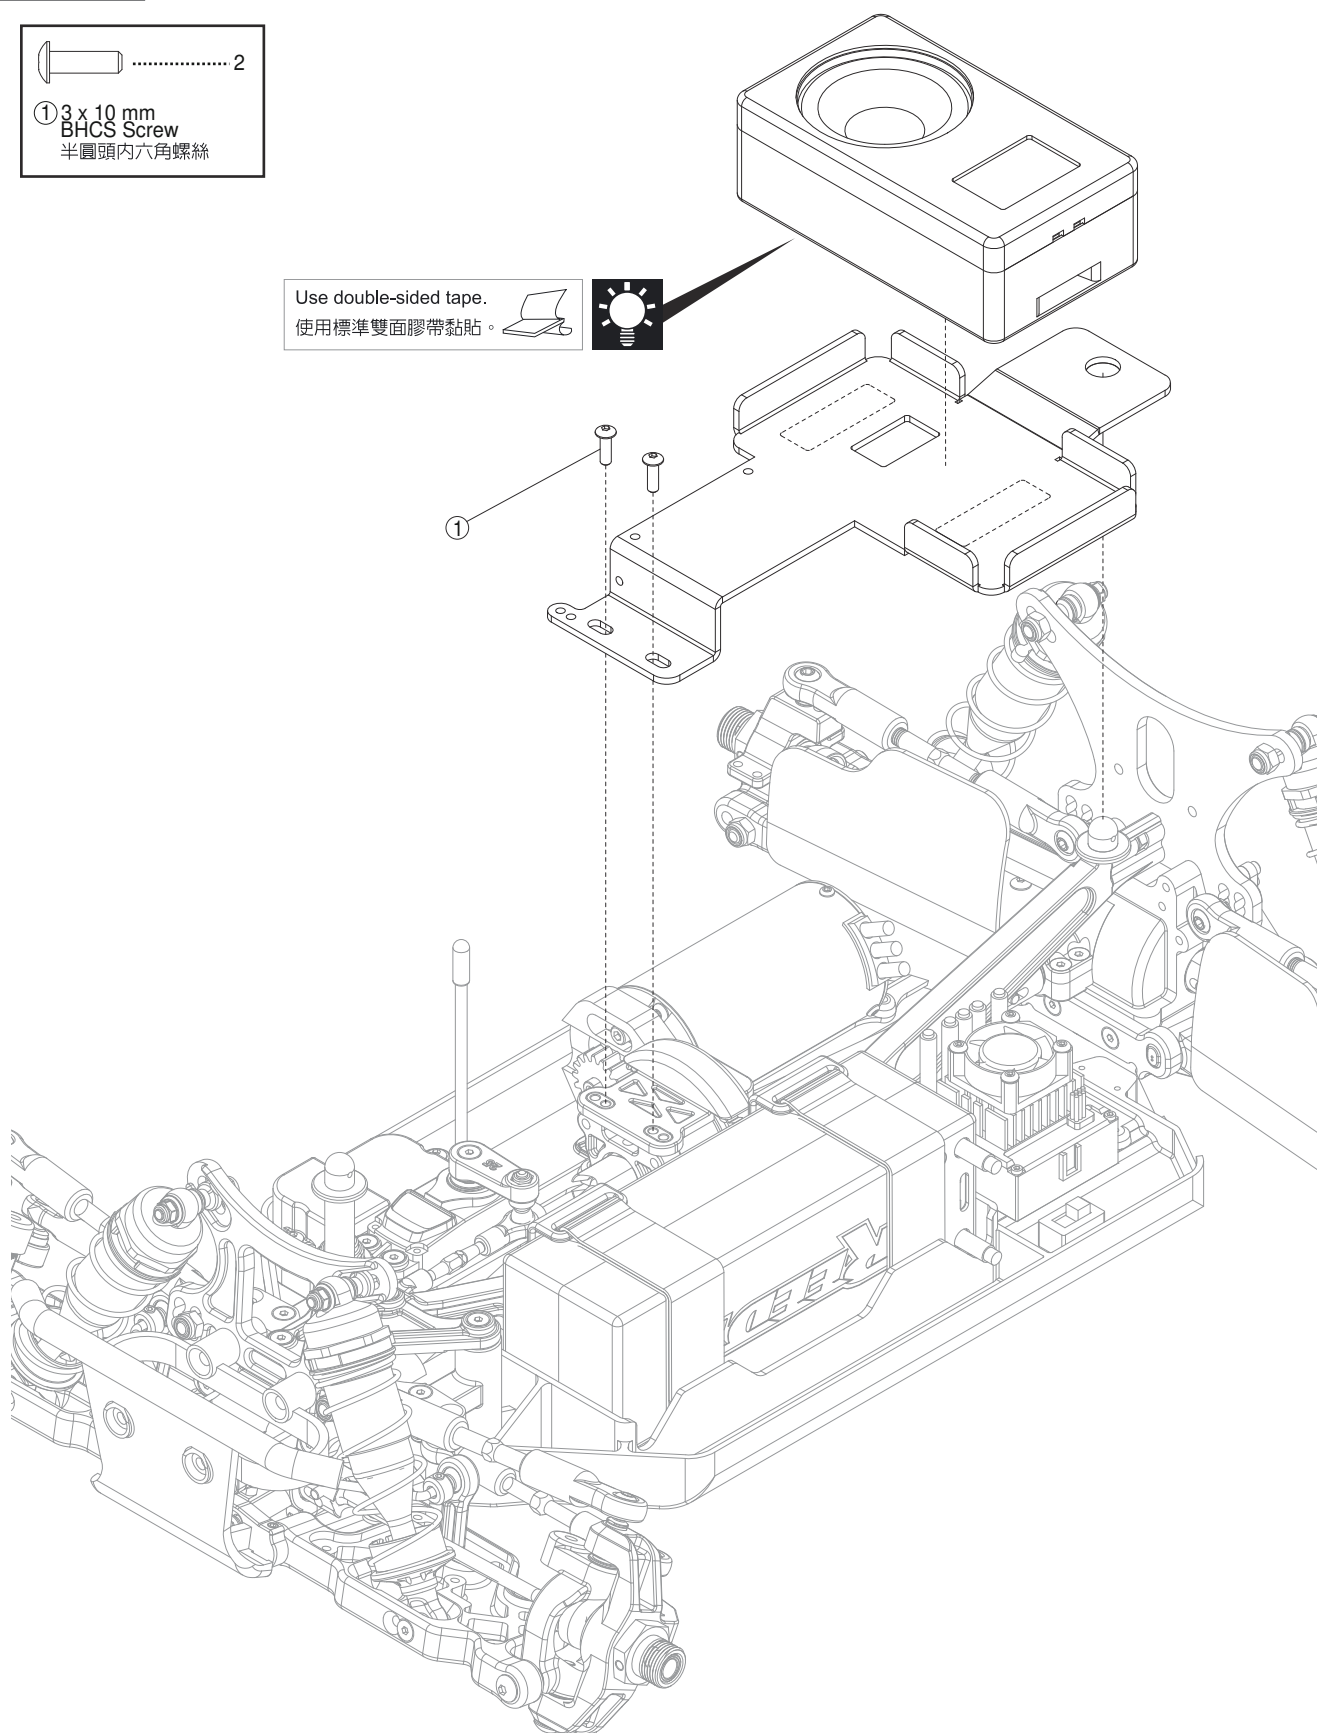



Hint
組裝提示

STEP37 Engine Sound Box 發聲器 (2)

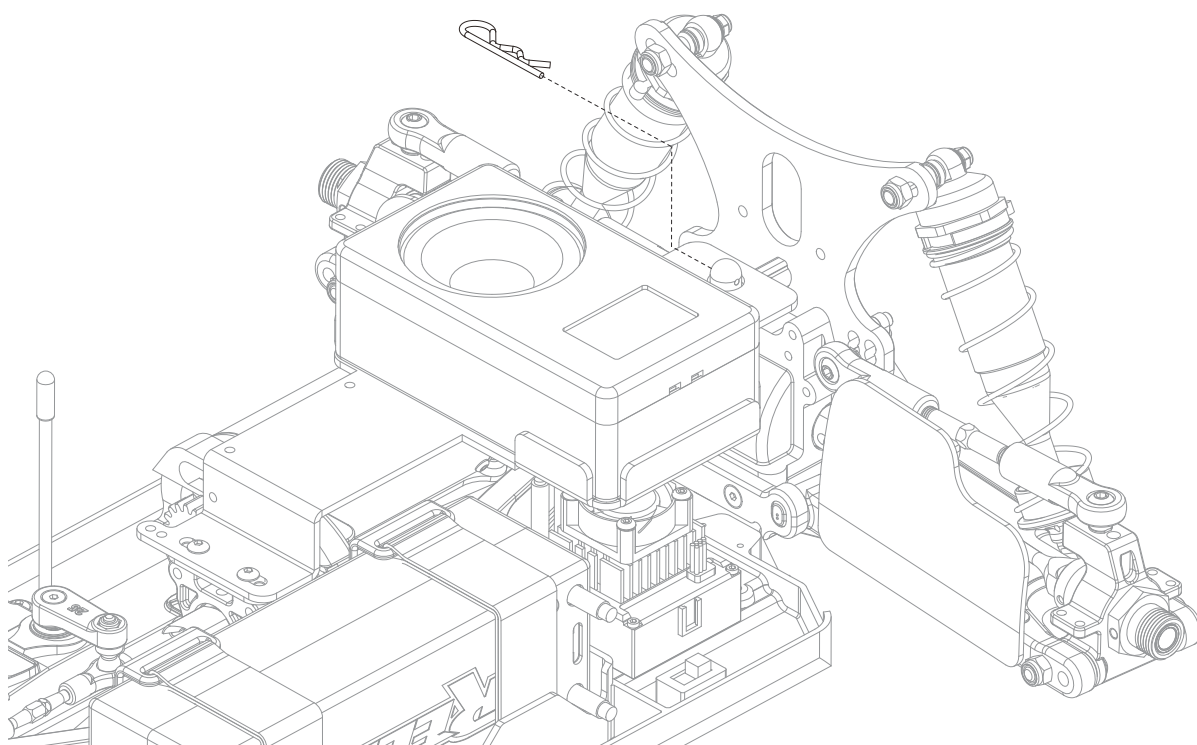


   STEP38 Rear Cage 後護欄



-  4
- ① 3 x 14 mm
BHCS Screw
半圓頭內六角螺絲
-  4
- ② 3 x 12 mm
BHCS Screw
半圓頭內六角螺絲
-  4
- ③ 2.5 x 6 mm
BHCS Screw
半圓頭內六角螺絲
-  2
- ④ M3 Lock Nut
止鬆螺帽

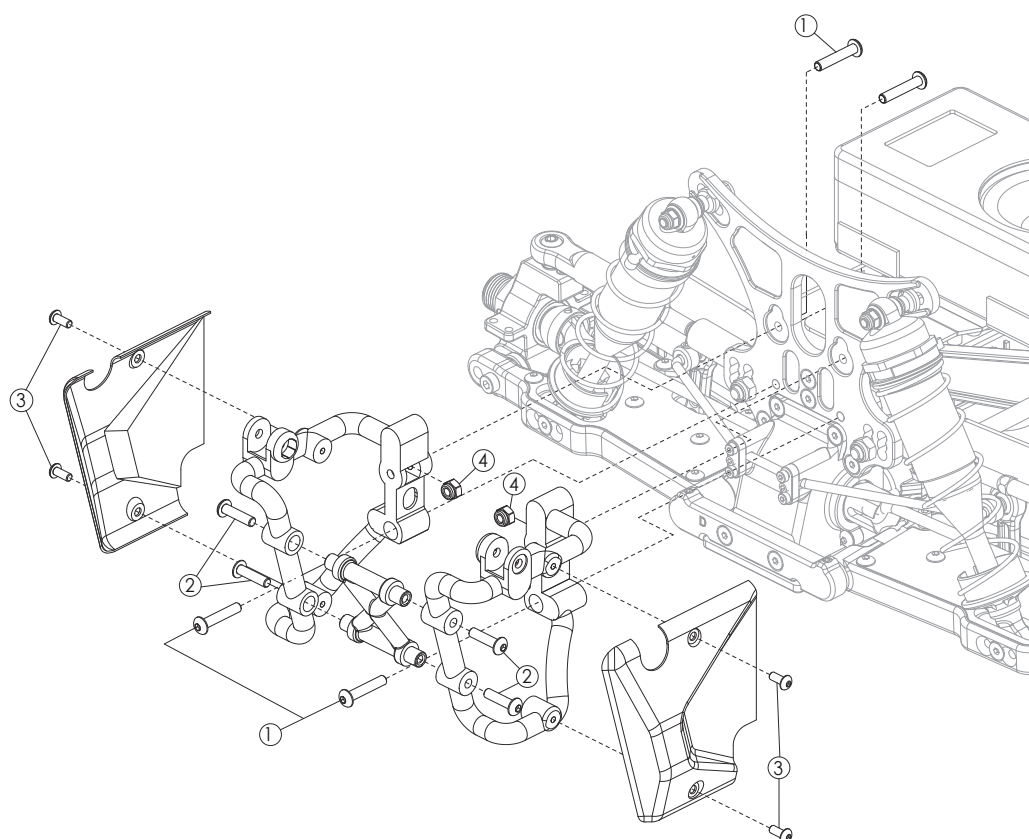


STEP39 Driver & Roll Cage 駕駛&護欄

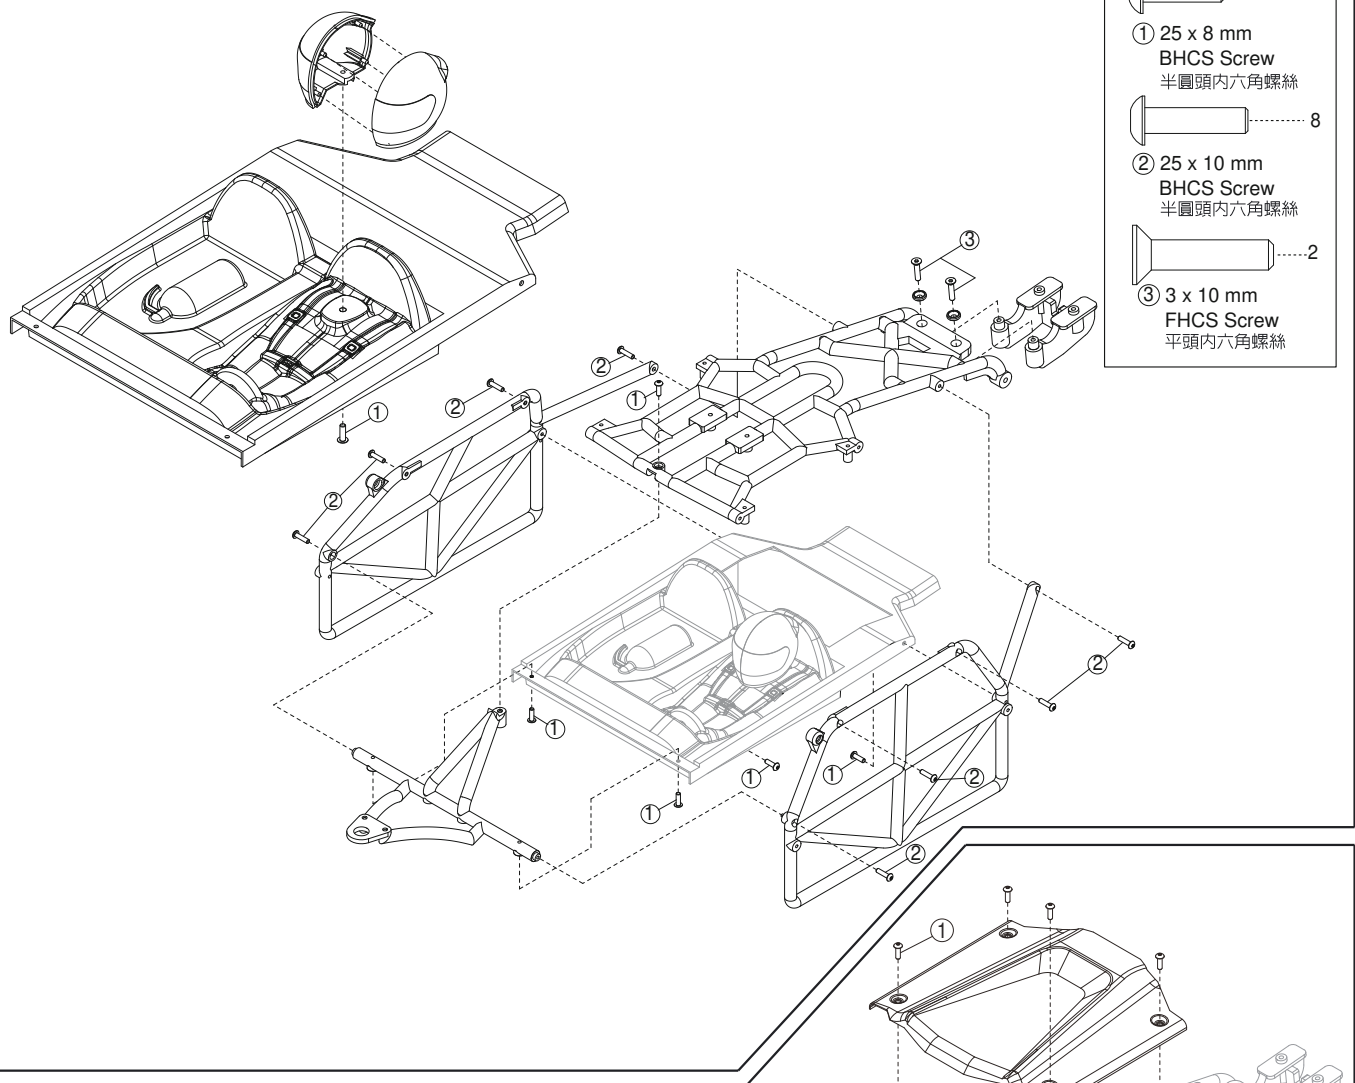


STEP40 Body 車殼 (1)

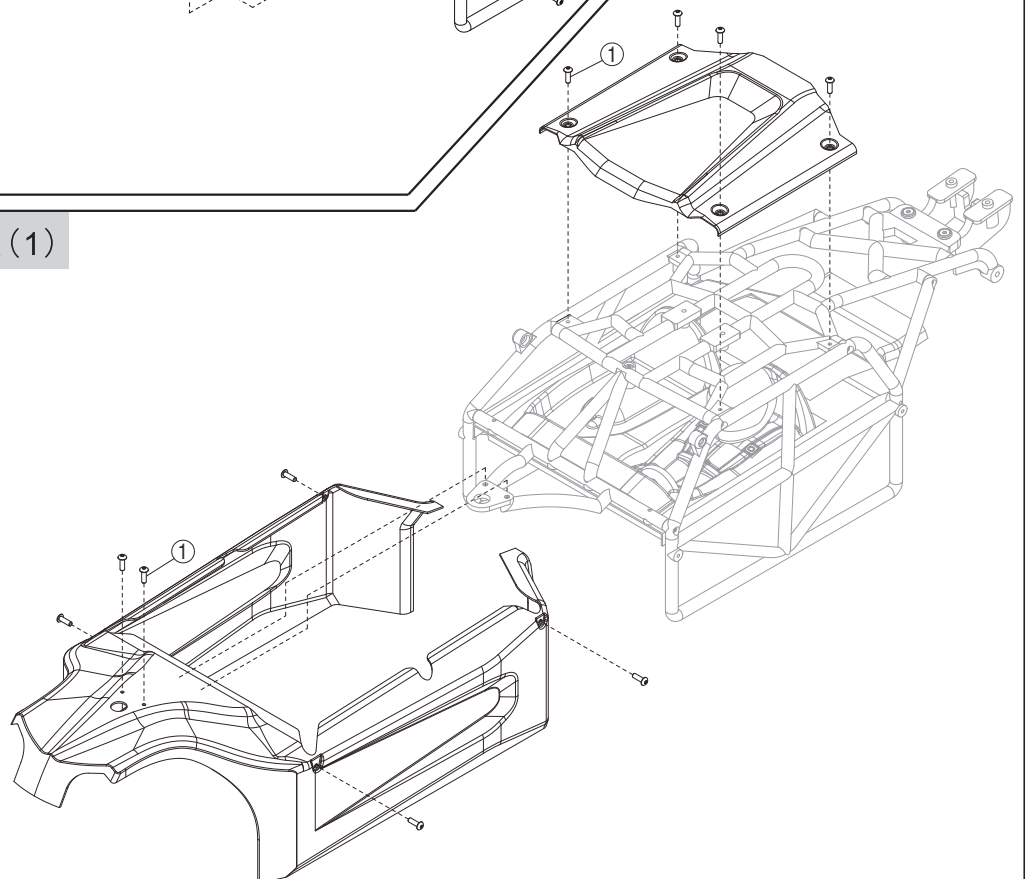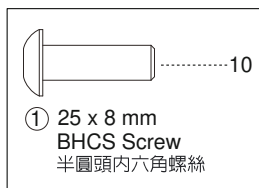

STEP41 Body 車殼 (2)

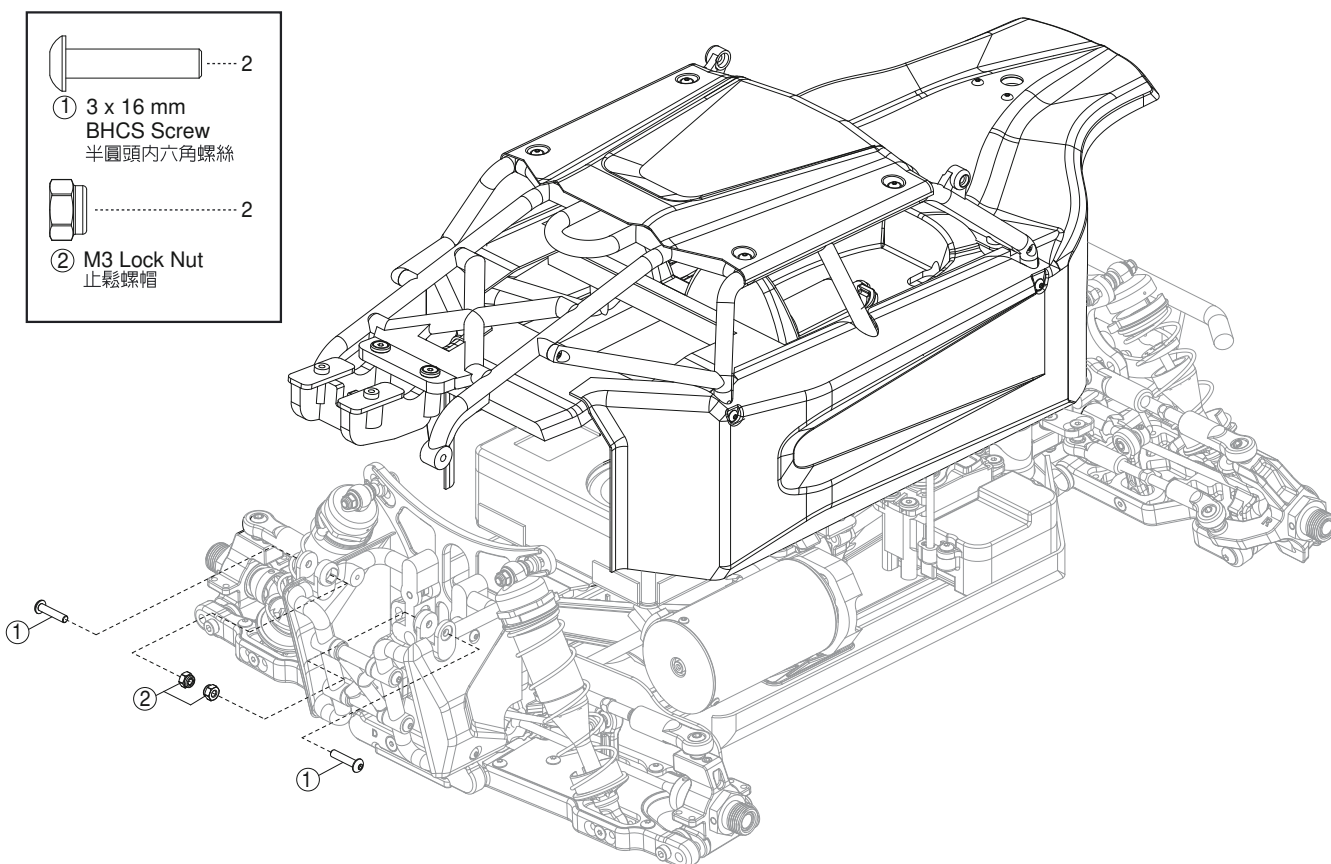


STEP42 Wing 尾翼

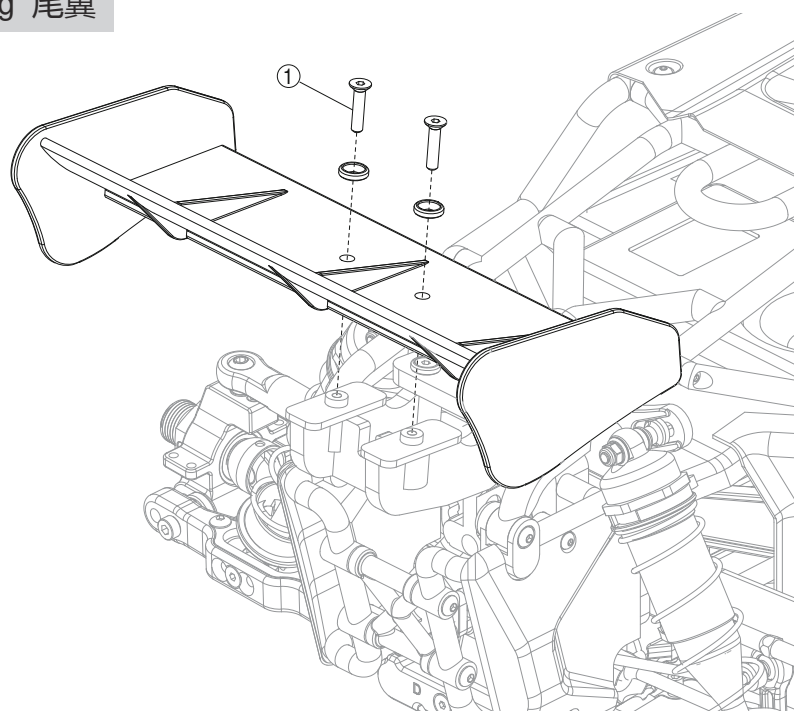

- ① 3 x 10 mm
FHCS Screw
平頭內六角螺絲

STEP43 Tires & Wheels 輪胎與輪轂 (1)


x4

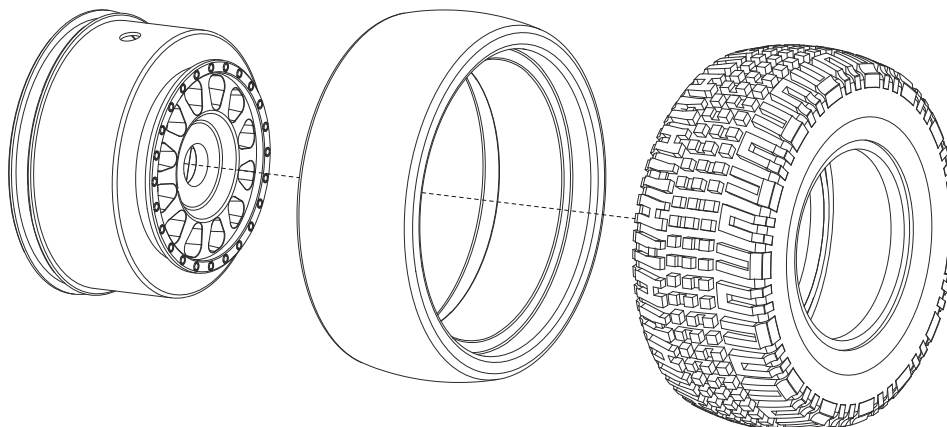

Install the tire onto the wheel. Glue the tire to the wheel with instant glue in several spots around the tire on both sides.
將輪胎（含內襯）與輪轂結合並在胎緣內側點上快乾膠黏合。

Warning: Follow the adhesive instructions for proper use and safety. Wear eye and hand protection.
注意！！使用快乾膠時請注意安全，最好戴上手套及護目鏡以避免危險。

STEP44 Tires & Wheels 輪胎與輪轂 (2)

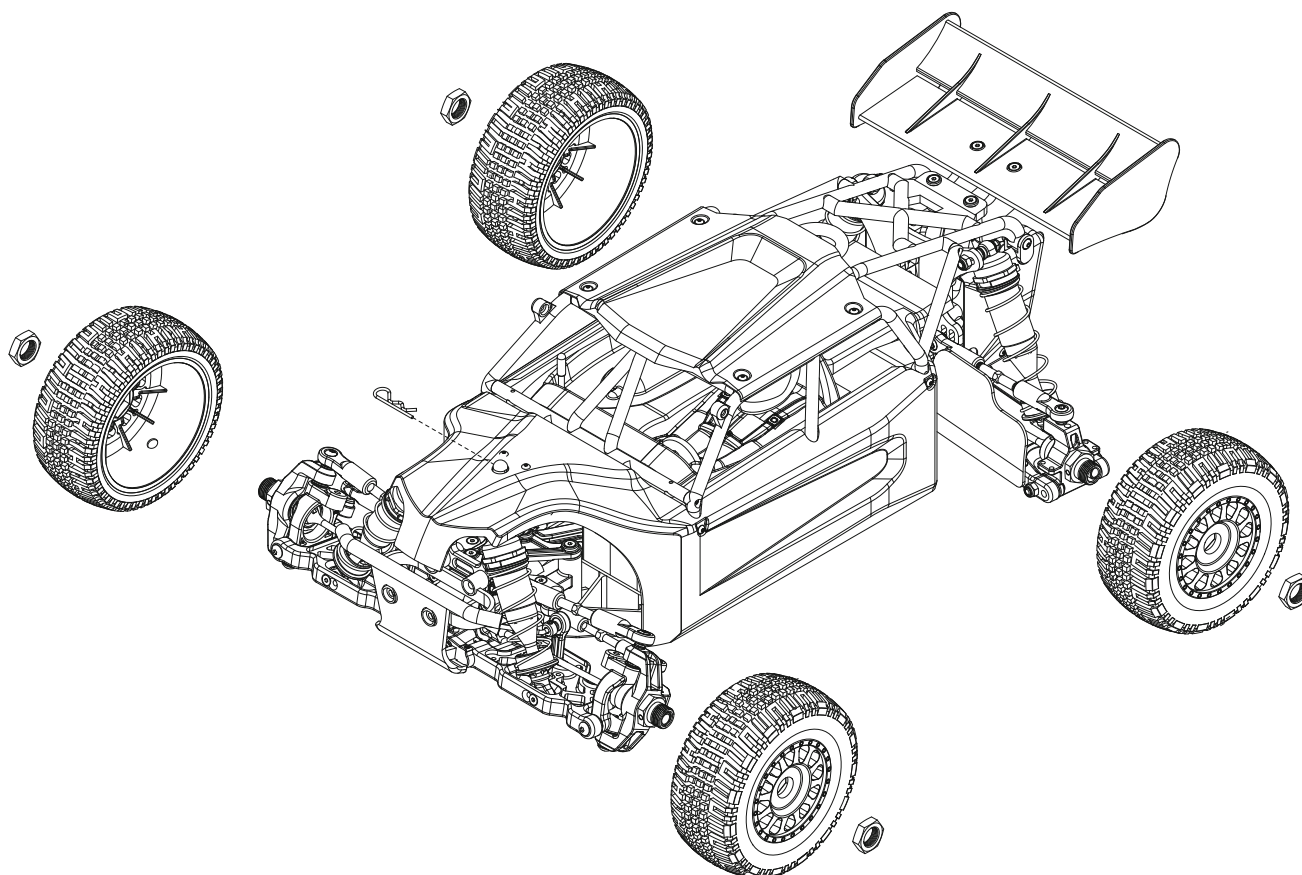


Hint
組裝提示


x4

Assemble as many times as specified
依指示組裝所需數量


FR / RR DIFF. ASSEMBLY

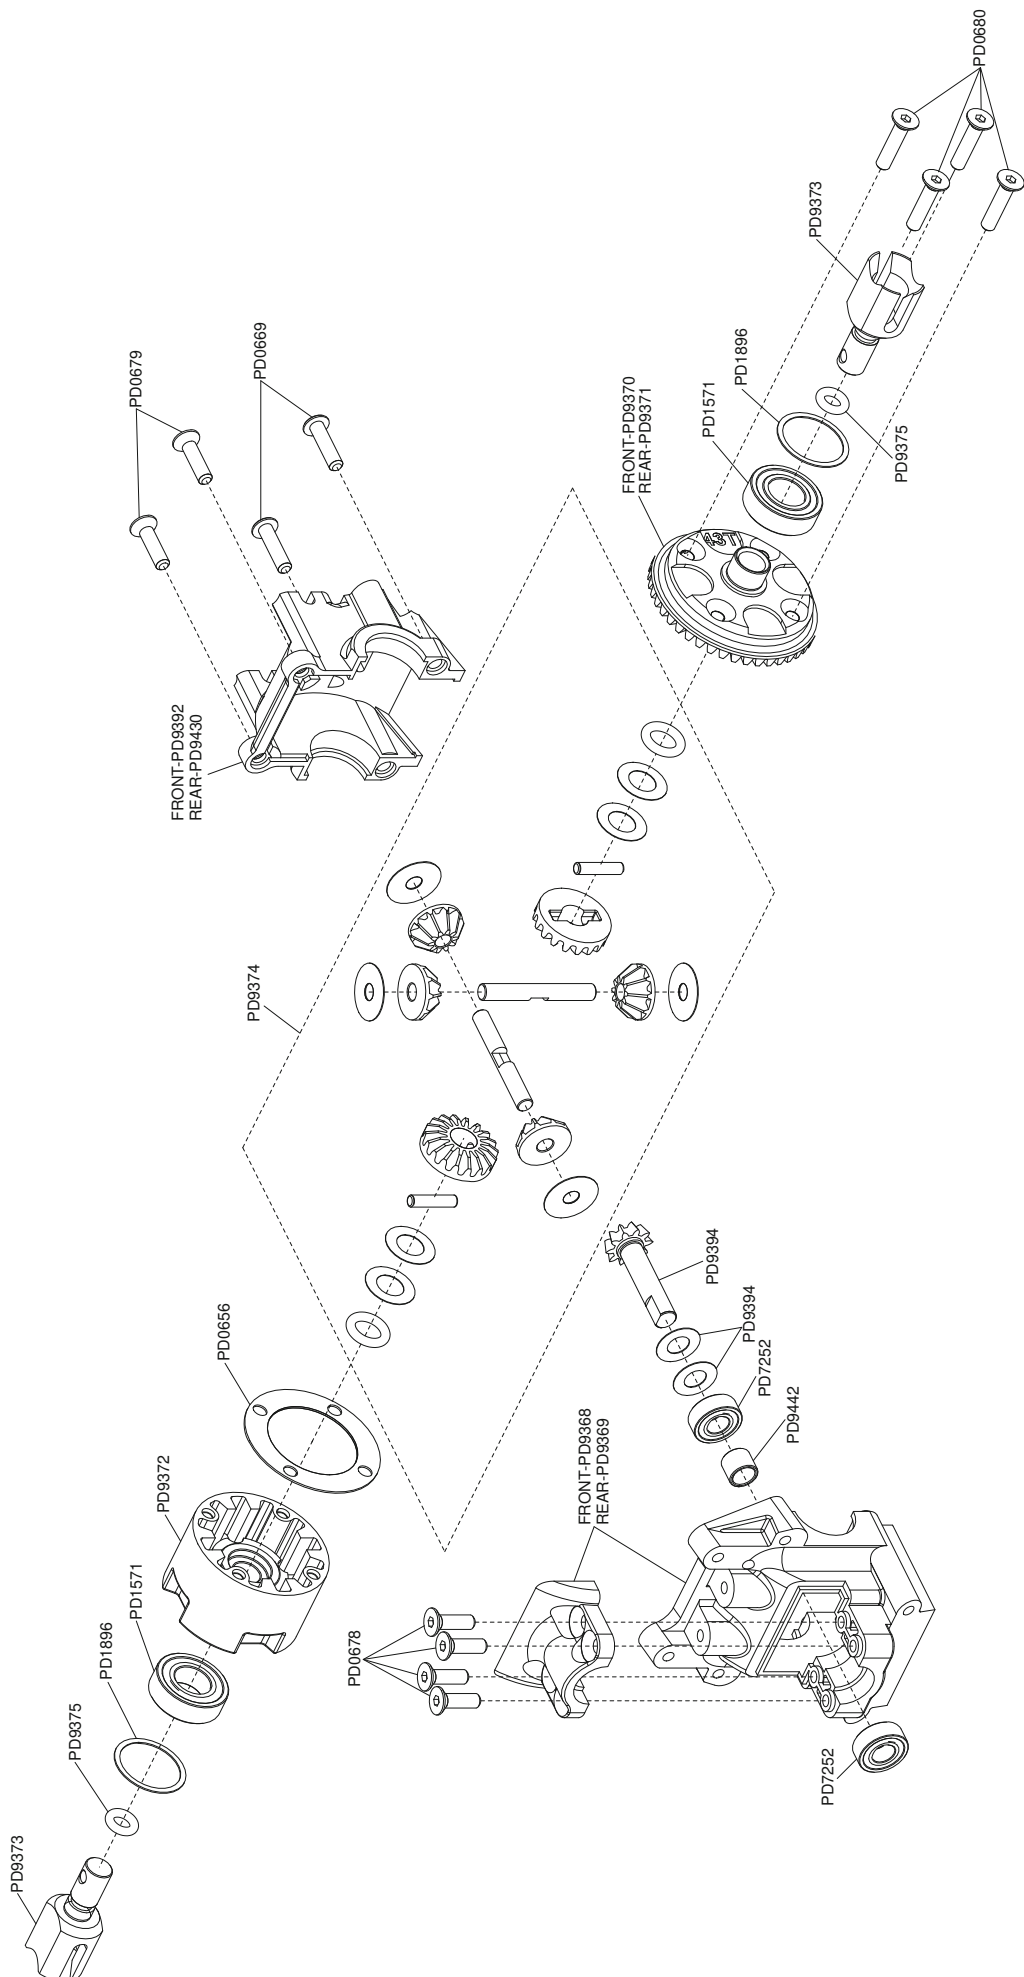


FRONT ASSEMBLY

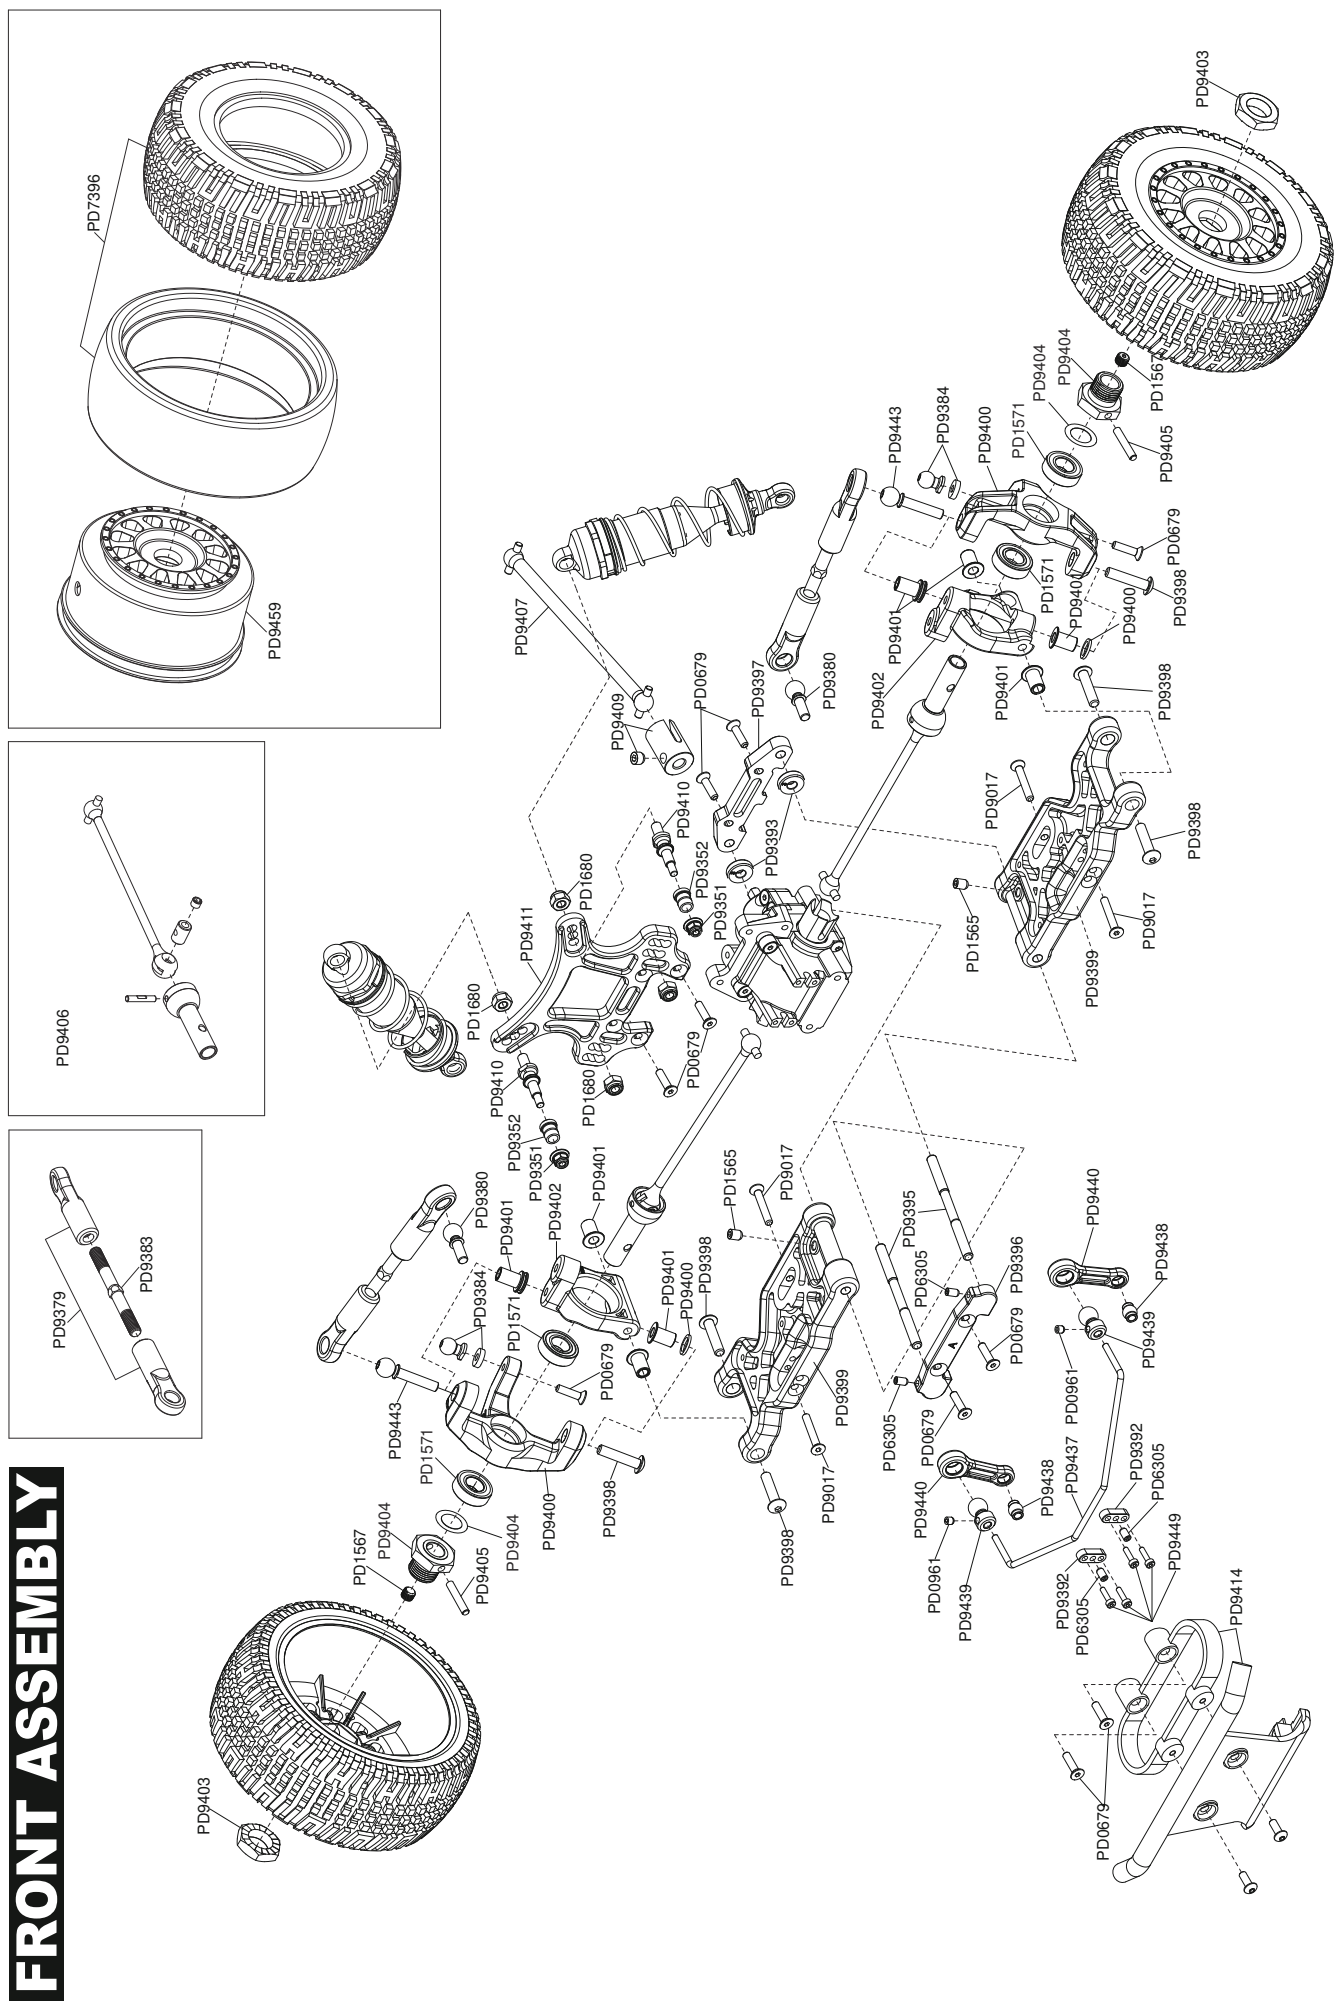

REAR ASSEMBLY

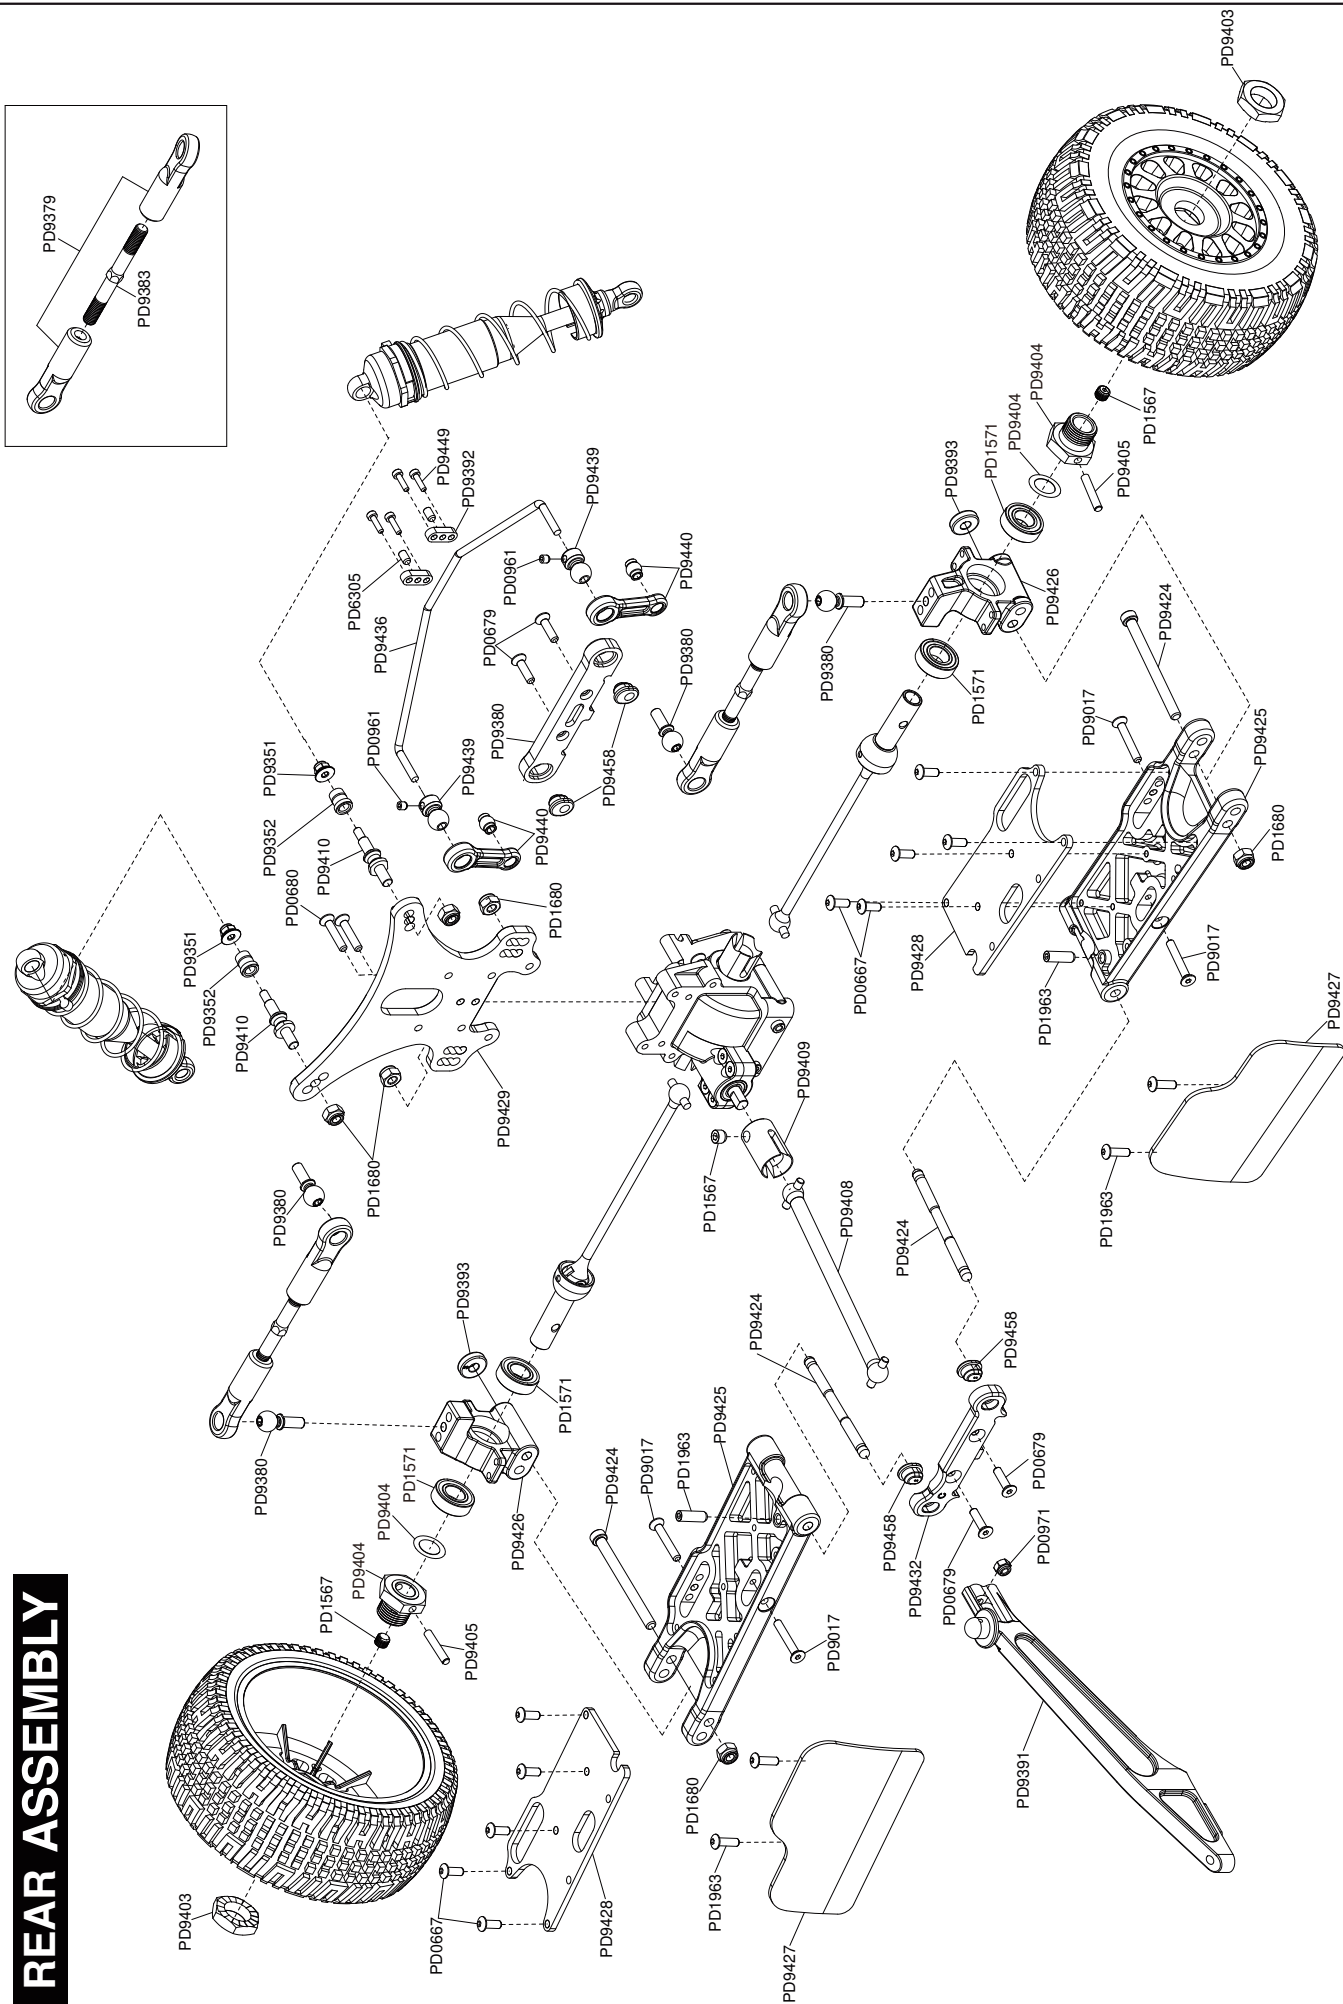


8069-1

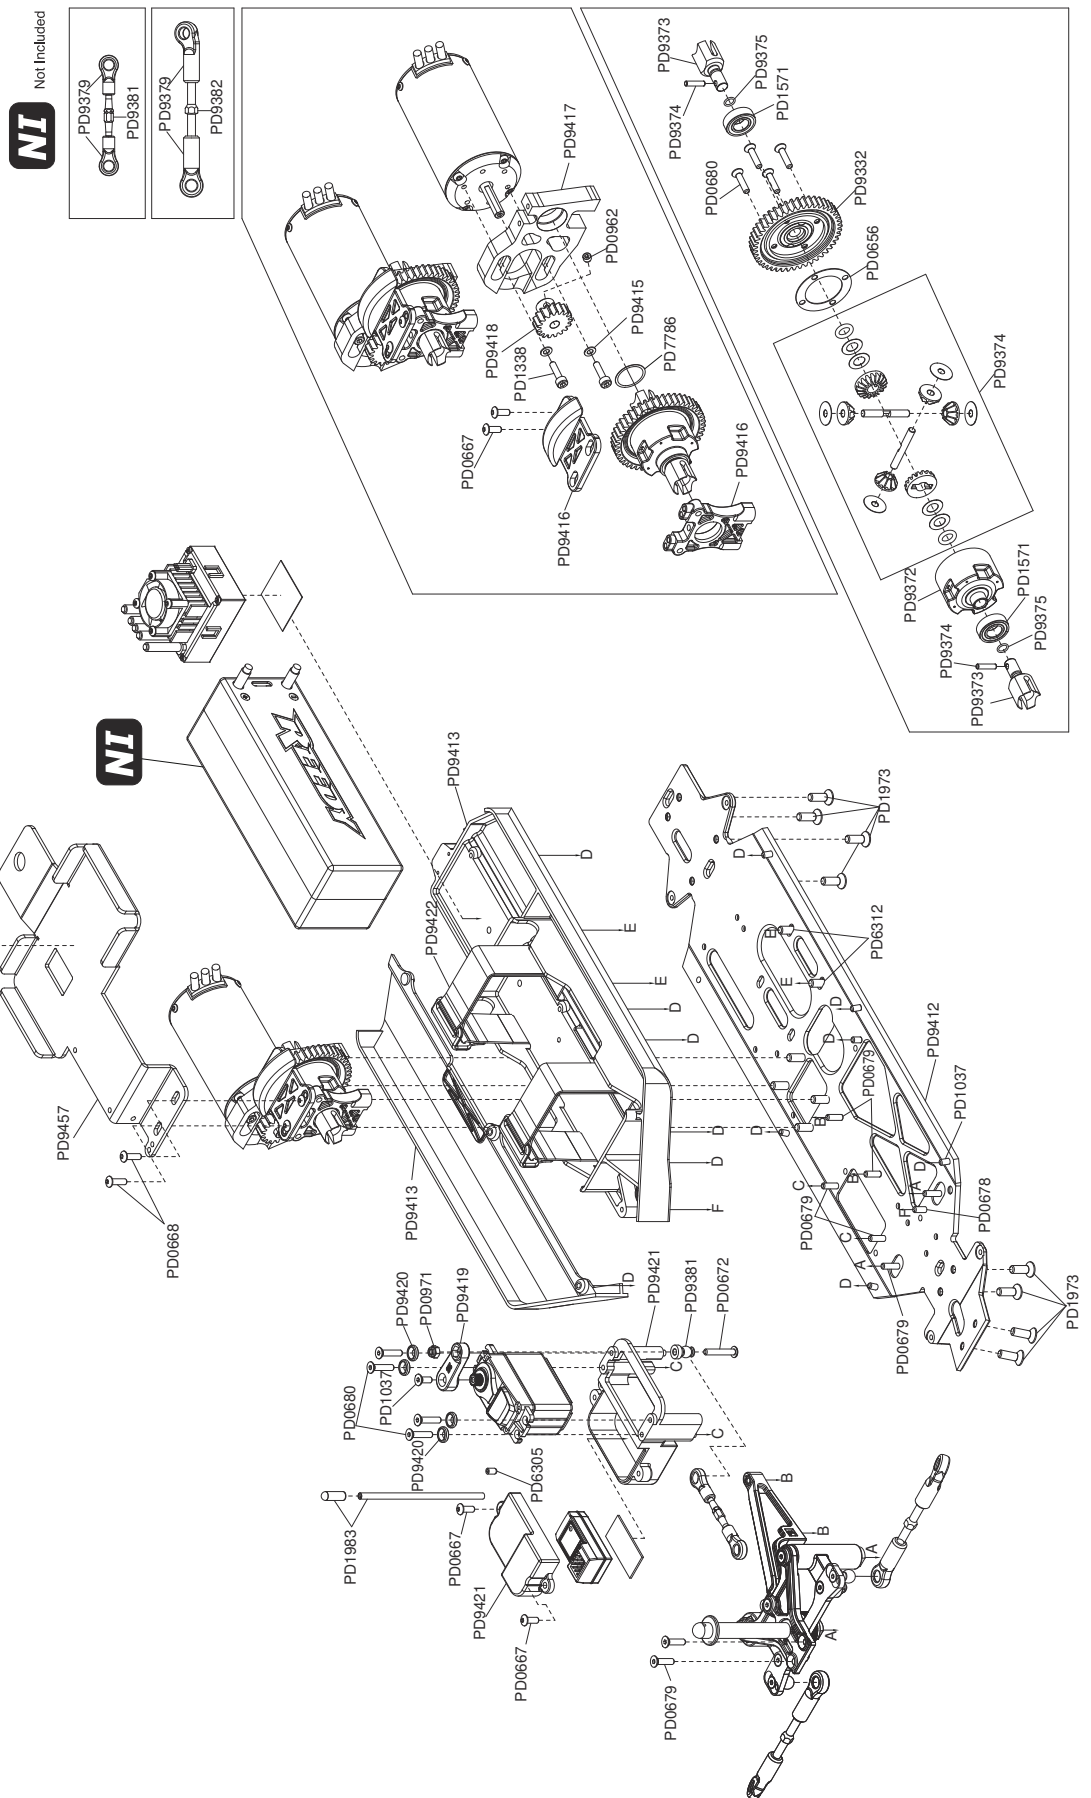


[illegible]


BUSHMASTER SPARE PARTS LIST 零件表

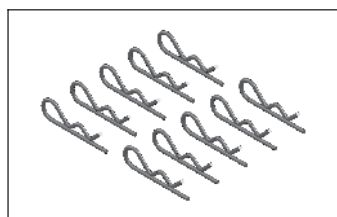


PD0432 BODY CLIPS (10)
R形插銷

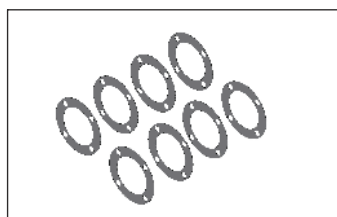


PD0656 DIFF GASKET
密封墊片

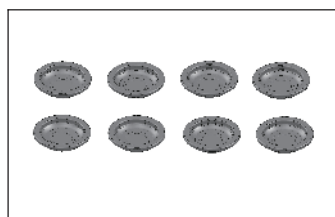


PD07-0013 SHOCK DIAPHRAGM
避震器空氣活門

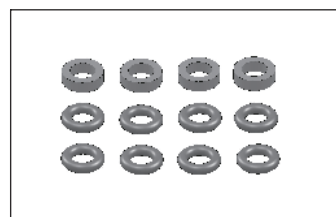


PD07-0024 O-RING&SPACERS
O型環&內環柱組

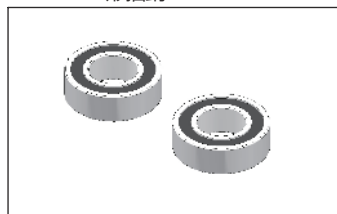


PD1571 BEARING, d8xD16xW5
滾珠軸承

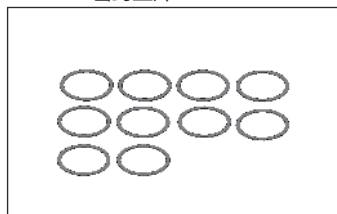


PD1896 DIFFERENTIAL SHIME
差速器墊片

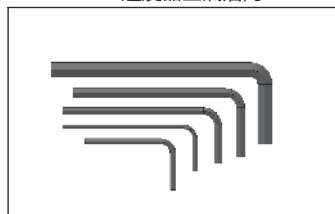

PD1975 HEX WRENCH SET
六角板手組

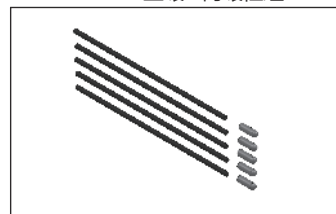


PD1983 ANENNA BAG
天線管

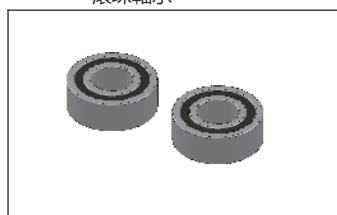

PD7252 BEARING, d5xD11xW4
滾珠軸承




PD7396 TIRE W/FOAM INSERT
輪胎/內襯組

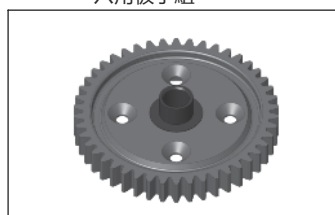


PD9332 PLASTIC SPUR [46T]
中央齒輪



PD9352 SHOCK BUSH/SPACER
避震器上蓋襯套

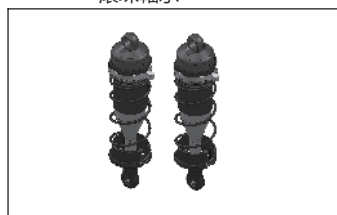


PD9353 FRONT SHOCK
前避震器組

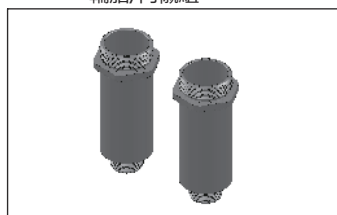


PD9354 SHOCK BODY [22]
避震器套筒




PD9355 SHOCK CAP
避震器上蓋

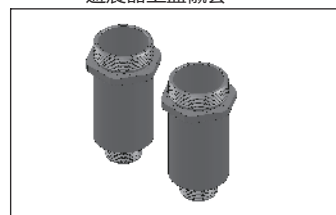

PD9356 SHOCK BODY [32]
避震器套筒

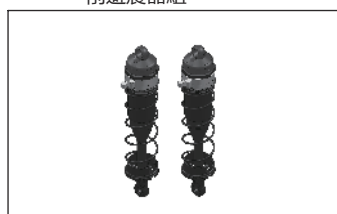


PD9357 REAR SHOCK
後避震器組

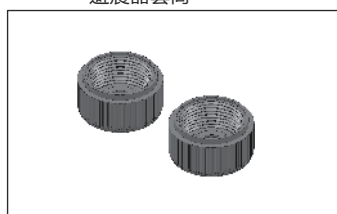


PD9358 SHOCK CAP BOTTOM
避震器下蓋




PD9359 SHOCK REBUILD
避震器維修零件

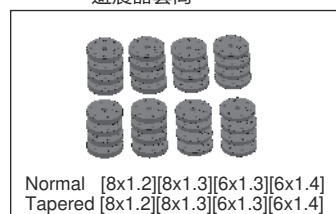


PD9360 SHOCK PISTONS
避震器活塞

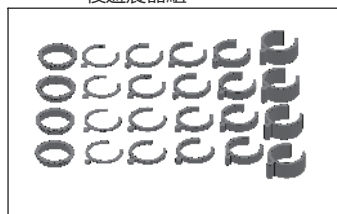


PD9361 PRE-LOAD CLIPS
避震器上定位套/調整夾

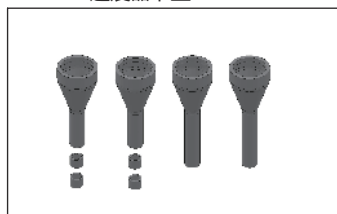


PD9362 SHOCK BOOTS
避震器防塵套

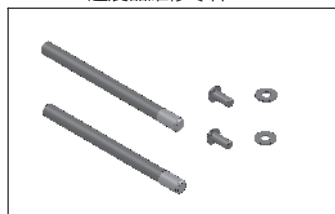


PD9363 SHOCK SHAFT [51]
避震器軸

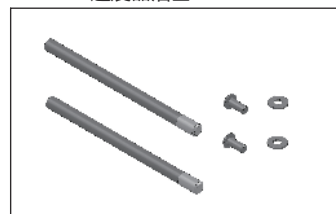


PD9364 SHOCK SHAFT [61]
避震器軸

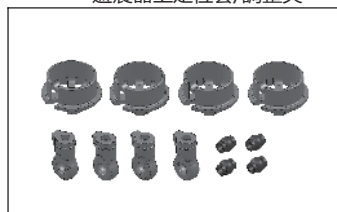


PD9365 SHOCK ROD ENDS
避震器球頭組

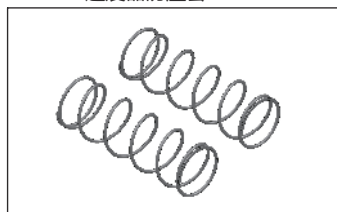

PD9366 FR SPRING
前避震器彈簧

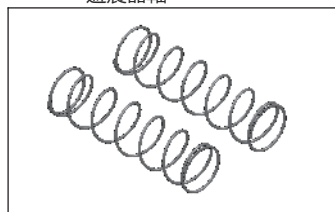


PD9367 RR SPRING
後避震器彈簧

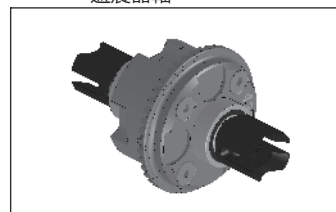


PD9368 FRONT COMPLETE DIFF
前差速器組


BUSHMASTER SPARE PARTS LIST 零件表

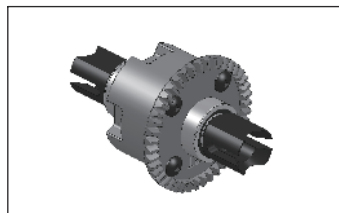


PD9369 REAR COMPLETE DIFF
後差速器組

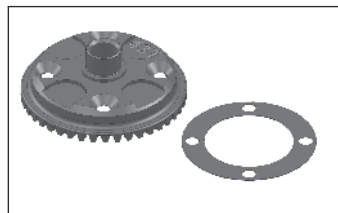


PD9370 FRONT RING GEAR [43T]
前差速大齒輪

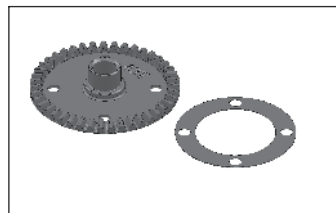


PD9371 REAR RING GEAR [43T]
後差速大齒輪

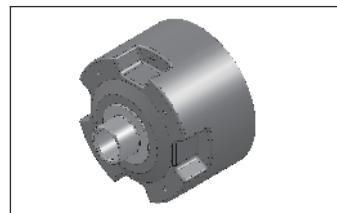


PD9372 DIFF HOUSING
差速器外殼

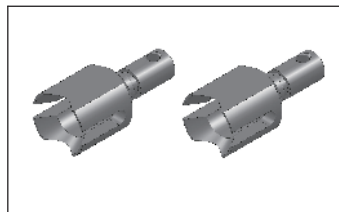

PD9373 OUTDRIVE
差速器軸套

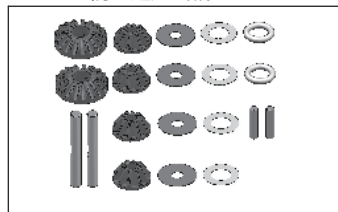


PD9374 DIFF GEARS & PINS
差速器零件包

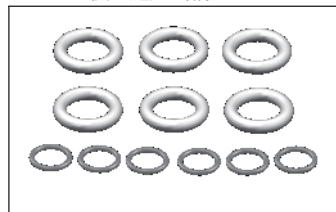


PD9375 DIFF O-RINGS
差速器O型環




PD9377 CENTER COMPLETE DIFF
中差速器組

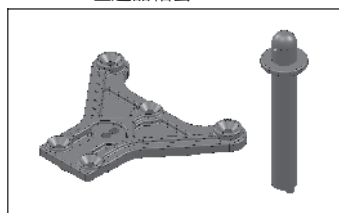


PD9378 BRACE/BODY POST
轉向支撐架/前車殼支柱

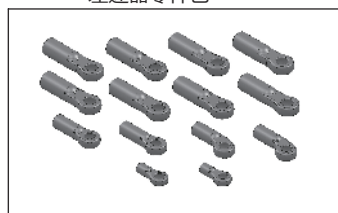


PD9379 SUSP ROD END
球型連桿帽

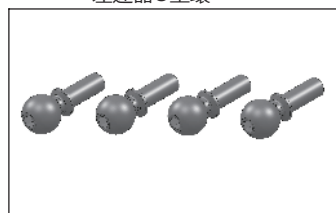


PD9380 BALL STUD
擺臂球頭

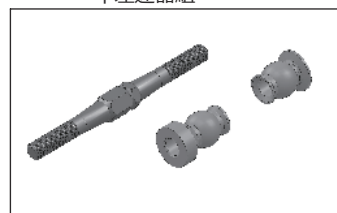


PD9381 TURNBUCKLE [3x38.6]
伺服拉桿螺絲

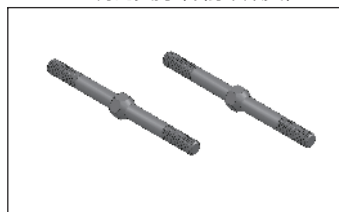


PD9382 TURNBUCKLE [4x50]
連接桿

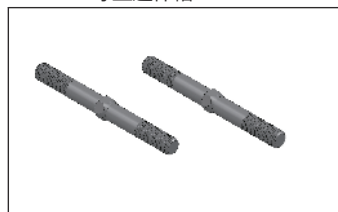


PD9383 TURNBUCKLE [5x50]
連接桿

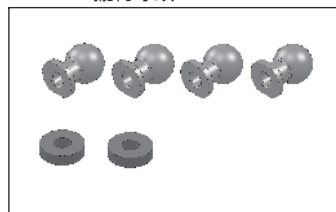


PD9384 STRG BALL STUD
轉向球頭/墊片

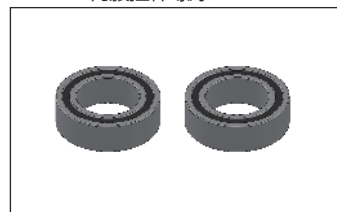


PD9385 BEARING, d6xD10xW3
軸承零件包

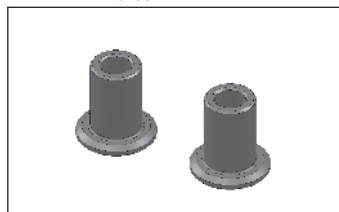


PD9386 STEERING RACK POST
轉向曲板軸套

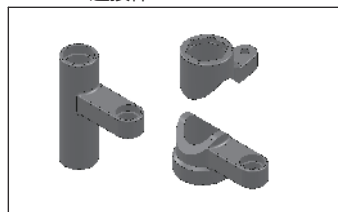


PD9387 STEERING SET
伺服機緩衝擺臂

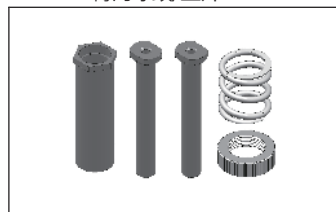


PD9388 STEERING POST
轉向組

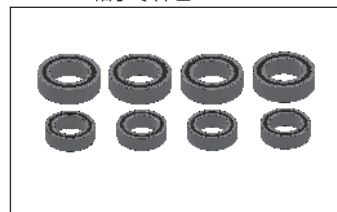


PD9389 STEERING BEARING SET
轉向滾珠軸承

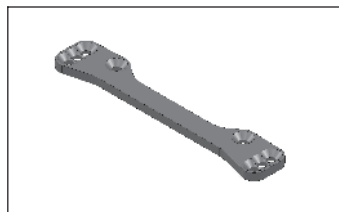


PD9390 STEERING RACK
轉向曲板

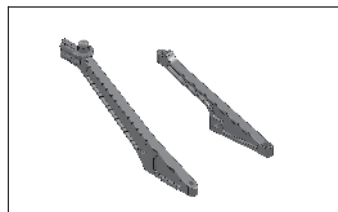


PD9391 CHASSIS BRACES
車底盤前支撐座

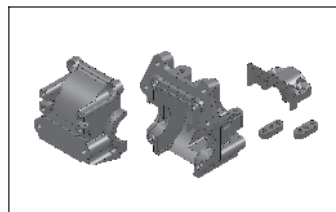


PD9392 GEAR BOX (FR)
前齒輪箱

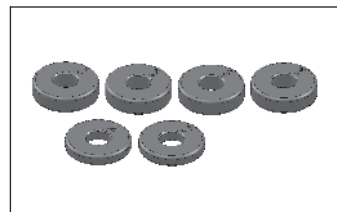


PD9393 HINGE PIN SHIM
墊片

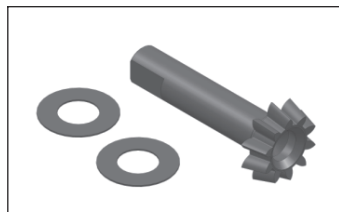


PD9394 BEVEL GEAR [10T]
小傘齒輪

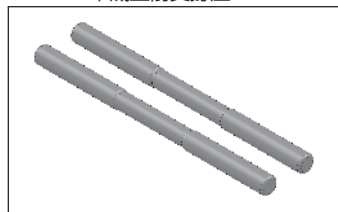

PD9395 HINGE PIN 4x58MM
前擺臂銷

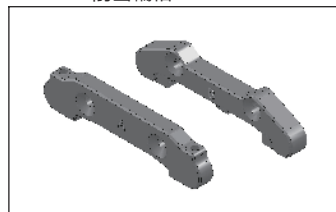


PD9396 A-PLATE 投影版(A)
PD9397 B-PLATE 投影版(B)

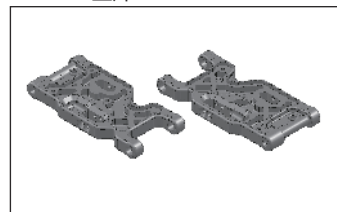


PD9399 FRONT ARMS
前擺臂


BUSHMASTER SPARE PARTS LIST 零件表

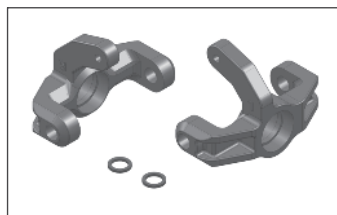


PD9400 STEERING BLOCKS
前輪座

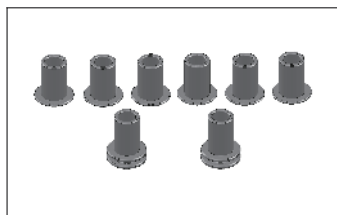


PD9401 SHOULDER BUSHING
前輪座軸套

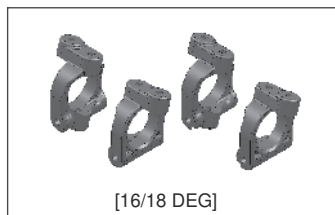


PD9402 CASTER BLOCKS
轉向固定座

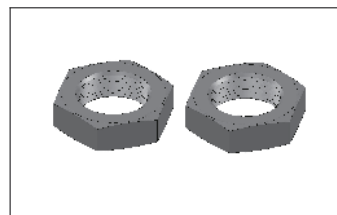


PD9403 WHEEL HEX NUTS
六角輪殼轉換器螺帽

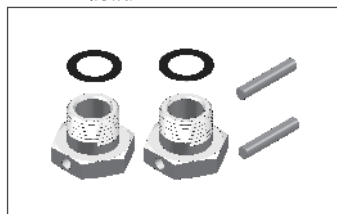

PD9404 WHEEL HEX
六角輪殼轉換器

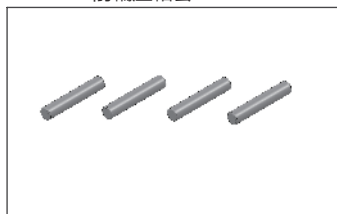

PD9405 WHEEL HEX PINS
輪殼插銷

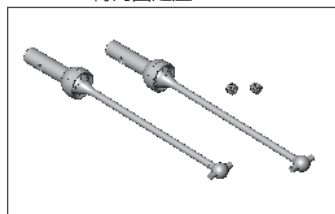


PD9406 CVA
輪軸組




PD9407 DOG BONE [104MM]
前中央傳動軸




PD9408 DOG BONE [96MM]
後中央傳動軸

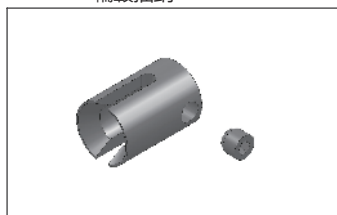


PD9409 INPUT CUP
中央傳動連接頭

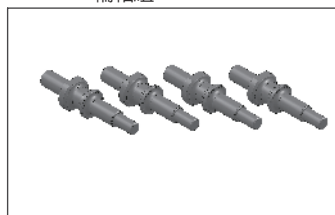


PD9410 SHOCK STAND OFF
避震器上蓋固定軸

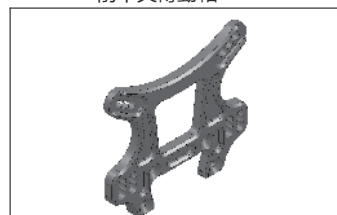


PD9411 SHOCK TOWER FR
前避震器支架

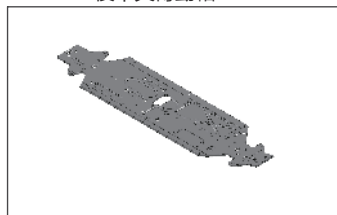


PD9412 CHASSIS (3MM)
車底板

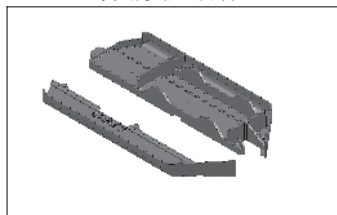


PD9413 GUARD & BATTERY TRAY
防撞板/電池盒

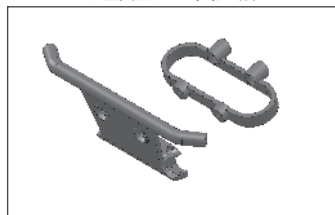


PD9414 BUMPER
前防撞板

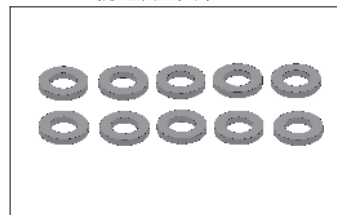


PD9415 STEEL WASHER
球頭墊圈

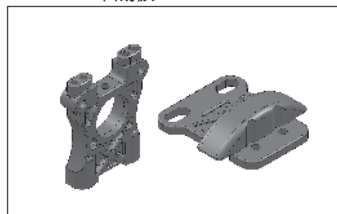


PD9416 CENTER DIFF MOUNT
中差固定座

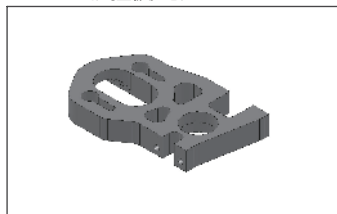


PD9417 MOTOR MOUNT
馬達固定座

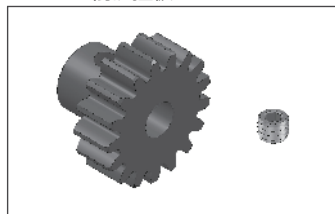


PD9418 17T PINION
驅動齒,17T

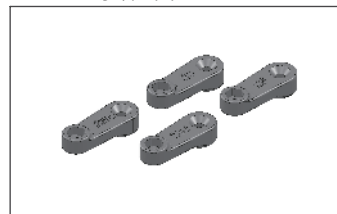


PD9419 STEERING SERVO HORNS
伺服機擺臂

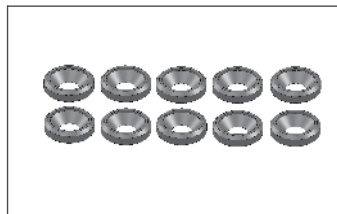


PD9420 COUNTERSUNK WASHER
藍色墊圈

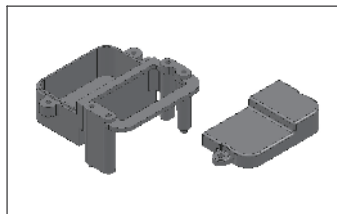


PD9421 SERVO MOUNT
伺服機固定座組

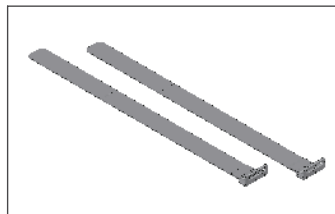


PD9422 VELCRO BATT. STRAPS
電池用魔鬼粘帶

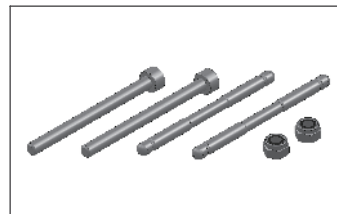


PD9424 RR OUT HINGE PIN
軸銷

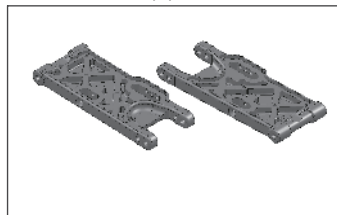

PD9425 REAR ARMS
後擺臂

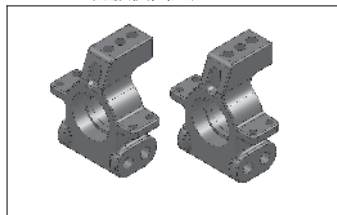

PD9426 HUB CARRIER
後輪座

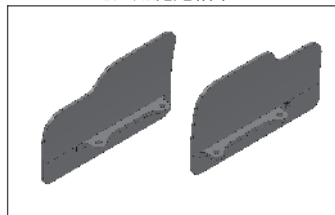


PD9427 MUD GUARD
擋泥板




PD9428 REAR ARM PLATE
後擺臂碳纖板


BUSHMASTER SPARE PARTS LIST 零件表

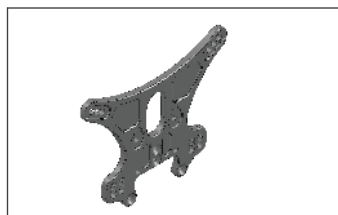


PD9429 SHOCK TOWER RR
後避震器支架

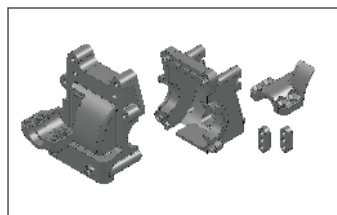


PD9430 GEAR BOX (RR)
後齒輪箱

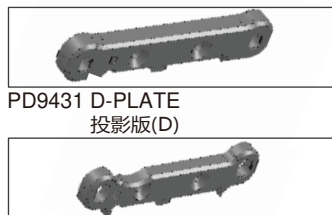


PD9431 D-PLATE
投影版(D)

 


PD9432 C-PLATE
投影版(C)

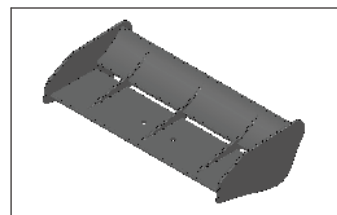


PD2319-B REAR WING, BLACK
擾流尾翼, 1/8(黑)

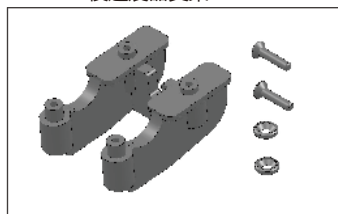


PD9434 WING MOUNT
尾翼固定座

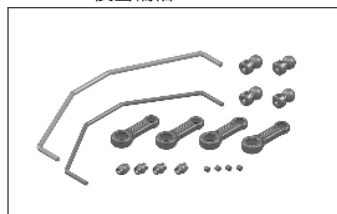


PD9435 SWAYBAR SET
防傾桿組

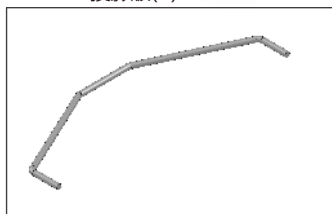


PD9436 REAR SWAY BAR [2.8]
後防傾桿

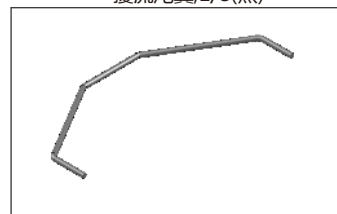


PD9437 FRONT SWAYBAR [2.5]
前防傾桿

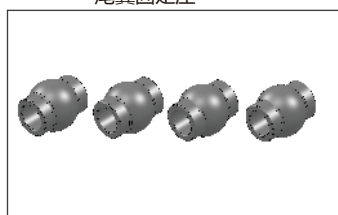


PD9438 SWAYBAR BALL JOINT
球頭

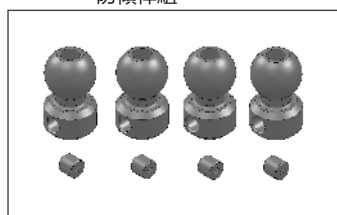


PD9439 SWAYBAR SOCKET JOINT
防傾桿球接頭

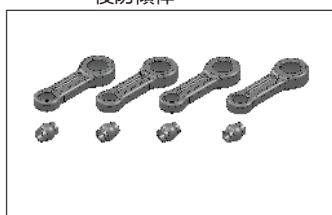


PD9440 SWAY BAR LINK
防傾桿連接拉桿

 


PD9442 CRUSH SLEEVE
軸套

 

PD9443 BALL STUD
擺臂球頭

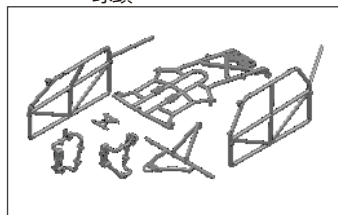


PD9450 ROLL CAGE
防滾護欄

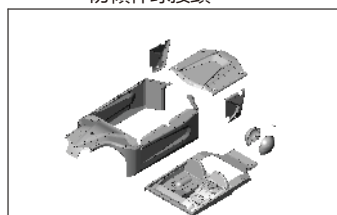


PD9452 BUSHMASTER BODY, BLUE
車殼, 藍




PD9453 BUSHMASTER DECAL, BLUE
BUSHMASTER車殼貼紙, 藍

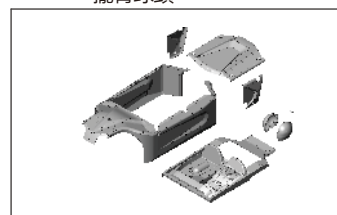


PD9456 BUSHMASTER BODY, RED
車殼, 紅

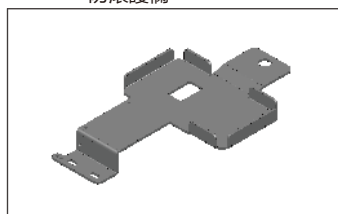

PD9457 ENGINE SOUND BOX MOUNT
發聲器固定座

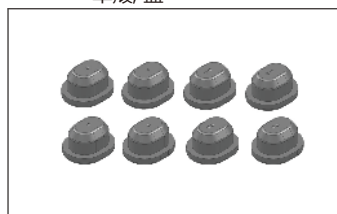


PD9458 HINGE PIN BUSHINGS
擺臂銷軸套

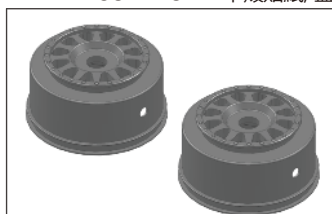

PD9459 WHEEL BLACK
輪殼, 黑



PD9460 BUSHMASTER DECAL, RED
BUSHMASTER車殼貼紙, 紅

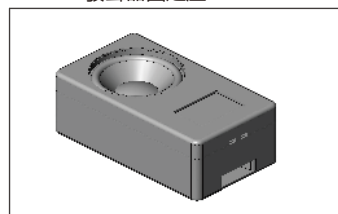


8069-1 ENGINE SOUND BOX
發聲器




8179 DIGITAL SERVO, DS1510MG
數位伺服機



8228 COUGAR GP2 RADIO
COUGAR遙控器

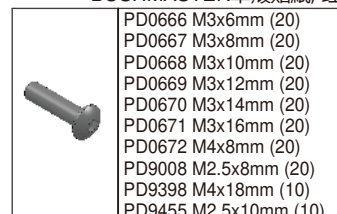


BHCS SCREW
半圓頭內六角螺絲

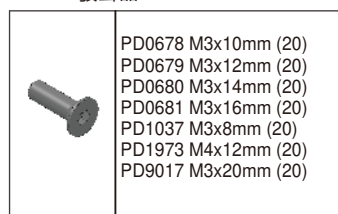


FHCS SCREW
平頭內六角螺絲

PD0678 M3x10mm (20)
PD0679 M3x12mm (20)
PD0680 M3x14mm (20)
PD0681 M3x16mm (20)
PD1037 M3x8mm (20)
PD1973 M4x12mm (20)
PD9017 M3x20mm (20)

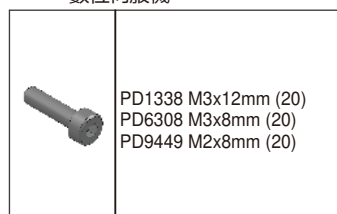


SHCS SCREW
內六角螺絲

PD1338 M3x12mm (20)
PD6308 M3x8mm (20)
PD9449 M2x8mm (20)

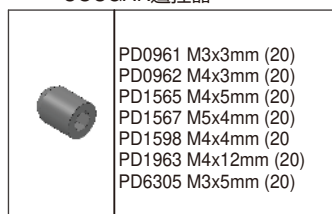

SET SCREW
無頭內六角螺絲

 PD0961 M3x3mm (20)
PD0962 M4x3mm (20)
PD1565 M4x5mm (20)
PD1567 M5x4mm (20)
PD1598 M4x4mm (20)
PD1963 M4x12mm (20)
PD6305 M3x5mm (20)



LOCK NUT
止鬆螺帽

PD0971 M3 (20)
PD1680 M4 (20)



LOCKNUT W/ FLANGE
尼龍墊圈螺帽


PD9351 M3 (20)

PART#	DESCRIPTION	中文名稱	NOTE
PD0432	BODY CLIPS (10)	R型插銷	
PD0656	DIFF GASKET,0.2mm	密封墊片,0.2mm	
PD0666	BHCS M. SCREW(20)M3*6	半圓頭內六角螺絲HSA3-6B	
PD0667	BHCS M. SCREW(20)M3*8	半圓內六角螺絲(20)M3x8	
PD0668	BHCS SCREW(20),M3x10	半圓內六角螺絲(20)M3x10	
PD0669	BHCS SCREW(20),M3x12	半圓頭內六角螺絲HSA3-12B	
PD0670	BHCS M.SCREW(20),M3*14	半圓頭內六角螺絲HSA3-14	
PD0671	BHCS SCREW(20),M3x16	半圓頭內六角螺絲HSA3-16B	
PD0672	BHCS SCREW(20),M3x18	半圓頭內六角螺絲HSA3-18B	
PD0678	FHCS M. SCREW(20)M3*10	平頭內六角螺絲(HSB3-10B)	
PD0679	FHCS M. SCREW(20)M3*12	平頭內六角螺絲,M3x12	
PD0680	FHCS M. SCREW(20)M3*14	平頭內六角螺絲(HSB3-14B)	
PD0681	FHCS M. SCREW(20)M3*16	平頭內六角螺絲(HSB3-16B)	
PD07-0013	SHOCK DIAPHRAGM,6402	避震器空氣活門	
PD07-0024	O-RING&SPACERS,6402	避震器O型環&內環柱組	
PD0961	SET SCREWS(20),M3*3	無頭內六角螺絲(20),M3*3	
PD0962	SET SCREWS(20),M4*3	無頭內六角螺絲(20),M4*3	
PD0971	LOCK NUT	止鬆螺帽(M3)	
PD1037	FHCS M. SCREW(20)M3*8	平頭內六角螺絲	
PD1338	SHCS M. SCREW(20)M3*12	內六角螺絲(20),M3X12	
PD1565	SET SCREW(20),4*5mm	無頭內六角螺絲	
PD1567	SET SCREW(20),5*4mm	無頭內六角螺絲	
PD1571	BALL BEARING	軸承組(HMV1680LLYX2)	
PD1598	SET SCREW	無頭內六角螺絲(HME4-4B)	
PD1680	LOCK NUT (20) ,M4	止鬆螺帽(M4)	
PD1896	DIFFERENTIAL SHIME	差速器墊片	
PD1963	SET SCREW(20),M4*12	無頭內六角螺絲	
PD1973	FHCS M. SCREW(20)M4*12	平頭內六角螺絲	
PD1983	ANENNA BAG,1/8	天線管	
PD6305	SET SCREW(20),M3*5	無頭內六角螺絲,M3x5	
PD6312	BHCS M. SCREW(20)M4*8	半圓頭內六角螺絲零件包	
PD7252	BALL BEARING(2),5*11*4	滾珠軸承5*11*4	
PD7396	TIRE W/FOAM INSERT	輪胎/內襯組	
PD9006	SKH.M SCREW(20),M2.5X8	內六角螺絲組	
PD9008	BHCS M.SCREW(20),M2.5x8	半圓頭內六角螺絲組	
PD9017	FHCS M. SCREW(20)M3*20	平頭內六角螺絲,M3x20	
PD9332	PLASTIC SPUR [46T]	中央齒輪	
PD9351	M3 LOCKNUT W/ FLANGE	尼龍墊圈螺帽	
PD9352	SHOCK BUSH/SPACER	避震器上蓋襯套	
PD9353	FRONT SHOCK KIT	前避震器組	
PD9354	SHOCK BODY 16X28 [42]	避震器套筒	
PD9355	SHOCK CAP [2]	避震器上蓋	
PD9356	SHOCK BODY 16X39 [53]	避震器套筒	
PD9357	REAR SHOCK KIT	後避震器組	
PD9358	SHOCK CAP BOTTOM [2]	避震器下蓋	
PD9359	SHOCK REBUILD	避震器維修零件包	
PD9360	SHOCK PISTONS	避震器活塞	
PD9361	PRE-LOAD CLIPS	避震器上定位套/調整夾	
PD9362	SHOCK BOOTS	避震器防塵套	
PD9363	SHOCK SHAFT 3x29 [51]	避震器軸	
PD9364	SHOCK SHAFT 3x39 [61]	避震器軸	
PD9365	SHOCK ROD ENDS	避震器球頭組	
PD9366	FR SPRING 1.4x7x70/WHT	前避震器彈簧	
PD9367	RR SPRING 1.4x8x84/WHT	後避震器彈簧	
PD9368	FRONT COMPLETE DIFF	前差速器組	
PD9369	REAR COMPLETE DIFF	後差速器組	
PD9370	RING GEAR [43T]	前差速大齒輪	
PD9371	REAR DIFF RING GEAR	後差速大齒輪	
PD9372	DIFF HOUSING	差速器外殼	
PD9373	OUTDRIVE (14MM)	差速器軸套	
PD9374	DIFF GEARS & PINS	差速器零件包	
PD9375	DIFF O-RINGS	差速器O型環	

PART#	DESCRIPTION	中文名稱	NOTE
PD9377	CENTER COMPLETE DIFF	中差速器組	
PD9378	BRACE/BODY POST	轉向支撐架/前車殼支柱	
PD9379	SUSP ROD END	球型連桿帽組	
PD9380	BALL STUD [7.9xM4x10]	擺臂球頭	
PD9381	TURNBUCKLE [3x38.6]	伺服拉桿螺絲	
PD9382	M4 X 50MM TURNBUCKLE	連接桿	
PD9383	TURNBUCKLE [5x50]	連接桿	
PD9384	STRG BALL STUD	轉向球頭/電片	
PD9385	6 x 10 MM BEARING	軸承零件包	
PD9386	STEERING RACK POST	轉向曲板軸套	
PD9387	STEERING SET	伺服機緩衝擺臂	
PD9388	STEERING POST	轉向組	
PD9389	STEERING BEARING SET	轉向滾珠軸承	
PD9390	STEERING RACK	轉向曲板	
PD9391	CHASSIS BRACES	車底盤前支撐座	
PD9392	GEAR BOX (FR)	前齒輪箱	
PD9393	HINGE PIN SHIM	墊片	
PD9394	BEVEL GEAR [10T]	小傘齒輪	
PD9395	HINGE PIN 4x58MM	前擺臂銷	
PD9396	A-PLATE	投影版(A)	
PD9397	B-PLATE	投影版(B)	
PD9398	BHCS 4x18MM	半圓頭內六角螺絲	
PD9399	FRONT ARMS	前擺臂	
PD9400	STEERING BLOCKS	前輪座	
PD9401	SHOULDER BUSHING	前輪座軸套	
PD9402	CASTER BLOCKS	轉向固定座	
PD9403	WHEEL HEX NUTS	六角輪轂轉換器螺帽	
PD9404	WHEEL HEX, ALUM.	六角輪轂轉換器	
PD9405	WHEEL HEX PINS	輪轂插銷	
PD9406	FRONT CVA	前輪軸組	
PD9407	DOG BONE [104MM]	前中央傳動軸	
PD9408	DOG BONE [96MM]	後中央傳動軸	
PD9409	INPUT CUP	中央傳動連接頭	
PD9410	SHOCK STAND OFF	避震器上蓋固定軸	
PD9411	SHOCK TOWER FR	前避震器支架	
PD9412	CHASSIS (3MM)	車底板	
PD9413	GUARD & BATTERY TRAY	防撞板/電池盒	
PD9414	BUMPER	前防撞板	
PD9415	STEEL WASHER 3x5.6x0.5mm	球頭墊圈	
PD9416	CENTER DIFF MOUNT	中差固定座	
PD9417	MOTOR MOUNT	馬達固定座	
PD9418	17T PINION	驅動齒, 17T	
PD9419	STEERING SERVO HORNS	伺服機擺臂	
PD9420	BLUE COUNTERSUNK WASHER	藍色墊圈	
PD9421	SERVO MOUNT	伺服機固定座組	
PD9422	VELCRO BATT. STRAPS	電池用魔鬼粘帶	
PD9424	RR OUT HINGE PIN	軸銷	
PD9425	REAR ARMS	後擺臂	
PD9426	HUB CARRIER	後輪座	
PD9427	MUD GUARD	擋泥板	
PD9428	REAR ARM PLATE	後擺臂破纖板	
PD9429	SHOCK TOWER RR	後避震器支架	
PD9430	GEAR BOX (RR)	後齒輪箱	
PD9431	D-PLATE	投影版(D)	
PD9432	C-PLATE	投影版(C)	
PD2319-B	REAR WING, BLACK	擾流尾翼, 1/8(黑)	
PD9434	WING MOUNT, RC8B2	尾翼固定座	
PD9435	SWAYBAR SET	防傾桿組	
PD9436	SWAY BAR [2.8] RR	後防傾桿	
PD9437	SWAYBAR 2.5MM	防傾桿	
PD9438	SWAYBAR BALL JOINT	球頭	
PD9439	SWAYBAR SOCKET JOINT	防傾桿球接頭	


PART#	DESCRIPTION	中文名稱	NOTE
PD9440	SWAY BAR LINK	防傾桿連接拉桿	
PD9442	CRUSH SLEEVE	軸套	
PD9443	BALL STUD [7.9xM4x18]	擺臂球頭	
PD9450	ROLL CAGE	防滾護欄	
PD9452	BUSHMASTER BODY, BLUE	BUSHMASTER車殼, 藍	
PD9453	BUSHMASTER DECAL, BLUE	BUSHMASTER車殼貼紙, 藍	
PD9455	BHCS M.SCREW(20),M2.5x10	半圓頭內六角螺絲組	
PD9456	BUSHMASTER BODY, RED	BUSHMASTER車殼, 紅	
PD9457	ENGINE SOUND BOX MOUNT	發聲器固定座	
PD9458	HINGE PIN BUSHINGS	擺臂銷軸套	
PD9459	WHEEL BLACK	輪轂, 黑	
PD9460	BUSHMASTER DECAL, RED	BUSHMASTER車殼貼紙, 紅	
8069-1	ENGINE SOUND BOX	發聲器	
8179	DIGITAL SERVO, DS1510MG	數位伺服機	
8228	COUGAR GP2 RADIO	COUGAR遙控器	

BUSHMASTER OPTIONAL PARTS LIST 選購零件表

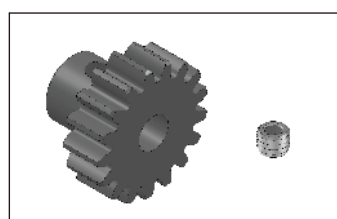


PINION
驅動齒

PD9444 12T
PD9445 13T
PD9446 14T
PD9447 15T
PD9448 16T

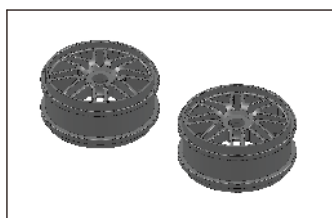


MULTI-SPOKE WHEEL
輪轂

PD1981-G GREEN(綠)
PD1981-O ORANGE(橘)
PD1981-P PINK(粉紅)
PD1981-W WHITE(白)
PD1981-Y YELLOW(黃)

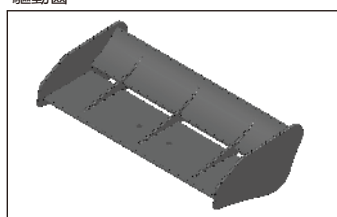


REAR WING
擾流尾翼

PD2319-G GREEN(綠)
PD2319-O ORANGE(橘)
PD2319-W WHITE(白)
PD2319-Y YELLOW(黃)

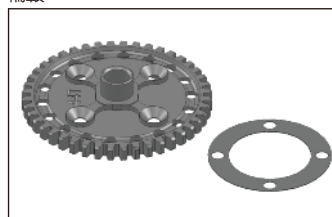

PD9376 SPUR GEAR [44T]
中央大齒輪

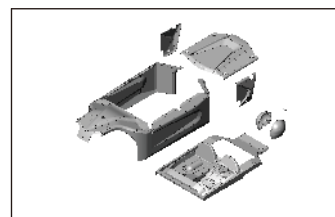

PD9454 BUSHMASTER BODY, CLEAR
BUSHMASTER 透明車殼

BUSHMASTER OPTIONAL PARTS LIST 選購零件表

PART#	DESCRIPTION	中文名稱	NOTE
PD9444	12T PINION	驅動齒, 12T	
PD9445	13T PINION	驅動齒, 13T	
PD9446	14T PINION	驅動齒, 14T	
PD9447	15T PINION	驅動齒, 15T	
PD9448	16T PINION	驅動齒, 16T	
PD1981-G	MULTI-SPOKE WHL, 1/8(G)	輪轂, 1/8(綠)	
PD1981-O	MULTI-SPOKE WHL, 1/8(O)	輪轂, 1/8(橘)	
PD1981-P	MULTI-SPOKE WHL, 1/8(P)	輪轂, 1/8(粉紅)	
PD1981-W	MULTI-SPOKE WHL, 1/8(W)	輪轂, 1/8(白)	
PD1981-Y	MULTI-SPOKE WHL, 1/8(Y)	輪轂, 1/8(黃)	
PD2319-G	REAR WING, GREEN	擾流尾翼, 1/8(綠)	
PD2319-O	REAR WING, ORANGE	擾流尾翼, 1/8(橘)	
PD2319-W	REAR WING, WHITE	擾流尾翼, 1/8(白)	
PD2319-Y	REAR WING, YELLOW	擾流尾翼, 1/8(黃)	
PD9376	SPUR GEAR [44T]	中央大齒輪	
PD9454	BUSHMASTER BODY, CLEAR	BUSHMASTER 透明車殼	



Declaration of Conformity

according to R&TTE Directive 1999/5/EC

For the following equipment:

Product : BUSHMASTER

Type Designation/Trademark : 6410-F / Thunder Tiger

Manufacturer's Name : Thunder Tiger Corp. (Ningbo)

Manufacturer's Address : 28 Jin-Feng Road, Liang Hui Industrial Park, Yuyao,
Zhejiang 315400 China

- Council Directive 1995/5/EC R&TTE on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity

For the evaluation of the compliance with this Directives, the following standards were applied :

EN 301 48901:V1.9.2 (2011)

EN 301 489-17:V2.2.1 (2012)

EN 300 328 (v1.8.1, 2012-6)

EN 62479(2010)

EN 55022:2010+AC:2011

EN 55024:2010

EN 61000-3-2:2006+A2:2009

EN 61000-3-3:2013

EN 55103-1:2009

EN 55103-2:2009

EN 61000-6-3 (2007+A1:2011)

EN 61000-6-1 (2007)

IEC/EN 61000-4-2 (2009)/ -3 (2006+A2:2010)/ -8 (2010)

Responsible for making this declaration is the :

Manufacturer ☒

Authorized representative established within the EU ☐

EC Distribution

Company Name : THUNDER TIGER EUROPE GmbH

Company Address : Rudolf-Diesel-Str. 1, 86453 Dasing, Germany

Person responsible for making this declaration

Name, Surname :

Jay Trellis

is 

Position/Title : Assist Manager

Date : April 2015



THUNDER TIGER GROUP
thundertiger.com

Manufactured by :

Thunder Tiger Corp.(Ningbo)
28 Jin-Feng Road, Liang Hui
Industrial Park, Yuyao, Zhejiang
315400 China

JD7563.V2