

1/8TH SCALE BRUSHLESS 4WD DESERT BUGGY RTR 1:8 無刷電動四驅越野完成車



This radio control model car is not a toy! Before beginning assembly, please read this manual thoroughly.

本產品為高性能模型非一般玩具，組裝與操作前，請詳閱本產品說明書。

The contents are subject to change without prior notice due to product improvements and specification changes.

本套件所附之零件可能跟圖示有所差異。因產品後續之設計研發或功能不斷改善之因，我們將保留產品規格變更權利，不再另行通知使用者。

Thunder Tiger offers online help on thundertiger.com, our product specialists are ready to take your call if you have any technical questions. Have fun and enjoy the exciting world of R/C.

若您在產品的使用上有任何的疑問，歡迎多加利用我們所提供的即時諮詢留言版或洽詢雷虎科技授權經銷商。雷虎科技的全球英文網址為 thundertiger.com，我們將竭誠為您服務！

Maintenance Manual & Parts Catalogue 維修說明書及零件包型錄

WARRANTY 品質保證事項

Thunder Tiger Corporation guarantees this model is free from defects in both material and workmanship. The total monetary value under warranty will in no case exceed the cost of the original product purchased. This warranty does not cover any components damaged by use or modification. Part or parts missing from this product must be reported within 60 days of purchase. No part or parts will be sent under warranty without proof of purchase. To receive part or parts under warranty, the service center must receive a proof of purchase and/or the defective part or parts. Should you find a defective or missing part, contact the authorized Thunder Tiger Service/Distributor near you. Under no circumstances a dealer or distributor accept return the product has been used.

本公司對於製造過程中產生之瑕疵，負完全品質保證責任。保證事項僅限於產品本身與隨產品所附之零配件。品質保證不包含因使用、組裝或調整本產品或其他所有非產品本身品質所造成之損壞。

Safety Precautions 安全注意事項

Please read all of the instructions and familiarize yourself with the product and its controls before operation.

1. This product is not a toy. It is a high performance model car therefore it is important to familiarize yourself with the model, its manual, and its construction before assembly or operation. Adult supervision is necessary for children operating this model.
2. Always keep this instruction manual on hand during assembly and for operating reference.
3. Do not use a power screwdriver to install screws into plastic parts. A power screwdriver's high rotation speed can heat up the screw being installed which can result in some melting of the plastic parts or stripped threads.
4. For best performance, it is important to make sure all the moving parts can move freely without binding.
5. This product, its parts, and its assembly tools can be harmful to your health. Always exercise extreme caution when assembling and operating this product. Keep away from any high speed rotating parts during operation.


感謝您購買雷虎科技產品，在您開始操作本產品前，請詳閱本產品說明書。

1. 本產品為高性能模型產品非一般玩具，組裝與操作過程皆須由成人陪同。請詳讀此本使用說明書，避免因組裝錯誤與操作不當造成損壞。
2. 請妥善保管此說明書，對於後續維修、操控說明將可提供您協助。
3. 請勿使用電動工具旋緊自攻螺絲於塑膠零件上，可能導致塑膠零件融化或滑牙。
4. 請檢視所有活動部位零件是否不受干涉，可靈活作動，以達車輛最佳性能。
5. 此項產品具有相當之危險性，於組裝、調整、操控上的不熟悉都可能造成自身或他人的傷害，發生這些傷害事件時，製造商是可以免除責任的，建議您於初次使用本產品前，先行請教具有相程度經驗同好或是專業雷虎經銷商與模型專賣店。

Index 索引

Manual format 說明書使用方式	P.2	STEP19 Rear Suspension 後懸吊 (3)	P.11
Symbols Used Throughout The Manual 符號說明	P.2	STEP20 Rear Sway Bar 後防傾桿	P.11
STEP1 Front / Rear Differential 前/後差速器	P.3	STEP21 Rear Suspension 後懸吊 (4)	P.12
STEP2 Front / Rear Diff Housing 前/後差速箱	P.3	STEP22 Drivetrain 傳動軸	P.12
STEP3 Front / Rear Shock Tower 前/後避震器支架	P.4	STEP23 Steering System 轉向組	P.13
STEP4 Center Differential 中央差速組	P.4	STEP24 Steering Servo 轉向伺服機 (1)	P.13
STEP5 Center Gearbox 中央齒輪箱	P.5	STEP25 Steering Servo 轉向伺服機 (2)	P.14
STEP6 Guard & Battery Tray 防撞板 / 電池盒	P.5	STEP26 Chassis Brace 後底盤支撐座	P.14
STEP7 Turnbuckle 拉桿	P.6	STEP27 Shock Assembly 避震組 (1)	P.15
STEP8 Steering System 轉向組	P.6	STEP28 Shock Assembly 避震組 (2)	P.16
STEP9 Steering System 轉向組 (2)	P.7	STEP29 Shock Assembly 避震組 (3)	P.16
STEP10 Front Suspension 前懸吊 (1)	P.7	STEP30 Battery Installation 電池安裝	P.17
STEP11 Front Suspension 前懸吊 (2)	P.7	STEP31 Wire Routing 連接線	P.17
STEP12 Front Suspension 前懸吊 (3)	P.8	STEP32 ESC, Receiver 速控器, 接收器	P.18
STEP13 Sway Bar 防傾桿	P.8	STEP33 Radio Antenna 接收天線	P.18
STEP14 Front Sway Bar 前防傾桿	P.9	STEP34 Wing & Wing Mount 尾翼與尾翼架	P.19
STEP15 Front BUMPER 前保險桿	P.9	STEP35 Tires & Wheels 輪胎與輪殼 (1)	P.19
STEP16 Rear Turnbuckle 後拉桿	P.10	STEP36 Tires & Wheels 輪胎與輪殼 (2)	P.20
STEP17 Rear Suspension 後懸吊 (1)	P.10	STEP37 Body 車殼	P.20
STEP18 Rear Suspension 後懸吊 (2)	P.10	BUSHMASTER SPARE PARTS LIST 零件表	P.21-25

Tools Required For Assembly 組裝維修工具

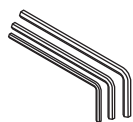

Hex Wrenches
1.5 / 2.0 / 2.5mm
六角板手組




Super Glue
(CA Glue)
快乾膠


Thread Locking
Adhesive
(Threadlocker)
螺絲防鬆膠




Wire Cutter
斜口剪

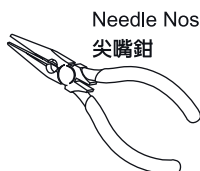

Needle Nose Pliers
尖嘴鉗

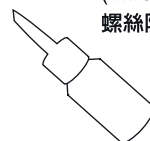

Grease
潤滑油膏
(黃油)

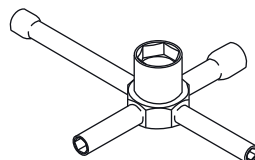


5-Way Cross Wrench
十字套筒



Lexan Body curved Scissor
車殼專用剪



Phillips
Screwdrivers
十字起子

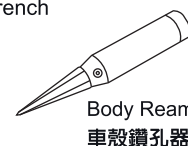


Body Reamer
車殼鑽孔器

Manual Format 說明書使用方式

How to read the instruction manual ? 說明書導讀

- A:** The manual indicates the assembly step number and the parts that are to be assembled.
- B:** The manual displays actual size drawings.
- C:** All parts, except screws, are identified by their order numbers. When purchasing spare parts, identify the part required and cross reference this to the spare parts list at the end of this manual, which shows the spare parts and the corresponding order numbers.
- D:** This instruction manual uses several symbols. Pay careful attention to them during construction. Details are given at the bottom of each page.
- A:** 顯示組立步驟及需組立之零件部位。
- B:** 零件實際對照尺寸。
- C:** 請比對零件形狀以及後附零件料號對照圖示找出需求零件料號。
- D:** 操作說明符號可更有效協助組裝者使用此說明書，請依說明書符號指示進行組裝步驟。

Example 說明範例

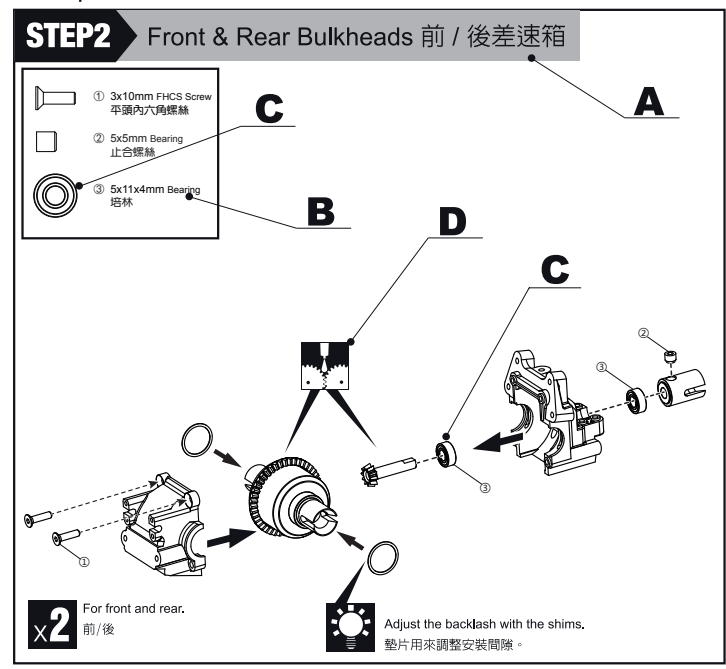

Symbols Used Throughout The Manual 符號說明



Apply C.A Glue
使用快乾膠黏合



Apply silicon oil
使用模型專用矽油



Assemble as many times as specified
依指示組裝所需數量



Assemble left and right side the same way
左右側組件相同



Assemble in right order
依標示順序組裝



Drill holes with the specified diameter
依標示尺寸鑽孔



Hint
組裝提示



Must be purchased separately
改裝品需另購



Cut off shaded portion
依標示部分裁切



Ensure smooth, non-binding movement when assembling
確認組件靈活度



Pay attention
組裝注意



Cut off excess
裁剪多餘部分




Apply threadlocker
使用螺絲防鬆膠



Apply grease
使用潤滑油膏(黃油)


STEP3 Front / Rear Shock Tower 前 / 後避震器支架

-  ① 3x10mm SFH SCREW
平頭內六角螺絲
-  ② 3x12mm SFH SCREW
平頭內六角螺絲
-  ③ 3x10mm SRH SCREW
半圓頭內六角螺絲

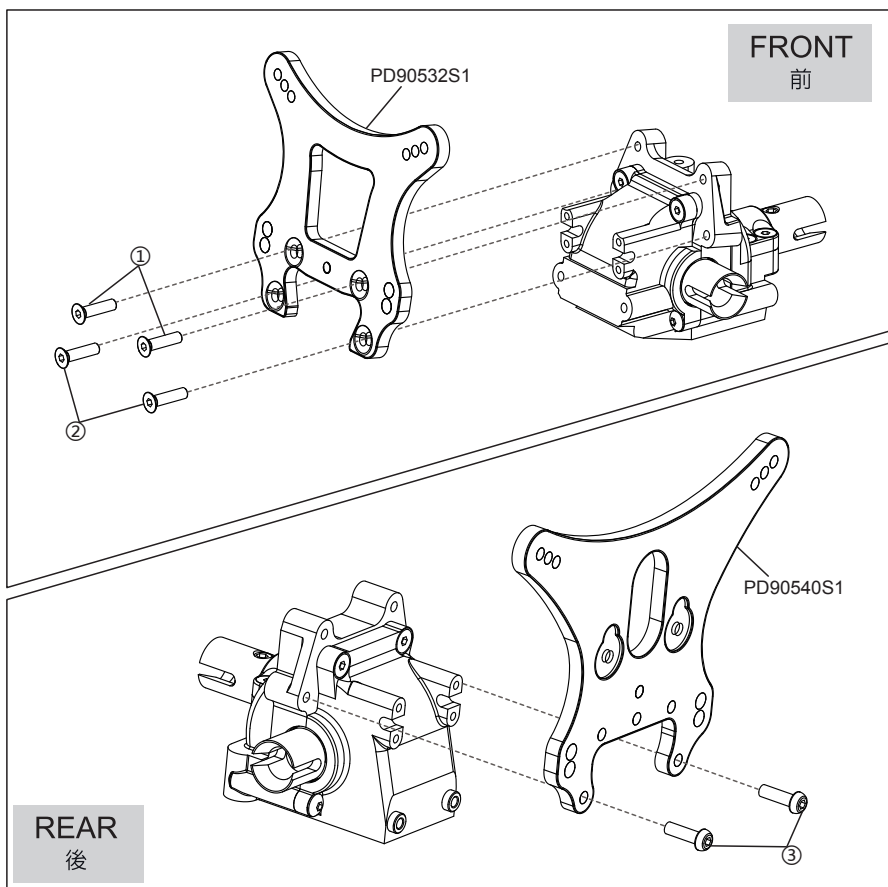

STEP4 Center Differential 中央差速組

-  ① 3x12mm SFH SCREW
平頭內六角螺絲
-  ② 2.5x11.8mm PIN
銷
-  ③ 5.8x1.5mm O-RING
O型環
-  ④ 6x11.5x0.2mm WASHER
墊片
-  ⑤ 3.6x12x0.2mm WASHER
墊片
-  ⑥ 8x16x5mm Bearing
培林

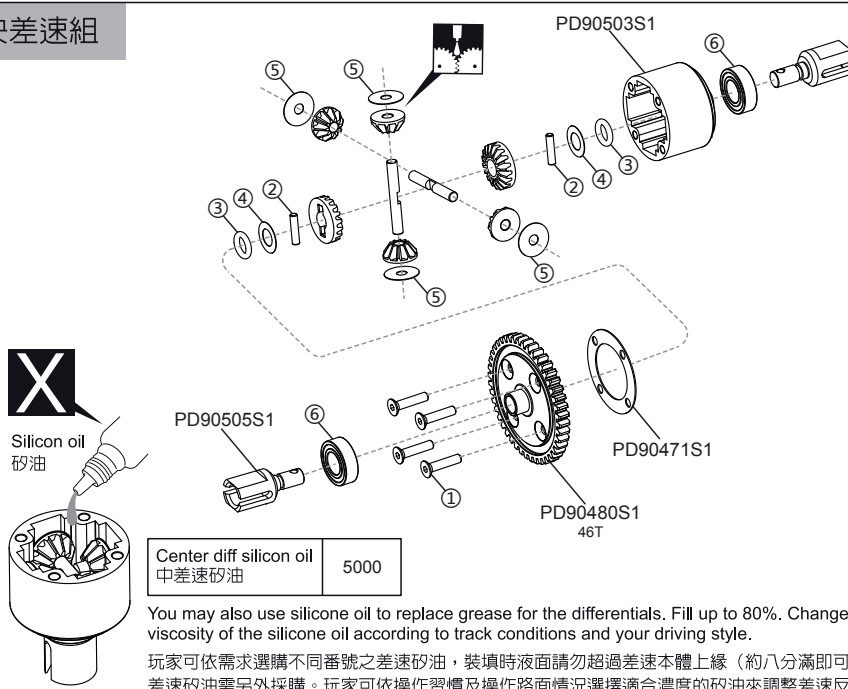

You may also use silicone oil to replace grease for the differentials. Fill up to 80%. Change the viscosity of the silicone oil according to track conditions and your driving style.



玩家可依需求選購不同番號之差速矽油，裝填時液面請勿超過差速本體上緣（約八分滿即可）。差速矽油需另外採購。玩家可依操作習慣及操作路面情況選擇適合濃度的矽油來調整差速反應。

 **Apply grease**
使用潤滑油膏（黃油）

 **Must be purchased separately**
改裝品需另購


STEP5 Center Gearbox 中央齒輪箱

- ① 3x8mm SRH SCREW
半圓頭頭內六角螺絲
- ② 3x10mm SBH SCREW
有合內六角螺絲
- ③ 4x10mm SBH SCREW
有合內六角螺絲
- ④ 4x4mm SET SCREW
止合螺絲

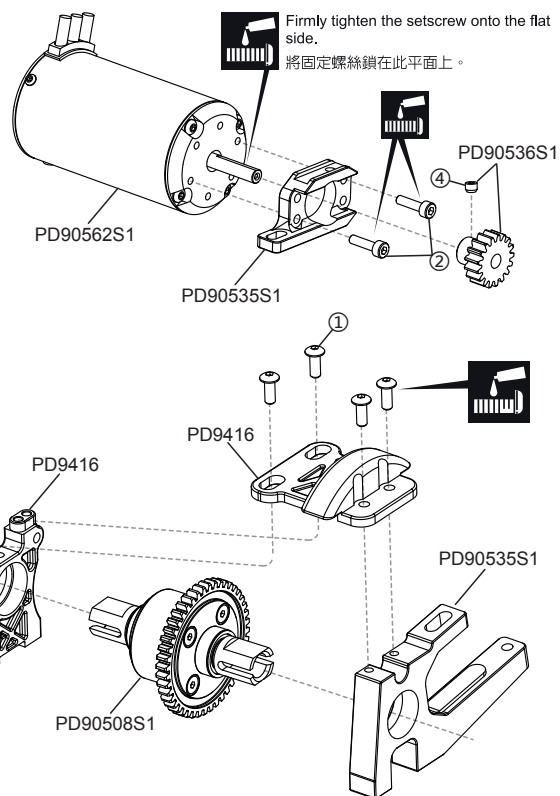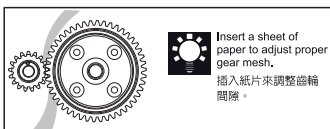

STEP6 Guard & Battery Tray 防撞板/電池盒

- ① 3X8mm SFH SCREW
平頭內六角螺絲
- ② 3x10mm SFH SCREW
平頭內六角螺絲
- ③ 4x8mm SFH SCREW
平頭內六角螺絲

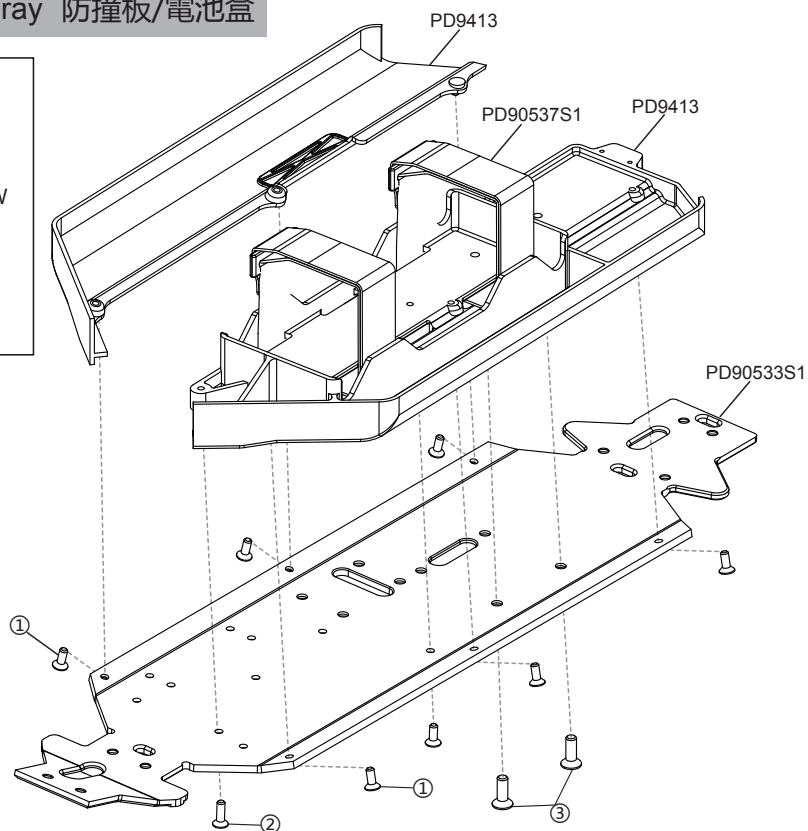


Apply threadlocker
使用螺絲防鬆膠




Hint
組裝提示

STEP7 Turnbuckle 拉桿

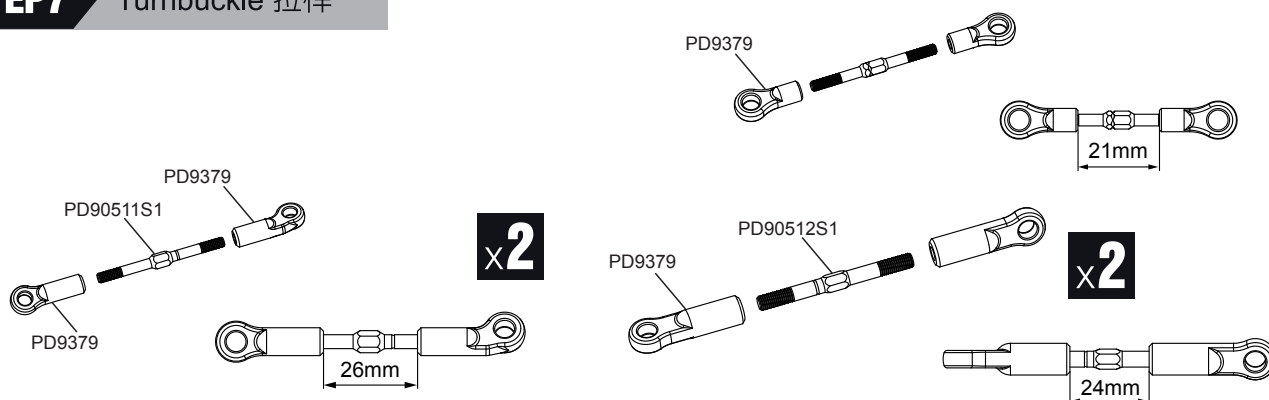

STEP8 Steering System 轉向組 (1)

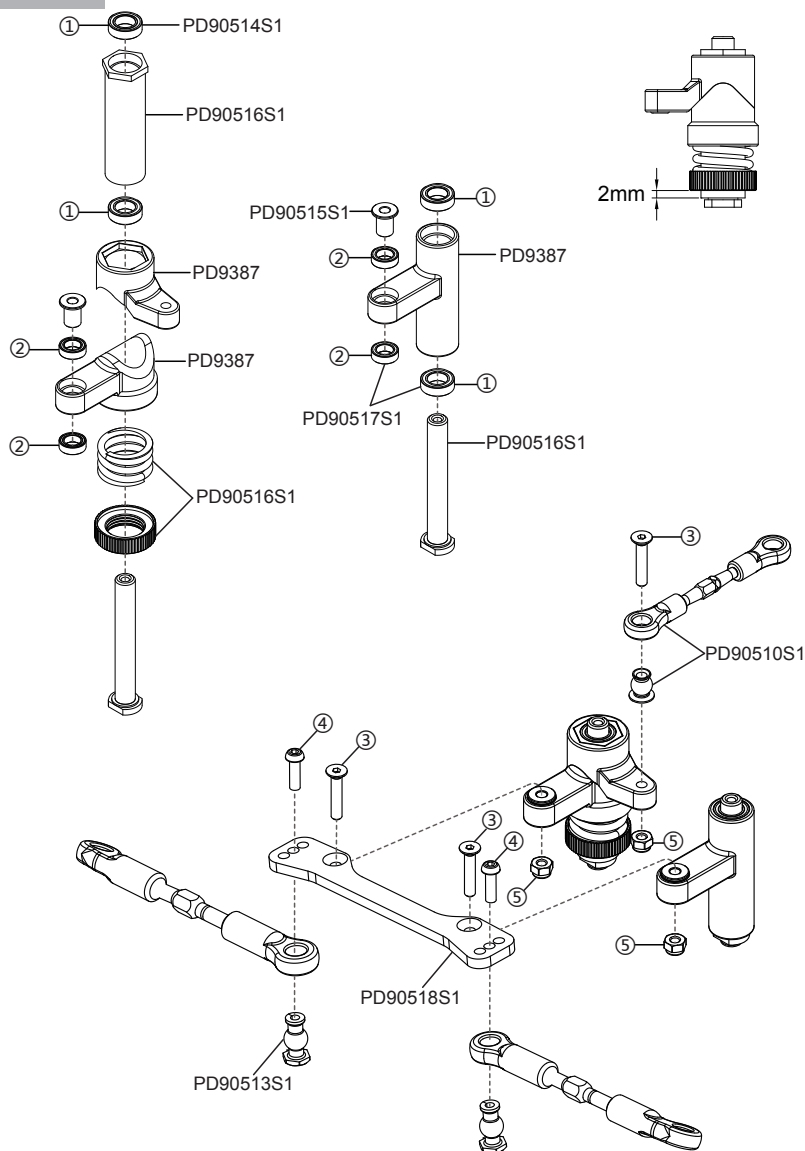


x2

Assemble as many times as specified
依指示組裝所需數量


STEP9 Steering System 轉向組 (2)

- ① 3x14mm SFH SCREW 平頭內六角螺絲
- ② 3x10mm SRH SCREW 半圓頭內六角螺絲
- ③ 3x12mm SFH SCREW 平頭內六角螺絲
- ④ M3 Lock Nut 防鬆螺帽

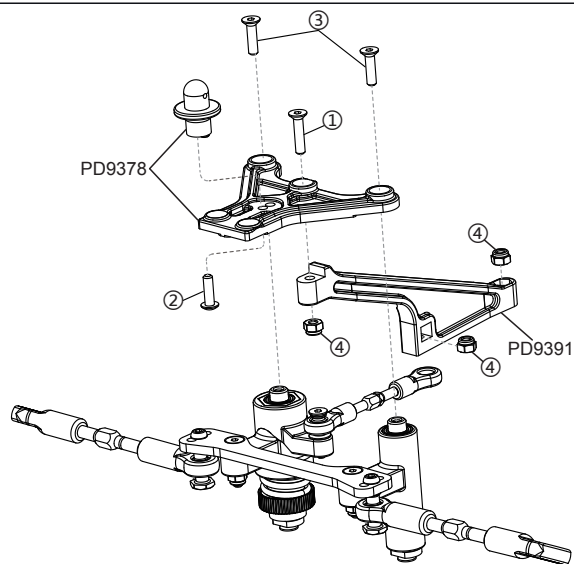


STEP10 Front Suspension 前懸吊 (1)

- ① 3x12mm SFH SCREW 平頭內六角螺絲
- ② 4x10mm SET SCREW 止合螺絲

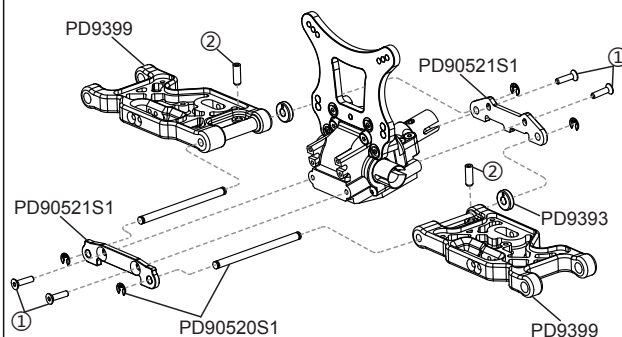



STEP11 Front Suspension 前懸吊 (2)

- ① 4x18mm SRH SCREW 半圓頭內六角螺絲
- ② 3x17mm PIN 銷
- ③ 2.5x13.8mm PIN 銷
- ④ 5x5mm SET SCREW 無頭內六角螺絲
- ⑤ 8x16x5mm BEARING 培林


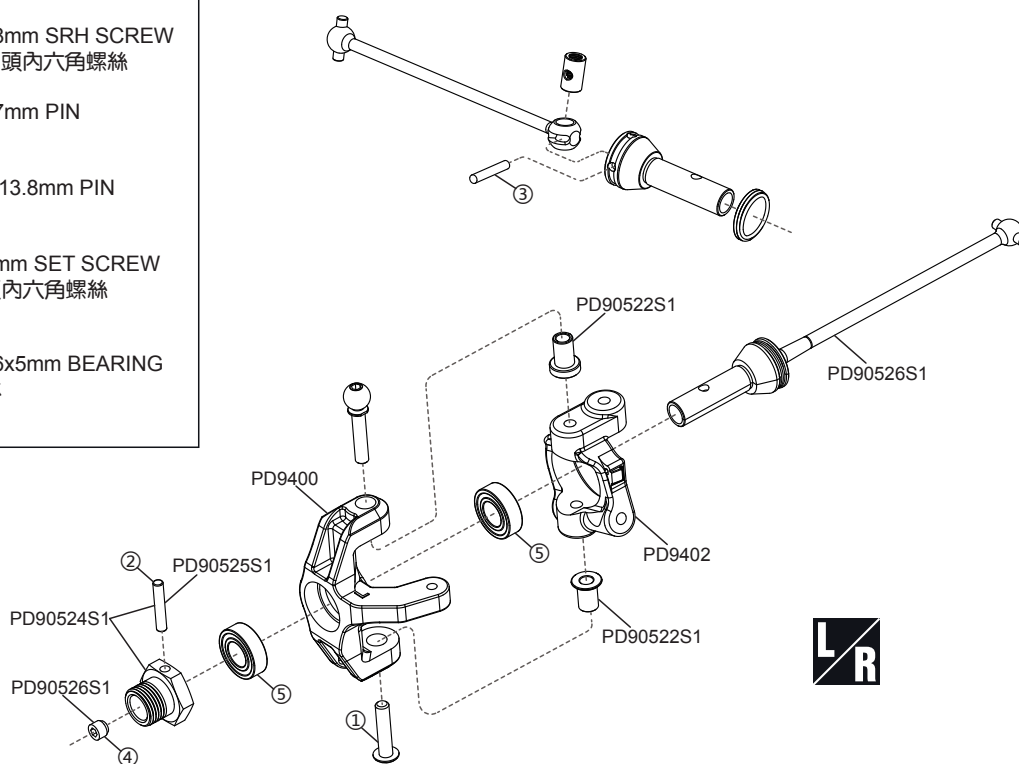


Assemble left and right side the same way
左右側組件相同

STEP12 Front Suspension 前懸吊 (3)

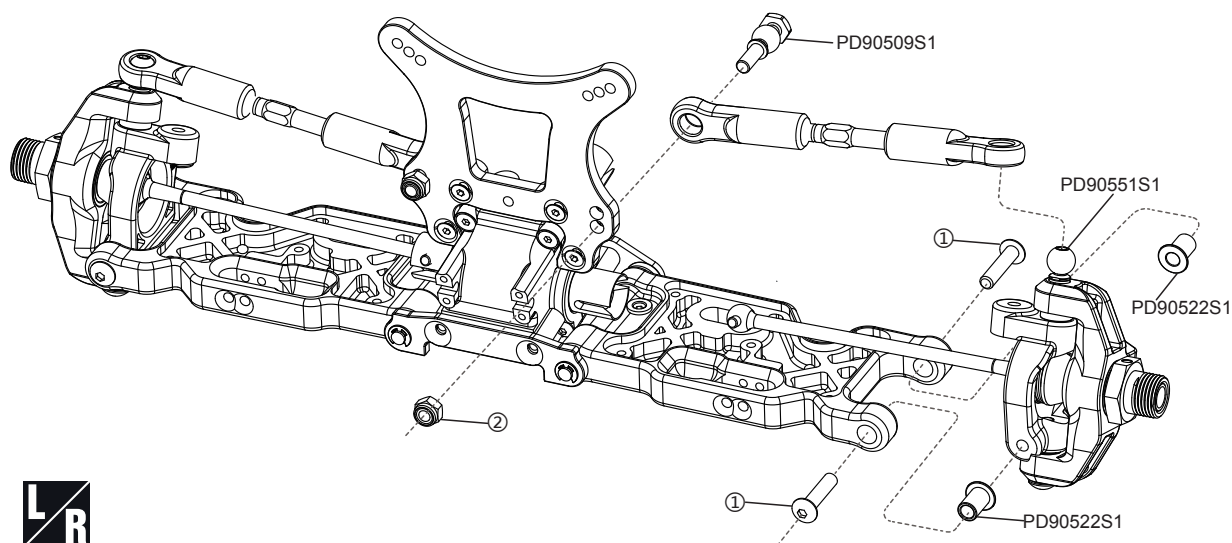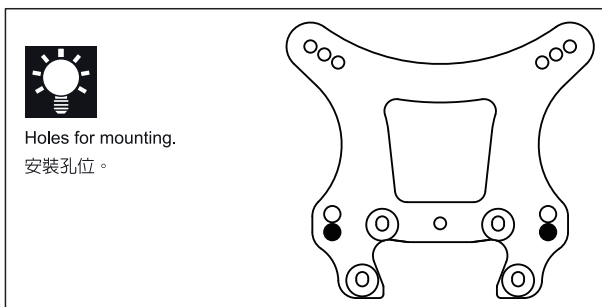

STEP13 Sway Bar 防傾桿

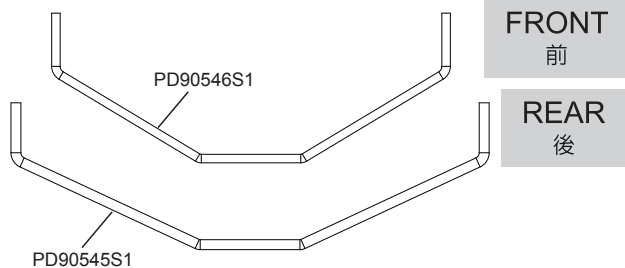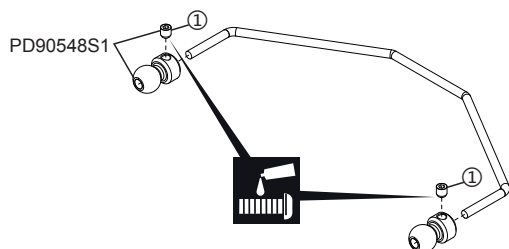


Assemble left and right side the same way
左右側組件相同



Apply threadlocker
使用螺絲防鬆膠

 STEP14 Front Sway Bar 前防傾桿




① 3x20mm SFH SCREW
平頭內六角螺絲




② 2x8mm SBH SCREW
有合內六角螺絲




③ 3x5mm SET SCREW
止合螺絲

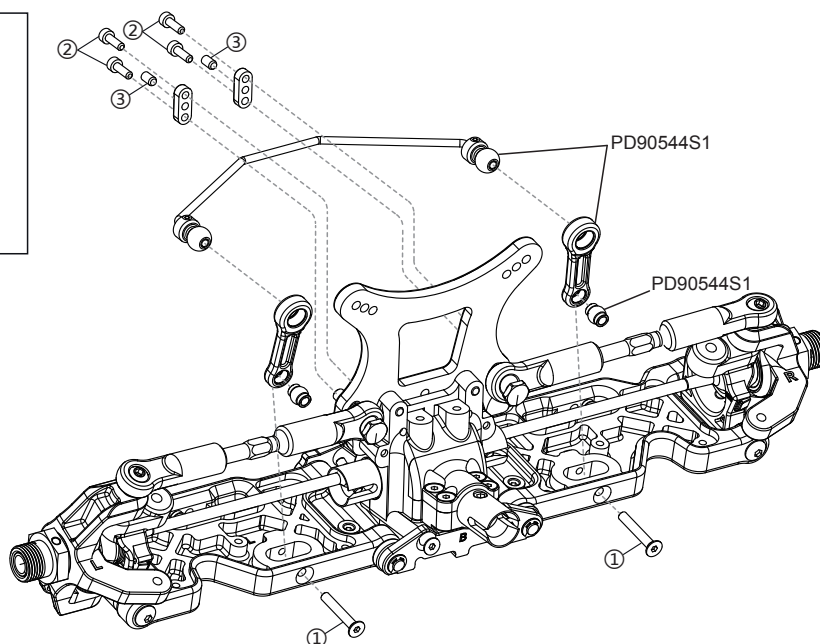

 STEP15 Front Bumper 前保險桿




① 4x12mm SFH SCREW
平頭內六角螺絲

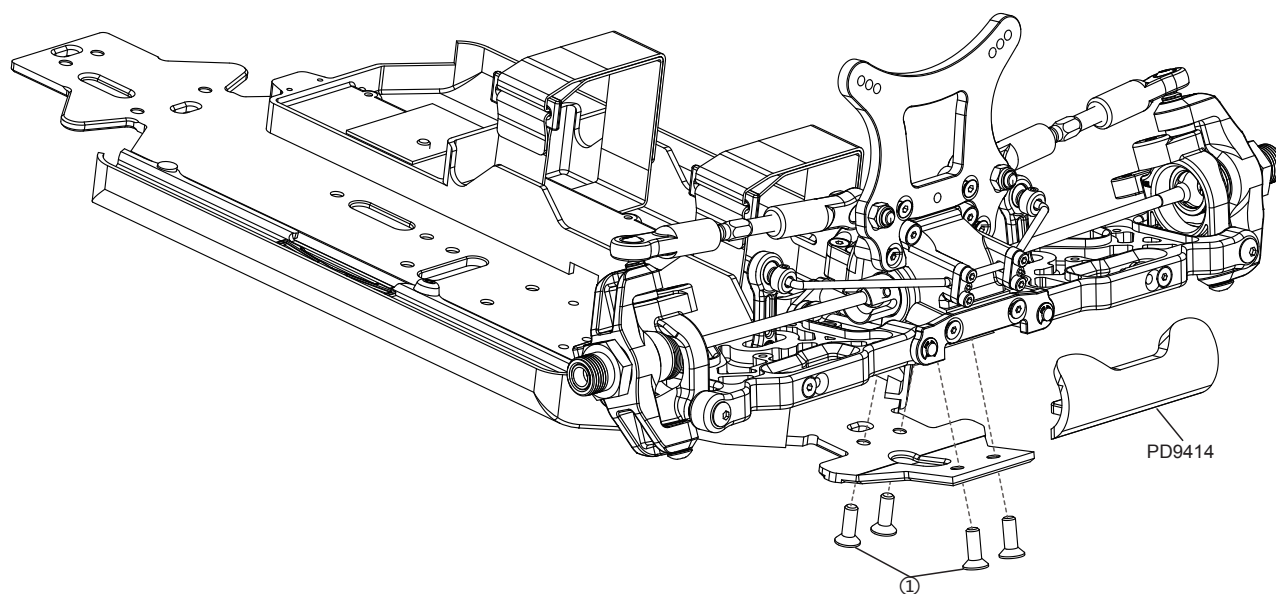


STEP16 Rear Turnbuckle 後拉桿



STEP17 Rear Suspension 後懸吊 (1)

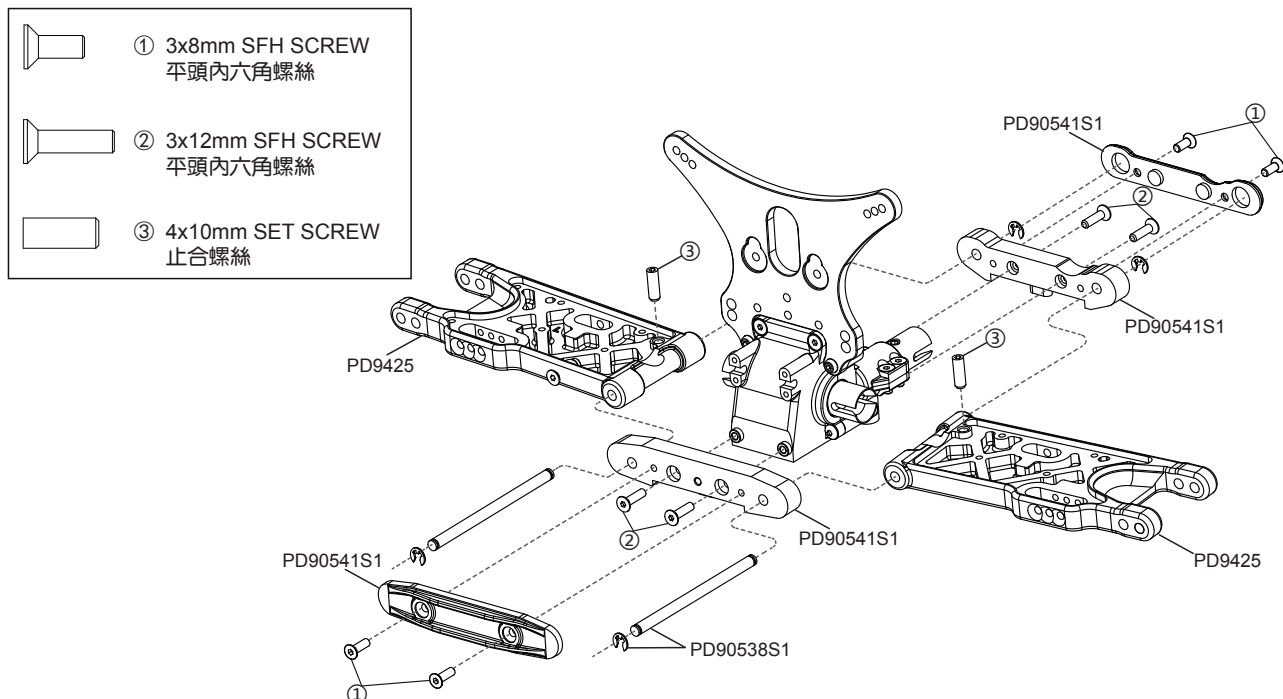


STEP18 Rear Suspension 後懸吊 (2)

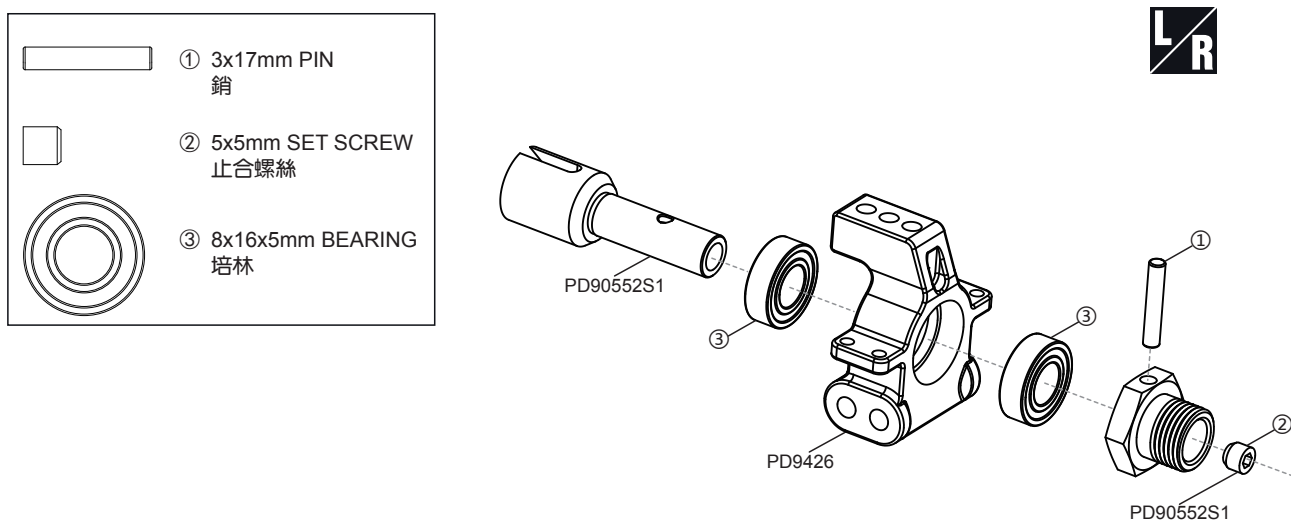

x2 Assemble as many times as specified
依指示組裝所需數量

 
STEP19 Rear Suspension 後懸吊 (3)



- ① 4x20mm SFH SCREW
平頭內六角螺絲




- ② M4 LOCK NUT
防鬆螺帽

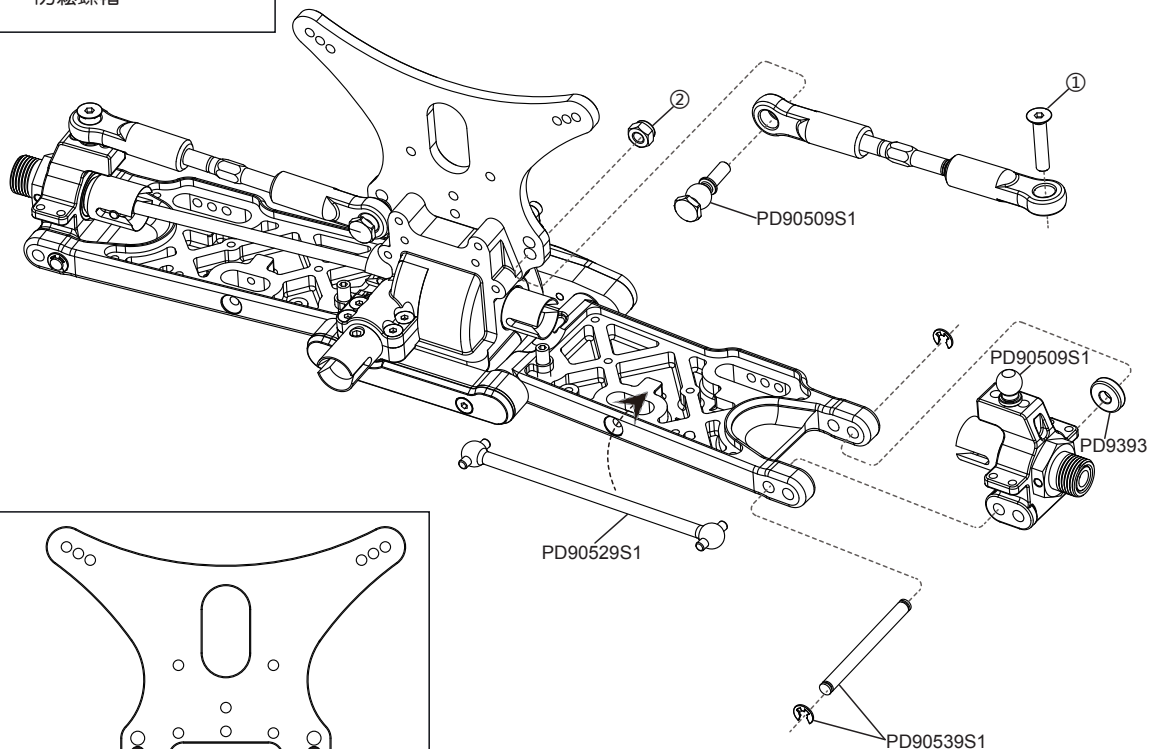

Holes for mounting.
安裝孔位。

 STEP20 Rear Sway Bar 後防傾桿




- ① 3x20mm SFH SCREW
平頭內六角螺絲



- ② 2x8mm SBH SCREW
有合內六角螺絲



- ③ 3x5mm SET SCREW
止合螺絲

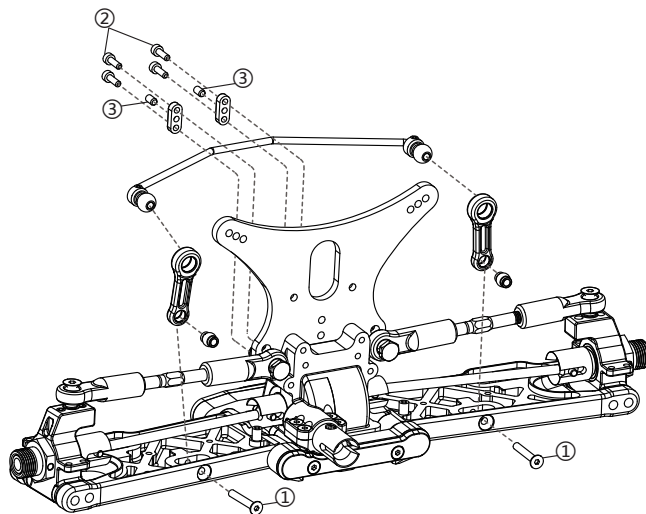


Assemble left and right side the same way
左右側組件相同




Hint
組裝提示

 
STEP21 Rear Suspension 後懸吊 (4)




- ① 4X12mm SFH SCREW
平頭內六角螺絲

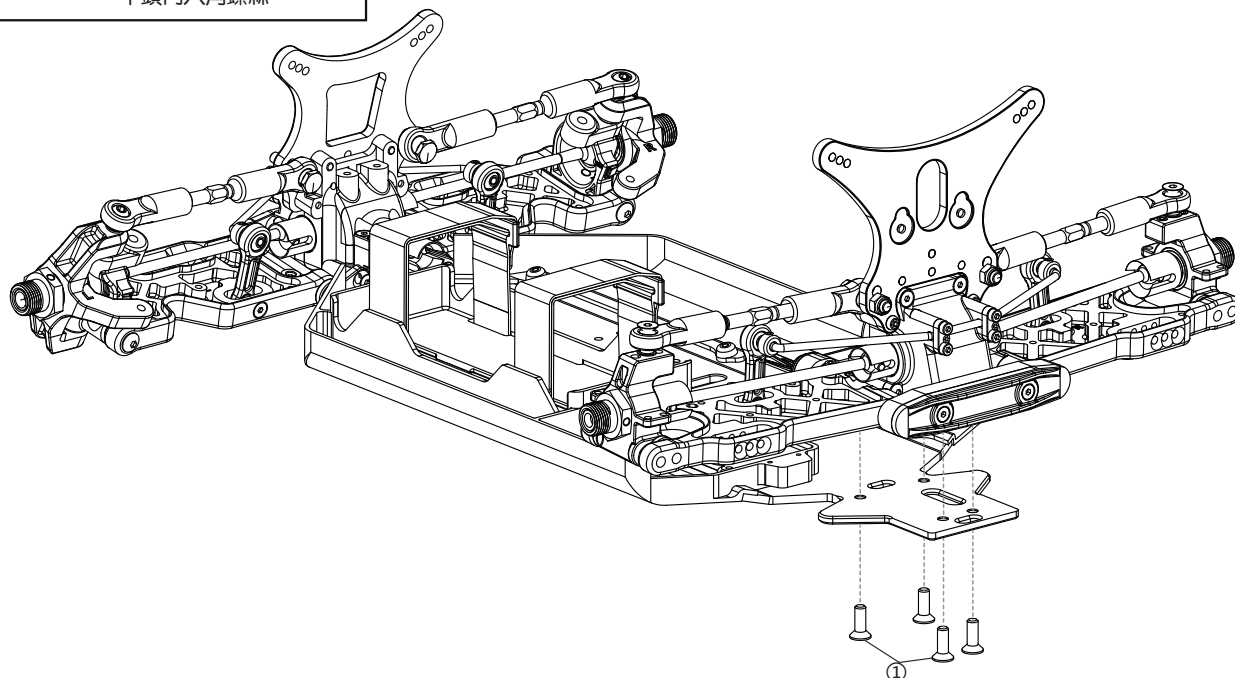

 STEP22 Drivetrain 傳動軸




- ① 4x12mm SFH SCREW
平頭內六角螺絲

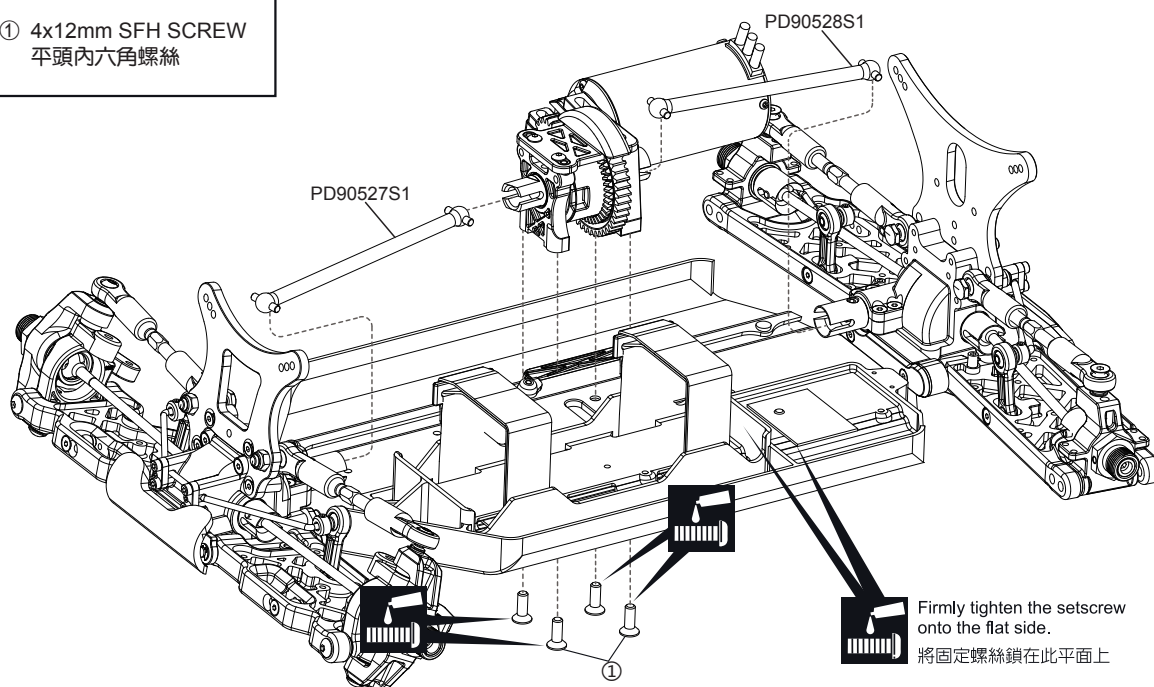

Apply threadlocker
使用螺絲防鬆膠


STEP23 Steering System 轉向組

- ① 3x12mm SFH SCREW
平頭內六角螺絲
- ② 3x7mm BALL STUD
球頭墊片

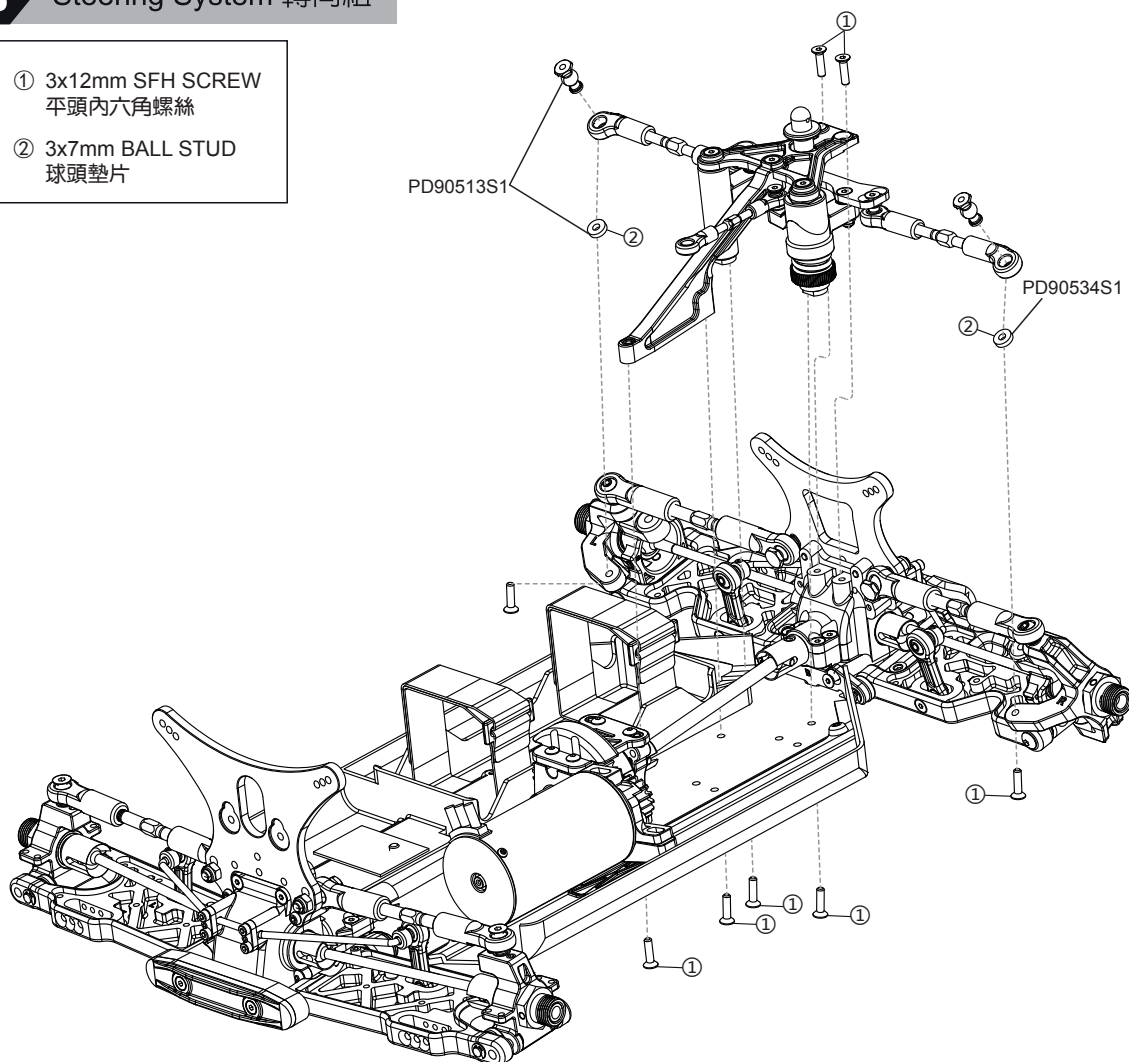



STEP24 Steering Servo 轉向伺服機(1)

- ① 3x14mm SRH SCREW
半圓頭內六角螺絲
- ② 3x8mm SFH SCREW
平頭內六角螺絲

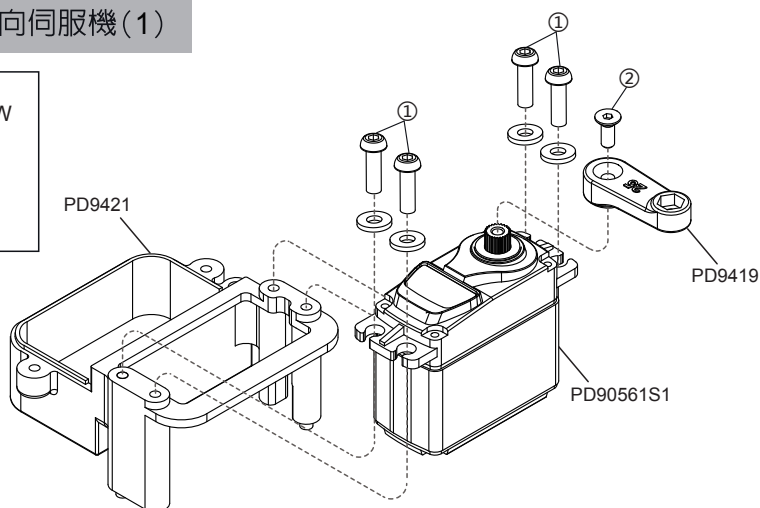


 
STEP25 Steering Servo 轉向伺服機 (2)

-  ① 3x18mm SRH SCREW
半圓頭內六角螺絲
-  ② 3x12mm SFH SCREW
平頭內六角螺絲
-  ③ M3 LOCK NUT
防鬆螺帽

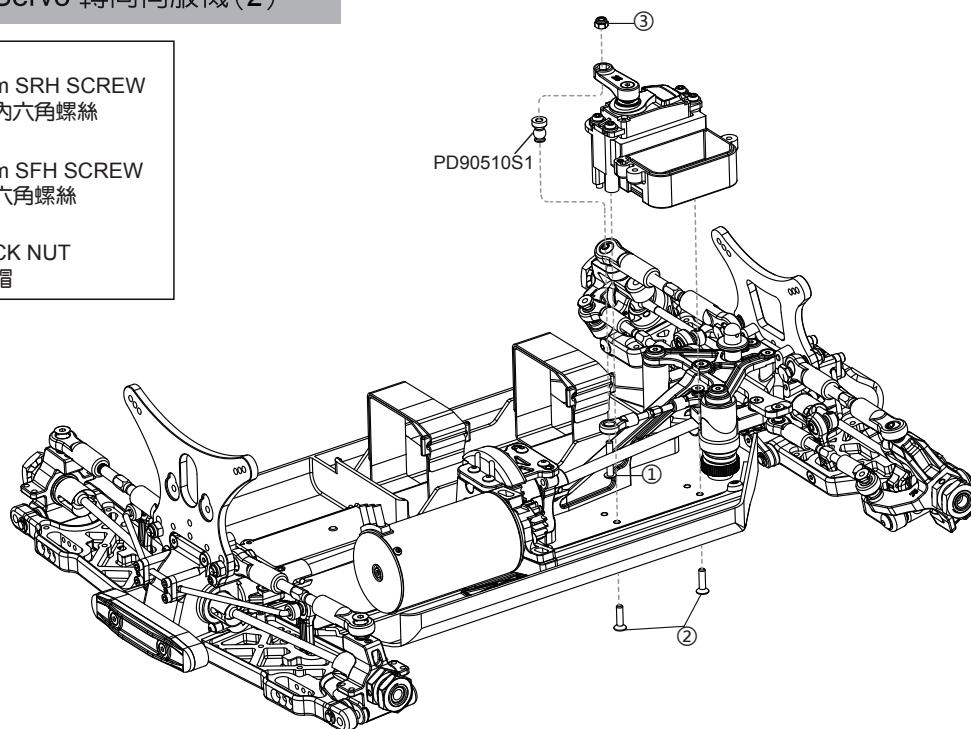

 
STEP26 Chassis Brace 後底盤支撐座

-  ① 3x14mm SRH SCREW
半圓頭內六角螺絲
-  ② 4x10mm SFH SCREW
平頭內六角螺絲
-  ③ M3 LOCK NUT
防鬆螺帽

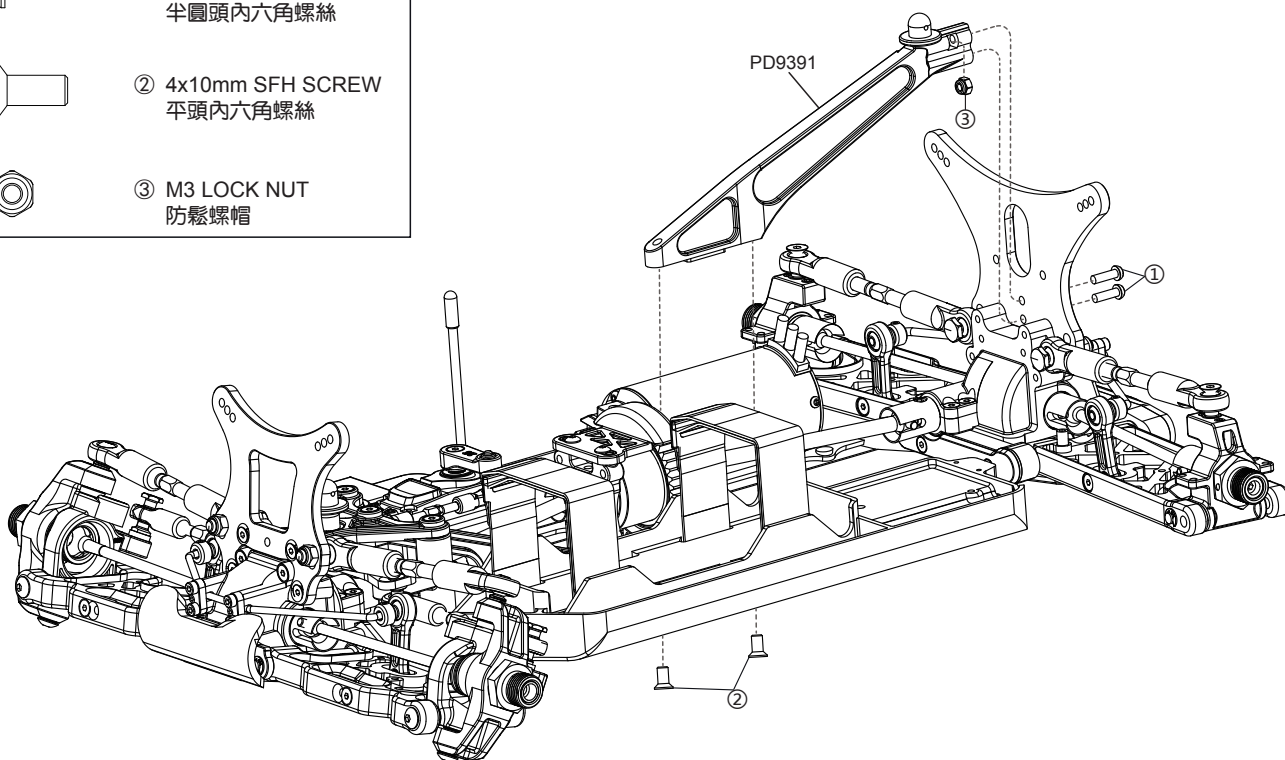




STEP27 Shock Assembly 避震組 (1)

- ① 2.6x6x0.5mm PISTON WASHER 活塞墊片
- ② 3x6.8mm O-RING O型環
- ③ SPACER 支撐環
- ④ M2.5LOCK NUT 防鬆螺帽
- ⑤ G CLIP G扣
- ⑥ 20x1.2mm O-RING O型環

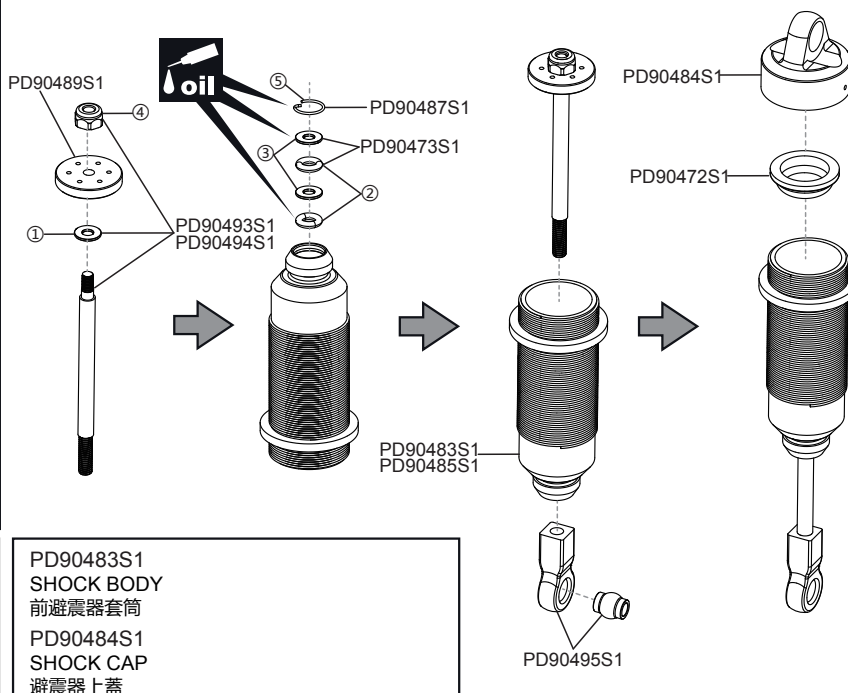


PD90493S1
FRONT SHOCK SHAFT
前避震軸心
PD90494S1
REAR SHOCK SHAFT
後避震軸心

PD90483S1
SHOCK BODY
前避震器套筒
PD90484S1
SHOCK CAP
避震器上蓋

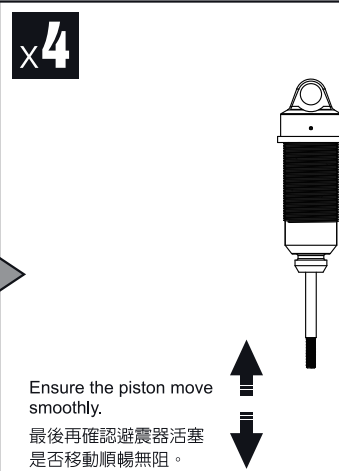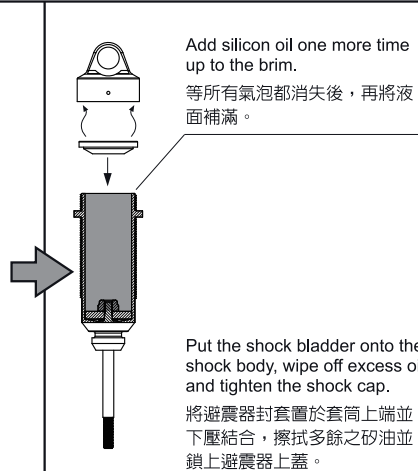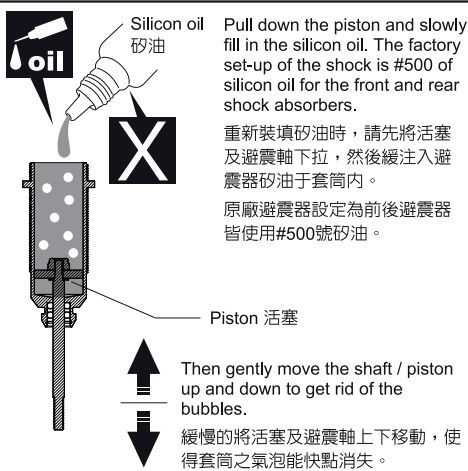

PD90496S1
FRONT SHOCK
前避震器彈簧
PD90497S1
REAR SHOCK
後避震器彈簧

PD90482S1
FRONT SHOCK
前避震器組
PD90486S1
REAR SHOCK
後避震器組

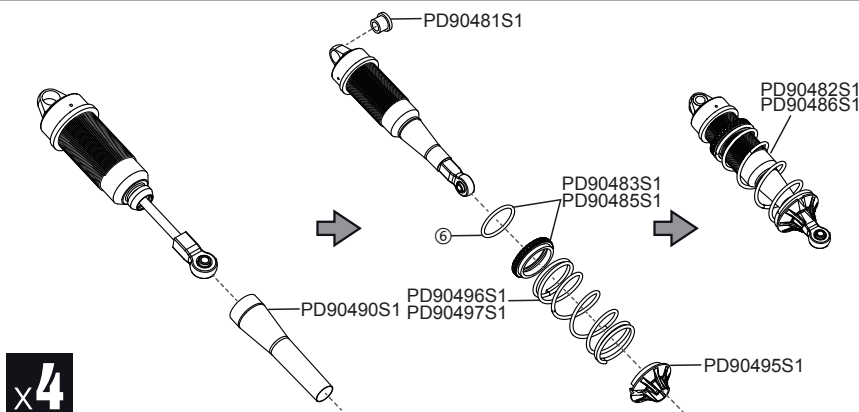

Hint
組裝提示



Assemble as many times as specified
依指示組裝所需數量

 


Apply silicon oil
使用模型專用矽油





Must be purchased separately
改裝品需另購



STEP28 Shock Assembly 避震組 (2)

-  ① 3x25mm SBH SCREW
有合內六角螺絲
-  ② 3x20mm SFH SCREW
平頭內六角螺絲
-  ③ M3 LOCK NUT
防鬆螺帽



FRONT
前

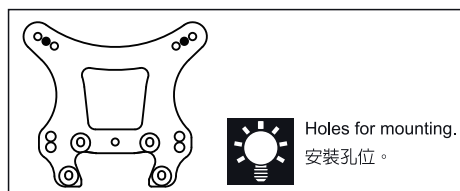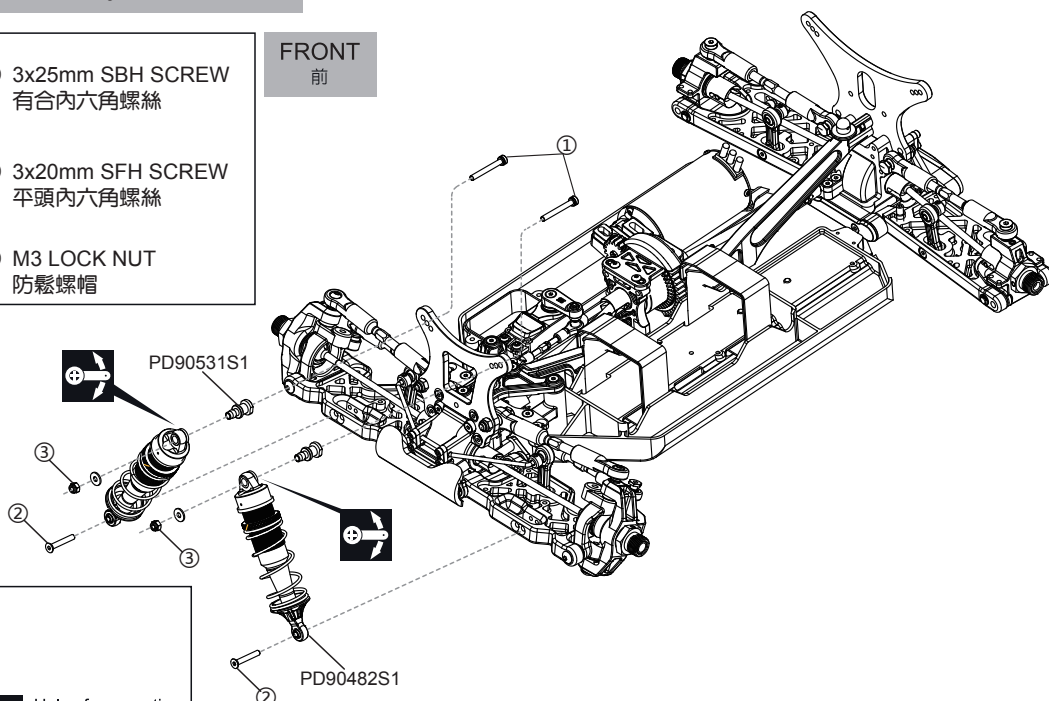

  STEP29 Shock Assembly 避震組 (3)


-  ① 3x25mm SBH SCREW
有合內六角螺絲
-  ② 3x20mm SFH SCREW
平頭內六角螺絲
-  ③ M3 LOCK NUT
防鬆螺帽

REAR
後

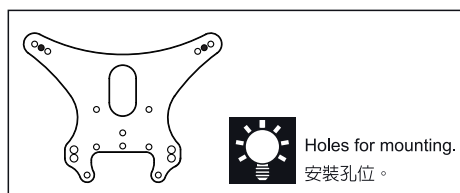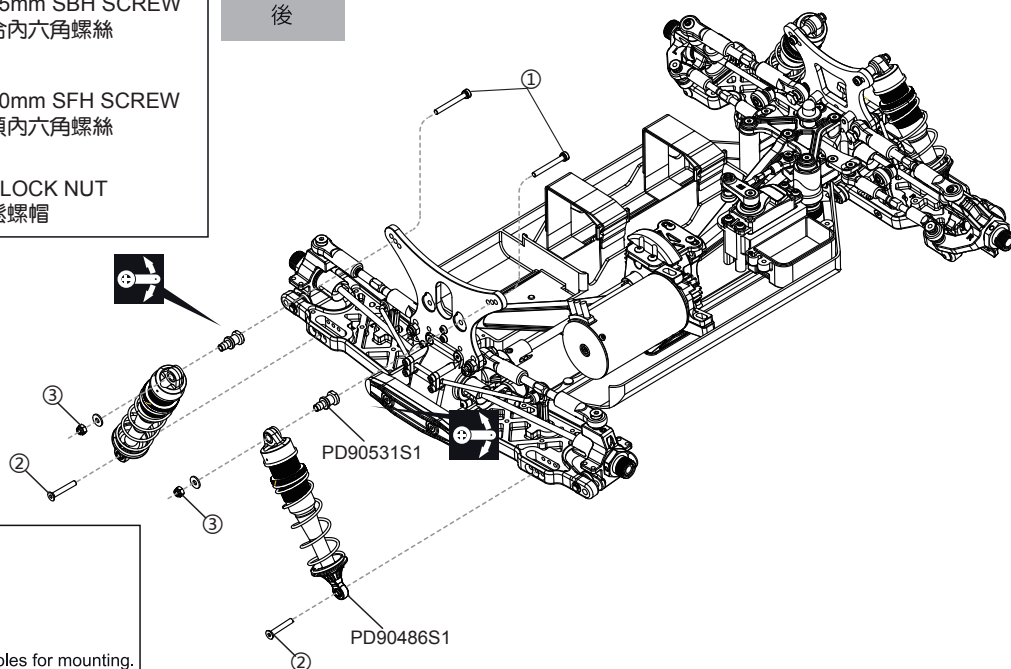


Ensure smooth, non-binding movement when assembling
確認組件靈活度

STEP30 Battery Installation 電池安裝

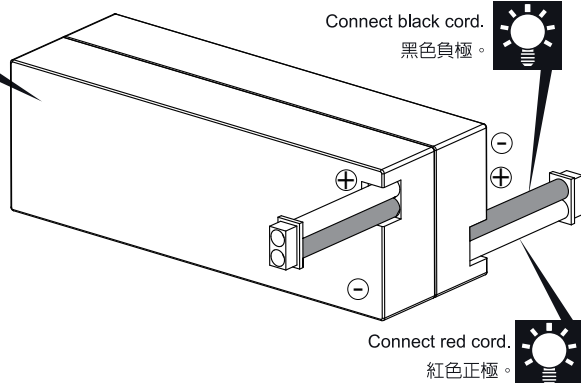

Combine two Lipo battery as shown.
請依圖示組合電池。

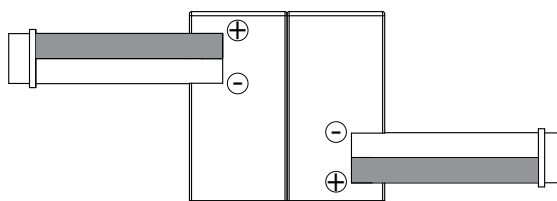


STEP31 Wire Routing 連接線



Make sure the switch is off before
in connecting the battery.
連接電池前先確認電源關閉。

OFF!
ON/OFF
Switch
速控器開關

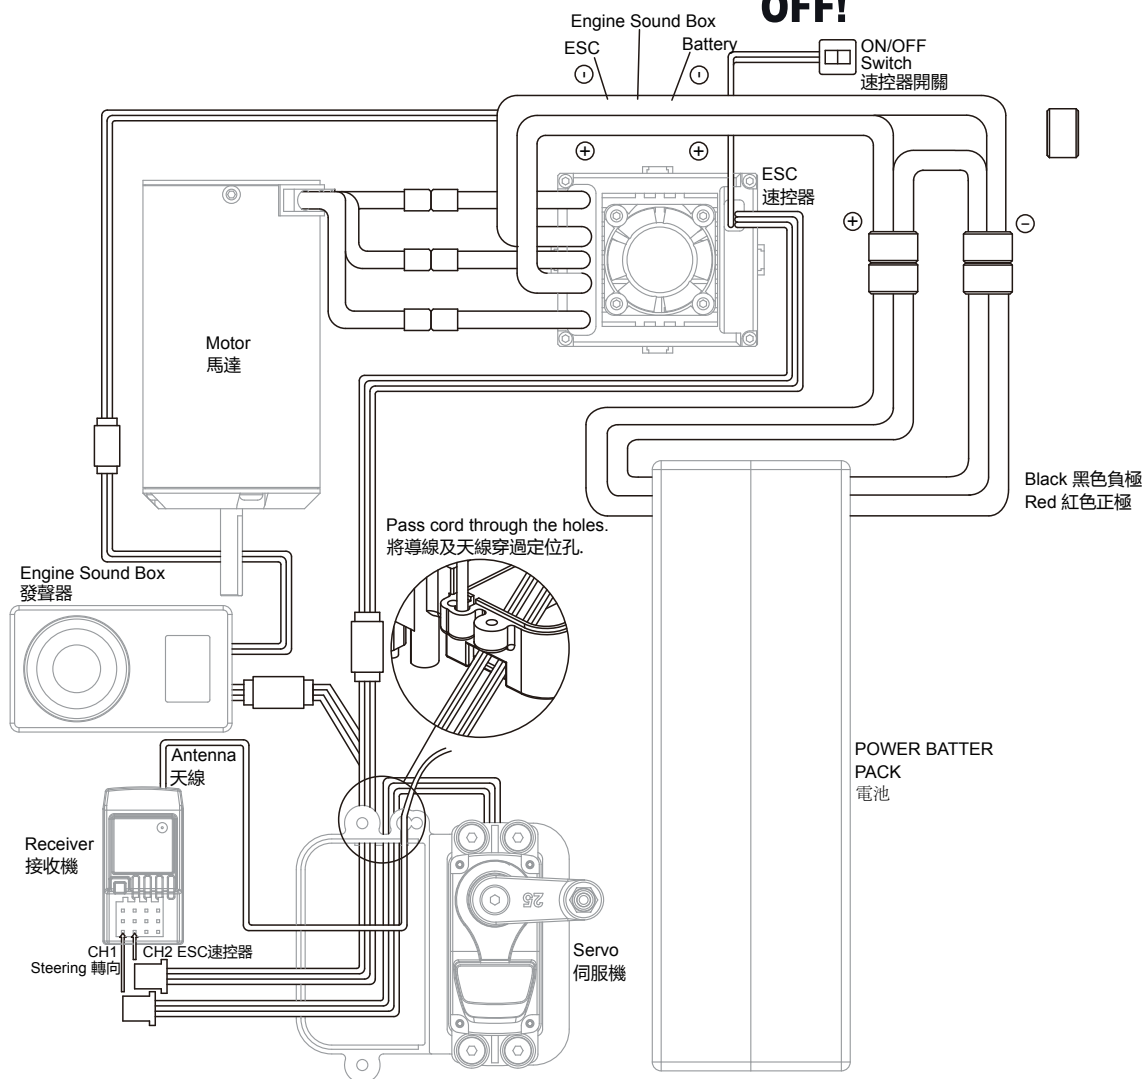

Pay attention
組裝注意




Hint
組裝提示




Must be purchased separately
改裝品需另購

STEP32 ESC, Receiver 速控器, 接收機

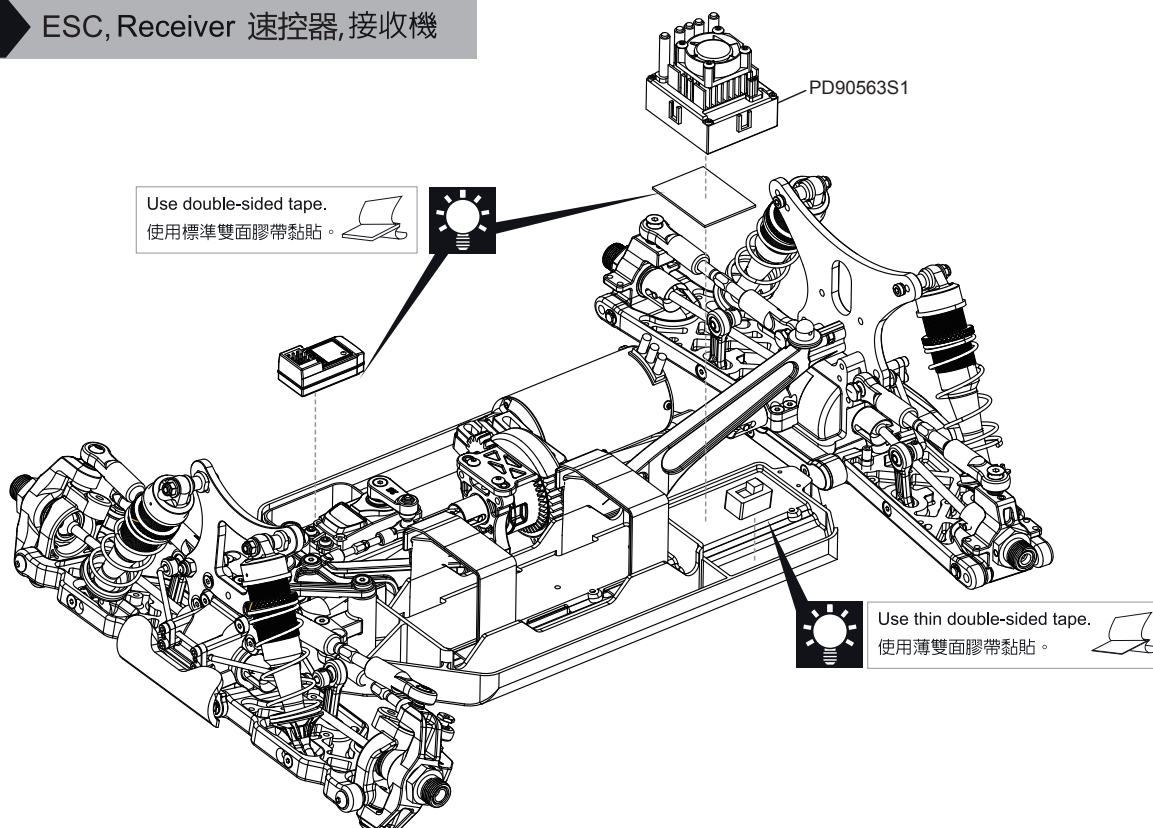


STEP33 Radio Antenna 接收天線

- ① 3x8mm SRH SCREW
半圓頭內六角螺絲
- ② 3X5mm SET SCREW
止合螺絲


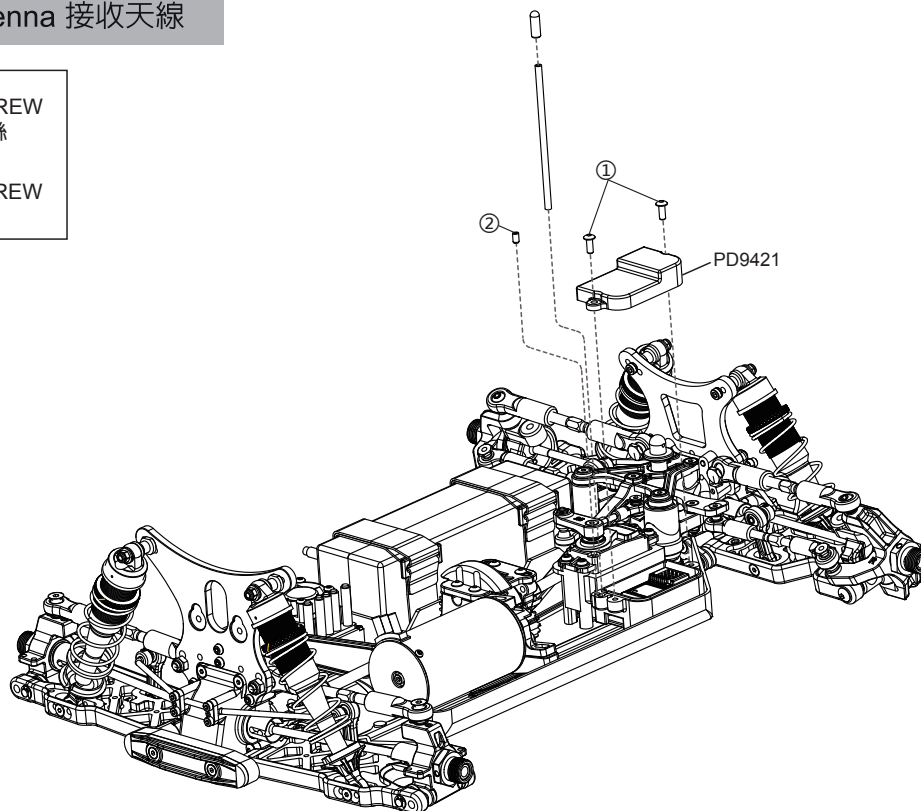


STEP34 Wing & Wing Mount 尾翼與尾翼架

- ① 3x12mm SRH SCREW
半圓頭內六角螺絲
- ② 3x14mm SRH SCREW
半圓頭內六角螺絲
- ③ M3 LOCK NUT
防鬆螺帽

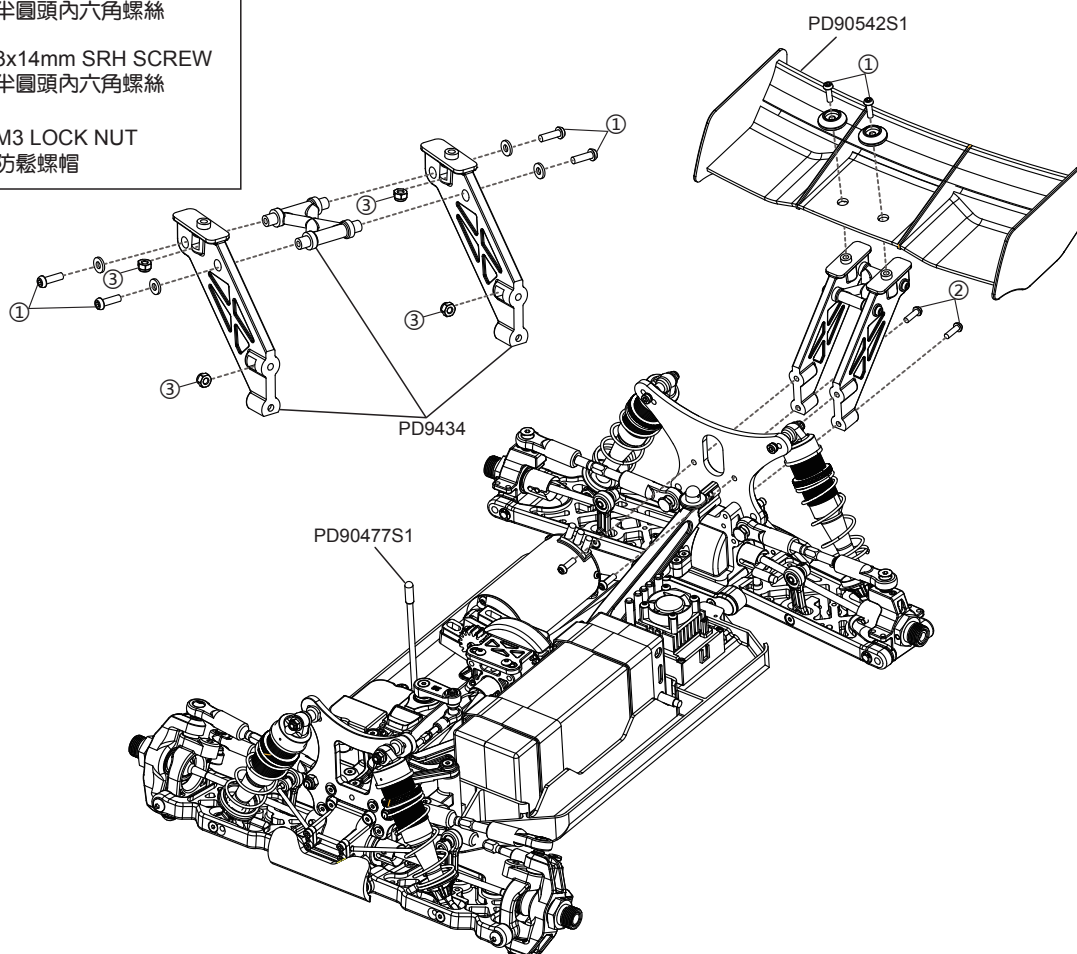

STEP35 Tires & Wheels 輪胎與輪轂 (1)

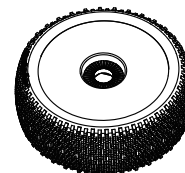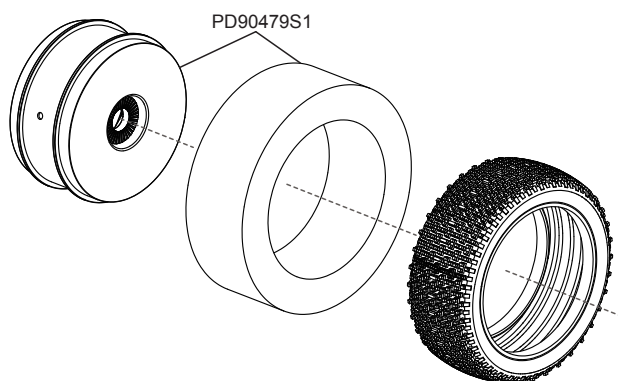

x4




Install the tire onto the wheel. Glue the tire to the wheel with instant glue in several spots around the tire on both sides.

將輪胎（含內襯）與輪轂結合並在胎緣內側點上快乾膠黏合。


Warning: Follow the adhesive instructions for proper use and safety. Wear eye and hand protection.

注意!!! 使用快乾膠時請注意安全，最好戴上手套及護目鏡以避免危險。

STEP36

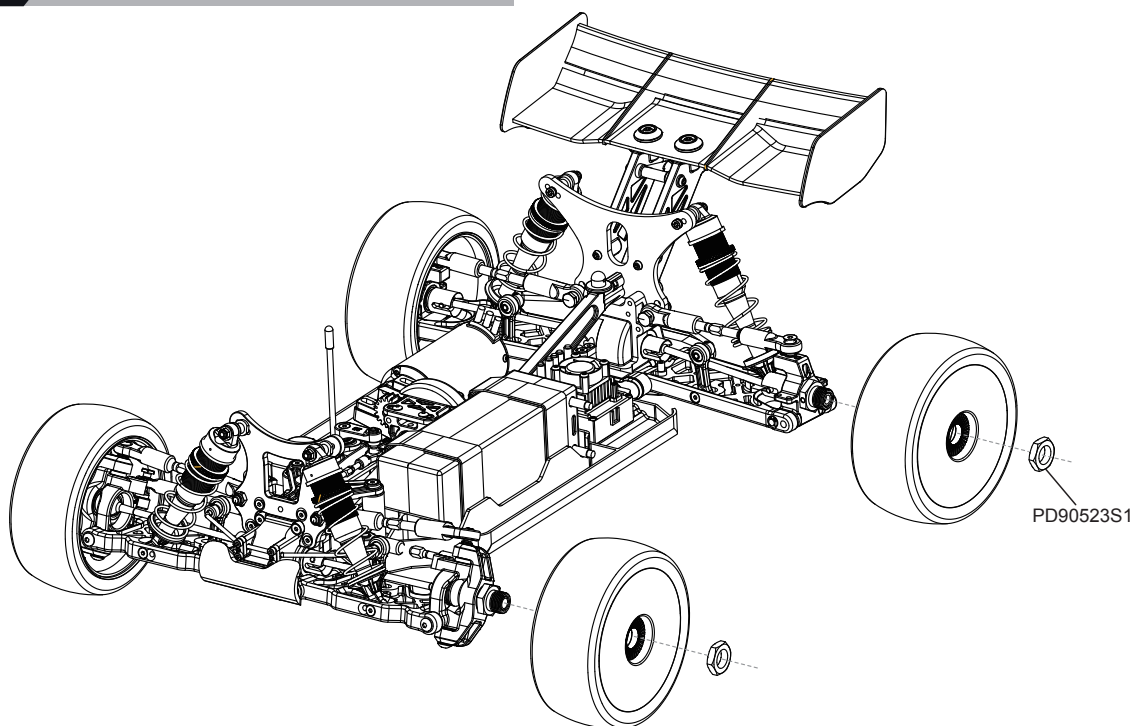

STEP37 Body 車殼

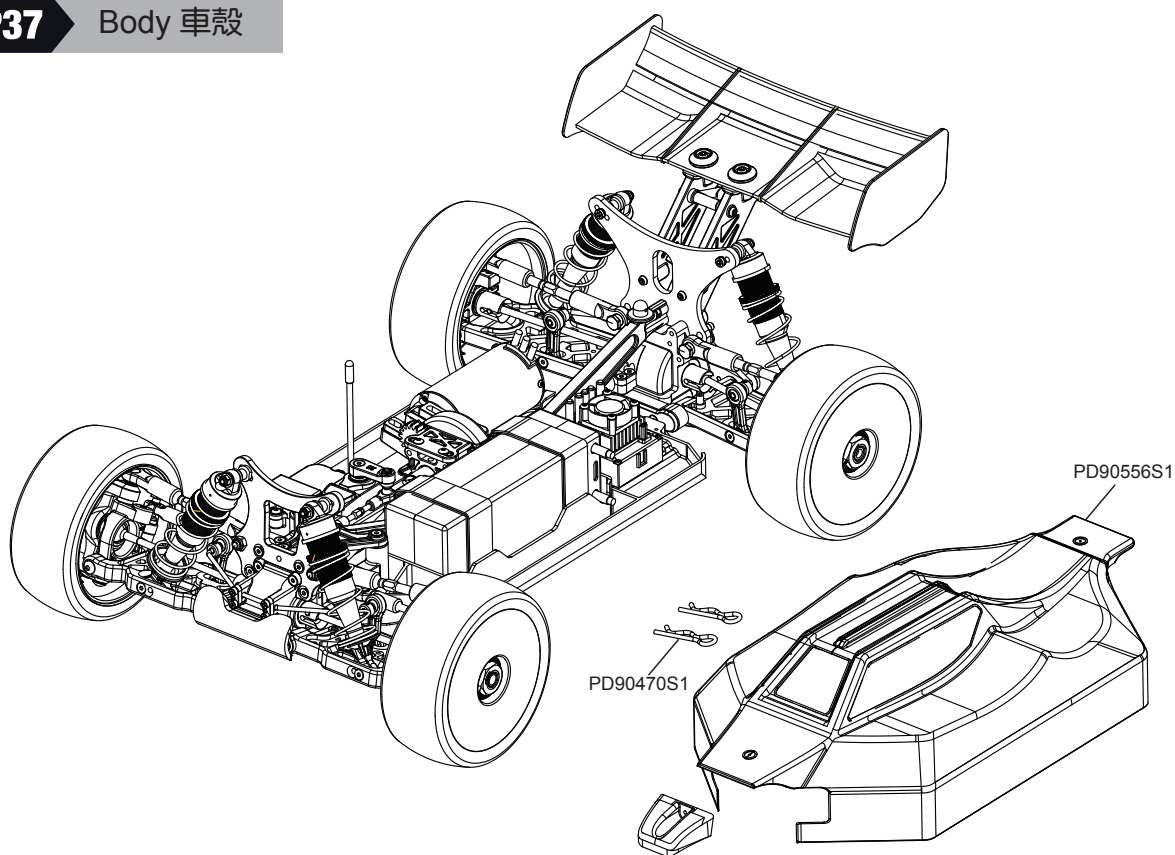


Hint
組裝提示


x4

Assemble as many times as specified
依指示組裝所需數量


BUSHMASTER8E SPARE PARTS LIST 零件表

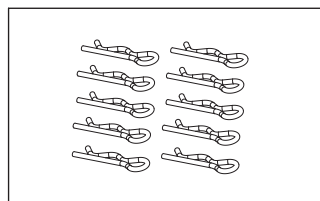


PD90470S1 BODY CLIP (10)
車殼插銷

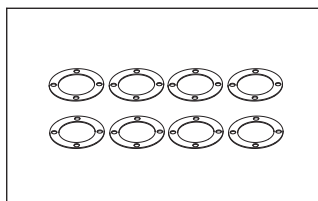


PD90471S1 DIFF GASKET
紙墊片

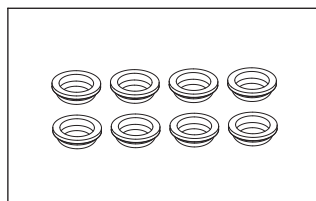


PD90472S1 SHOCK DIAPHRAGM
避震器氣室

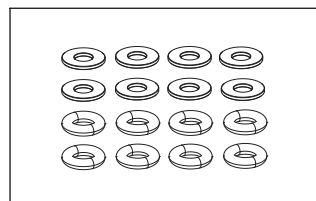


PD90473S1 O-RING & SPACERS
O型環 & 內環柱組

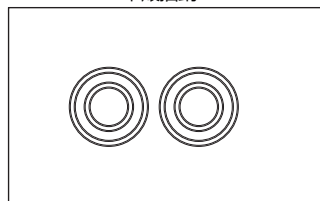


PD90474S1 BEARING 8x16x5
培林 8x16x5

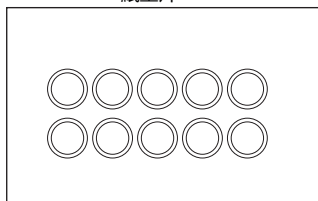


PD90475S1 DIFFERENTIAL SHIME 13x16x0.1
差速器墊片 13x16x0.1

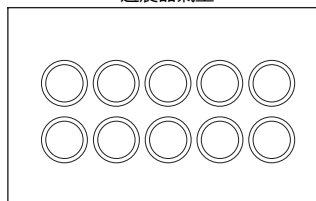


PD90476S1 DIFFERENTIAL SHIME 13x16x0.2
差速器墊片 13x16x0.2

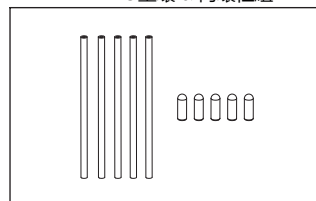


PD90477S1 ANENNA BAG
天線管

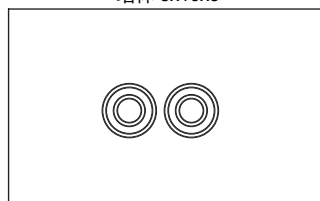

PD90478S1 BEARING 5x11x4
培林 5x11x4

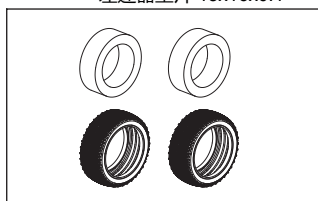


PD90479S1 TIRE W/FOAM INSERT
輪胎/內襯組

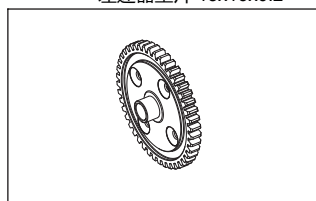


PD90480S1 GEAR SPUR
中央齒輪 46T




PD90481S1 SHOCK BUSH/SPACER
避震器上蓋襯套

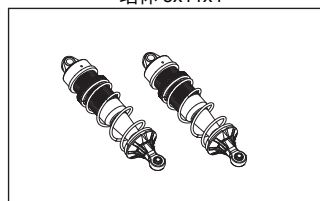


PD90482S1 FRONT SHOCK
前避震器組

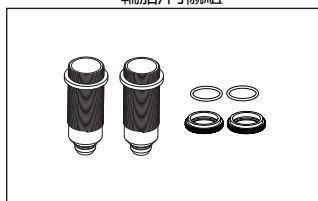


PD90483S1 FRONT SHOCK BODY
前避震器套筒

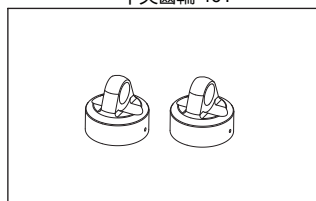


PD90484S1 SHOCK CAP
避震器上蓋

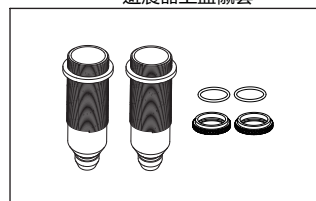


PD90485S1 REAR SHOCK BODY
後避震器套筒

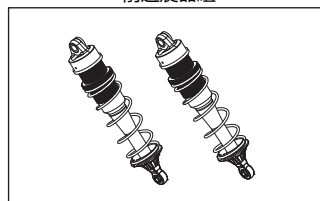


PD90486S1 REAR SHOCK BODY
後避震器組

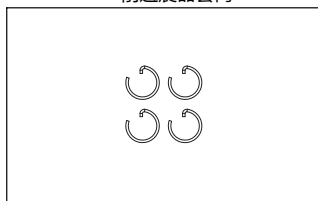


PD90487S1 G CLIP
G扣

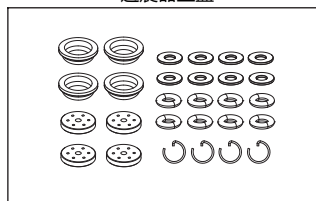


PD90488S1 SHOCK REBUILD
避震器維修零件

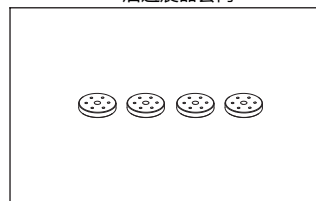


PD90489S1 SHOCK PISTONS
避震器活塞

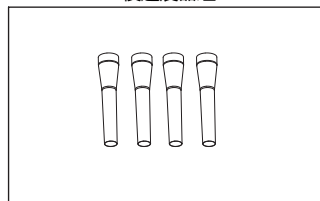


PD90490S1 SHOCK BOOTS
避震器防塵套

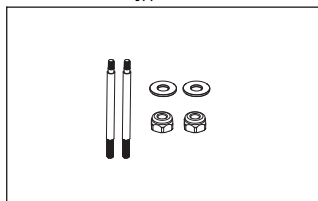


PD90493S1 FRONT SHOCK SHAFT
前避震軸心

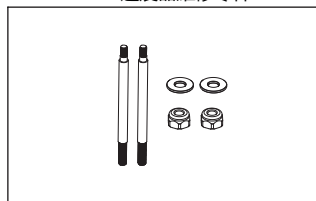


PD90494S1 REAR SHOCK SHAFT
後避震軸心

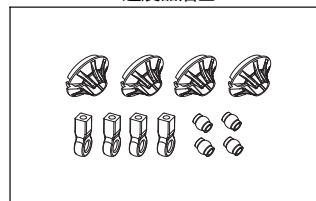


PD90495S1 SHOCK ROD ENDS
避震器球頭組

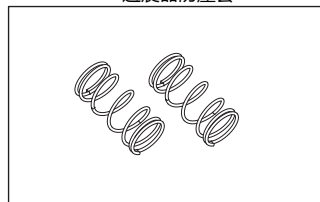


PD90496S1 FRONT SHOCK SPRING
前避震器彈簧

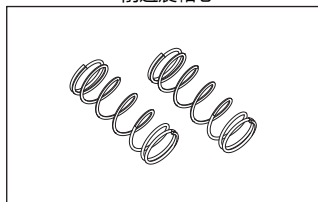

PD90497S1 REAR SHOCK SPRING
後避震器彈簧

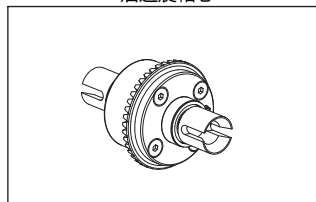


PD90498S1 FRONT COMPLETE DIFF
前差速器組

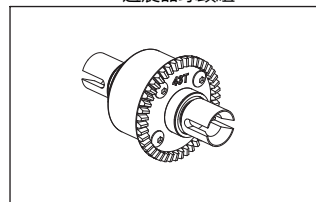


PD90499S1 REAR COMPLETE DIFF
後差速器組


BUSHMASTER8E SPARE PARTS LIST 零件表

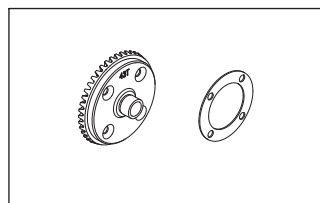


PD90500S1 FRONT RING GEAR (43T)
前差速齒 43T

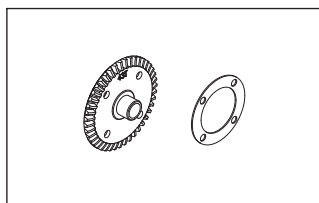


PD90501S1 REAR RING GEAR (43T)
後差速齒 43T

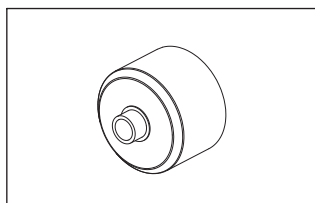


PD90502S1 F&R DIFF HOUSING
前後差速器外殼

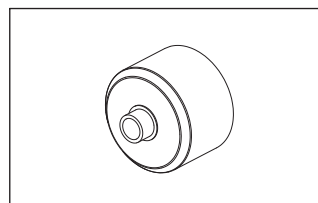


PD90503S1 CENTER DIFF HOUSING
中差速器外殼

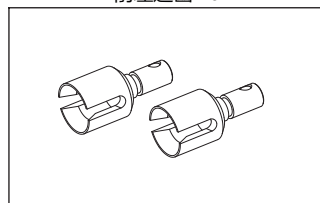


PD90504S1 F/R OUTDRIVE
前後差速接杯

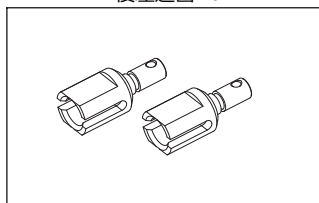


PD90505S1 CENTER OUTDRIVE
剎車接杯

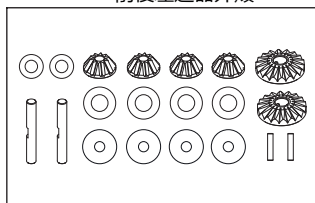


PD90506S1 DIFF GEARS & PINS
差速器零件包

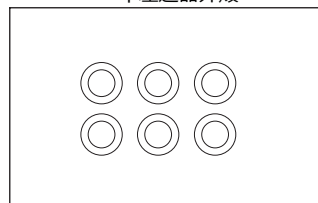


PD90507S1 DIFF O-RINGS 8.5x1.5
差速器O型環 8.5x1.5

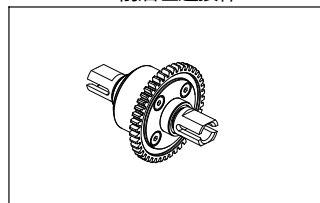


PD90508S1 CERNTER COMPLETE DIFF
中差速器組

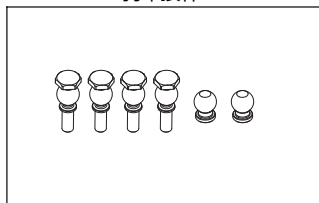


PD90509S1 BALL STUD
擺臂球頭

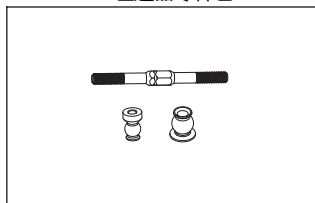


PD90510S1 TURNBUCKLE (3x40)
伺服拉桿螺絲 3x40

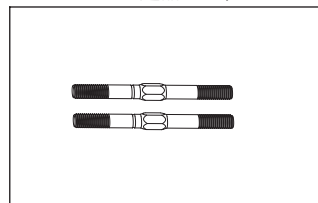


PD90511S1 TURNBUCKLE (4x50)
連接桿 4x50

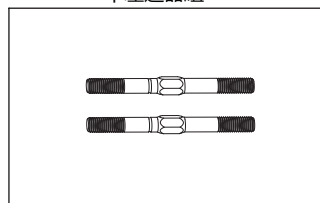


PD90512S1 TURNBUCKLE (5x50)
連接桿 5x50

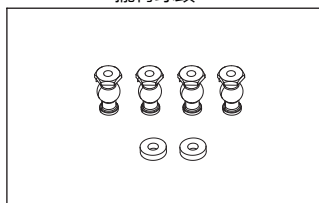


PD90513S1 STEERING BALL STUD
轉向球頭/墊片

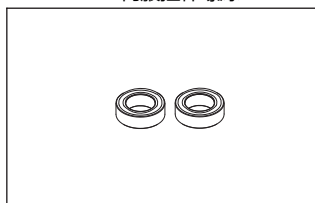


PD90514S1 BEARING 6x10x3
軸承零件包 6x10x3

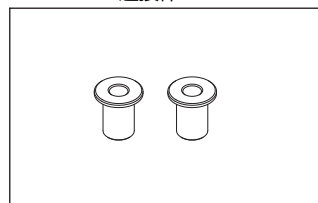


PD90515S1 STEERING RACK POST
轉向曲板軸套

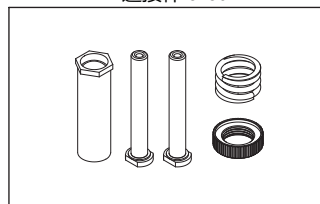


PD90516S1 STEERING POST
轉向組

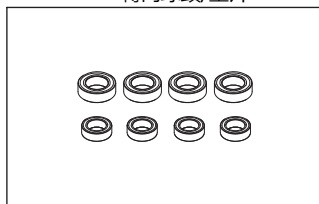


PD90517S1 STEERING BEARING SET
轉向滾珠軸承 5x8x2.5 & 6x10x3

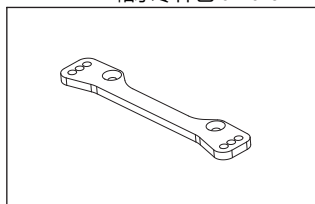


PD90518S1 STEERING RACK
轉向曲板

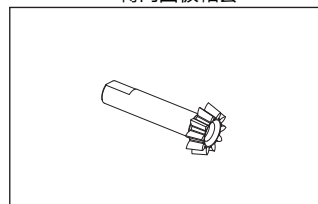


PD90519S1 BEVEL GEAR (10T)
小傘齒 10T

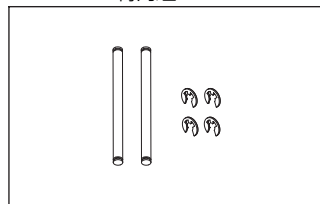


PD90520S1 F. SUSP. HINGE PIN, 4x59
前擺臂插銷 4x59mm

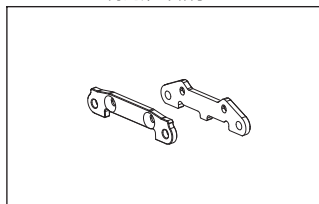


PD90521S1 TOE-IN PLANTE FF&FR
投影版 FF&FR

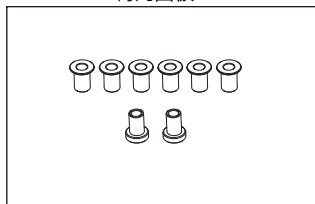


PD90522S1 SHOULDER BUSHING
前輪座軸套

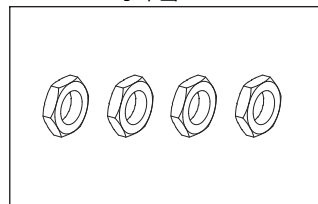


PD90523S1 WHEEL HEX NUTS
六角輪轂轉換器螺帽

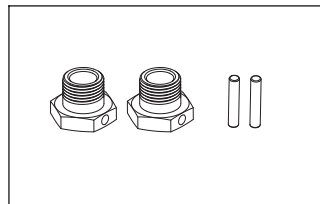


PD90524S1 WHEEL HEX
六角輪轂轉換器

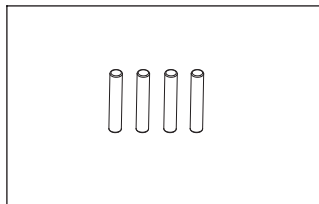

PD90525S1 WHEEL HEX PINS, 3x17
輪轂插銷 3x17mm

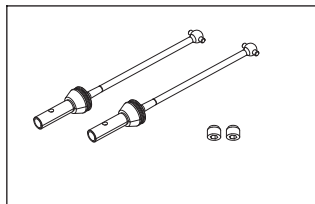


PD90526S1 FRONT CVA
前輪軸組

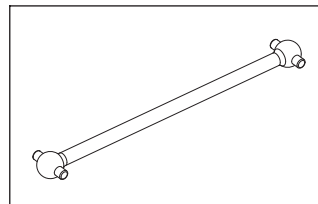


PD90527S1 CENTER FRONT DOG BONE
中前傳動軸


BUSHMASTER8E SPARE PARTS LIST 零件表

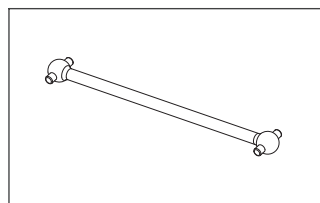


PD90528S1 CENTER REAR DOG BONE
中後傳動軸

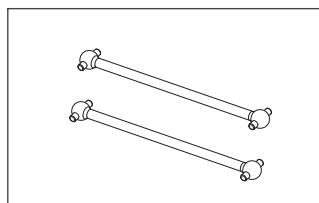


PD90529S1 REAR DOG BONE
後傳動軸

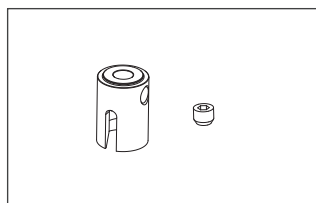


PD90530S1 INPUT CUP
中央傳動連接頭

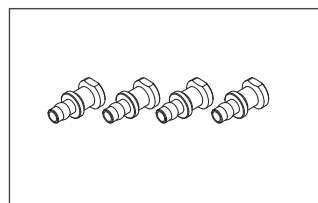


PD90531S1 SHOCK STAND OFF
避震器上蓋固定軸

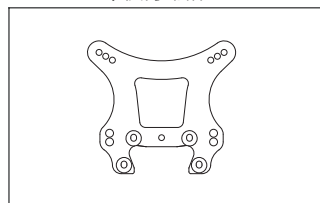


PD90532S1 SHOCK TOWER FR
前避震器支架

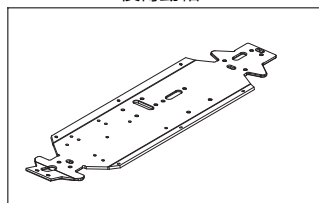


PD90533S1 CHASSIS
底盘

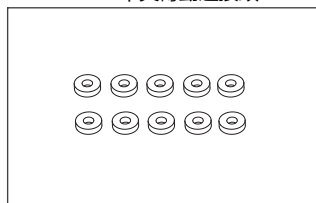


PD90534S1 STEEL WASHER
球頭墊圈

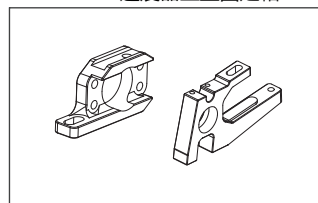


PD90535S1 MOTOR MOUNT
馬達固定座

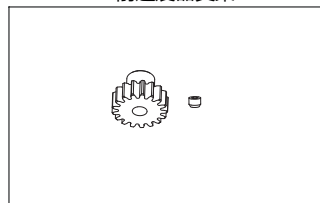


PD90536S1 17T PINION]
馬達齒輪,17T

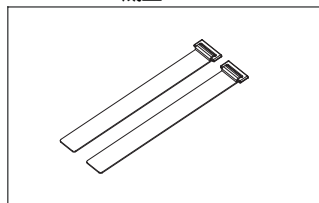


PD90537S1 VELCRO BATTERY STRAPS
電池用魔术貼

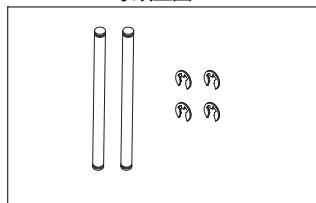


PD90538S1 REAR SUSP. HINGE PIN 4x65.5
後擺臂插銷 4x65.5mm

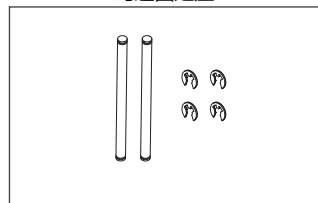


PD90539S1 REAR OUT HINGE PIN 4x46.5
後輪座插銷 4x46.5mm

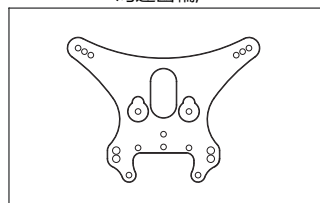


PD90540S1 SHOCK TOWER RR
後避震架

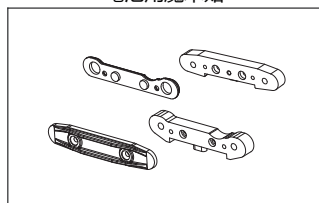


PD90541S1 D-PLATE
後下擺臂固定片

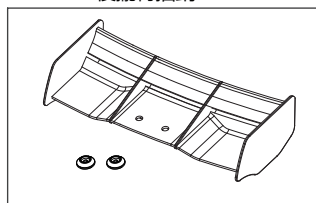


PD90542S1 REAR WING, BLACK
擾流尾翼,1/8(黑)

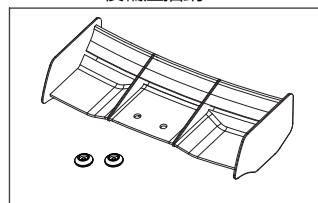


PD90543S1 REAR WING, WHITE
擾流尾翼,1/8(白)

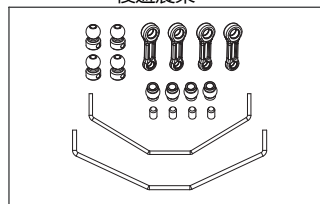


PD90544S1 SWAYBAR SET
防傾桿組

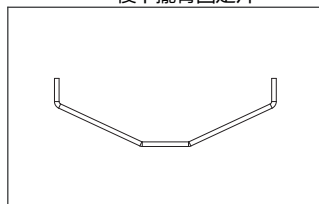


PD90545S1 REAR SWAY BAR (2.8)
後防傾桿 2.8

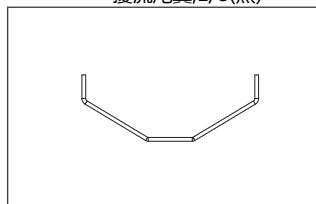


PD90546S1 FRONT SWAYBAR (2.5)
前防傾桿 2.5

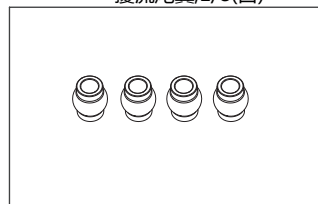


PD90547S1 SWAYBAR BALL JOINT
球頭

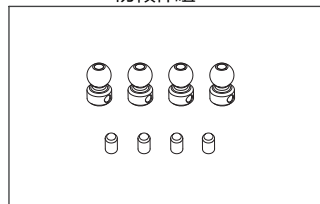


PD90548S1 SWAYBAR SOCKET JOINT
防傾桿球接頭

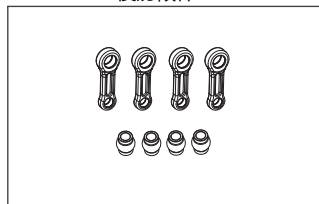


PD90549S1 SWAYBAR LINK
防傾桿連接拉桿

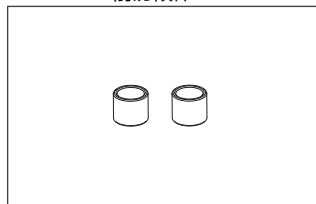


PD90550S1 CRUSH SLEEVE
軸套

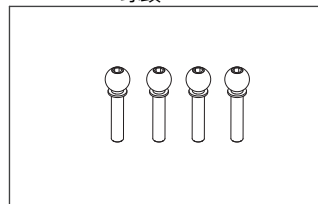


PD90551S1 BALL STUD
擺臂球頭

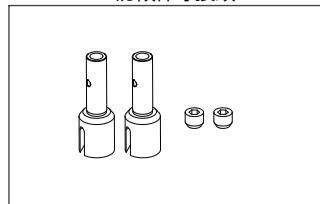


PD90552S1 REAR STUB AXLES
後輪軸

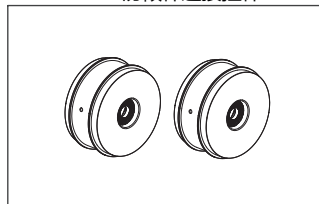

PD90553S1 WHEEL, BLACK
輪框, 黑

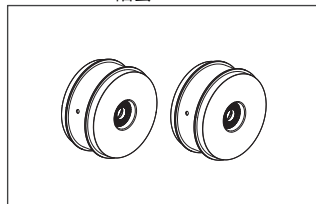


PD90554S1 WHEEL, WHITE
輪框, 白

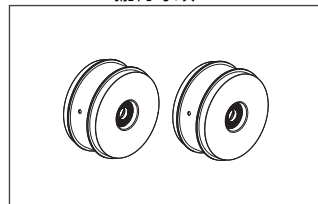


PD90555S1 WHEEL, YELLOW
輪框, 黃


BUSHMASTER8E SPARE PARTS LIST 零件表

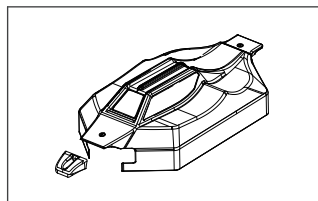


PD90556S1 PRINTED BODY
車殼

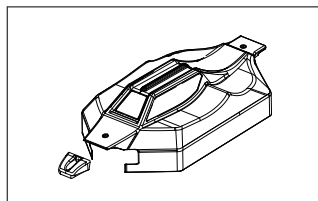


PD90557S1 CLEAR PC BODY
透明PC車殼

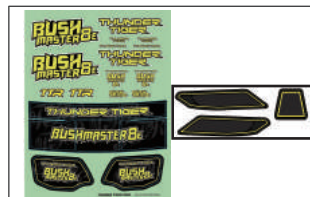


PD90558S1 BUSHMASTER8E DECAL
BUSHMASTER8E車殼貼紙

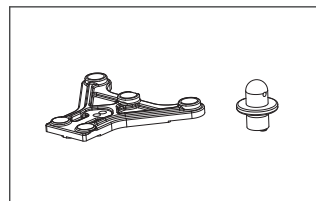


PD9378 BRACE/BODY POST
轉向支撐架/前車殼支柱

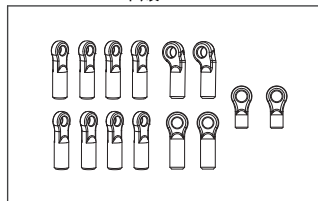


PD9379 SUSP ROD END
球型連桿帽

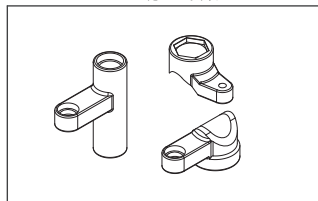


PD9387 STEERING SET
伺服機緩衝擺臂

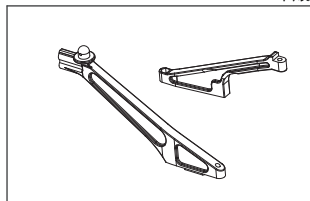


PD9391 CHASSIS BRACES
車底盤前支撐座

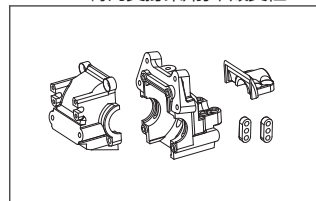


PD9392 GEAR BOX (FR)
前齒輪箱

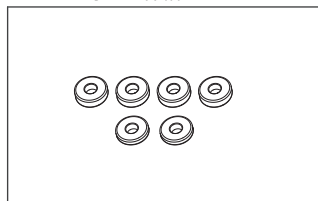


PD9393 HINGE PIN SHIM
墊片

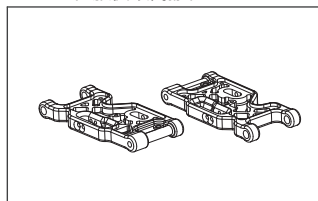


PD9399 FRONT ARMS
前擺臂

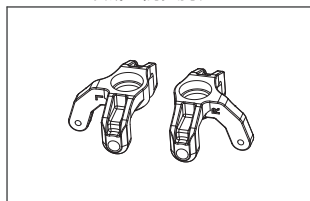


PD9400 STEERING BLOCKS
前輪座

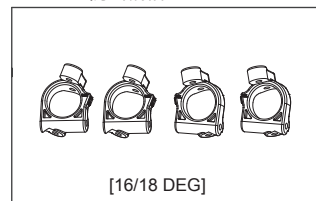


PD9402 CASTER BLOCKS
轉向固定座
[16/18 DEG]

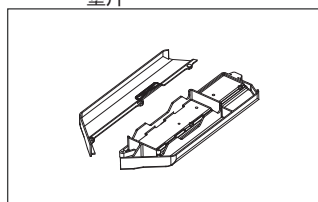


PD9413 GUARD & BATTERY TRAY
防撞板/電池盒

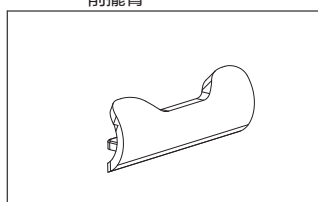


PD9414 BUMPER
前防撞板

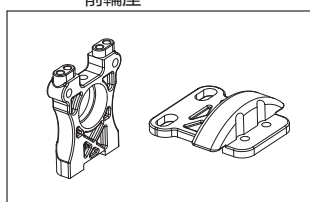


PD9416 CENTER DIFF MOUNT
中差固定座

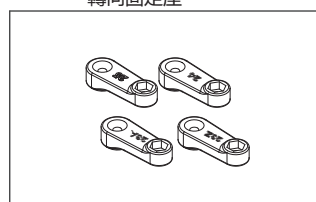


PD9419 STEERING SERVO HORNS
伺服機擺臂

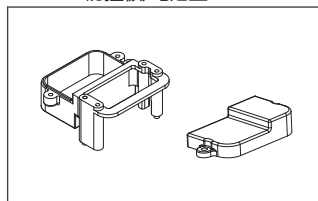


PD9421 SERVO MOUNT
伺服機固定座組

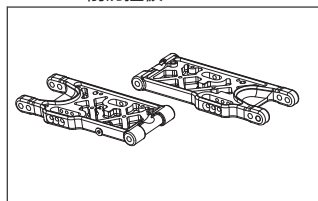


PD9425 REAR ARMS
後擺臂

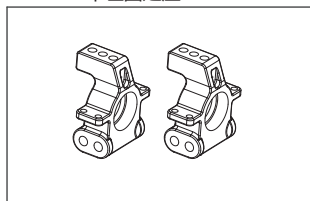


PD9426 HUB CARRIER
後輪座

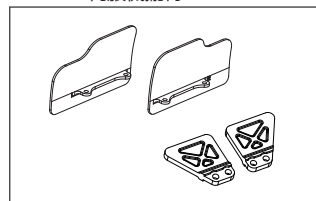

PD9427 MUD GUARD
擋泥板

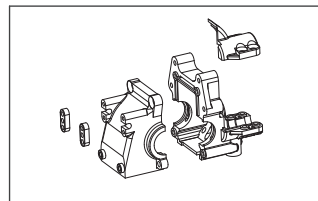

PD9430 GEAR BOX (RR)
後齒輪箱

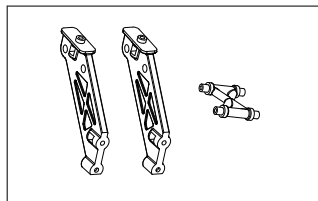

PD9434 WING MOUNT
尾翼固定座



PD90559S1 SCREW SET
全車螺絲包




PD90560S1 NUT SET
全車螺帽



PD90561S1 HI-TORQUE SERVO
10.5KG伺服機



PD90562S1 2000KV BRUSHLESS MOTOR
4274 2000KV 马达

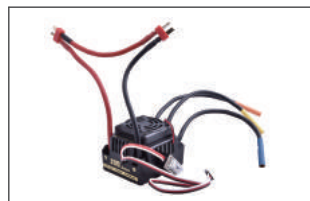

PD90563S1 BLC-100C
100A无刷防水电调 T插



PD90469S1 2.4G RADIO
2.4G遥控器



Declaration of Conformity

according R&TTE Directive 1999/5/EC

For the following equipment:

Product : BUSHMASTER8E
Type Designation/Trademark : 6412-F131 RTR
6412-A ARR
Manufacturer's Name : Thunder Tiger Corp.
Manufacturer's Address : NO.7,6th RD,Industry Park Taichung 40755,Taiwan

● Council Directive 1995/5/EC R&TTE on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity

For the evaluation of the compliance with this Directives, the following standards were applied :

EN 62311
EN 60950-1+A11+A1+A12
EN 301 489-1/-17
EN 300 328
EN 55022:2010
EN 55024:2010+A1:2015
EN 61000-3-2:2014
EN 6100-3-3:2013
EN 55022:2010+AC:2011
EN 55024:2010
EN 61000-3-2:2006+A2:2009
EN 61000-6-3:2007+AL:2011+AC:2012
EN 61000-6-1:2007
EN 61000-4-2:2009
EN 61000-4-3:2006+A1:2008+A2:2010
2002/95/EC
2011/65/EC
CE/2015/A2183

Responsible for making this declaration is the :

Manufacturer ☒

Authorized representative established within the EU ☐

EC Distribution

Company Name : THUNDER TIGER EUROPE GmbH

Company Address : Rudolf-Diesel-Str. 1, 86453 Dasing, Germany

Person responsible for making this declaration :

Name, Surname

Position/Title

: Manager

Date

: April 2016